

K-2850 - JT15D-4 Engine Adapter Sling Kit

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

The K-2850 Engine Sling Adapter Kit for the Pratt Whitney JT15D-4 engine is to be used with either 08-0134-4000 or 08-0135-4000 Engine Sling Bar assemblies. This kit is to be used for Pratt Whitney serial numbers up to 70226. Always follow the manufacturer's instructions for proper engine handling.

ENGINE HANGING INSTRUCTIONS FOR THE JT15D-4 ENGINE:

1. Locate the slide blocks on the engine sling bar assembly with the front slide block located at 19 $\frac{1}{16}$ inches forward of zero point. Locate the rear slide block at 20 $\frac{1}{16}$ inches aft of zero point and position the lift point at 3 $\frac{3}{16}$ inches forward of zero point. Ensure that all lifting straps have been securely installed into the slide blocks (**see Figure 1**). The strap kit retaining ring may be placed into one of the unused holes in either of the slide blocks for storage.
2. The sling is now ready to be installed onto the aircraft engine.
3. Lift engine sling slightly and check positioning of the lift points to ensure that the engine is balanced when lifting.



CAUTION!

The blocks may need to be adjusted to properly balance the engine. In the event of an unbalanced condition, loss of control and/or damage may occur to the engine and/or user.


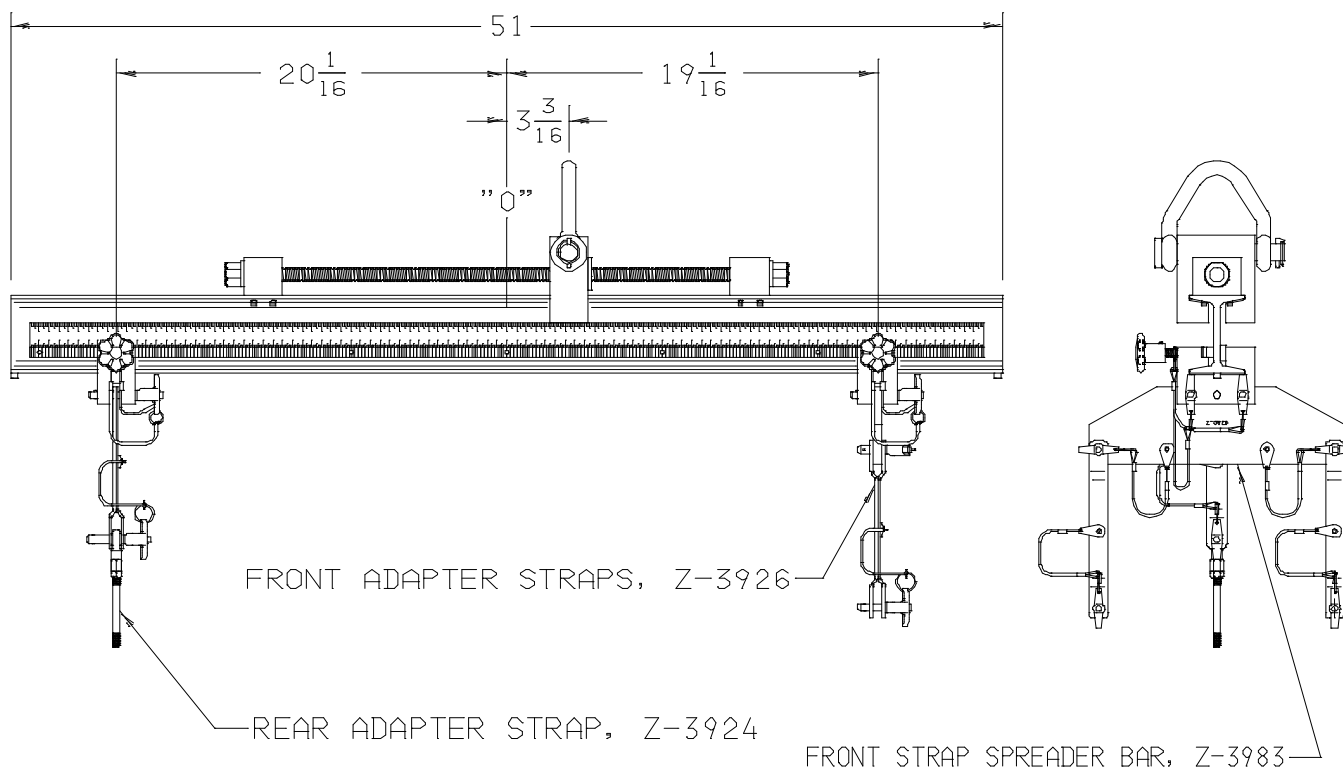


FIGURE 1 - Typical locations for JT15D-4 Engine Adapter Sling Kit

Parts List

When ordering Replacement Parts/Kits, please specify Model, Color and Serial Number of your Unit

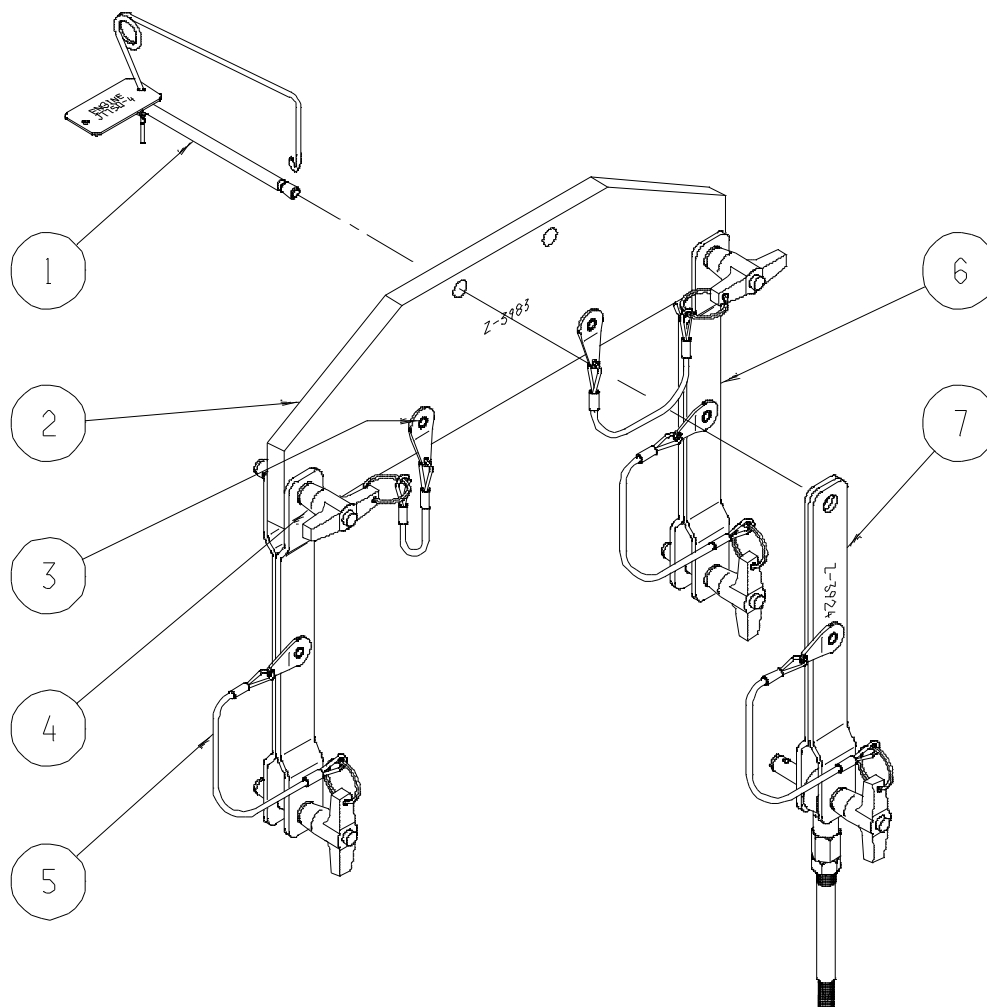

Item	Part Number	Description	Qty
1	Z-3982-01	Assembly, Sling Adapter Pin	1
2	Z-3983	Assembly, Spreader Bar	1
6	Z-3926	Assembly, Engine Strap	2
7	Z-3924	Assembly, Engine Strap	1
	K-2895	Replacement Ball Lok Pin Kit; consists of:	
3	G-1351-04	Rivet, 1/8 Open-End Stl	1
4	G-1310-0610	Pin, Ball Lok-T, 3/8" diameter x 1.0" long	1
5	H-1026*07.0	Assembly, Lanyard	1

GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. **Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.**