




OPERATION & SERVICE MANUAL

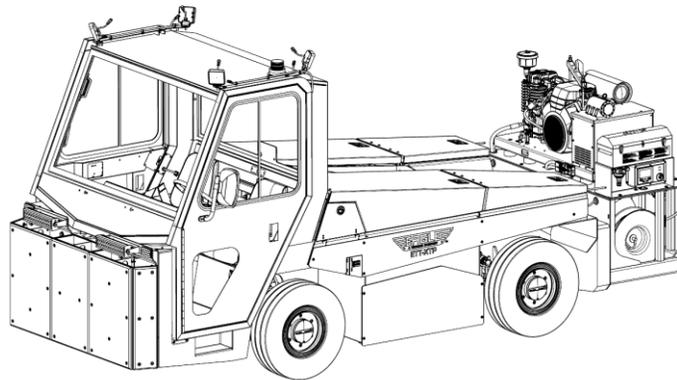

Model: eTT-XTP Electric Transit Pro Tractor

12/2025 – Rev. 06

For Spare Parts, Operations & Service Manuals or Service Needs
Scan the QR code or visit tronair.com/pages/tronair-information-center



The Tronair Group of Companies: Tronair | Columbus Jack | Eagle | Malabar International

Eagle Tugs
1 Air Cargo Pkwy East
Swanton, OH 43558

Phone: (734) 442-1000 | 800-671-0431
Web: www.tronair.com
Email: sales@tronair.com

REVISION	DATE	TEXT AFFECTED
01	11/2023	Original Release
02	04/2024	Modified 17.0 Tail / Shelf Compressor
03	04/2024	Modified graphics and BOM for sections 11.1 Assembly, Chassis Sub and 16.1 Assembly, Decals & Labels
04	06/2025	Modified 17.0 Tail Shelf / Compressor
05	09/2025	Removed old Section 13.4 Charge, Jack Sub, Modified Sections 19.0 eTT-XTP Features and Options, 21.0 Battery Feature and 23.1 Operator Cab Feature, added 21.3 Customer Furnished Lead Acid Battery Option C, 21.4 LI 840 AH Battery Option G
06	12/2025	Modified 34.0 Guarantees/Limitation Of Liability - Eagle Warranty



TABLE OF CONTENTS

	<u>PAGE</u>
1.0 PRODUCT INFORMATION	1
1.1 DESCRIPTION.....	1
1.2 MODEL & SERIAL NUMBER.....	1
1.3 MANUFACTURER.....	1
1.4 SPECIFICATIONS.....	2
1.4.1 Vehicle Specifications.....	3
1.4.2 Chassis System.....	3
1.4.3 Vehicle Weight (with standard cab).....	3
1.4.4 Traction Specifications.....	3
1.4.5 Pump Specifications.....	3
1.4.6 Transfer Case.....	3
1.4.7 Axles.....	4
1.4.8 Tires.....	4
1.4.9 Electrical.....	4
1.4.10 Battery Specifications.....	4
1.4.10.1 Battery Option 1.....	4
1.4.10.2 Battery Option 2.....	4
1.4.11 Performance.....	4
2.0 SAFETY INFORMATION.....	5
2.1 USAGE AND SAFETY INFORMATION.....	5
2.2 IMPORTANT SAFETY NOTICE.....	5
2.3 GENERAL.....	5
2.4 GENERAL SAFETY.....	6
3.0 TRAINING.....	6
3.1 TRAINING REQUIREMENTS.....	6
3.2 TRAINING PROGRAM.....	6
3.3 OPERATOR TRAINING.....	6
4.0 PUTTING INTO SERVICE.....	6
4.1 UNPACKING AND SETTING UP.....	6
5.0 OPERATION.....	7
5.1 OPERATOR REQUIREMENTS.....	7
5.2 OPERATOR WORKSTATION.....	7
5.3 PRE-OPERATION CHECKLIST.....	7
5.3.1 Daily Pre-Operation Checklist.....	7
5.3.2 Weekly Operation Checklist.....	8
5.4 STARTUP/SHUTDOWN AND SAFE TOWING.....	8
5.4.1 Starting the Unit.....	8
5.4.2 Shutting Down the Unit.....	8
5.4.3 Pushing Safety.....	8
5.4.4 Cold Vehicle Care Safety.....	8
5.4.5 Compressor/Booster Operation.....	9
5.5 CONTROLS AND INSTRUMENTATION.....	10
5.5.1 Multi-Function Display.....	11
5.5.2 Steering Sync Operation.....	12
6.0 PACKAGING AND STORAGE.....	13
6.1 HANDLING.....	13
6.1.1 Tie Downs.....	13
6.1.2 Jacking and Jack Stand locations.....	14
6.1.3 Weight Distribution Without Battery.....	14
6.1.4 Flat Towing.....	15
7.0 TROUBLESHOOTING.....	16
7.1 OPERATIONAL TROUBLESHOOTING.....	16
7.2 ERROR CODES.....	17
8.0 MAINTENANCE.....	19
8.1 PREVENTIVE MAINTENANCE SCHEDULE.....	19
8.2 FLUIDS.....	20
8.3 HYDRAULIC SIGHT GLASS AND FILL.....	21
8.4 HYDRAULIC FILTER.....	22
8.5 PLANETARY AXLE SERVICE POINTS.....	23
8.6 TRANSFER CASE SERVICE.....	24
8.7 BRAKE SERVICE.....	25
8.8 BATTERY CARE INSTRUCTIONS.....	26



8.8.1	Lead Acid Battery Care	26
8.8.2	Lithium Battery Care	29
9.0	DRIVETRAIN	30
9.1	ASSEMBLY, COOLING FANS.....	30
9.2	ASSEMBLY, MOTOR CTRLR WITH HEATSINK	31
9.3	ASSEMBLY, MOTOR AND XFER CASE.....	33
9.4	ASSEMBLY, FRONT AXLE	37
9.5	ASSEMBLY, AXLES AND DRIVESHAFTS.....	38
10.0	HYDRAULIC SYSTEM.....	41
10.1	ASSEMBLY, SPIN-ON FILTER.....	41
10.2	ASSEMBLY, STEERING WHEEL.....	42
10.3	ASSEMBLY, BRAKE PEDAL.....	43
10.4	ASSEMBLY, BRAKE PEDAL SUB-ASSEMBLY	44
10.5	ASSEMBLY, ACCUMULATOR	47
10.6	ASSEMBLY, HYDRAULIC TANK.....	48
10.7	ASSEMBLY, MANIFOLD BLOCK.....	49
10.8	ASSEMBLY, PUMP MOTOR.....	50
10.9	ASSEMBLY, STEER BLOCK.....	51
10.10	ASSEMBLY, HYDRAULIC SYSTEM	52
11.0	CHASSIS	68
11.1	ASSEMBLY, CHASSIS SUB.....	68
12.0	OPERATOR COMPARTMENT	69
12.1	PRX SENSOR BUZZLITE W CONNECT.....	69
12.2	ASSEMBLY, PARKING BRAKE CABLE.....	70
12.3	ASSEMBLY, DASH PANEL	71
12.4	ASSEMBLY, OPERATOR COMPARTMENT.....	72
13.0	ELECTRICAL SYSTEM.....	74
13.1	ASSEMBLY, BATTERY CABLES.....	74
13.2	ASSEMBLY, ELECTRICAL PANEL.....	78
13.3	ASSEMBLY, ELECTRICAL PANEL.....	83
13.4	ASSEMBLY, ELECTRICAL SYSTEM.....	84
14.0	ASSEMBLY, STD COLOR PANELS.....	96
14.1	ASSEMBLY, REAR MIDDLE DOOR.....	96
14.2	ASSEMBLY, MOTOR DOOR.....	98
14.3	ASSEMBLY, STANDARD COLOR PANELS	99
15.0	ASSEMBLY, ALT COLOR PANELS.....	104
15.1	STORAGE DOOR SUB	104
15.2	ASSEMBLY, BATTERY DOOR, LH.....	105
15.3	ASSEMBLY, BATTERY DOOR, RH	106
15.4	ASSEMBLY, ALT COLOR PANELS	110
16.0	ASSEMBLY, DECALS & LABELS.....	112
16.1	ASSEMBLY, DECALS & LABELS.....	112
17.0	TAIL SHELF / COMPRESSOR.....	117
18.0	BALLAST ASSEMBLY & TIRE/RIM.....	139
19.0	eTT-XTP FEATURES AND OPTIONS.....	140
19.1	CHARGER COMPATIBILITY OPTION A - GECL.....	140
19.2	CHARGER COMPATIBILITY OPTION B – ON-BOARD.....	143
20.0	IGNITION FEATURE.....	145
20.1	KEYED IGNITION OPTION A.....	145
20.2	KEYLESS IGNITION OPTION B.....	146
21.0	BATTERY FEATURE.....	147
21.1	OPTION A - 510 LEAD ACID BATTERY KIT.....	147
21.2	OPTION B - 420 AH LITHIUM BATTERY	148
21.3	OPTION C - CUSTOMER FURNISHED LEAD ACID BATTERY	152
21.4	OPTION G - LI 840 AH BATTERY	157
22.0	BACKUP ALARM FEATURE	162
22.1	OPTION A - BACKUP ALARM.....	162
22.2	OPTION B - SMART BACKUP ALARM	163
22.3	OPTION C - WHITE NOISE BACKUP ALARM.....	164
23.0	OPERATOR CAB FEATURE	165
23.1	OPTION O - OPERATOR CAB NO AC.....	165
23.2	OPTION A - NO OPERATOR CAB	176
23.3	OPTION B - OPERATOR CAB WITH AIR CONDITIONING	181
23.4	ADDITIONAL CAB FEATURES	194
24.0	DECK FEATURE	195



24.1	DIAMOND TREAD PVC DECK.....	195
25.0	FIRE EXTINGUISHER, 5 LB ABC, FEATURE	196
26.0	SEAT FEATURE.....	197
26.1	OPTION A - NO SEAT SWITCH.....	197
26.2	OPTION O – SEAT SWITCH.....	198
27.0	CAMERA FEATURE.....	199
27.1	BACKUP CAMERA.....	199
28.0	FRONT HITCH FEATURE	203
28.1	OPTION A - E-HITCH OPTION A.....	203
28.2	OPTION B - LOCKING E-HITCH.....	204
28.3	OPTION C - PINTLE HITCH.....	205
28.4	OPTION O - NO HITCH.....	206
29.0	FRONT PUSH BUMPER FEATURE.....	207
29.1	OPTION A - PUSH BUMPER WITH HITCH AND PLOW STANDARD.....	207
29.1.1	Push Bumper Assembly.....	209
29.1.2	Push Bumper Assembly.....	210
29.1.3	Push Bumper Assembly.....	211
29.2	OPTION B - TALL PUSH BUMPER.....	212
29.2.1	Push Bumper Assembly.....	214
29.2.2	Push Bumper Assembly.....	215
29.2.3	Push Bumper Assembly.....	216
29.3	OPTION C - TALL PUSH BUMPER WITH HITCH AND PLOW.....	218
29.3.1	Push Bumper Assembly.....	220
29.3.2	Push Bumper Assembly.....	221
29.3.3	Push Bumper Assembly.....	222
29.4	OPTION O - PUSH BUMPER.....	224
29.4.1	Push Bumper Assembly.....	226
29.4.2	Push Bumper Assembly.....	227
29.4.3	Push Bumper Assembly.....	228
30.0	LIGHTS FEATURE	229
30.1	OPTION A - ON CAB WORKLIGHTS & TURN SIGNAL.....	229
30.2	OPTION O - ON CAB WORKLIGHTS.....	233
31.0	REAR HITCH FEATURE	236
31.1	OPTION A – E-HITCH.....	236
31.2	OPTION B – E-HITCH WITH AUTOLOCK.....	237
31.3	OPTION C – STANDARD PINTLE HOOK.....	238
31.4	OPTION D – SINGLE LEVEL HITCH.....	239
32.0	PROVISION OF SPARES.....	240
32.1	SOURCE OF SPARE PARTS.....	240
32.2	ORDERING SPARE/SERVICE PARTS.....	240
32.3	RECOMMENDED SPARE PARTS LIST.....	240
33.0	IN SERVICE SUPPORT.....	241
33.1	TECHNICAL ASSISTANCE.....	241
34.0	GUARANTEES/LIMITATION OF LIABILITY - EAGLE WARRANTY.....	241
35.0	APPENDICES.....	242



From everyone at Tronair, we would like to say thank you for purchasing an Eagle eTT-XTP Transit Pro tractor. We take a lot of pride in the quality of the products that we build, as well as, our continued customer service. Our goal is to build a long-term relationship with our customers. We want you, the customer, to be 100% satisfied with your experience. To us, this means that your Eagle eTT-XTP series tractor is functionally superior to any other products you have used. This also means that your Eagle product is continually supported in a professional, timely manner.

WARNING!



Read this manual in its entirety before putting your Eagle tractor into service. This manual contains important safety instructions. Improper usage or a failure to follow the safety requirements listed in this manual could result in severe injury or death.

1.0 PRODUCT INFORMATION

1.1 DESCRIPTION

This manual is designed as a reference guide to make the reader more familiar with the Eagle-specific components of the Eagle eTT-XTP series tow tractor models. This manual includes part numbers and descriptions to assist the reader in ordering component spare/service parts. The manual also outlines the Scheduled Maintenance Intervals recommended by Tronair in order to keep your vehicle running properly.

1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit




1.3 MANUFACTURER

Tronair / Eagle Tugs
1 Air Cargo Pkwy East
Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301
Fax: (419) 867-0634
E-mail: sales@tronair.com
Website: www.tronair.com

Please check www.eagletugs.com periodically for updates to this manual, operations manual, and service bulletins that affect your tractor

1.4 SPECIFICATIONS

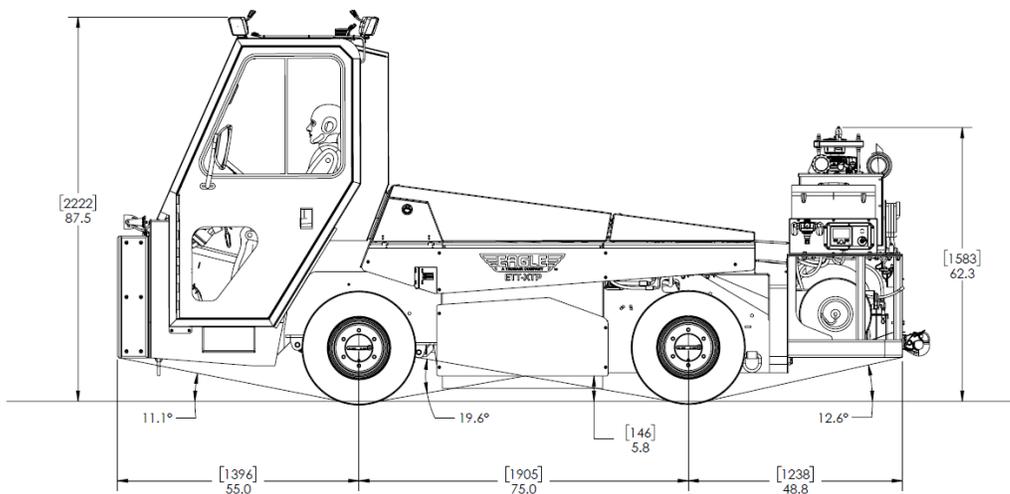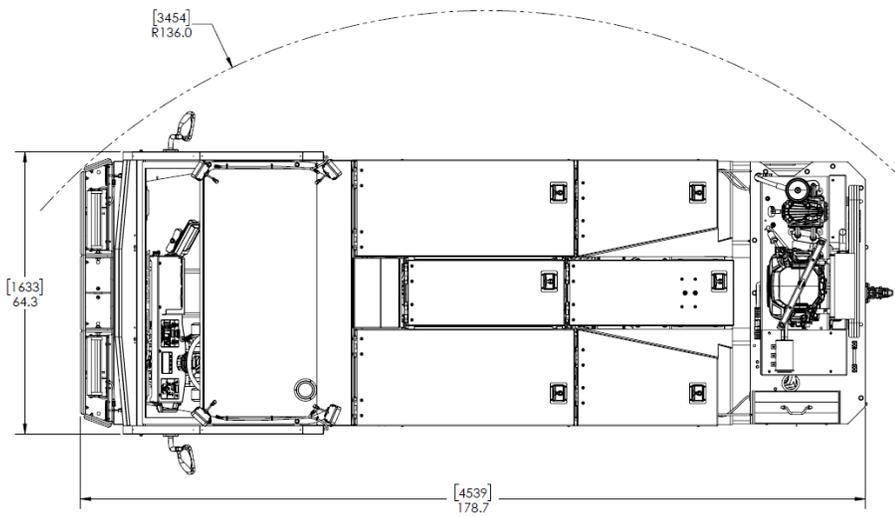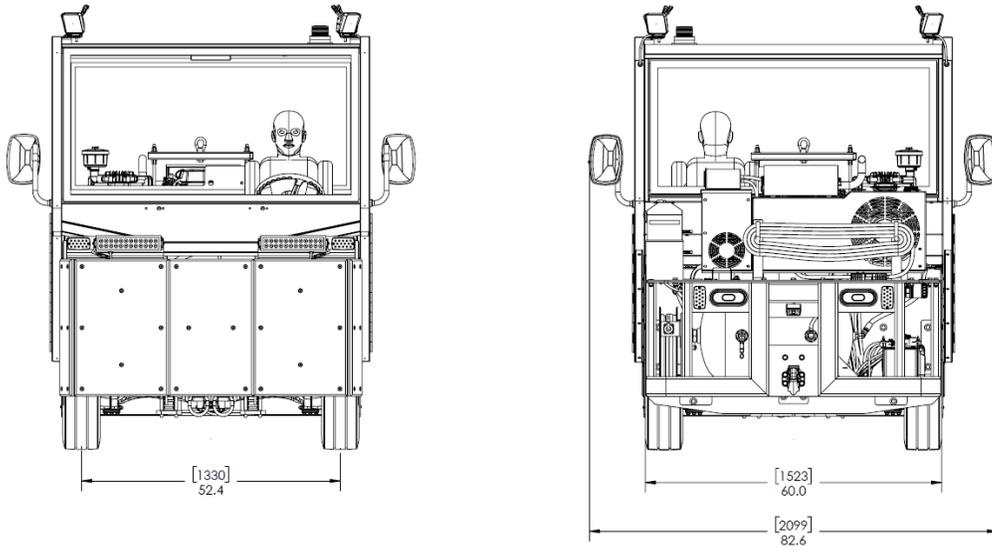



1.4.1 Vehicle Specifications

Model	GVW* lbs (kg)	Rated DBP lbf (kN)	Vertical Hitch Capacity lbf (N)	Pushing Capacity † lbs (kg)
eTT-XTP	13,600 (6,169)	12,000 (53.3)	500 (2200)	170,000 (17,110)

† Towing Capacity applies to 1% grade, wet surface condition.

* GVW listed for the heaviest battery option

1.4.2 Chassis System

Length (not including hitches)	178.7 in (4,539 mm)
Width	60.5 in (1,537 mm)
Height with Cab	87.5 in (2,222 mm)
Step-In Height	18.4 in (467 mm)
Ground Clearance	6 in (152 mm)

1.4.3 Vehicle Weight (with standard cab)

Lead Acid Battery Option

Gross Vehicle Weight.....	13,600 lbs (6,169 kg)
Weight distribution.....	47% Front / 53% Rear

Lithium Battery Option

Gross Vehicle Weight.....	13,500 lbs (6,124 kg)
Weight distribution.....	47% Front / 53% Rear

1.4.4 Traction Specifications

Motor Model	Dana TM4
Motor Type	SRIPM
Motor Power	40 kW – S2 60 min
Motor IP Rating	66
Inverter Model	InMotion AC80L70-C35T
Inverter Power Max	700A – 2 min
Inverter Power Nom	350A – S2 60 min
Inverter IP Rating	65
Inverter Cooling	Active Finned Heatsink

1.4.5 Pump Specifications

Motor Model	CFR AMP173-150-SAE A
Motor Type	AC Induction
Motor Power	4 kW – S2 60 min
Motor IP Rating	44
Inverter Model	InMotion ACS80S
Inverter Power Max	175A – 1 min
Inverter Power Nom	80A – S2 60 min
Inverter IP Rating	65
Inverter Cooling	Passive Flat Heatsink

1.4.6 Transfer Case

Gear Ratio Low	4.85
Gear Ratio High	1.5
Output Flange	DIN100
Shift Pressure (max).....	507 psi (35 bar)



- 1.4.7 Axles
 - Wheelbase60.5 in (1,537 mm)
 - Track Width52.4 in (1,330 mm)
 - Inside Steering Angle35°
 - Steering Working Pressure180 psi (12.4 bar)
 - Center Differential Ratio2.818
 - Planetary Ratio4.235
 - Overall Ratio11.936
 - Service Brake Working Pressure685 psi (47 bar)
 - Service BrakesDry Disc
 - Parking BrakesDry Disc, front only
 - Input FlangeDIN100

- 1.4.8 Tires
 - Tire Size7.00 R12 | TL

- 1.4.9 Electrical
 - System Voltage80V Floating Ground
 - Lighting/Logic Voltage12V Floating Ground
 - 12V Converter RatingDual 500W

- 1.4.10 Battery Specifications
 - Nominal Voltage80V
 - Connector TypeDIN/Euro
 - Compartment Length36.5 ± 0.25 in (1,295 mm)
 - Compartment Width20.5 ± 0.25 in (575 mm)
 - Compartment Height29 ± 0.25 in (797 mm)

- 1.4.10.1 Battery Option 1
 - Battery chemistryLead Acid
 - Industrial Designation20-85-13
 - Capacity510 Ahr

- 1.4.10.2 Battery Option 2
 - Battery chemistryLithium Iron Phosphate
 - Capacity420 Ahr

- 1.4.11 Performance
 - Top Speed - Low5 mph (8 kph)
 - Top Speed - Drive15 mph (24.1 kph)
 - Outside Turning Radius136 in (3,4549 mm)
 - Approach Angle Without Hitch11°
 - Departure Angle Without Hitch12°
 - Breakover Angle19°

2.0 SAFETY INFORMATION

2.1 USAGE AND SAFETY INFORMATION

To ensure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



WARNING!

Warning is used to indicate the presence of a hazard that can cause **severe personal injury, death, and/or substantial property damage** if the Warning Notice is ignored.



CAUTION!

Caution is used to indicate the presence of a hazard, which will or can cause **minor personal injury or property damage** if the Caution Notice is ignored.

2.2 IMPORTANT SAFETY NOTICE

Appropriate service methods and proper repair procedures are essential for the safe and reliable operation of all industrial equipment as well as the personal safety of the individual performing the work. This service manual provides general directions for accomplishing service and repair work with tested and effective techniques. Following them will help assure reliability.

There are numerous variations in procedures, techniques, tools, and parts for servicing equipment, as well as in the skill of the individual doing the work. This manual cannot anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this manual must first establish that he compromises his/her personal safety and/or the equipment integrity by his/her choice of methods, tools or parts.

2.3 GENERAL

The following list contains some general warnings that you should follow when you work on equipment:

- Always wear safety glasses for eye protection.
- Use safety stands whenever a procedure requires you to be under the equipment.
- Be sure that the ignition switch and battery is disconnected unless otherwise required by the procedure.
- Set the parking brake when working on the equipment. Place wheel chocks on the tires to provide further restraint from inadvertent equipment movement.
- Keep yourself and your clothing away from moving parts when the tractor is moving.
- Do not smoke while working on the equipment.
- To avoid injury, always remove rings, watches, loose hanging jewelry, and loose clothing before beginning to work on the equipment. Tie long hair securely behind the head.

For more information regarding safety please refer to the operations manual provided with your tug. This manual can also be found on the Eagle Tugs website at www.eagletugs.com.

2.4 GENERAL SAFETY

The following safety recommendations are not intended to cover all possible safety aspects of the eTT-XTP series tractor. Please use common sense in addition to the safety recommendations that follow.



WARNING!

Failure to comply with the following safety precautions can result in serious injury or death as well as equipment damage.

- Always do the Pre-Operation Inspection before using the tractor.
- If you have not operated this equipment previously, practice driving and operating it in a safe and clear (not congested) area until you are familiar with all aspects of its operation.
- Always operate the tractor at a speed appropriate for the environmental conditions and the towed load. Slow down in congested areas, when moving a large load, or when conditions reduce traction or visibility.
- Always take care when driving on a slope or uneven ground. Reduce speed and take turns slowly in a controlled manner.
- When working on or around the tractor, take care to keep well clear of any moving components including tires, fans, and driveshafts. Also keep clear of hot surfaces such as drive and motor components.
- The eTT-XTP series tractor is intended to be operated on hard improved surfaces. Never drive on soft surfaces, and avoid potholes and damaged pavement.
- The traction battery, contactor, and busbar connections are capable of dangerous electrical discharge and electric shock. Stay away from electrical components and connections unless trained in service and repair on this type of equipment.

3.0 TRAINING

3.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the unit.

3.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the unit in and around the intended aircraft at the intended aircraft servicing location.

3.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the unit.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.

4.0 PUTTING INTO SERVICE

4.1 UNPACKING AND SETTING UP

The following directions specify the correct steps that should be taken once you receive delivery of your eTT-XTP series tractor. These steps will ensure that the tow tractor will operate safely. Reference the Parts and Preventive Maintenance Manual for details as appropriate.

- During the unloading of your tractor, note any shipping damage and report it to Tronair and the shipping company. Verify that all components appear to be in order and undamaged.
- Remove manual and any shipped-loose components from the operator compartment.
- Install shipped-loose components per the Parts and Preventive Maintenance Manual.
- Read this manual in its entirety, paying close attention to all safety requirements.
- Verify that tires are inflated.
- Verify that the battery state of charge is above 30%.
- Check the hydraulic fluid level.
- Familiarize yourself with the tractor operation and control.



5.0 OPERATION

5.1 OPERATOR REQUIREMENTS

The eTT-XTP series tractor is a piece of industrial equipment and has inherent safety risks. As such, the operator of the tractor is expected to have a fork truck or similar license, or be otherwise trained in the usage of material handling equipment.

The operator should read this manual in its entirety before operating the tractor.


The operator should be familiar with all aspects of the tractor before operating it.

5.2 OPERATOR WORKSTATION

Your eTT-XTP series tractor features an ergonomically designed operator's workstation. This is the only operator workstation on the tractor. Do not sit on or stand on the tractor outside of this area during tractor movement.

The operator should be seated with the seatbelt secured when moving or operating the tractor.

Keep arms and legs within the perimeter of the tractor's frame to avoid injury. Always place the tractor in Neutral and apply the parking brake before exiting the tractor.

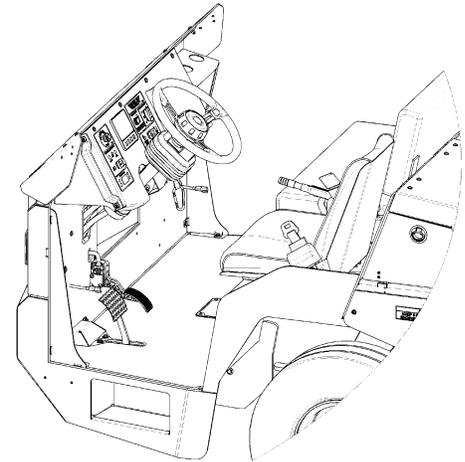

5.3 PRE-OPERATION CHECKLIST

The following inspections should be conducted as stated below. Additional inspections may be required due to unusual operating conditions.

WARNING!



Any problems noted during inspection should be corrected as soon as possible. Failure to promptly attend to problems could compromise safety and/or the tractor's performance. Do not attempt to make repairs. Contact a qualified mechanic.

5.3.1 Daily Pre-Operation Checklist

Daily Pre-Operation Checklist	Satisfactory	Service Required	Not Applicable
Walk-Around Inspection			
Verify no evidence of leaks under and around the tractor			
Visually verify tires are fully inflated			
Verify rims and tires free from damage including tire tread			
Verify tire tread is free from debris			
Verify lights, mirrors, and reflectors are clean			
Drain moisture from air tank			
Operational Checks			
Verify that the dash display is free of errors and warnings			
Verify that battery state of charge is above 30%			
Verify that horn is operational			
Verify that lights, flashers, and beacon work properly			
Cab Inspection (if equipped)			
Verify windows clean			
Verify windows free of cracks and chips			
Verify windshield wipers operate properly			
Verify heater and fans operate properly			



5.3.2 Weekly Operation Checklist

Weekly Pre-Operation Checklist	Satisfactory	Service Required	Not Applicable
Walk-Around Inspection			
Verify tire inflation pressure (pneumatic tires only)			
Battery/Motor Compartment Inspection			
Check top of battery for debris, electrolyte, or electrolyte residue			
Check hydraulic fluid level (top off if necessary)			
Verify visible wiring free of damage			
Verify battery cable connection tight			

5.4 STARTUP/SHUTDOWN AND SAFE TOWING

5.4.1 Starting the Unit

1. With feet firmly on the floor mat, adjust the seat to a comfortable position.
2. Sit in the operator seat and buckle the seat belt.
3. Verify that the FNR selector switch is in the neutral position.
4. Verify the E-stop is in the up position.
5. Turn on the tractor with the ignition switch.
6. Select the desired transmission gear (LOW for pushing, HIGH for unloaded travel)
7. Release the parking brake.
8. Verify that the intended path of the tractor is clear of obstructions and personnel and then proceed with driving.

5.4.2 Shutting Down the Unit

1. Bring the tractor to a complete stop with the service brake.
2. Put the tractor in neutral using the FNR selector switch.
3. Set the parking brake by pulling the parking brake handle.
4. Turn the tractor off by turning the ignition switch.
5. For extensive periods of time, where the tractor will not be in use, for Lithium batteries, turn the switch on the back of the battery to the off position. This will help prevent the battery from discharging overtime.

5.4.3 Pushing Safety

If pushing a load, check to see that:

- The area around the load is clear of obstructions and pedestrians.
- There is a clear area on the pushed load for contact with the push bumpers.
- Engage with the pushed load slowly to prevent possible damage to the push bumpers and/or load.

5.4.4 Cold Vehicle Care Safety

In cases where the tractor is in a cold environment, at start-up, extra care should be made to warm up the tractor before towing. Towing the tractor cold will greatly reduce the amount of weight it can tow and reduce the battery's performance.

At start-up, drive the tractor (unloaded) around to gradually warm up the battery.

For more information on battery care, refer to section 8.1 Preventive Maintenance Schedule.



5.4.5 Compressor/Booster Operation

Engine start-up:

1. Check capstart fuel level, fill if needed.
2. Pilot valve lever should be in unloaded position.
3. Turn engine control switch to "run" position, wait 3-5 seconds to prime fuel pump.
4. Turn engine control switch to "start" until the engine starts.

Engine shut-down:

1. Ensure display is on the home screen.
2. Disconnect charging cables, if connected.
3. Allow machine to idle for 3-5 minutes for cool down.
4. Turn engine control switch to the off position.


Charging / boosting instructions:

1. Capstart should be off when making connections.
2. Turn target vehicle ignition switch to accessory or battery mode, and turn the target vehicle heater fan on.
3. Connect the Vanair-approved charging cable to unit.
4. Attach jumper cable by placing red clamp to positive battery post, negative clamp to the negative battery post, ensure correct polarity.
5. Turn the Capstart engine on, following start-up procedure.
6. If target battery voltage is too high or too low, fault code will be present.

Compressor instructions:

1. To use compressor, flip pilot valve lever to on position after engine started. (loaded position)
2. Pilot valve is located on front RH side of tail shelf.
Lever horizontal - on position (loaded)
Lever vertical - off position (unloaded)
3. Allow tank to build pressure and engine idle down.
4. Drain air tanks daily to eliminate moisture.

5.5 CONTROLS AND INSTRUMENTATION

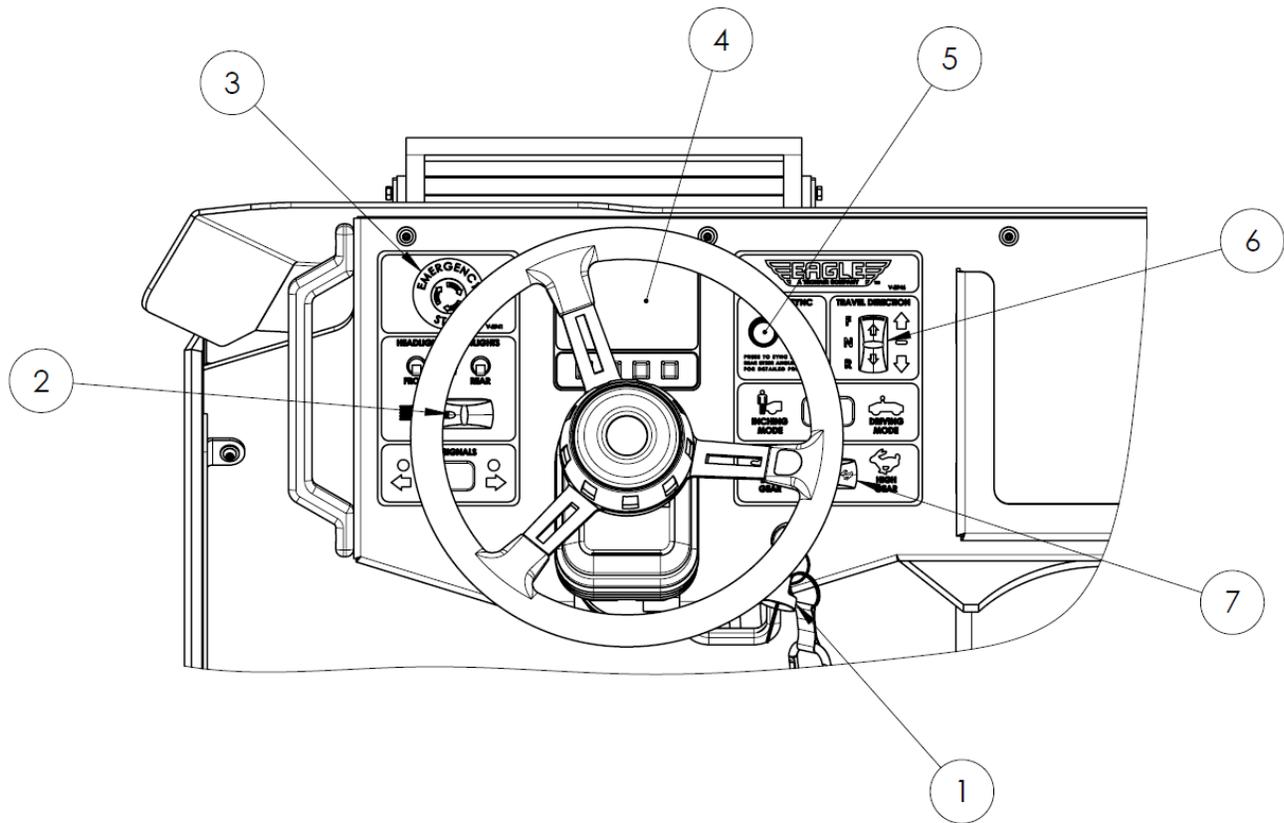

1. **Ignition Switch:** Your tractor is equipped with a keyed or keyless ignition switch. The switch provides power to the tractor to turn the controls system on. Note, the third momentary position is used to start-up the truck and the second maintained position is used to keep it on. If the E-stop is pressed, the truck will get power in the momentary switch position, but will turn off immediately in the maintained switch position.
2. **Headlight Switch:** The headlight switch is an on/off type. There is no hi/low beam control position.
3. **Emergency Stop:** In the event of an emergency, the emergency stop button will shut down the tractor.
Note that steering functionality requires the tractor be on to function.
4. **Multi-function Digital Display:** The digital display module provides critical information on the tractor operational status. The digital display module includes detailed I/O diagnostics that enable troubleshooting of various tractor systems without needing a laptop or other external device. The digital display can provide specific motor control diagnostic codes that allow easy troubleshooting.
5. **Steering Sync Switch:** Steering Sync switch allows the operator to sync the front and rear axle. The vehicle is equipped with 4-wheel hydraulic steering system. Press-hold the Steering Sync switch and turn the steering wheel all the way to left till it hits the bump stops. Release the switch and resume normal vehicle operation.
6. **Forward / Neutral / Reverse Selector Switch:** The FNR switch allows the operator to select a travel direction. The tractor should be placed in Neutral any time the operator seat is unoccupied and any time the tractor is turned off.
7. **Transfer Case Gear Selector Switch:** The transfer case gear selector allows for switching between LOW gear for pushing, and HIGH gear for unloaded operation. Gear changes can only be performed while stationary.
8. **Parking Brake Lever (Not shown above):** The parking brake can be engaged or released with the parking brake lever located between the driver and passenger seats. The parking brake should never be used to stop a moving unit except in an emergency situation.

5.5.1 Multi-Function Display

Operation Screen:

The multi-function display allows for monitoring a wide range of vehicle parameters. The default running operation screen includes all of the following diagnostic information:

- Battery charge indicator
- Speedometer
- Traction Drive Current Meter
- Low/High Gear Indicator
- Parking Brake Indicator
- Traction Motor Temperature
- Traction Drive Temperature
- Battery Voltage
- Hours



Imperial/Metric Units:

Press **C** then **B** at the same time for 3 seconds to toggle from Imperial to Metric Units.

Error Messages:

The multi-function display is capable of showing many error, warning, and informational messages such as Low Battery Level, Motor Inverter Fault, and others.

I/O Diagnostics:

Press **D** to from the Operation Screen to view the I/O diagnostics menu. This menu allows you to review a wide range of data about the vehicle. Flip between diag screens using the arrows, and use **D** to exit the diagnostics.

See below for a brief description of each parameter.

Diagnostic Screen 1 – Low/High Gear Parameters:

- MAX SPD L: Max Low motor RPM parameter setting
- MAX SPD H: Max High motor RPM parameter setting
- CUR MODE: Current Speed Mode on the traction controller

Diagnostic Screen 2 – Throttle Parameters:

- TPS1 Value: Throttle Wiper 1 current voltage
- TPS2 Value: Throttle Wiper 2 current voltage
- THR CMND: The throttle percent currently being sent to the traction drive, from -100% for full reverse to +100% for full forward.

Diagnostic Screen 3 – Traction Drive Parameters:

- TRAC DRV TEMP: Temperature of the traction drive inverter
- TRAC MTR TEMP: Temperature of the traction motor
- TRAC MTR RPM: Traction motor RPM
- TRAC RMS CUR: Current traction motor torque current

Diagnostic Screen 4 – Hydraulic Pump Parameters:

- PUMP DRV TEMP: Pump inverter temperature
- PUMP MTR TEMP: Pump motor temperature
- PUMP MTR RPM: Pump motor speed
- PUMP STATUS: ON for throttle command to pump, OFF for no throttle command
- LOW PRESS SW: Status of the low pressure switch
- HIGH PRESS SW: Status of the high pressure switch
- PRESS STATE: Pressure state based on the two pressure switches, LOW, NORMAL, or HIGH.

Diagnostic Screen 5 – Shifting Parameters:

- LOW GEAR SW: Status of the low gear switch input
- LOW GEAR SENS: Status of the low gear sensor
- SHIFT LOW SOL: Output status of the shift low solenoid
- HIGH GEAR SW: Status of the high gear switch input
- HIGH GEAR SENS: Status of the high gear sensor
- SHIFT HIGH SOL: Output status of the shift high solenoid



5.5.1 Multi-Function Display (*continued*)

Diagnostic Screen 7 – Miscellaneous I/O:

- P BRAKE SW: Parking brake switch status
- S BRAKE SW: Service brake switch status
- HIGH HYD TEMP: Hydraulic overtemp switch status
- FWD SW: Forward switch input status
- REV SW: Reverse switch input status
- BRAKE RLY: Brake relay power output status
- FAN RLY: Cooling fan relay power output status

Diagnostic Screen 8.1 – Battery Parameters for Lead Acid battery:

- STATE OF CHARGE: Current state of charge
- VOLTAGE: Current battery voltage
- TEMPERATURE: Current battery temp
- TOTAL AH DISCH: Total lifetime battery amp-hours discharged
- TOTAL AH CHARG: Total lifetime battery amp-hours charged

Diagnostic Screen 8.2 – Battery Parameters for Lithium battery:

- STATE OF CHARGE: Current state of charge
- VOLTAGE: Current battery voltage
- TEMPERATURE: Current battery temp
- Battery diagnostic parameters

5.5.2 Steering Sync Operation


The steering calibration mode is used to recalibrate the front and rear axles in the event that a synchronization is lost between the front and rear steering.

To perform steering sync, set the FNR directional switch to neutral. Apply the parking brake and set the DRIVE/INCH switch to DRIVE. Press and hold the STEERING SYNC SWITCH on the dash with one hand and, use the other hand to turn the steering wheel all the way to the left till it dead heads. Release the STEERING SYNC SWITCH. Perform visual inspection of the steering while turning all the way from left to right while being stationary.

6.0 PACKAGING AND STORAGE

6.1 HANDLING

6.1.1 Tie Downs

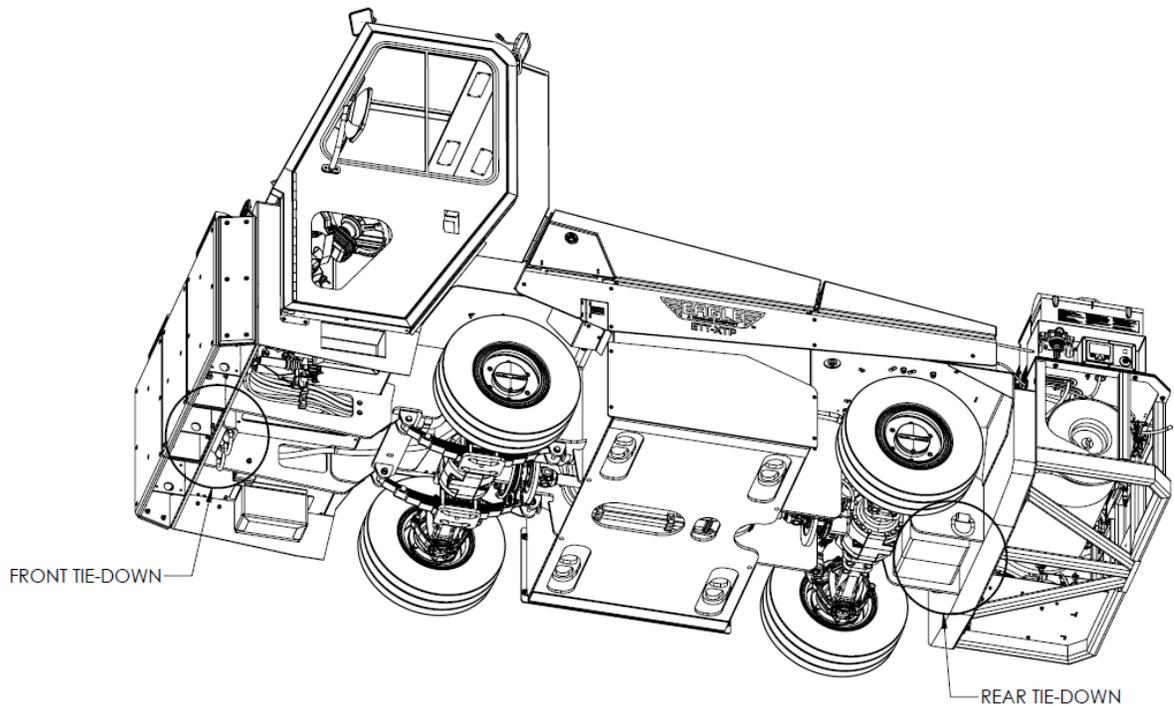


The eTT-XTP is equipped with four heavy duty tie-down rings located on the front and rear of the tractor. These tie-downs provide for safe ground transportation.

When securing the tractor, chains/straps should not make contact with the tractor in any area other than the tie down rings. At no point should the hitches be used for securing the tractor.

6.1.2 Jacking and Jack Stand locations

When lifting the eTT-XTP with jacks use the locations shown above for maximum safety.

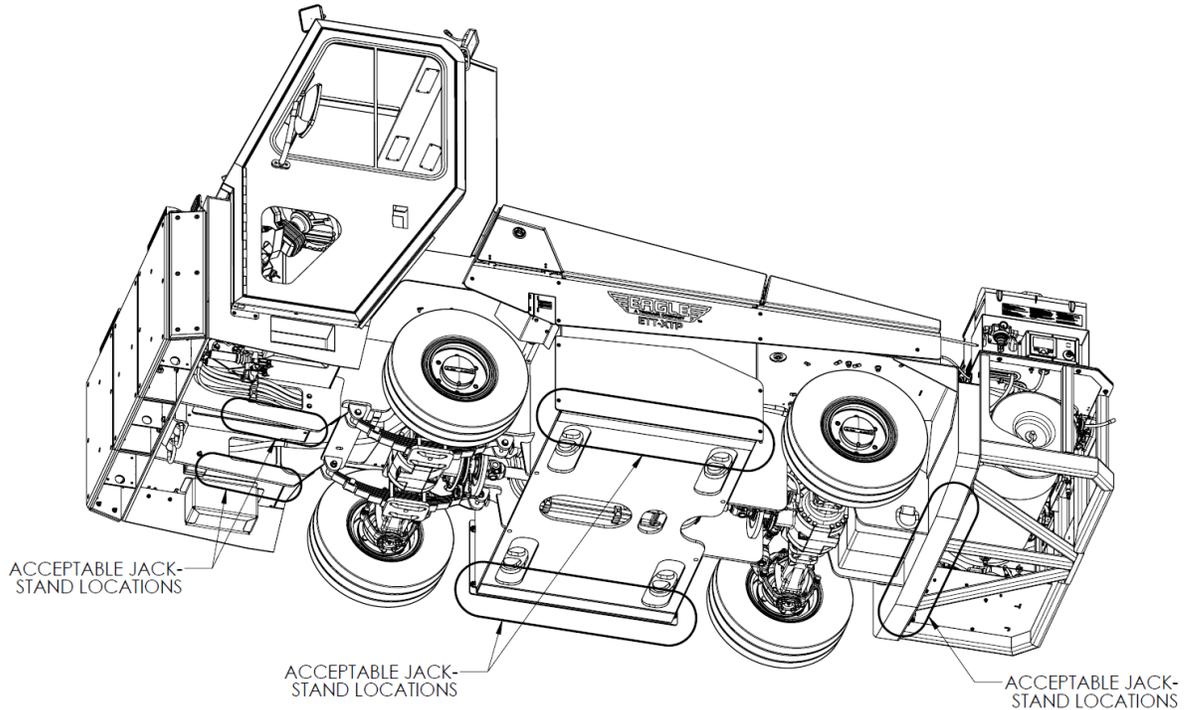


Jacks and jack stands should be rated for 5 short tons or 5 metric tons minimum when using one located at each corner of the tractor.

Wheel lug nut torque: 200 ft-lb

6.1.3 Weight Distribution Without Battery

The battery or batteries of the eTT-XTP series tractor constitutes a large portion of the total tractor weight. Removal of the battery will result in a large shift in center of gravity location. For a single battery option, the center of gravity will shift from the center. For dual battery option, the center of gravity location will not be affected.

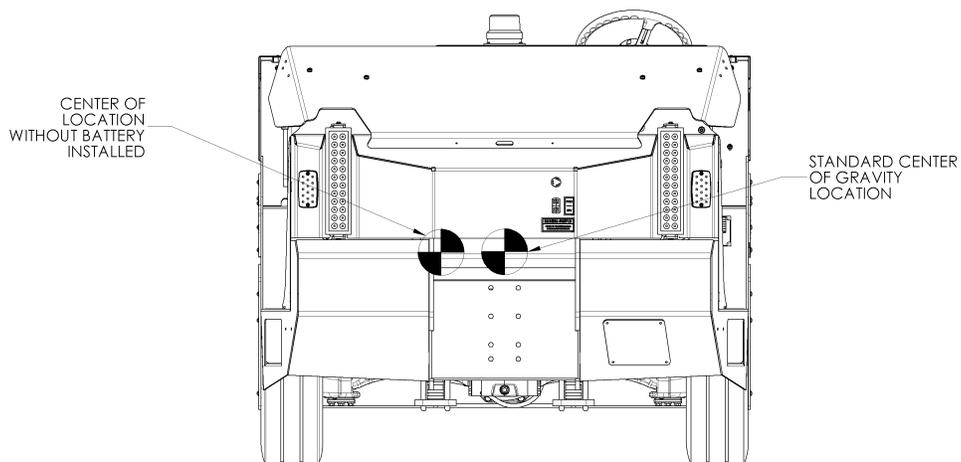


When transporting or handling a tractor without a battery installed, the new center of gravity needs to be taken into account. When lifting with a fork lift, always lift from the heavy side (non-battery side). When lifting with jacks, factor in the new center of gravity location.

6.1.4 Flat Towing

Should the eTT-XTP tractor be disabled, it can be flat towed for short distances as long as the following is observed:

- The maximum speed should never exceed 5 mph / 4.5 kph
- The maximum distance should not exceed .5 mile / .8 kilometer
- The tractor is turned off and the battery is disconnected
- The tractor should be put in Neutral using the below mentioned steps.

During towing, the axles may be steered with the steering wheel, but at a greatly increased effort.

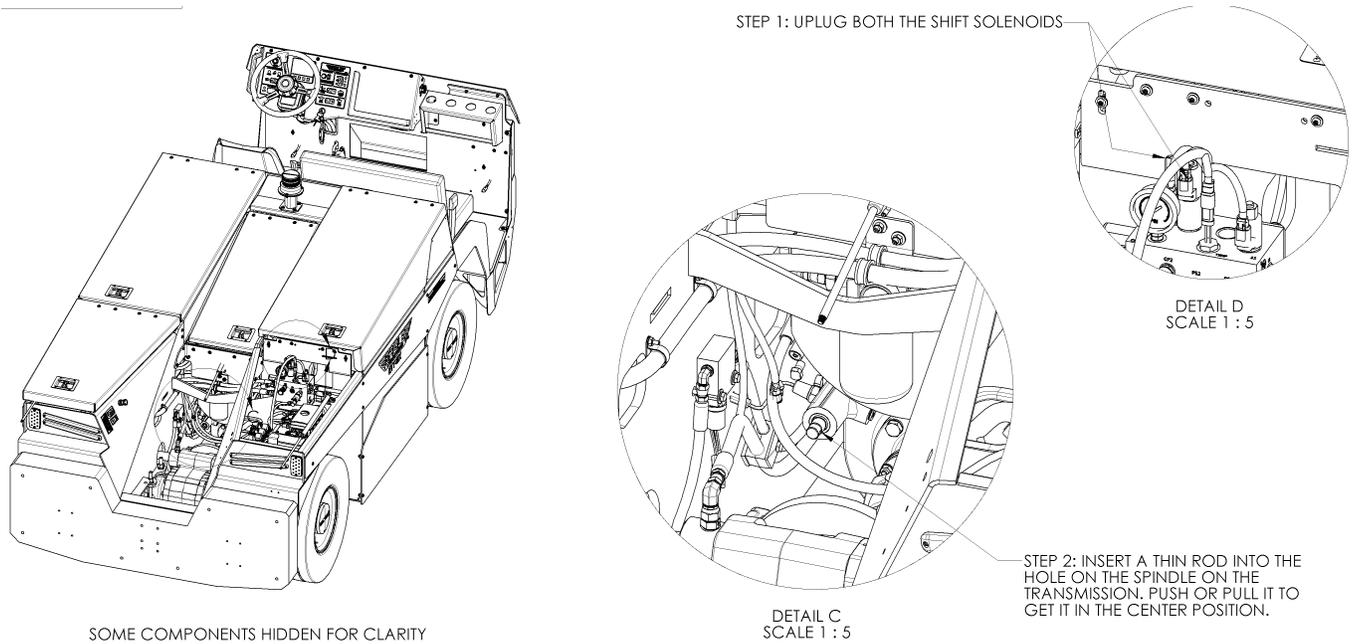



7.0 TROUBLESHOOTING

7.1 OPERATIONAL TROUBLESHOOTING

Tractor won't move when the throttle pedal is pressed
Verify that the parking brake is released. Confirm by looking at the display module for the parking brake icon. If the indicator graphic does not turn off the parking brake proximity sensor is not working correctly
Verify that the tractor is in the selected gear by looking at the dash shift selector switch and display module. A brand-new transmission may hesitate when shifting until the gears get some hours on them. Switch between high/tow a couple times to attempt to get the transmission fully into the desired gear
Verify that the tractor in in Drive Mode
Verify that no active codes are present that could be impeding travel
Use the display module diagnostics to verify the throttle pedal input is working correctly
Tractor drives very slowly (creeping) and will not speed up
The tractor may be in limp-home mode. Use the display module to verify that there are no active errors or codes that could be causing the issue
Incorrectly installed UVW cables can cause this issue. Inspect the UVW cables to verify that they are properly installed on the motor and the traction drive
A faulty motor speed sensor can cause this issue. Use the display module to watch the motor speed while driving at a slow speed. The input should be smooth during travel. If the motor speed oscillates between positive and negative while traveling, replace the drive motor encoder bearing
Low battery state of charge will put the vehicle in Limp-mode. Check if the battery state of charge is below 30%. If so, plug in to a charger
Tractor battery does not last long before needing to be charged
Battery life is directly dependent on usage of the tractor. Some causes of short battery life are shown below
Do not tow loads in high gear. High gear is intended to be used for unloaded travel only. Towing while in high gear will drain the battery very quickly
After a full equalization charge on the battery, inspect the specific gravity of each cell. If the specific gravity is lower than a full charge, have the charger serviced. If any individual cell differs by more than .020 from the nominal 1.290 (positive or negative), have the battery serviced
Verify that the drivetrain is freely moving and that no bearings, brakes, or other components are creating resistance in the drivetrain
Charger is giving an error message or not working properly
Tronair / Eagle does not service the battery charger for the truck. For the most expedient assistance with a charger issue, please contact the manufacturer of the charger directly. Tronair can assist with working with the charger manufacturer if you do not get a prompt response
Battery is not performing properly or cells are out of specification
Tronair / Eagle does not service the battery for the truck. For the most expedient assistance with a battery issue, please contact the manufacturer of the battery directly. Tronair can assist with working with the battery manufacturer if you do not get a prompt response
Vehicle is crabbing when the steering wheel is held in straight position
Perform steering sync operation using the instruction mentioned above. (<i>Section 5.5.2</i>)

7.1 OPERATIONAL TROUBLESHOOTING (*continued*)

Hydraulic pump runs more frequently than usual, or does not shut off

One possible cause is that the system cannot maintain pressure. A relief valve stuck in the open position or any other valve or seal that is bleeding pressure from the accumulator will result in reduced battery life and increased component wear

- Let the pump charge the system and then shut off. With the pump off, listen for any hydraulic bleed-by that is draining the accumulator pressure
- Watch the pressure gage located on the manifold block once the system has charged. The pressure should hold at a steady rate. If no pressure bleeds seem to be present and the system can hold pressure for a long period of time, there may be an issue with the gear pump
- Test the time to charge the accumulator from a fully depressurized state. If the accumulator takes longer to charge than when new, the hydraulic pump may be worn or damaged. An alternative cause of frequent pump operation is a loss of accumulator pre-charge. The accumulator relies on highly compressed nitrogen to store hydraulic energy. If some of the nitrogen leaks out, the accumulator will store much less energy and the pump will have to work much more often
- Test the number of turns possible on the steering wheel after the pump charges the system up, before the pump turns back in in response to low pressure. If the amount of turns differs significantly from when new, the accumulator pre-charge should be checked

7.2 ERROR CODES

Below are error codes for the traction and pump motor controllers. Should one of these devices detect an issue, the device and error code will be displayed on the vehicle display module.

202: Controller Overcurrent

Effect: System shutdown of all drive components (motor, pump, contactors)

This error means that the electrical current to the motor has exceeded pre-set limits. Possible causes are:

- The U/V/W cables to the motor are shorted to the tractor frame or each other. Verify that the U/V/W cables are in good condition and not shorted. Replace the cables if necessary.
- There is noise on the speed encoder signal. Verify that the speed encoder is working properly (that the tractor drives smoothly). If not, replace the speed encoder.
- If the motor cables and speed encoder are working correctly and the issue persists, replace the controller.

207-209: Phase Not Connected

This error means that one of the U, V, or W wires are not connected properly. Possible causes are:

- One of the U, V, or W wires is loose. Verify motor U, V, and W connections are tight and secure.
- One of the U, V, or W wires is faulty or improperly crimped. Verify that the U, V, and W wires are in good condition with good crimps. Replace as necessary.

Motor Temperature Sensor: Ensure motor temperature sensor is connected properly.

600: Not Connected – Check wiring on the motor temperature sensor. Sensor is defective.

601: Short Circuit – Check wiring on the motor temperature sensor. Sensor is defective.

602: Moderately high – Event is set if motor temperature is above a predefined setpoint. Max allowed AC current is limited.

603: High – Event is set if motor temperature is above a predefined setpoint. Motor is disabled.

604: Moderately low – Event is set if motor temperature is below a predefined setpoint. Max allowed AC current is limited.

Controller Temperature Sensor: Ensure cooling fins are free of debris.

700: Not Connected – Sensor inside the controller is defective.

701: Short Circuit – Sensor inside the controller.

702: Moderately high – Event is set if controller temp is above a predefined setpoint. Max allowed AC current is limited.

703: High – Event is set if controller temp is above a predefined setpoint. Motor is disabled.

704: Moderately low – Event is set if controller temp is below a predefined setpoint. Max allowed AC current is limited.

800: Sensor Supply not connected

801: Sensor Supply High current

This error means that the 5V and 12V controller output currents are out of range. Possible causes are:

- The motor speed encoder connection is faulty. Verify encoder wiring connection and repair any issues.
- The motor speed encoder is faulty. Replace the motor speed encoder.



7.2 ERROR CODES (Continued)

802-805: Encoder Fault

Effect: Shutdown throttle

This error means that the motor speed encoder data cannot be read reliably by the controller. Possible causes are:

- The motor speed encoder has a wiring connection issue. Verify speed encoder connection and wiring.
- The motor encoder is faulty. Replace the encoder.

Open Drain Output faults: Check wiring for respective coils below or the coils are defective.

1001, 1011, 1021, 1031 – Main contactor faults.

1002, 1012, 1022, 1032 – Shift low solenoid faults

1003, 1013, 1023, 1033 – Shift high solenoid faults

1004, 1014, 1024, 1034 – Brake light relay faults

1006, 1016, 1026, 1036 – Cooling fan relay faults

1250- 1280: PDO Timeout

Effect: Shutdown throttle

This error means that the CAN communication failed to transmit data properly. Possible causes are:

- Faulty CAN wiring. Verify the CAN communication wires between the controller and the display module and repair as necessary.
- Missing CAN termination jumper. Verify the jumper wire connection between pins 9 and pins 22 on the pump controller
- Missing CAN termination resistor near the display. Verify the 120-ohm 3 pin resistor under the dash is connected.

10110 – 10114 Pedal Handler faults

- Check if the wiring for accelerator pedal is intact.
- Faulty accelerator pedal.

Code	Fault Message	Effect of Fault	Possible Cause	Set/ Clear Conditions
Warning	Return to Neutral Before Driving	Disable throttle output	The unit is keyed on with the vehicle direction rocker set to Forward or Reverse instead of Neutral	Set Gear To Neutral
Warning	Inch Mode Time Up	Disable throttle output	Inching hold time surpassed	Release The Forward/ Reverse Inching Switch And Re-Press
Fault	Throttle Compare Fault, Service Throttle Pedal	Disable all traction and pump activity	If the throttle pedal wiper 1 and 2 compare fail	Force A Key Cycle To Reset
Fault	Motor Control Fault	Disable all traction and pump activity	If the motor RPM exceeds 1.5x the command speed during inching	Force A Key Cycle To Reset
Fault	Pressure Switch Or Pump Failure, Service Hydraulic System	Disable all traction and pump activity	If the pump motor runs for 30 seconds continuously without triggering the Pressure Good or Pressure High state	Force A Key Cycle To Reset
Fault	Hydraulic Fluid Over Temp	Disable all traction and pump activity	If the hydraulic temp switch shows over-temp	Force A Key Cycle To Reset
Fault	Pressure Switch Fault, Service Pressure Switches	Disable all traction and pump activity	If both high and low pressure switches are OFF at the same time	Force A Key Cycle To Reset
Fault	Low Battery, Charge Required	Reduce vehicle speed to 1 mph	battery SOC falls to 30% or lower	Force A Key Cycle To Reset
Fault	Battery Low Voltage, Please Charge Or Service	Reduce vehicle speed to 1 mph	If the battery voltage reported falls below 60V for 2 or more seconds at a time	Force A Key Cycle To Reset
Fault	Gear Shift Fault	Disable throttle output	If the gear sensor output stays 0 for 5 seconds	Gear Sensor=1
Fault	Operator Presence Switch Error, Traction Disabled	Disable all traction and pump activity	Operator seat switch opened	Set Gear To Neutral. Seat Switch = Closed



8.0 MAINTENANCE

8.1 PREVENTIVE MAINTENANCE SCHEDULE

Any items found to be deficient during the preventive maintenance review should be repaired or replaced. All fluids found low should be topped off. Refer to this section for fluid and filter specifications and part numbers.

* See relevant diagrams/instruction in this section for these items.

† Whichever time period is shorter.

Preventive Maintenance Item	Daily	Weekly	First 50 hours	First 150 hours	500 hours	1000 hours or annually †
Perform daily pre-operation checklist	X					
Check hydraulic fluid level and top off as necessary (Section 8.3)		X				
Verify tire pressure and add air as necessary		X				
Perform battery equalization charge then water (For Battery option 1)		X				
Re-torque front and rear axle U-bolts			X			
Drain and replace axle oil; center & planetaries (1 st time only: Section 8.5)				X		
Drain and replace transfer case oil (1 st time only: Section 8.6)				X		
Check axle oil level, center and planetaries					X	
Clean axle oil breathers (Section 8.5)					X	
Grease upper and lower kingpin grease fittings on axles					X	
Check transfer case oil level					X	
Clean transfer case oil breather					X	
Grease driveshaft U-joints and slip shafts					X	
Inspect wheel lug nuts and tighten if necessary					X	
Check all battery cable connections for tightness and corrosion						X
Drain and replace axle oil; center and planetaries (Section 8.5)						X
Clean axle magnetic drain plugs						X
Drain and replace transfer case oil (Section 8.6)						X
Clean transfer case magnetic drain plug						X
Drain hydraulic fluid from tank and replace (Section 8.3)						X
Remove and clean hydraulic magnetic drain plug						X
Replace hydraulic filter, A-ES12-0485 (Section 8.4)						X
Inspect axle U-bolts for loosening and tighten if necessary						X
Re-torque driveshaft U-joint straps and flange hardware						X
Inspect wet brake discs for wear and replace if necessary						X
Check front parking brake disc and pads and replace if necessary						X
Inspect steering tie-rod ball ends for play and replace if necessary						X
Inspect steering tie-rod adjustment nuts and tighten if necessary						X
Inspect steering stops and re-set/tighten if necessary						X
Inspect steering sensor potentiometers						X



8.1 PREVENTIVE MAINTENANCE SCHEDULE *(continued)*

Preventive Maintenance Item	Daily	Weekly	First 50 hours	First 150 hours	500 hours	1000 hours or annually †
Inspect all hydraulic tubes and hoses for wear/damage and leaks						X
Inspect hitch pins for wear and replace if beyond specifications						X
Inspect motor / transfer case mount isolators and replace if necessary						X
Check steering accumulator pre-charge pressure (key-on hours)						X

8.2 FLUIDS

		FLUID SPECIFICATIONS	
Fluid	Recommendation	Requirement	Volume approximate
Hydraulic Fluid	MOBIL AERO HF	MIL-PRF-5606	7.5 gal (28.4 L)
Axle Gear Oil	FUCHS TITAN EG LS 90 (GL5)	API GL5	1 gal (3.7 L)
Transfer Case Oil	ELF SF3 (GL4)	API GL4	1 gal (3.7 L)
Brake Fluid	MOBIL AERO HF	MIL-PRF-5606	0.5 gal (2.0 L)
Refrigerant (for cabs with AC)	R-134A	R-134A	TBD


8.3 HYDRAULIC SIGHT GLASS AND FILL

Hydraulic Fluid:

Recommendation MOBIL AERO HF


Total Volume 10.3 gal (39 l) approximate

Tank Volume 7.5 gal (28.4 l) approximate

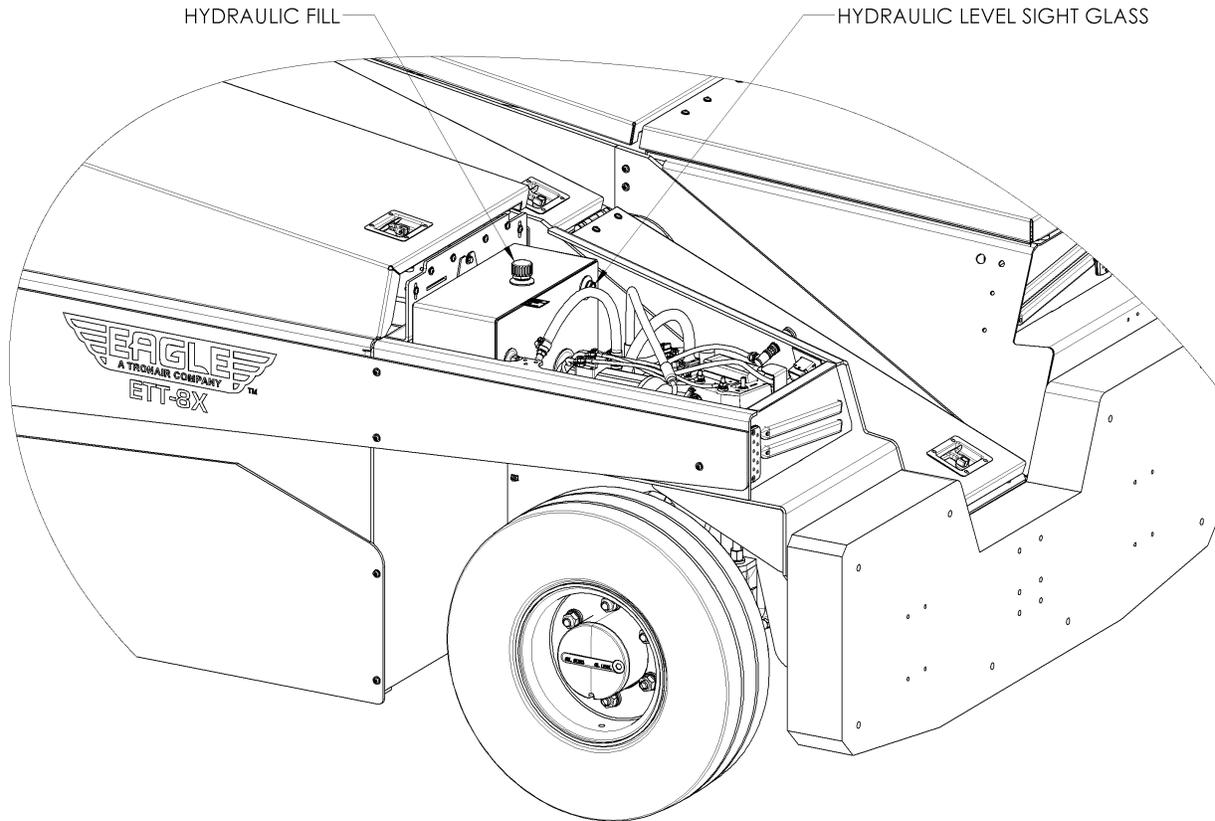

HOOD REMOVED FOR CLARITY

- 8.4 HYDRAULIC FILTER
Hydraulic Filter A-ES12-0485

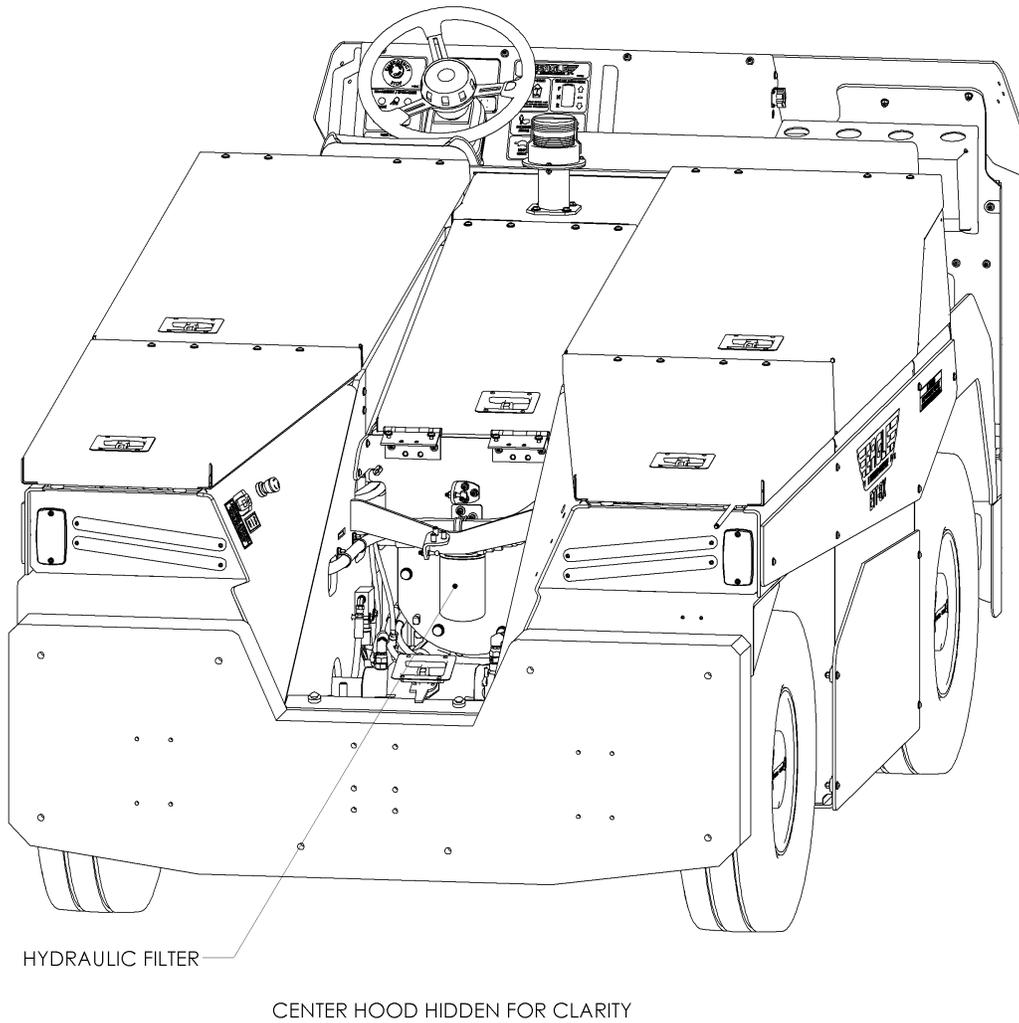


8.5 PLANETARY AXLE SERVICE POINTS

Axle Gear Oil:

Recommendation	Castrol Trans-C SAE 50
Center Volume	0.9 gal (3.5 l) approximate
Planetary Volume (each)	0.1 gal (0.4 l) approximate
Total Volume (each axle)	1 gal (3.9 l) approximate

Oil level should be maintained at the bottom of the planetary and differential Oil Fill ports.

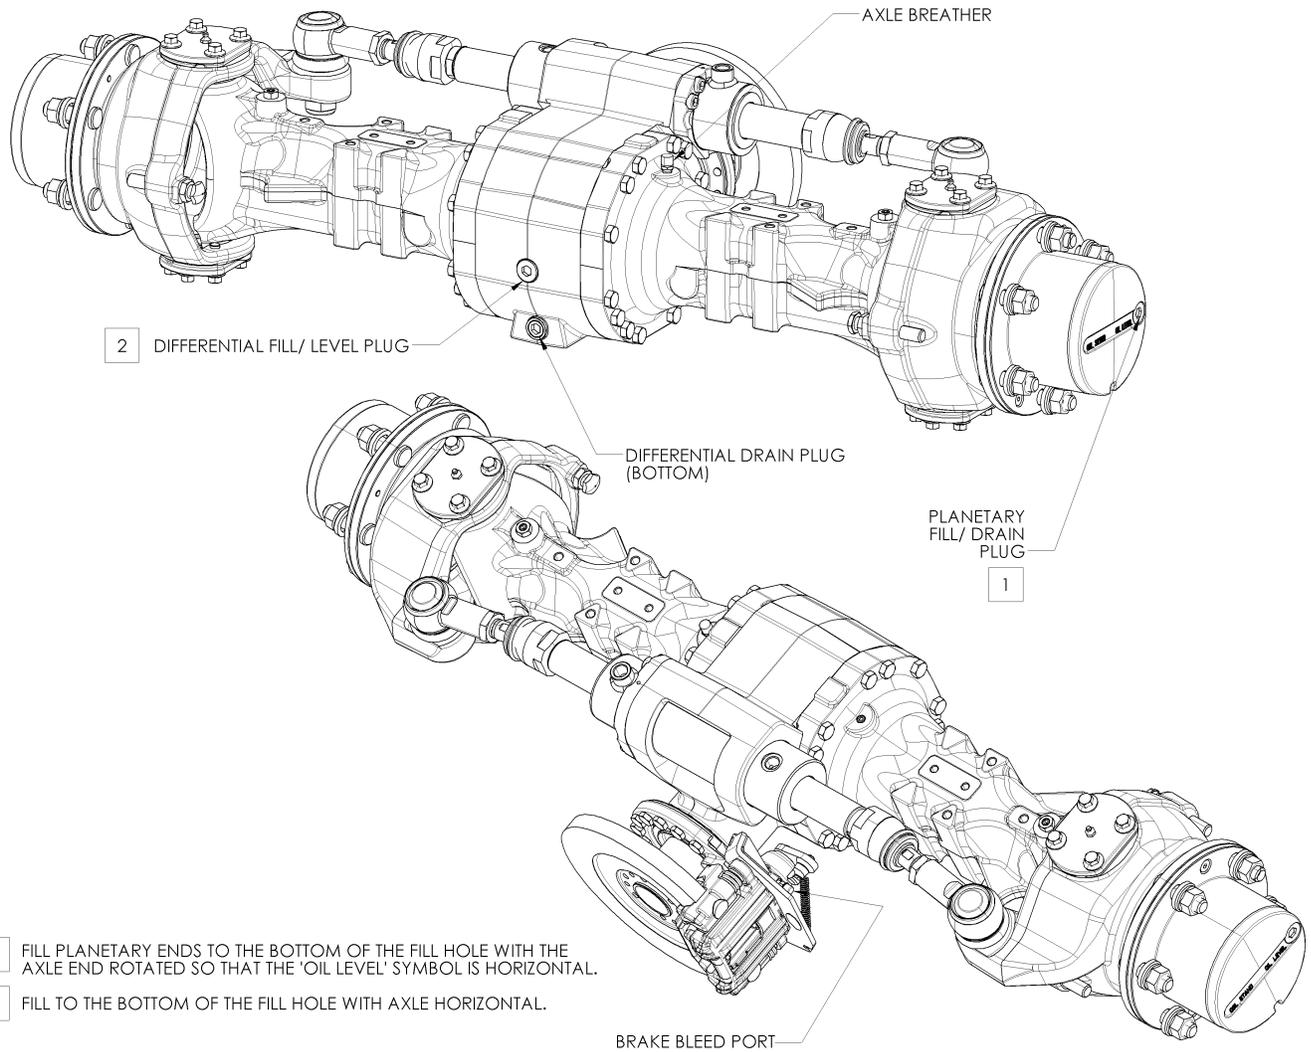

- 1 FILL PLANETARY ENDS TO THE BOTTOM OF THE FILL HOLE WITH THE AXLE END ROTATED SO THAT THE 'OIL LEVEL' SYMBOL IS HORIZONTAL.
- 2 FILL TO THE BOTTOM OF THE FILL HOLE WITH AXLE HORIZONTAL.


8.6 TRANSFER CASE SERVICE

Transfer Case Oil:

Recommendation ELF SF3 (GL4)

Volume 1 gal (3.7 l) approximate

Oil level should be maintained at the bottom of the Oil Fill port.

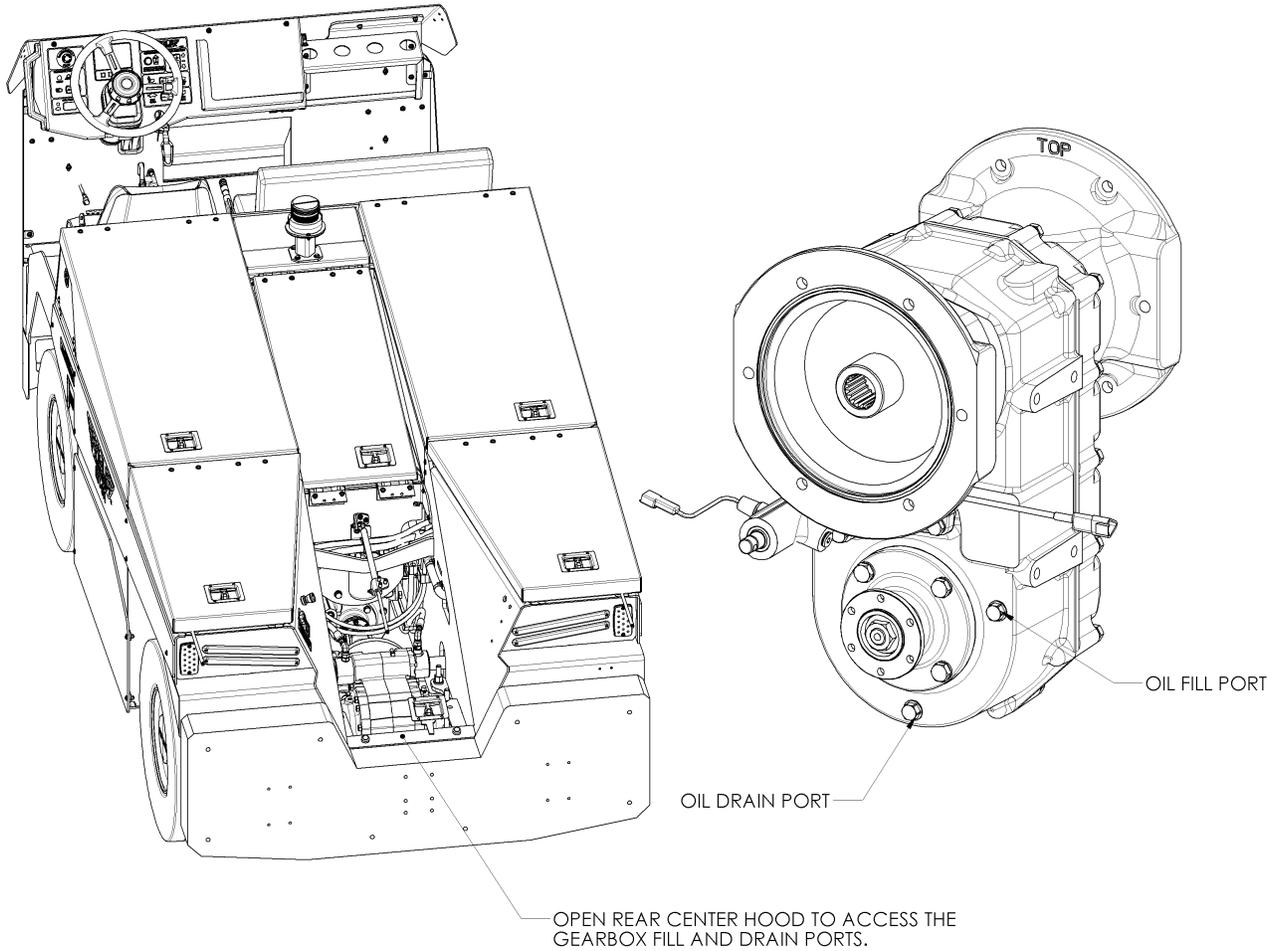

8.7 BRAKE SERVICE



Brake Fluid:

Recommendation MOBIL AERO HF

Volume 0.5 gal (2.0 l) approximate

Use bleed ports on brake caliper sets, front and rear. Fill master cylinder reservoirs, re-cap reservoirs, and then pump brakes to fill lines and bleed air. Repeat until lines are full and reservoir is $\frac{3}{4}$ full.

Volume shown is approximate to fill both front and rear lines. Rear lines will require more fluid than the front.

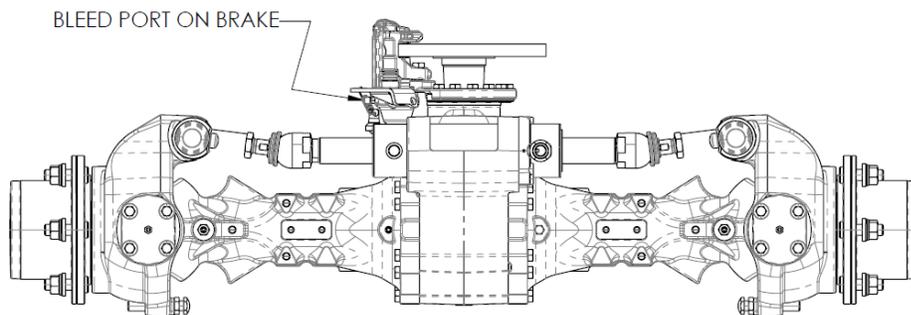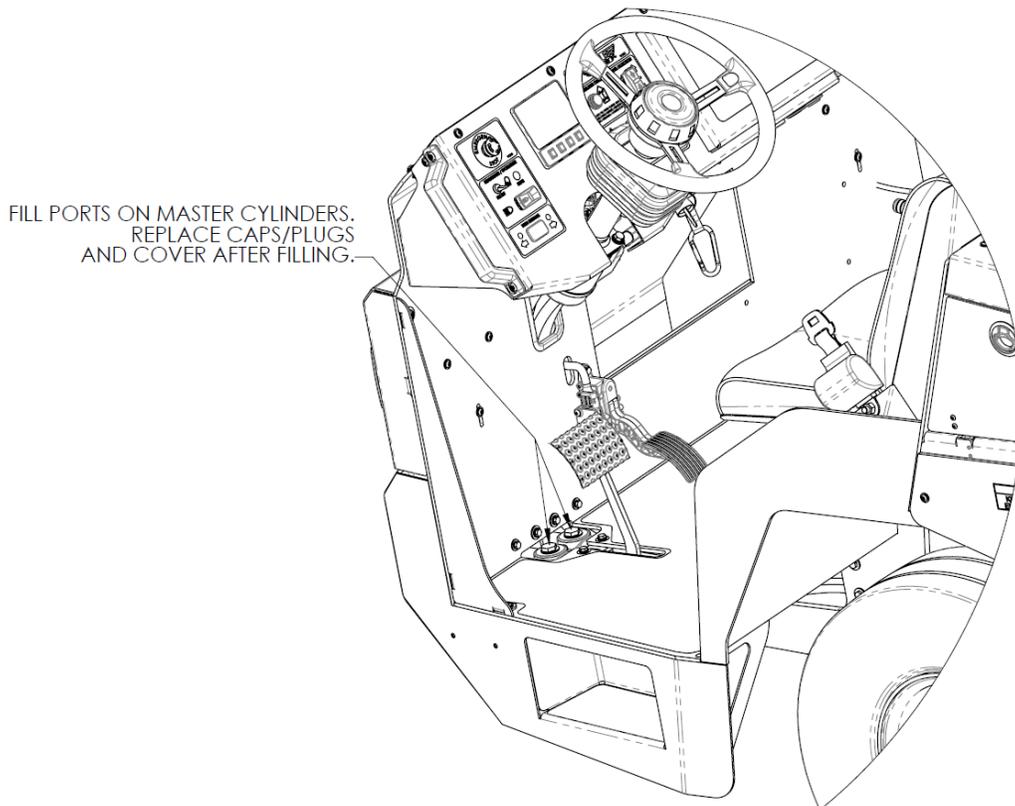



8.8 BATTERY CARE INSTRUCTIONS

The eTT-XTP has the option to be configured with a lead acid or lithium battery. Both options have different requirements for care to be considered to ensure the best potential for performance and battery life.

Note: Tronair / Eagle Tugs is not a battery nor charger manufacturer, but Tronair may recommend certain brands and models. The below information applies regardless of what brand and model traction battery or charger is on the truck.

8.8.1 Lead Acid Battery Care

8.8.1.1 Battery Basics

The eTT-XTP traction battery is a heavy-duty industrial battery designed specifically for electrical vehicle usage. The battery is a collection of 40 individually sealed cells combined into two heavy gage steel trays. The battery provides the motive power for the eTT-XTP as well as providing necessary ballast weight.

For a lead acid battery, individual battery cells consist of lead plates separated from each other by porous mats. The lead plates are immersed in a sulfuric acid solution. Discharging and charging the battery causes chemical reactions between the lead plates and the sulfuric acid. This chemical process is repeatable and provides the basis for continued charge and discharge cycles.

Batteries produce both voltage and amperage. Voltage is the measure of electrical potential and can be thought of analogously as the fluid "pressure" in the electrical system. Amperage is the quantity of current flow and is likewise analogous to fluid "flow". Both voltage and amperage work together to do work in the battery system. The product of voltage and amperage is watts.

Each battery cell produces a nominal voltage of 2.0 volts. The actual voltage ranges from 2.15 volts when fully charged, to 1.97 volts when completely discharged. The cells are wired in series which causes the voltage to add from each cell. The 40 cells at 2.0 volts per cell creates an 80V nominal battery.

Batteries are rated in ampere-hours. An ampere hour is the number of amps (current) a battery can supply in a given amount of time. Most batteries are rated at a 6-hour discharge, meaning that the current output is spread over a 6-hour period of time. The ampere hour rating along with the battery voltage determine the total amount of energy a battery can store.

To measure the current state of charge of a battery cell, the most accurate method is by using specific gravity. The acid solution in the battery varies greatly by charge level. A fully charged battery will have a very strongly acidic electrolyte. In a fully discharged battery the acid solution is very weak. This has to do with the sulfuric acid in the solution being absorbed into the lead plates during discharge. Sulfuric acid and water have different densities, so an accurate measure of the density (specific gravity) of the electrolyte will tell you the percentage of acid present in the electrolyte. The specific gravity reading can be measured with a hydrometer and should be compared to a chart provided by the battery manufacturer to accurately determine state of charge.

The battery electrolyte loses water over time to both evaporation and electrolysis (breaking up of water into hydrogen and oxygen through an applied electric current). The electrolysis happens naturally as part of the charging cycle. Water has to be re-introduced into the battery to account for the water loss. Each cell should be topped off regularly to prevent a low electrolyte situation. Low electrolyte in the battery will lead to reduced power output and can damage the cells.

To ensure that all 40 individual cells are working at the same level, an equalization charge is periodically required. The equalization charge is essentially a controlled overcharge. It ensures that all cells are at their absolute maximum capacity. Battery water levels should be corrected immediately after equalization. The equalization charge will have heated the electrolyte, causing it to expand and be at its highest level. If you water a cold battery and then equalize, the electrolyte will overflow, spilling acid on the ground.



8.8.1.2 Charger Basics

The purpose of the charger is to use electrical power to reverse the chemical reaction in the battery and return it to a charged state.

During the charge process, the lead plates in the battery reverse their chemical charge and the electrolyte acid becomes more concentrated. The specific gravity will also change, reflecting the change in acid concentration.

Tronair only recommends the use of smart chargers with eTT-XTP batteries. Smart chargers communicate with a battery monitoring module installed to the battery. This module informs the charger of voltage and temperature of the battery to prevent overcharging and extend the life of the battery.

The charge cycle starts out at a high amperage, up to 23 amps per 100 ampere hours of battery capacity. As the battery charge state rises, the charge amperage will slowly taper off to 5 amps per 100 ampere hours of battery capacity until the battery reaches a full charge.

An equalization charge will hold the final charge amperage of 5 amps per 100 ampere hours for approximately three hours past full charge. This provides an opportunity for all cells to reach their absolute maximum charge levels. The equalization phase of charging will also cause degassing of the electrolyte through electrolysis. The bubbles created during degassing are beneficial to the battery. The bubbles stir the electrolyte and prevent concentrated acid from settling to the bottom of the battery cells.

Batteries produce heat when discharged and charged. During charging the battery temperature can rise significantly to the point of damaging the battery. The battery should never exceed 115°F/46°C at any time. A smart charger monitors the temperature and will cut back on charging amperage should the battery temperature approach the 115°F/46°C limit.

The eTT-XTP tractor line features a Euro/DIN style charge connector on the side of the tractor. This connector is where you plug the charger into the tractor. A small switch located in the charge connector will prevent tractor drive-off when the charger is plugged in.


8.8.1.3 Cold Weather Usage

There are two issues that batteries face in extremely cold weather; Reduced Capacity and Freezing Electrolyte.

8.8.1.4 Reduced Capacity

As the battery temperature drops, the internal resistance of the battery increases and the usable capacity is decreased. At a battery temperature of -10°F / -23°C , the battery can only deliver roughly 50% of the rated capacity. At higher loads, the usable capacity is reduced even further. During a tow event, the eTT-XTP tractor can demand large amounts of current from the battery. A battery cold-soaked to a low temperature may not be able to maintain voltage at the required current, leading to error messages and an inability to tow the load.

See the below chart for a general idea of the temperature effect on capacity.

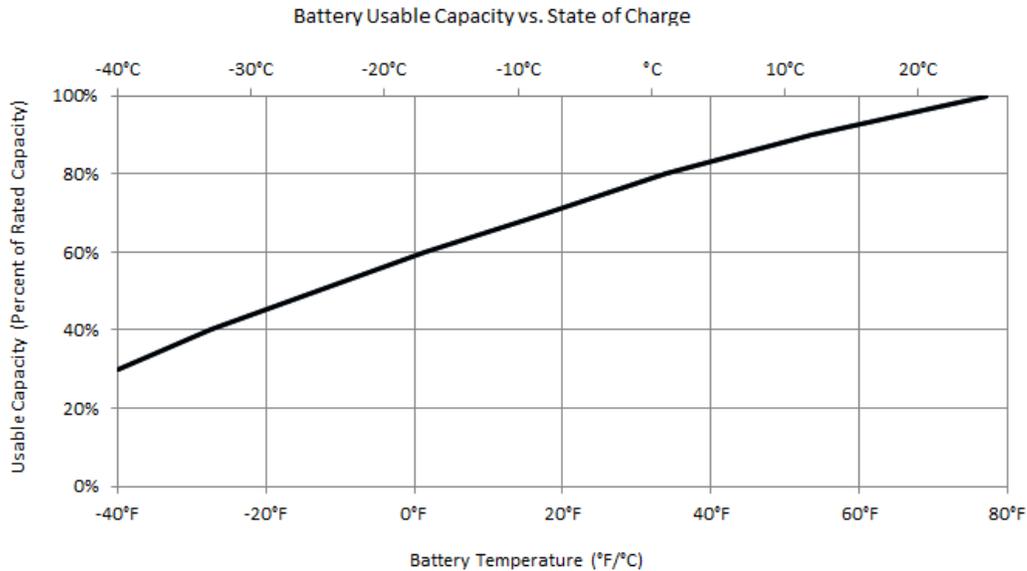


There are a few ways to ensure that the tractor will be able to perform in cold weather:

1. When leaving a tractor/battery in cold weather for long periods, ensure that the battery is fully charged. This will ensure the maximum possible capacity during cold operation, and will also prevent possible electrolyte freezing (see following page).
2. The battery will produce heat internally during normal usage. Because of this behavior, a battery stored in a climate controlled environment will be usable in a non-climate controlled environment without degradation of performance. The battery will maintain the internal temperature while in use.
3. The battery is heated during a charge cycle. This can warm or maintain battery temperature even if the battery is being charged in a cold environment.

8.8.1.5 Electrolyte Freezing

The electrolyte in the eTT-XTP traction battery is a weak sulfuric acid solution. As the battery is discharged, the acid is absorbed by the battery plates and the electrolyte becomes weaker turning into mostly water. A deeply discharged battery will readily freeze in cold weather. If the electrolyte freezes it can damage or destroy the battery.

It is very important that any tractor/battery stored in cold weather be stored with a fully charged battery. This will eliminate the danger of freezing. Refer to the below chart as a reference for state of charge versus freezing temperature.

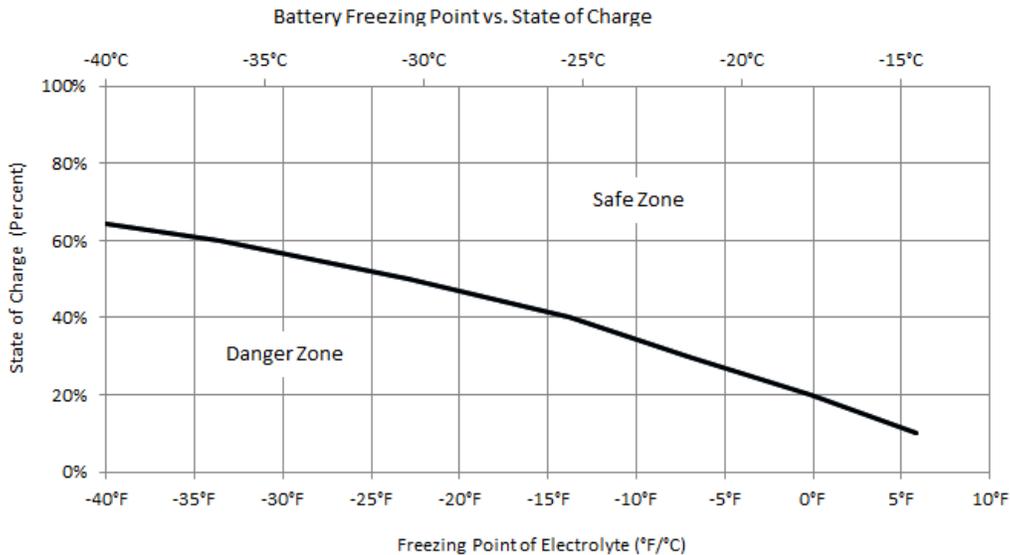

8.8.2 Lithium Battery Care

8.8.2.1 Cold Weather Usage


Lithium under cold weather conditions cannot accept a charge under 32°F. The battery will need to be warmed up either by heaters or by driving the eTT-XTP tractor at start-up. However, the batteries provided include a “Battery Management Systems” (BMS), and will protect the battery from taking a charge at low temperatures until it has warmed up to optimal conditions. BMS also monitors the voltage and temperature of the battery to prevent overcharging and extend the life of the battery.

If the battery is cold, it will also lead to low performance results. Cold battery temperatures will greatly reduce the load capacity at which the eTT-XTP tractors can tow. Extra care should be taken to ensure the battery is warmed up before towing a load.

8.8.2.2 Charger Basics

In regards to storage, lithium batteries have a much slower self-discharge rate in comparison to lead acid. This means that lithium doesn't require a full charge, equalization charge, or float charge when left unused for extensive periods of time. However, it is recommended for long term storage to turn off the battery's switch, located on the back, to help prolong the battery's life.

9.0 **DRIVETRAIN**
9.1 **ASSEMBLY, COOLING FANS**

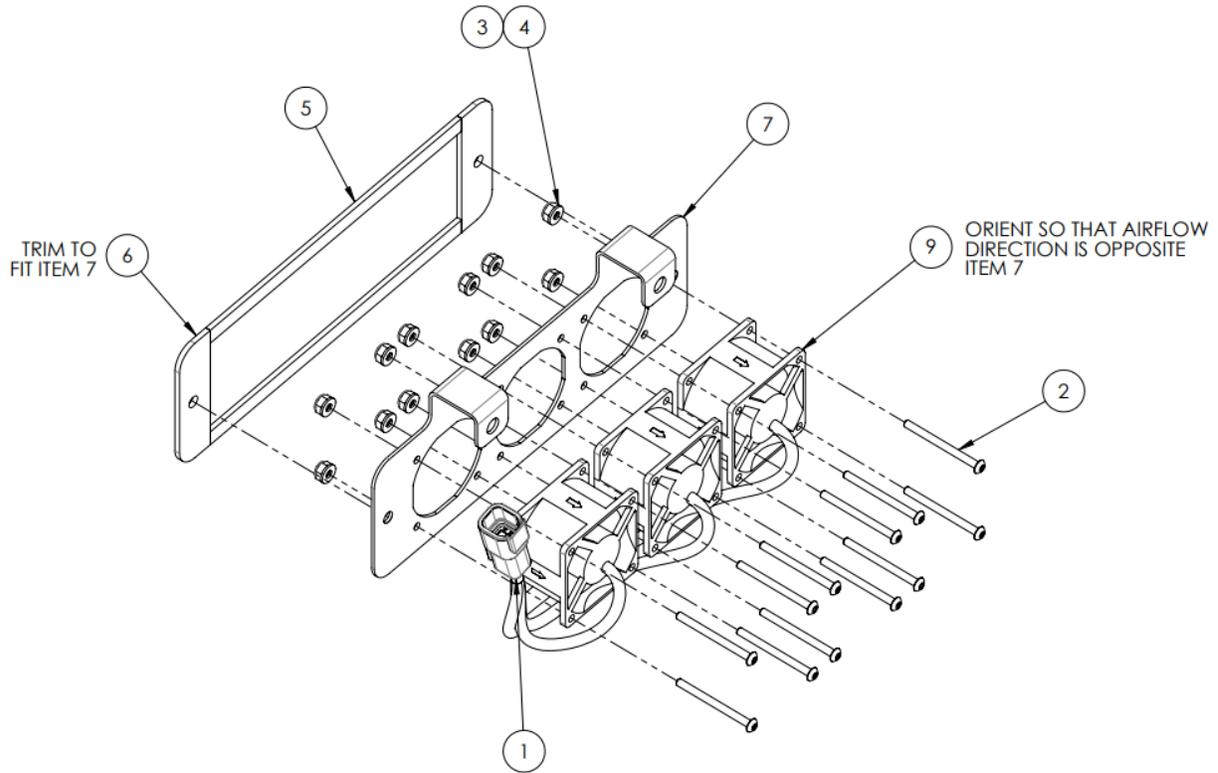


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	DTM04-6P	DEUTSCH CONNECTOR	1
2	G-1154-102220	SCREW, #8-32 X 2.00" LG. SST SOC BUTT. HD CAP	12
3	G-1202-1020	STOPNUT, #8-32 ELASTIC	12
4	G-1250-1020N	FLATWASHER, #8 NARROW	12
5	H-1204-03	TAPE, NEOPRENE FOAM SEALING, 1/8" X 3/8"	As Needed
6	H-1204-10	TAPE, NEOPRENE FOAM SEALING, 1/8" X 1"	As Needed
7	S-3930-00	FAN MOUNTING PLATE (P)	1
8	WM-6P	DEUTSCH CONNECTOR LOCK	1
9	Z-11063	ASY, FAN WITH TERMINALS	3

9.2 ASSEMBLY, MOTOR CTRLR WITH HEATSINK

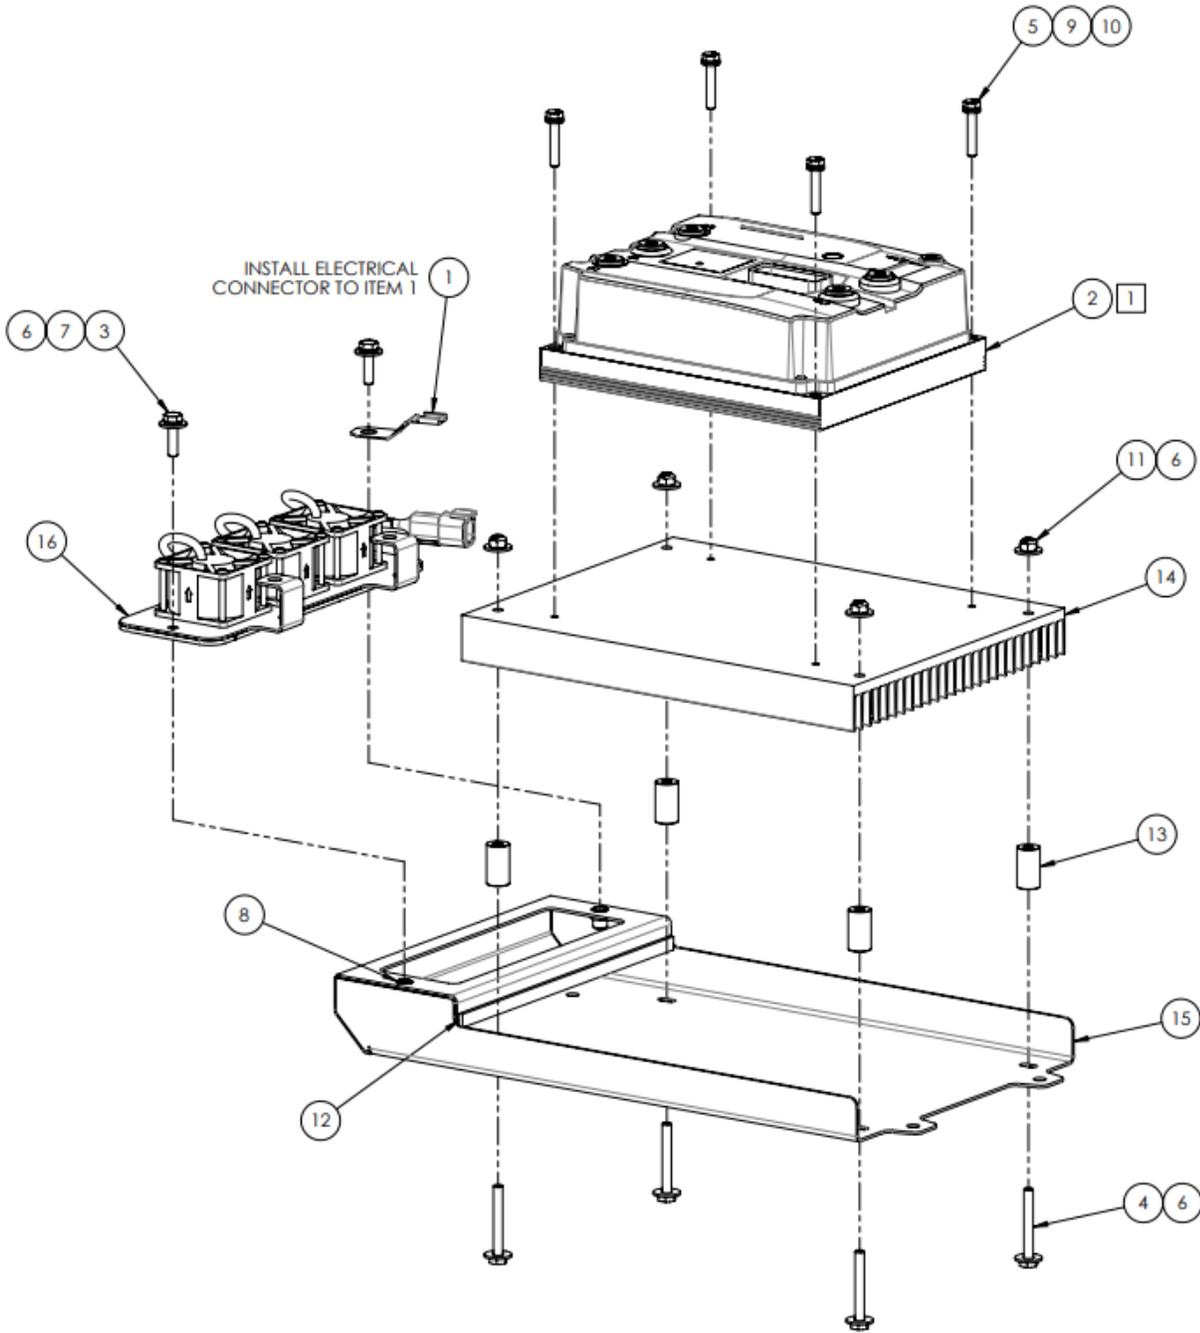

1 APPLY A THIN UNINTERRUPTED LAYER OF THERMAL INTERFACE COMPOUND SUCH AS TOCTITE TC 4 OR EQUIVALENT TO BOTTOM OF DRIVE BEFORE MOUNTING TO HEATSINK





9.2 ASSEMBLY, MOTOR CTLR WITH HEATSINK (continued)

Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	1027-003-1200	DEUTSCH RETAINER CLIP	1
2	EC-3475	INVERTER, INMOTION 700A	1
3	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	2
4	G-1100-105020	BOLT, 1/4-20 X 2.0" LG HEX HD GR 5	4
5	G-1114-060035	BOLT, M6X1.0 X 35 CLASS 8.8	4
6	G-1250-1050W	G-1250-1050W	10
7	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	2
8	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	2
9	G-1514-M60R	LOCKWASHER, M6 REGULAR	4
10	G-1515-M60	FLATWASHER, M6	4
11	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	4
12	H-1204-03	TAPE, NEOPRENE FOAM SEALING, 1/8" X 3/8"	As Needed
13	H-4566-11	SPACER, .252 ID X .625 OD X 1.125	4
14	H-5024	HEATSINK, MODIFIED	1
15	Z-11005-00	WLD, DRIVE COOLING PLENUM (P)	1
16	Refer above section	ASY, COOLING FANS	1




9.3 ASSEMBLY, MOTOR AND XFER CASE

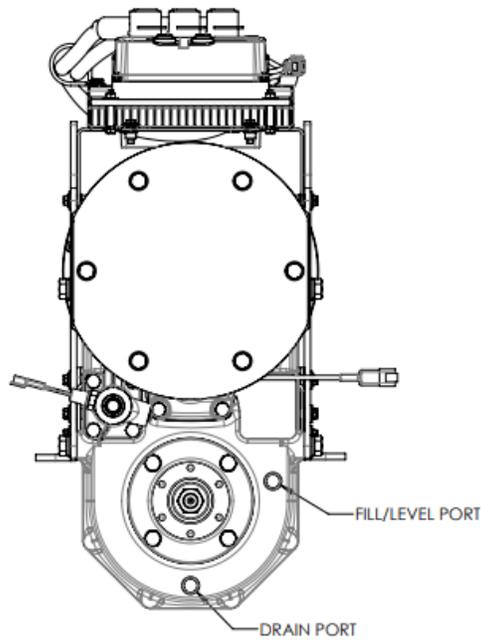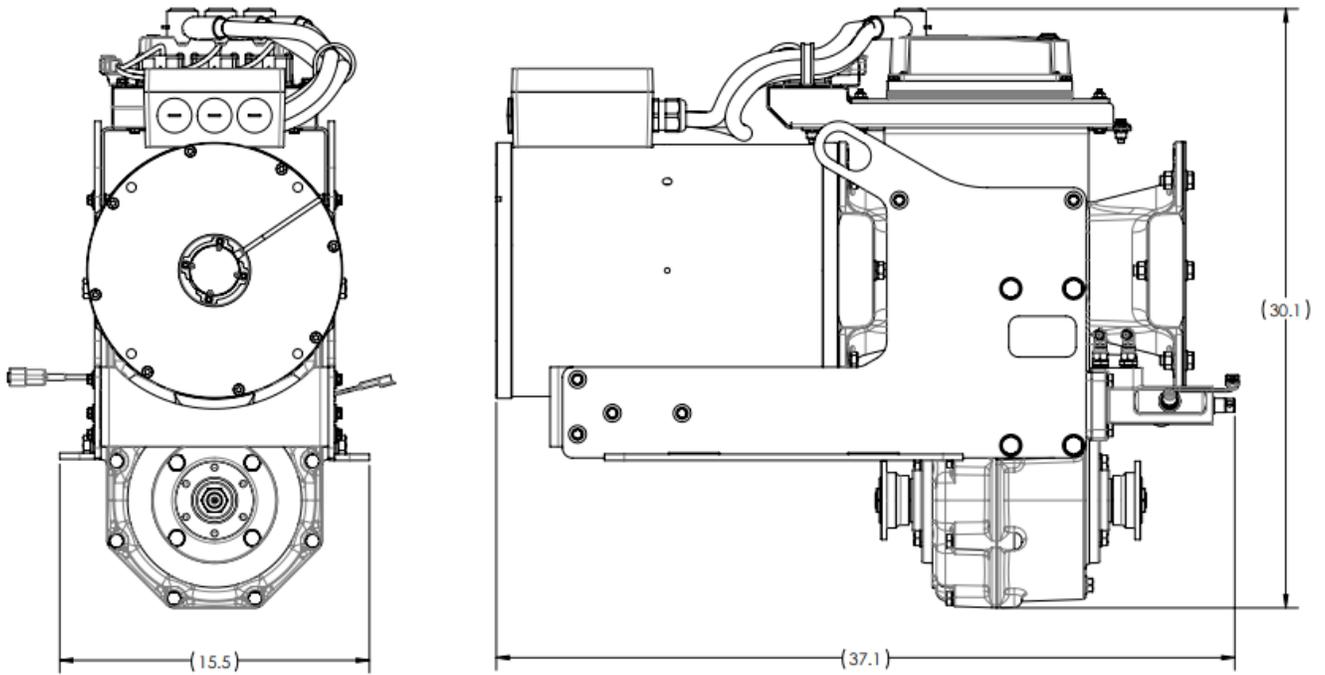

9.3 ASSEMBLY, MOTOR AND XFER CASE (continued)

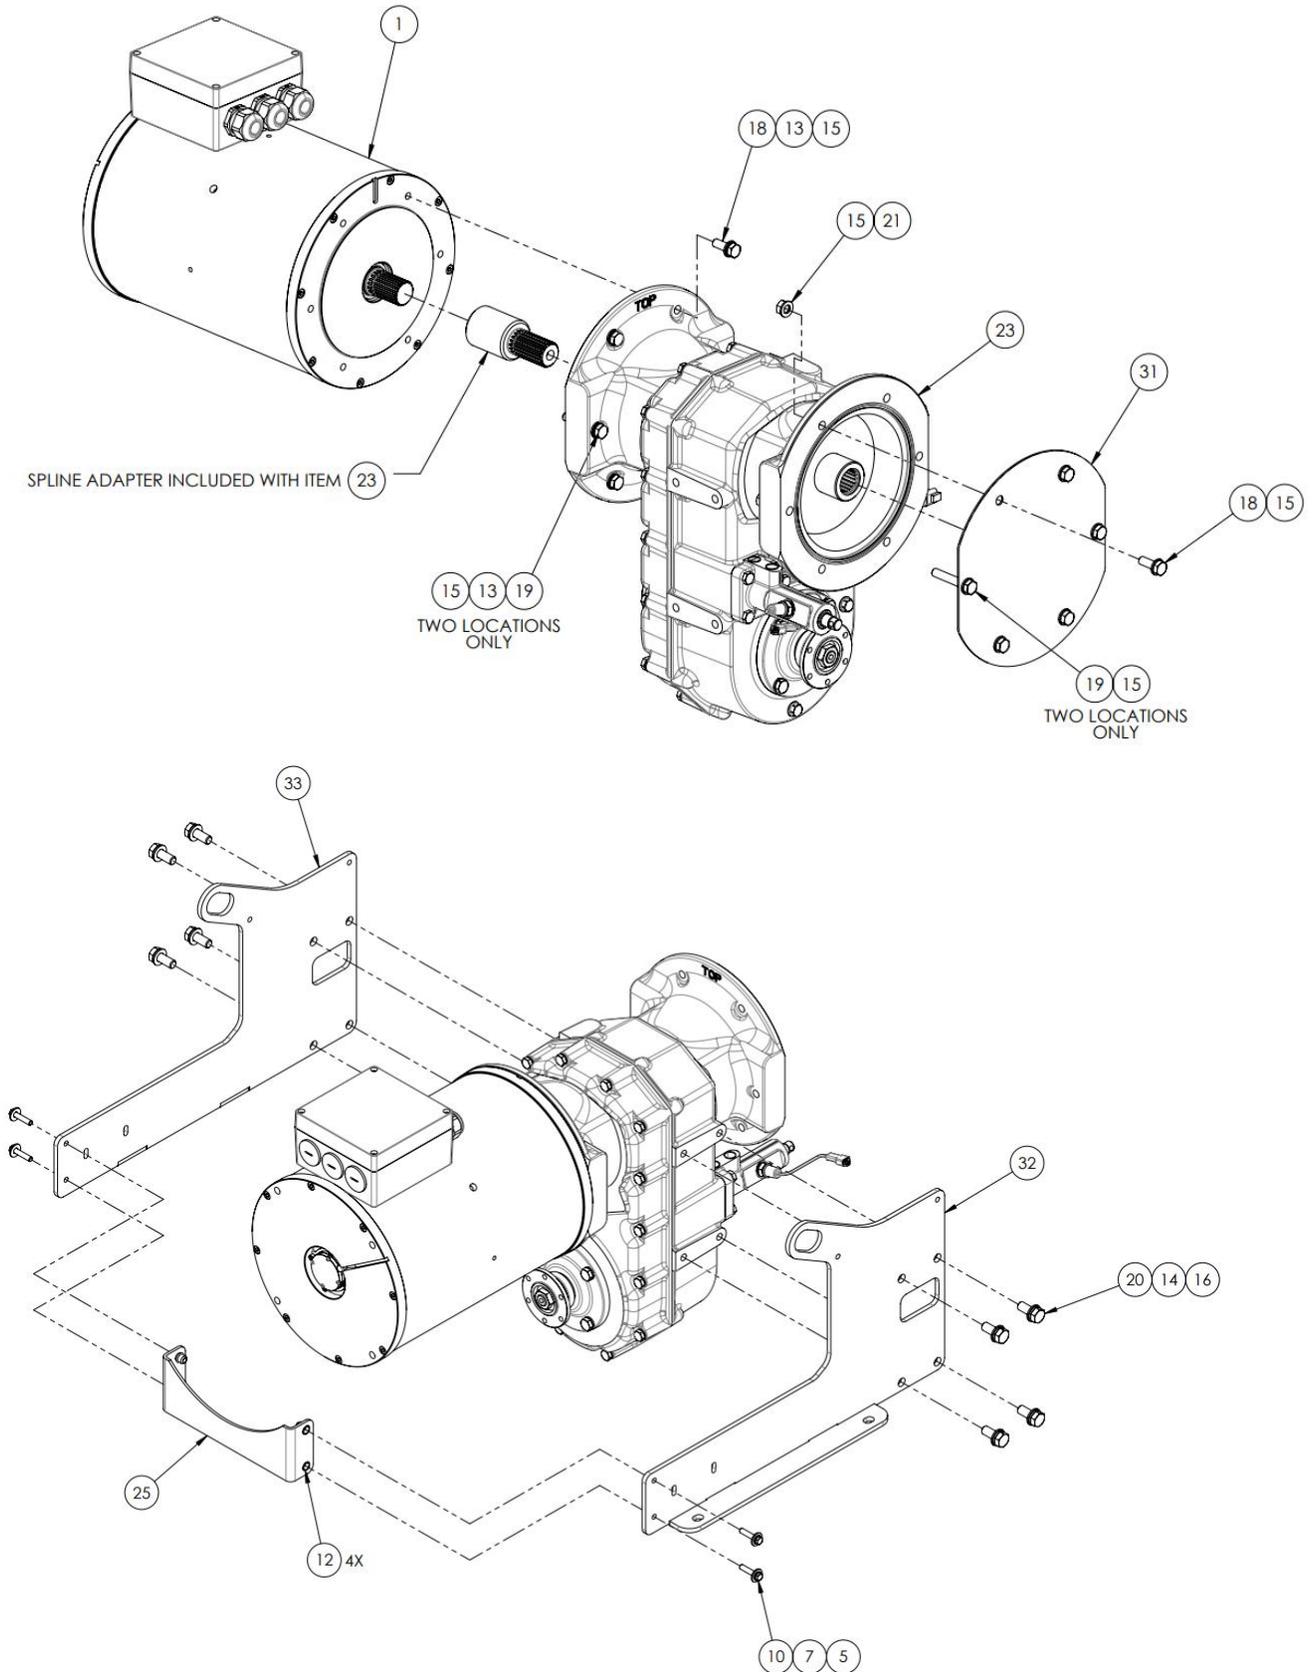

9.3 ASSEMBLY, MOTOR AND XFER CASE (continued)

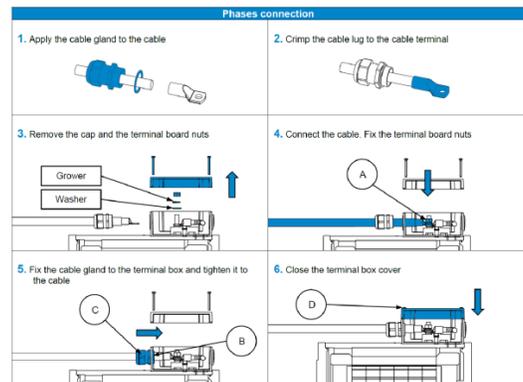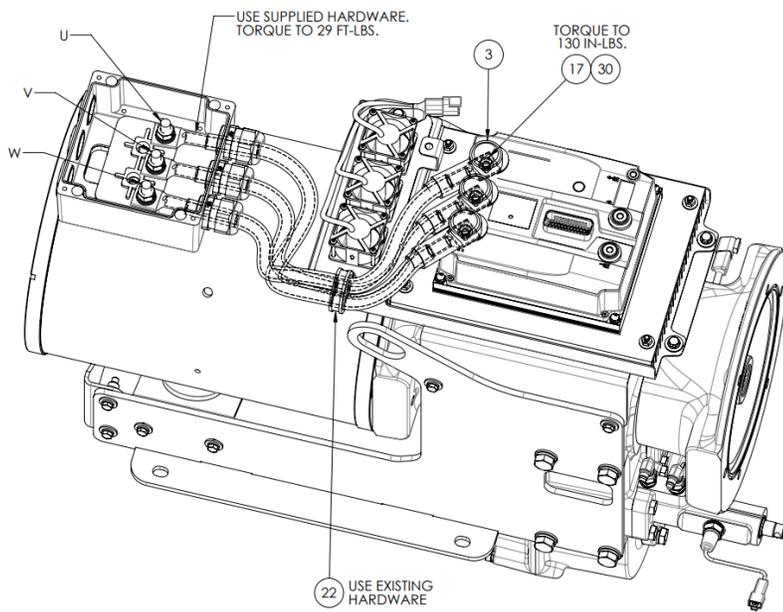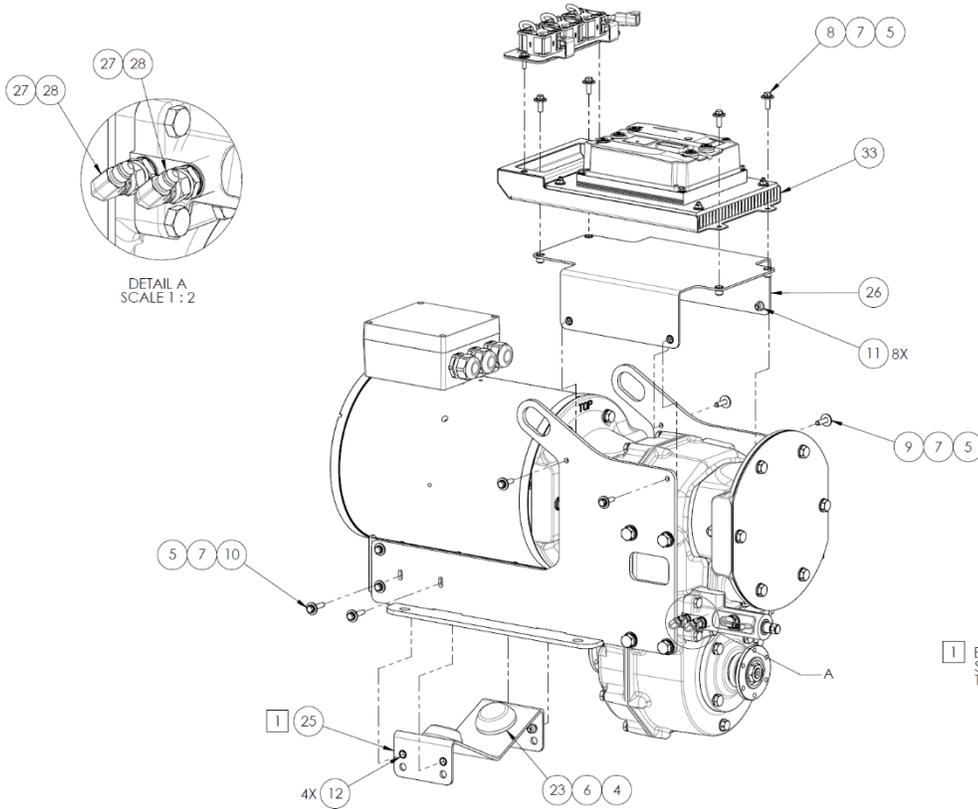




9.3 ASSEMBLY, MOTOR AND XFER CASE (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	EC-3367	TRACTION MOTOR, 40KW	1
2	EC-3388	ASY, UVW MOTOR CABLE	3
3	EC-3393	BATTERY TERMINAL INSULATOR	3
4	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	2
5	G-1250-1060W	FLATWASHER, 5/16 WIDE	16
6	G-1250-1070W	FLATWASHER, 3/8 WIDE	2
7	G-1251-1060R	LOCKWASHER, 5/16 REGULAR	16
8	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	4
9	G-1420-106012	BOLT, 5/16-18 X 1-1/4" LG. HEX HD GR 8	4
10	G-1420-106014	BOLT, 5/16-18 HEX HD GR 8	8
11	G-1439-1060-S	NUTSERT, THIN WALL 5/16-18	8
12	G-1440-1060-S	NUTSERT, THICK WALL 5/16-18	8
13	G-1514-M120R	LOCKWASHER, M 12 REGULAR	6
14	G-1514-M140R	LOCKWASHER, M 14 REGULAR	8
15	G-1515-M120	FLATWASHER, M12	18
16	G-1515-M140	FLAT WASHER, M14	8
17	G-1533-080016	BOLT M8-1.25 X 16mm LG. CLASS 10.9	3
18	G-1533-120035	BOLT M12-1.75 X 35mm LG. CLASS 10.9	8
19	G-1533-120070	BOLT M12-1.75 X 70mm LG. CLASS 10.9	4
20	G-1533-140035	HEX BOLT, M14 X 2.0 X 35, CLASS 10.9	8
21	G-1793-16	NUT, HEX CLASS 8 M12X1.75	6
22	H-3521-23	CLAMP, CUSHIONED LOOP 1 3/4"	1
23	H-4863	TRANSFER CASE, 2 SPEED (368)	1
24	H-4868	ISOLATOR, MOTOR	2
25	J-7862-00	PLATE, TIE (P)	1
26	J-7863-00	PLATE, MOTOR SUPPORT (P)	1
27	J-7864-00	PLATE, DRIVE MOUNTING (P)	1
28	MC5315X6X14	M14 X 1.5 DIN M 6 JIC M	2
29	N-2002-14-S	ELBOW 90°, -06 F JIC X -04 M JIC	2
30	NVSP-21-016-CB	M8 BELLEVILLE LOCK WASHER	3
31	S-4191-00	TRANSFER CASE COVER PLATE (P)	1
32	Z-11332-00	WLD, LH MOTOR MOUNT (P)	1
33	Z-11333-00	WLD, RH MOTOR MOUNT (P)	1
34	Refer above section	ASY, MOTOR CTRLR WITH HEATSINK	1

9.4 ASSEMBLY, FRONT AXLE


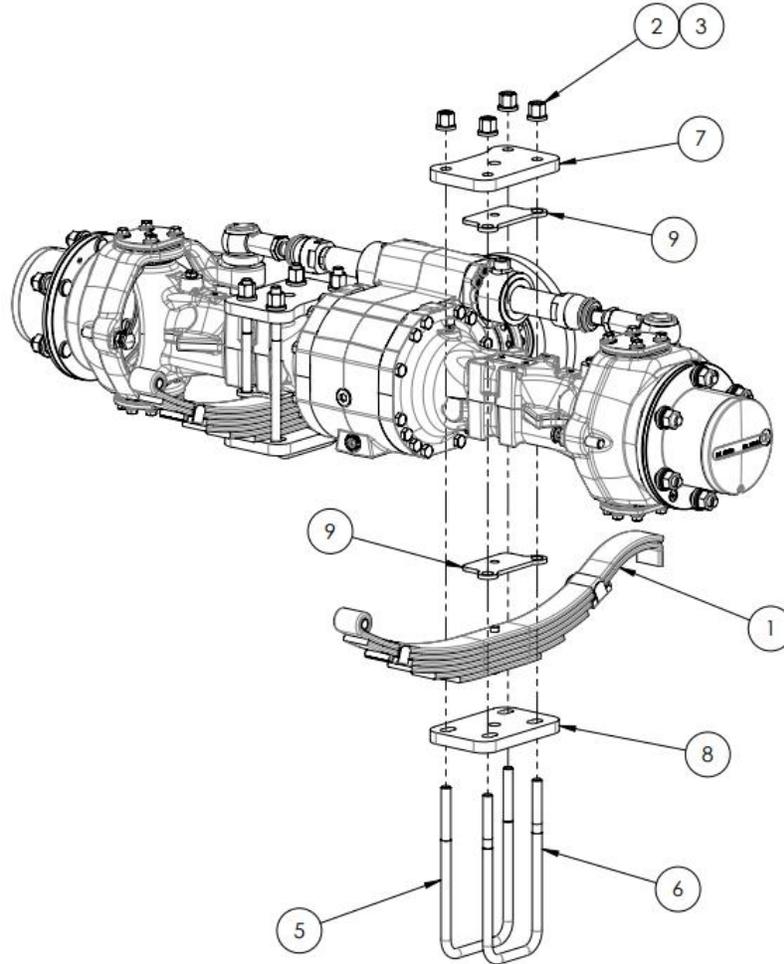


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.


Item	Part Number	Description	Qty
1	A-TT10-00116	LEAF SPRING, TT12	2
2	A-TT4-00365	NUT, AXLE U-BOLT	8
3	A-TT4-00366	WASHER, AXLE U-BOLT	8
4	H-4860	AXLE, FRONT PLANETARY (211)	1
5	H-4879	U-BOLT, FRONT, 10.875" LG	2
6	H-4880	U-BOLT, FRONT, 10.70" LG	2
7	S-4109-00	U-BOLT PLATE	2
8	S-4110-00	U-BOLT PLATE, BOTTOM	2
9	S-4111-00	PLATE, AXLE SPACER	4

9.5 ASSEMBLY, AXLES AND DRIVESHAFTS

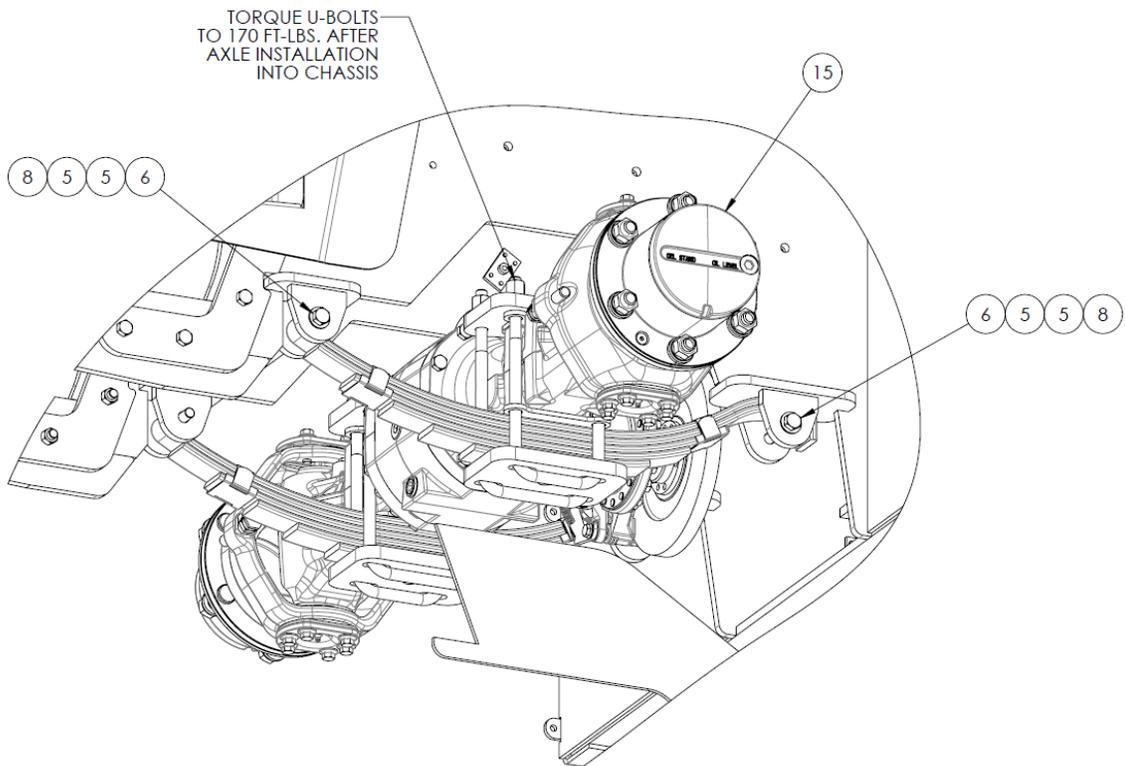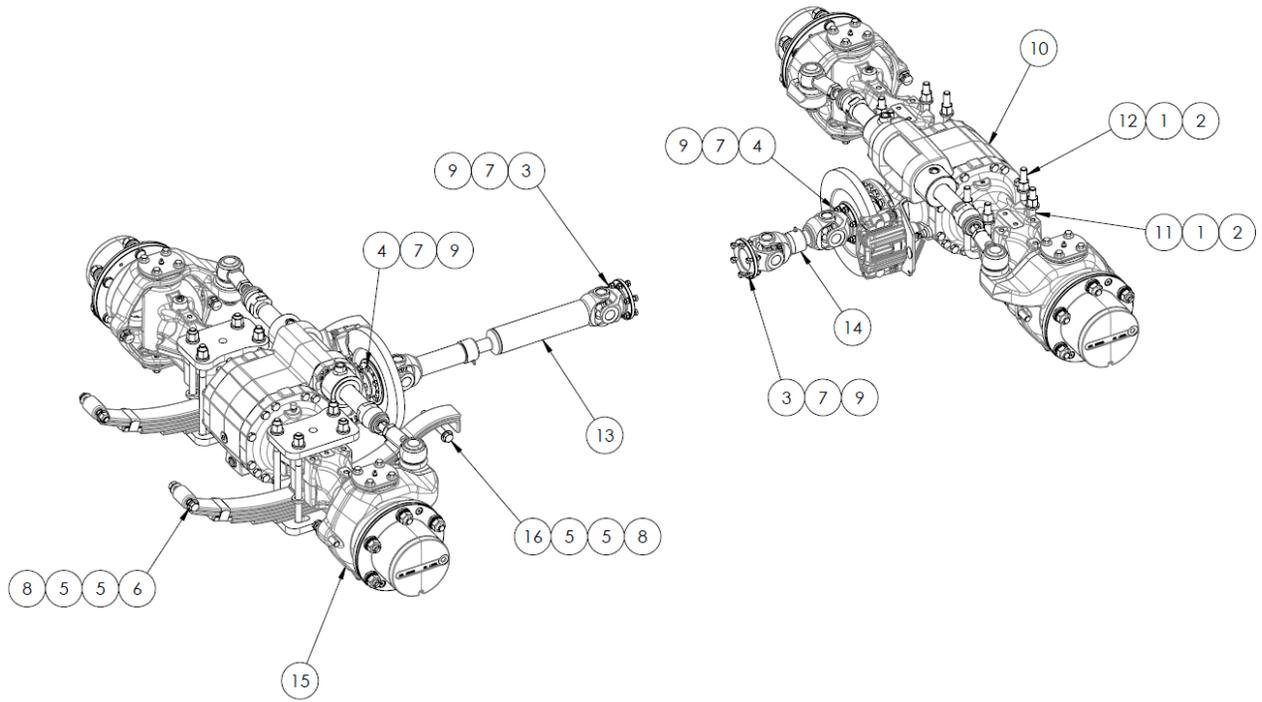


FRONT AXLE INSTALLATION

9.5 ASSEMBLY, AXLES AND DRIVESHAFTS (continued)

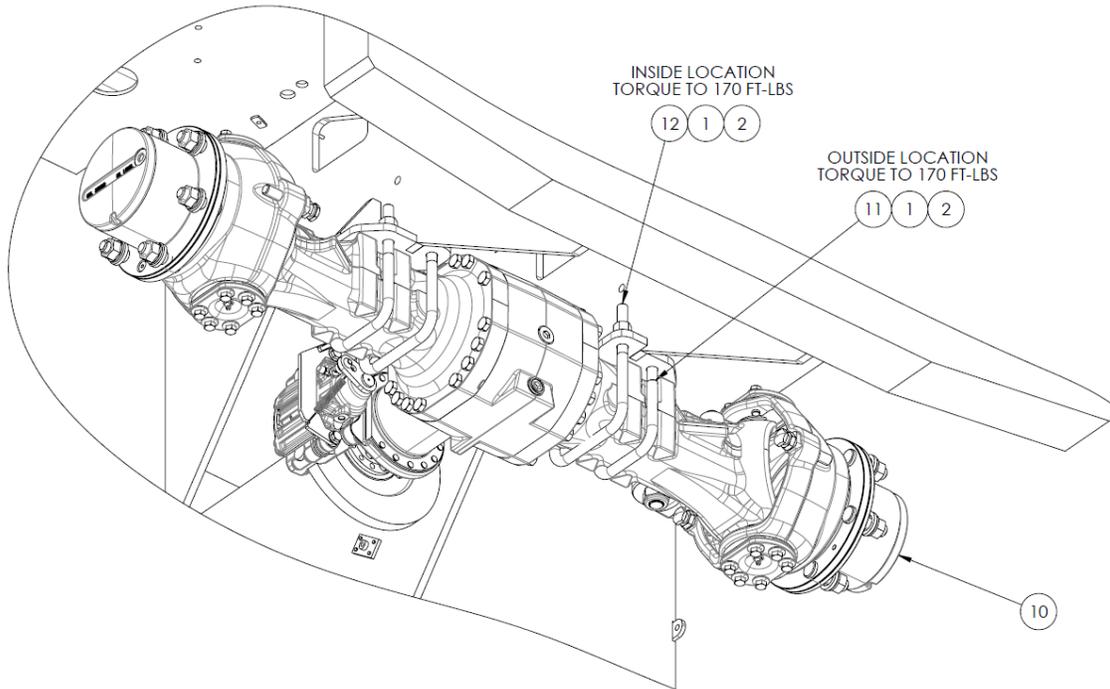


REAR AXLE INSTALLATION

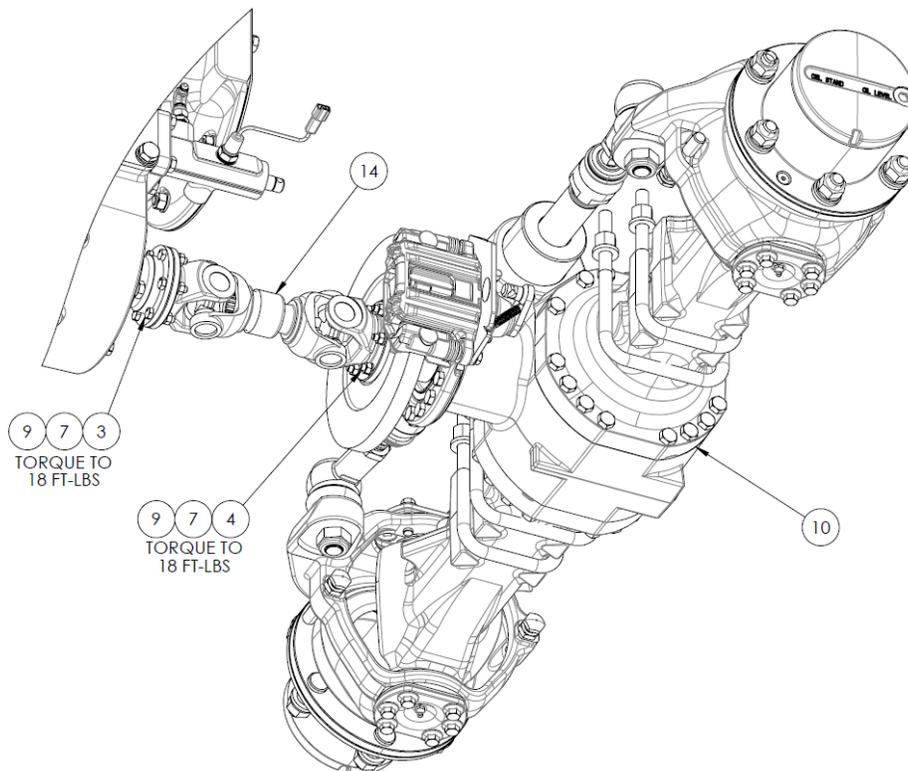

REAR DRIVESHAFT

9.5 ASSEMBLY, AXLES AND DRIVESHAFTS (continued)

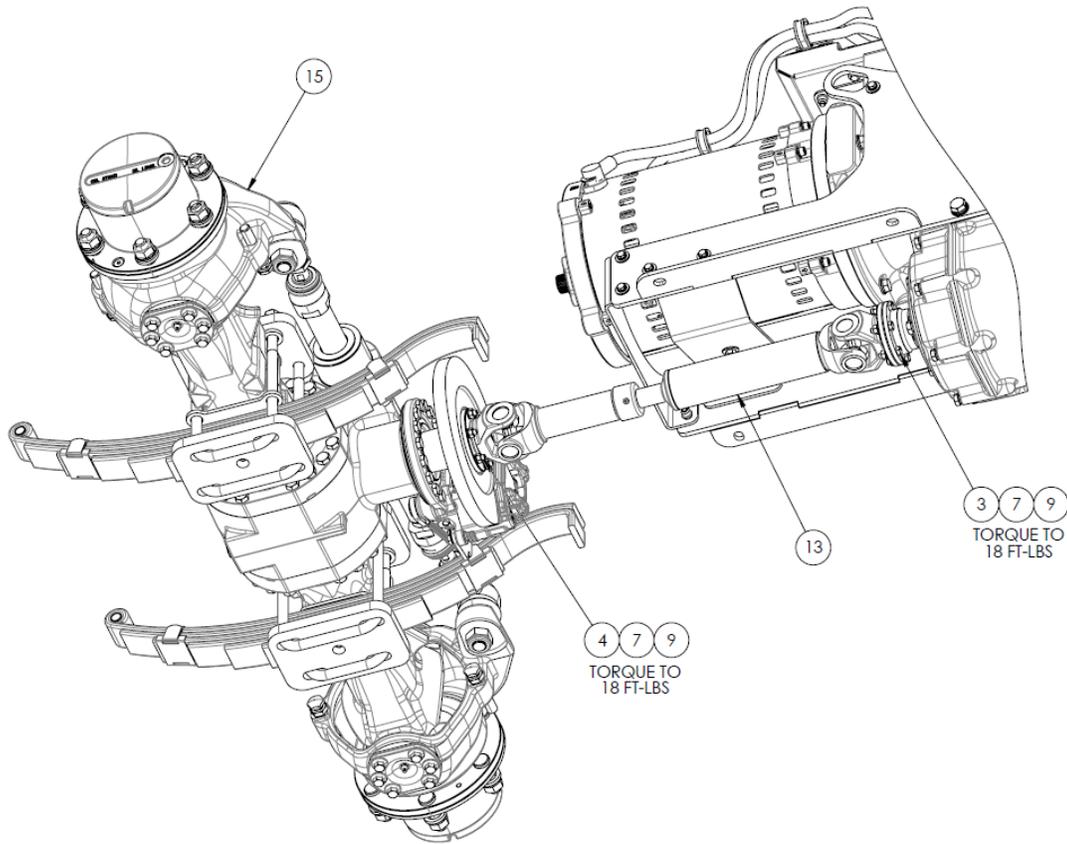


FRONT DRIVESHAFT

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-TT4-00365	NUT, AXLE U-BOLT	8
2	A-TT4-00366	WASHER, AXLE U-BOLT	8
3	G-1114-080030	BOLT M8-1.25 X 30mm LG. CLASS 8.8	12
4	G-1114-080040	BOLT M8-1.25 X 40mm LG. CLASS 8.8	12
5	G-1250-1210N	FLATWASHER, 9/16 NARROW	8
6	G-1420-121540	BOLT, 9/16-18 X 4.0" HEX HD GR 8	4
7	G-1514-M80R	SPLIT LOCK WASHER M8	24
8	G-1727-1210	NUT, 9/16-18 TOP LOCK ZINC	5
9	G-1793-09	NUT, HEX CLASS 8 M8X1.25	24
10	H-4861	AXLE, REAR PLANETARY (211)	1
11	H-4881	U-BOLT, REAR, 7.50" LG	2
12	H-4882	U-BOLT, REAR, 7.875" LG	2
13	H-4909	FRONT DRIVESHAFT	1
14	H-4910	REAR DRIVESHAFT	1
15	Refer above section	ASY, FRONT AXLE	1

10.0 HYDRAULIC SYSTEM
10.1 ASSEMBLY, SPIN-ON FILTER

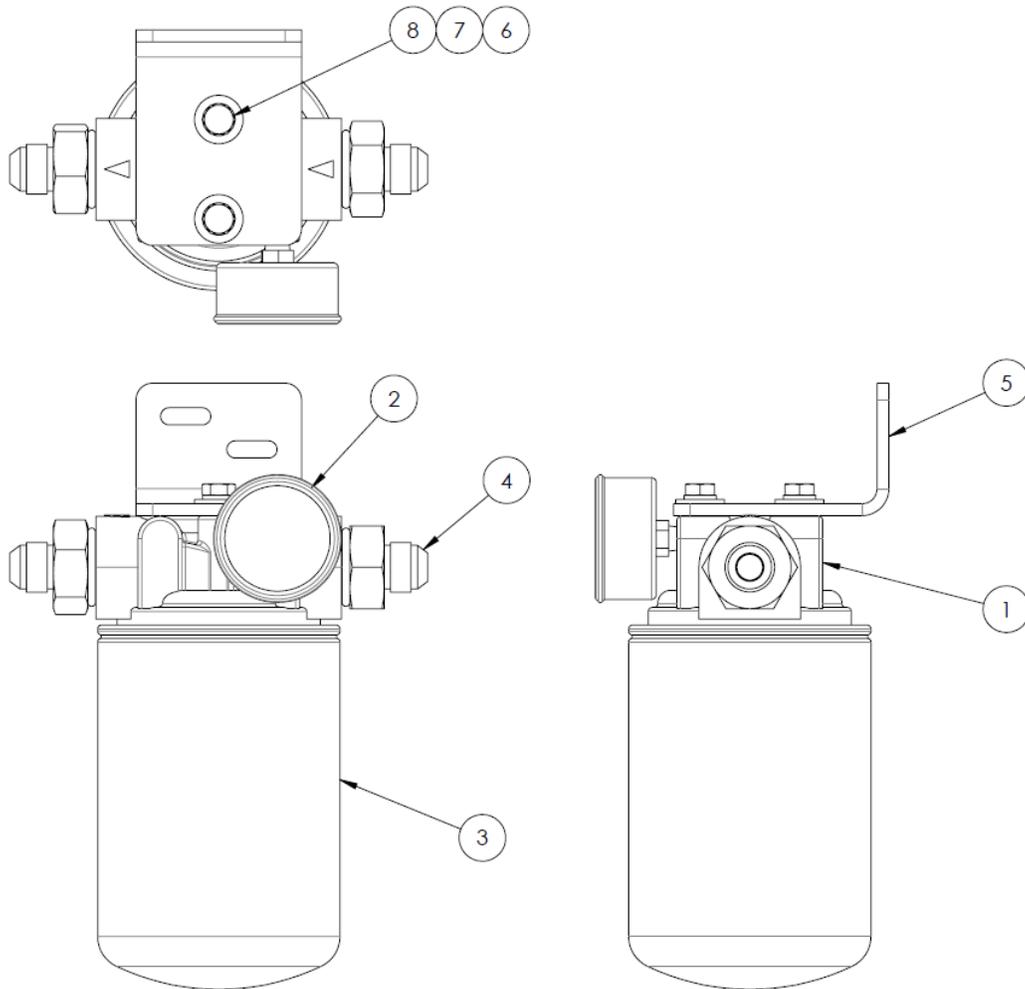


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ES12-0486	HYD FILTER HEAD	1
2	A-ES12-0487	FILTER PRESSURE INDICATOR	1
3	A-ES12-0485	HYD FILTER, SPIN-ON	1
4	N-2007-14-S-B	CONNECTOR, STR THD	2
5	S-4089-00	BRACKET, FILTER (P)	1
6	G-1250-1050W	FLATWASHER, 1/4 WIDE	2
7	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	2
8	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	2

10.2 ASSEMBLY, STEERING WHEEL

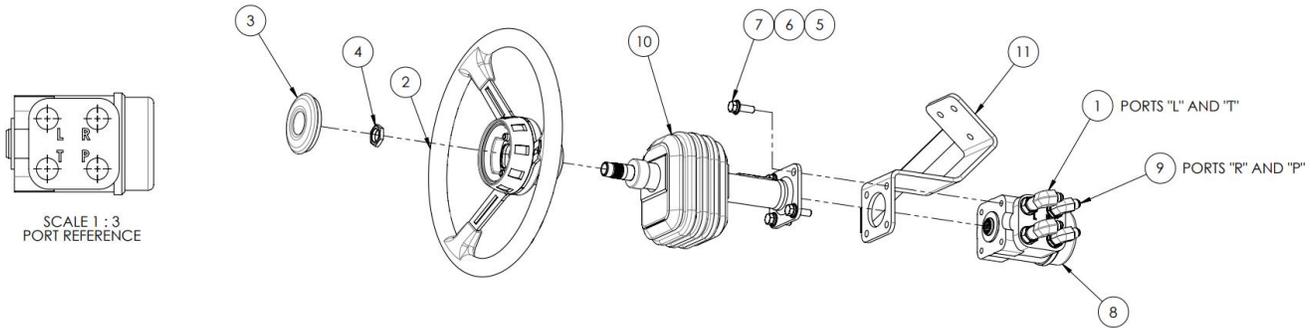


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	6-8 CC5OX-S	ELBOW LONG, -06 M JIC X -08 M ORB	2
2	A-TN4-00809E	STEERING WHEEL, 14"	1
3	A-TT10-00811	HORN BUTTON	1
4	A-TT10-00813	WHEEL NUT, 13/16-20 UNEF	1
5	G-1250-1070N	FLATWASHER, 3/8 NARROW	4
6	G-1251-1070R	LOCKWASHER, 3/8 REGULAR	4
7	G-1420-107012	BOLT, 3/8-16 X 1.25" HEX HD GR 8	4
8	HC-2789-00	STEERING VALVE (WP)	1
9	N-2001-09-S-B	ELBOW, STRAIGHT THREAD	2
10	XL00-14-019-SA	TILT STEERING COLUMN	1
11	Z-11390-00	WELDMENT, STEERING MOUNT (P)	1

10.3 ASSEMBLY, BRAKE PEDAL

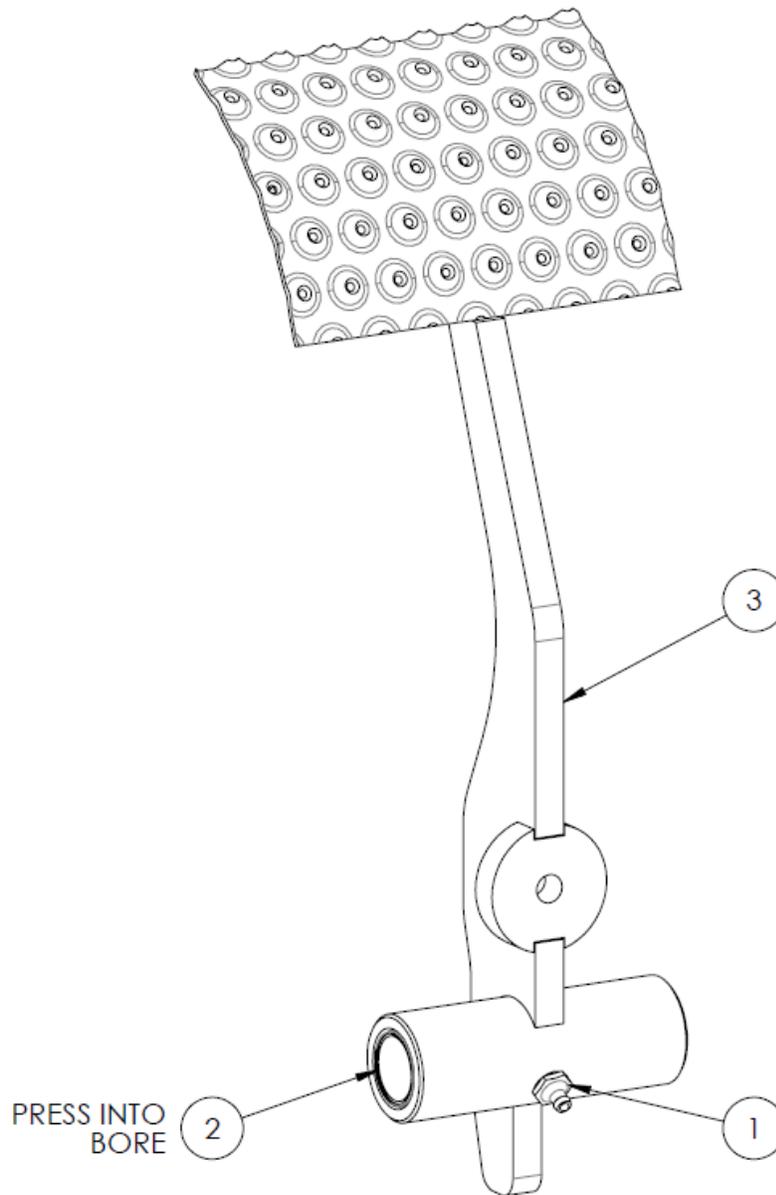


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-RTT50-0328	GREASE ZERK	1
2	C-TT4-10188	NYLINER BEARING	2
3	Z-11785-00	WLD, BRAKE PEDAL (P)	1


10.4 ASSEMBLY, BRAKE PEDAL SUB-ASSEMBLY

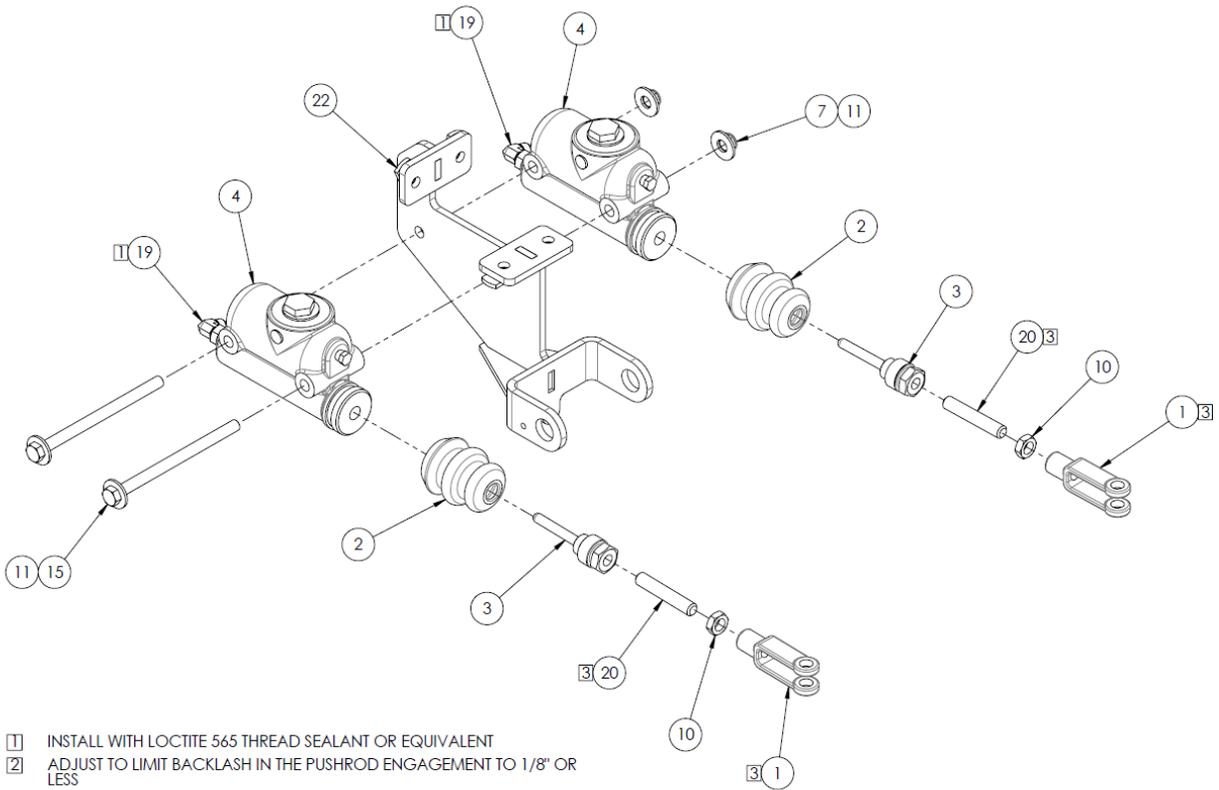

- 1] INSTALL WITH LOCTITE 565 THREAD SEALANT OR EQUIVALENT
- 2] ADJUST TO LIMIT BACKLASH IN THE PUSHROD ENGAGEMENT TO 1/8" OR LESS
- 3] ADJUST PUSHROD AND ROD END THREAD ENGAGEMENT FOR SMOOTH OPERATION AND SUFFICIENT FORWARD TRAVEL ALLOWANCE FOR ALL BRAKING CONDITIONS.

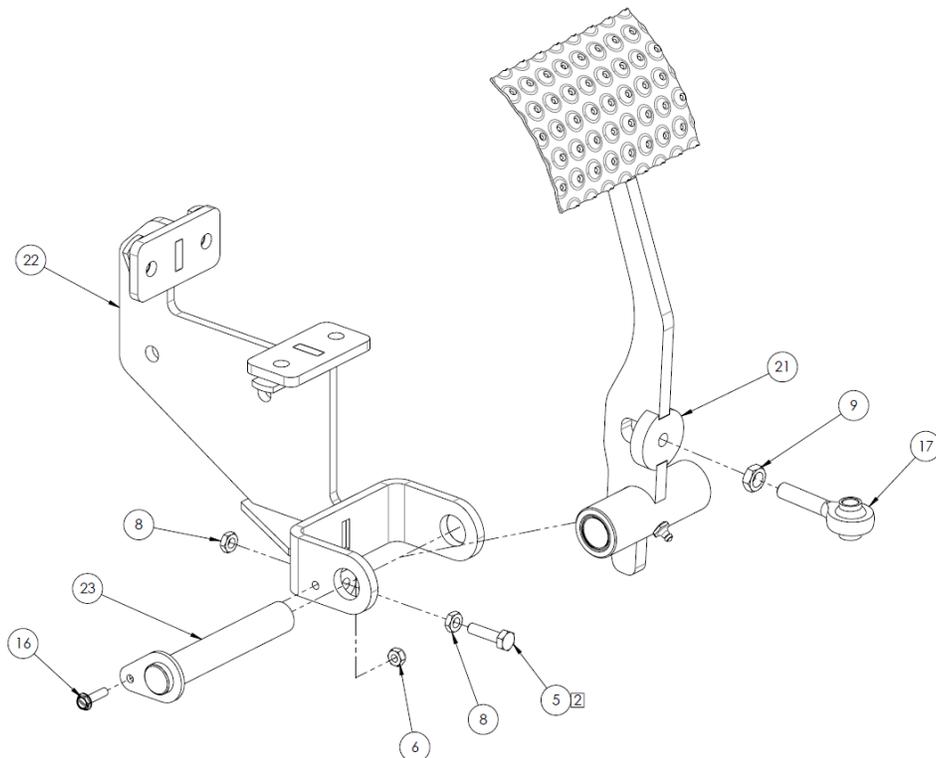

10.4 ASSEMBLY, BRAKE PEDAL SUB-ASSEMBLY (continued)

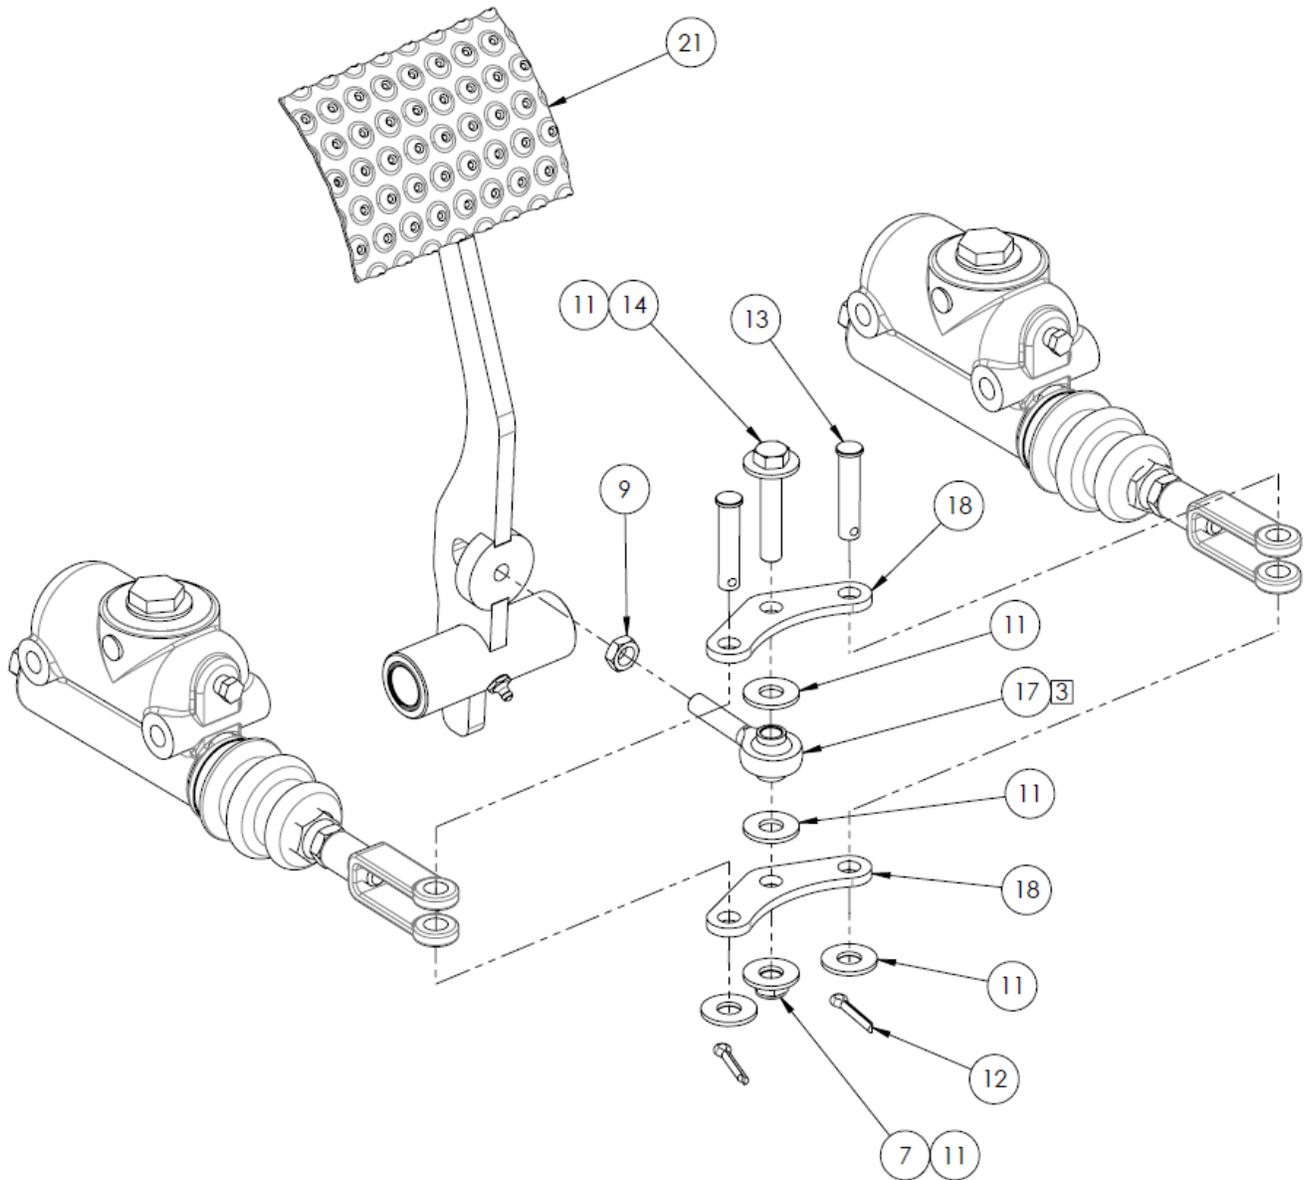




10.4 ASSEMBLY, BRAKE PEDAL SUB-ASSEMBLY (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ETT8-0530	BRAKE, PEDAL CLEVIS	2
2	A-TN3E-00159	BRAKE PUSHROD BOOT	2
3	A-TN3E-00160	PUSHROD, MASTER CYLINDER	2
4	A-TN3E-00161	MASTER CYLINDER	2
5	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	1
6	G-1202-1035	STOPNUT, #10-32 ELASTIC	1
7	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	3
8	G-1207-1050	NUT, 1/4-20 JAM	2
9	G-1207-1075	NUT, 3/8-24 JAM	1
10	G-1207-1085	NUT, 7/16-20 JAM	2
11	G-1250-1070W	FLATWASHER, 3/8 WIDE	10
12	G-1301-04	PIN, 5/32 X 1.0" LG. COTTER	2
13	G-1302-30	PIN, 3/8 X 1.50 LG CLEVIS	2
14	G-1420-107020	BOLT, 3/8-16 X 2.0" HEX HD GR 8	1
15	G-1420-107054	BOLT, 3/8-16 X 5.5" HEX HD GR 8	2
16	G-1720-103506	SCR, #10-32X.75 MACH HEX WSH HD	1
17	H-5014-06	ROD END, SUPER SWIVEL 3/8	1
18	J-8191-00	BAR, EQUALIZER (P)	2
19	N-2005-03-S	90° ELBOW, 1/8 M NPT X -04 M JIC	2
20	R-3393	PUSHROD, BRAKE	2
21	Refer above section	ASY, BRAKE PEDAL	1
22	Z-11786-00	WLD, BRAKE MOUNT (P)	1
23	Z-11787-00	WLD, ROTATION PIN (P)	1

10.5 ASSEMBLY, ACCUMULATOR

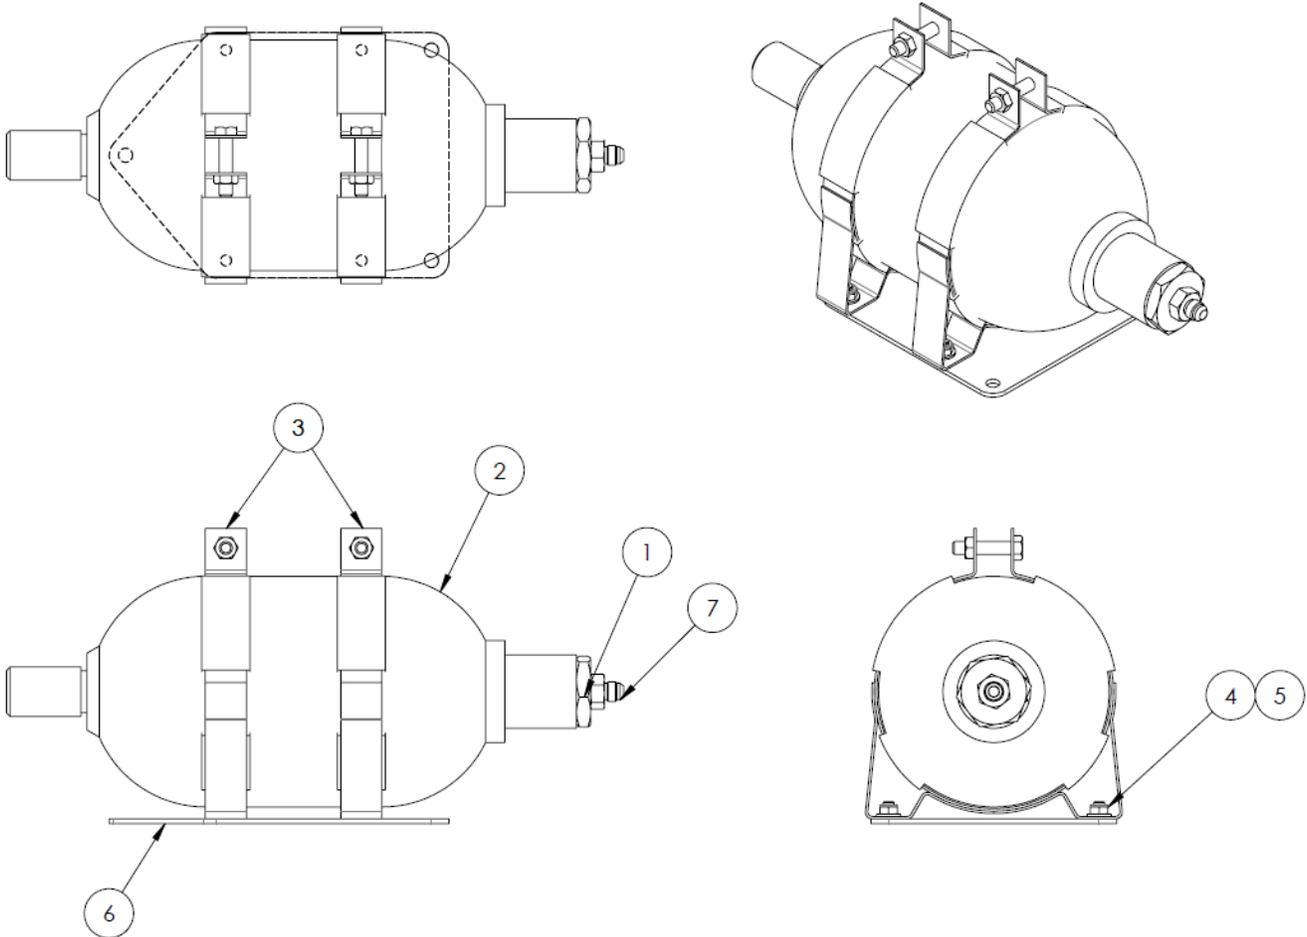


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	20-8 F5OG5-S	REDUCER, -20 SAE ORB M X -08 SAE ORB F	1
2	A-ETT8-0454-C8	CHARGED ACCUMULATOR, 1 GALLON	1
3	ET08-09-001-CA	BRACKET, ACCUMULATOR	2
4	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	4
5	G-1250-1060N	FLATWASHER, 5/16 NARROW	4
6	J-8217-00	PLATE, ACCUMULATOR MTG (P)	1
7	N-2007-09-S-B	ADAPTER, -06 M JIC X -08 M ORB	1

10.6 ASSEMBLY, HYDRAULIC TANK

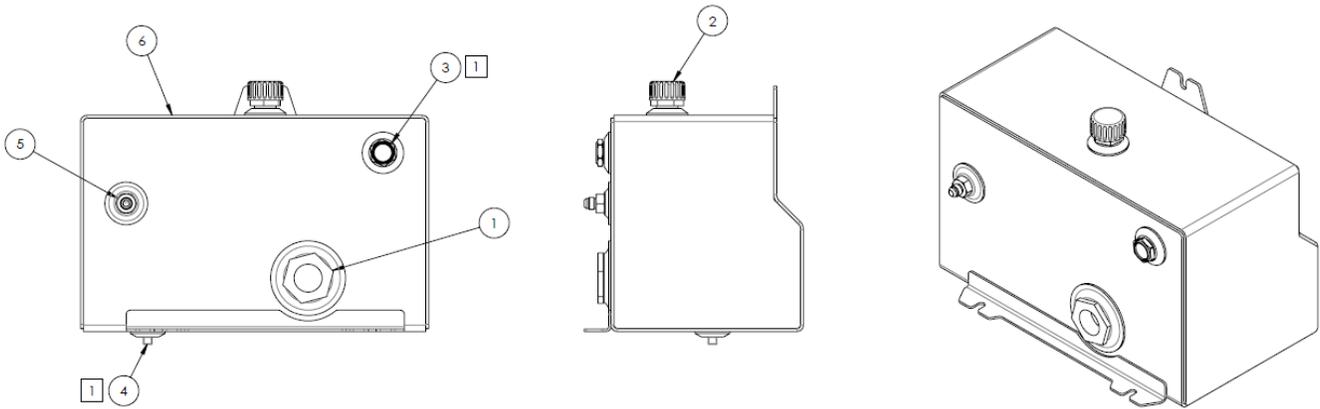


1 INSTALL SPECIFIED FITTINGS WITH LOCTITE 565 PIPE THREAD SEALANT OR EQUIVALENT

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ES12-0488	HYDRAULIC TANK STRAINER	1
2	A-ES12-0550	HYD FILLER-BREATHER CAP	1
3	A-ES12-0551	HYD SIGHT GAGE	1
4	A-ES12-0552	MAGNETIC DRAIN PLUG, .5 NPT	1
5	N-2007-09-S-B	ADAPTER, -06 M JIC X -08 M ORB	1
6	Z-11878-00	WLD, HYD TANK (P)	1

10.7 ASSEMBLY, MANIFOLD BLOCK

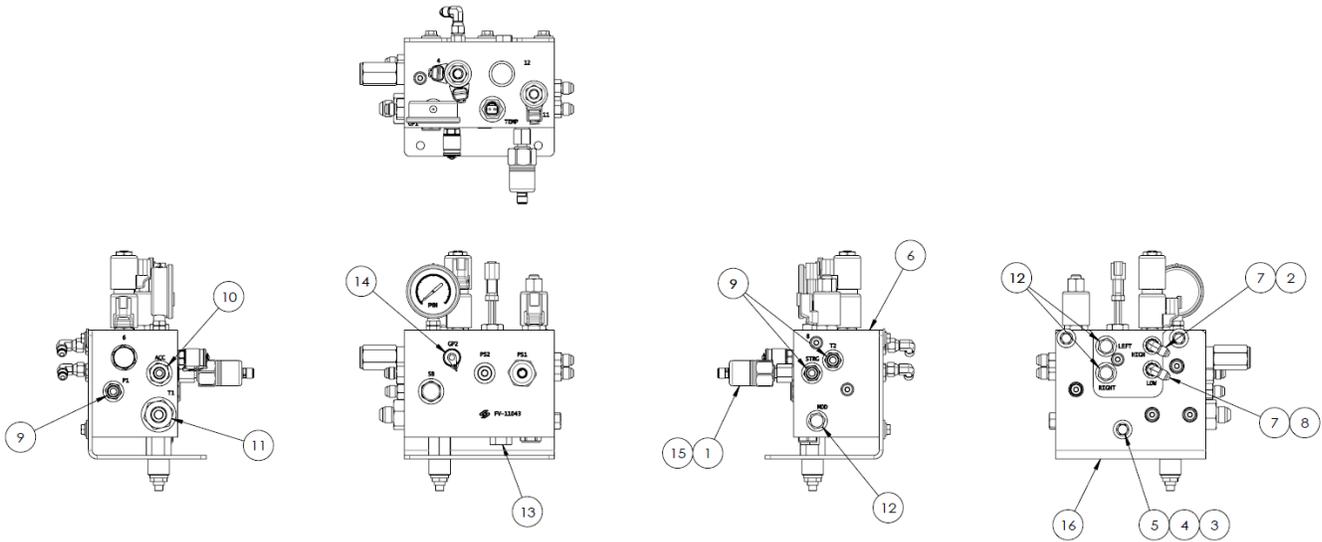


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	EC-3493-PGM-1	PRESSURE SENSOR, PROGRAMMED (ETT-8X)	1
1	EC-3493-PGM-2	PRESSURE SENSOR, PROGRAMMED (ETT-12X)	1
2	ET00-09-003-CA	ADAPTER, -04 SAE ORB M X -04 JIC M X .031 ORIFICE	1
3	G-1250-1060W	FLATWASHER, 5/16 WIDE	3
4	G-1251-1060R	LOCKWASHER, 5/16 REGULAR	3
5	G-1420-106012	BOLT, 5/16-18 X 1-1/4" LG. HEX HD GR 8	3
6	HC-2983	MANIFOLD BLOCK, 24V	1
7	N-2002-03-S	ELBOW, SWIVEL NUT	2
8	N-2007-03-S-B	CONNECTOR, STR THD	1
9	N-2007-08-S-B	ADAPTER, -06 JIC M X -06 ORB M	3
10	N-2007-09-S-B	ADAPTER, -06 M JIC X -08 M ORB	1
11	N-2007-14-S-B	CONNECTOR, STR THD	1
12	N-2053-05-S-B	PLUG, HEX HD W/ O-RING	3
13	N-2053-06-S-B	PLUG, HEX HD W/O-RING	1
14	N-2544-04	CPLG, QUICK DISCONNECT MB	1
15	N-2846-02	FITTING, ADAPTOR	1
16	S-4084-00	BRACKET, MANIFOLD (P)	1

10.9 ASSEMBLY, STEER BLOCK


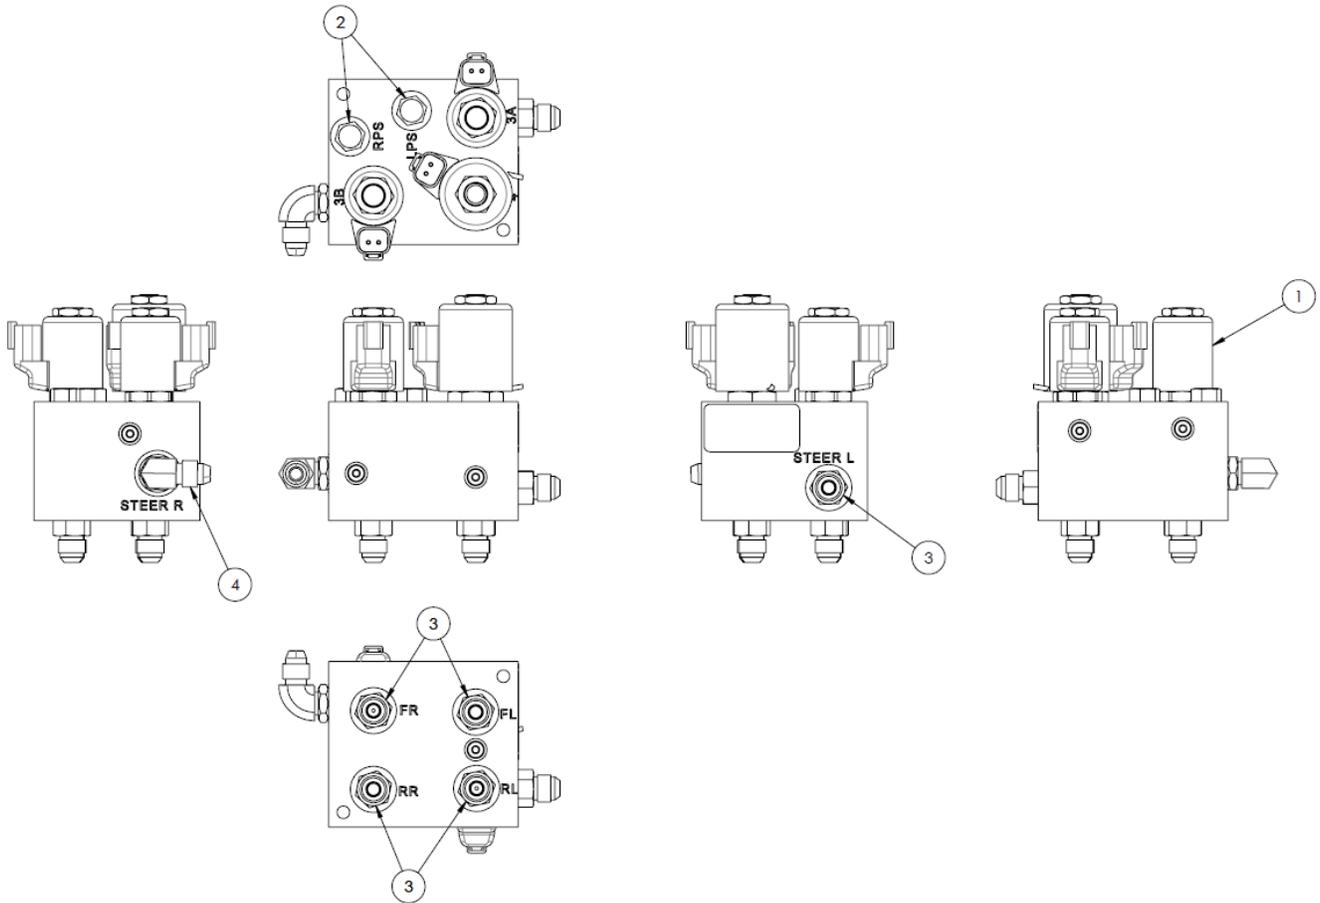


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.



Item	Part Number	Description	Qty
1	HC-2937	STEERING SYNCH VALVE	1
2	N-2053-03-S-B	PLUG, HEX HD W/O-RING	2
3	N-2007-08-S-B	ADAPTER, -06 JIC M X -06 ORB M	5
4	N-2001-08-S-B	ELBOW, STRAIGHT THREAD	1

10.10 ASSEMBLY, HYDRAULIC SYSTEM

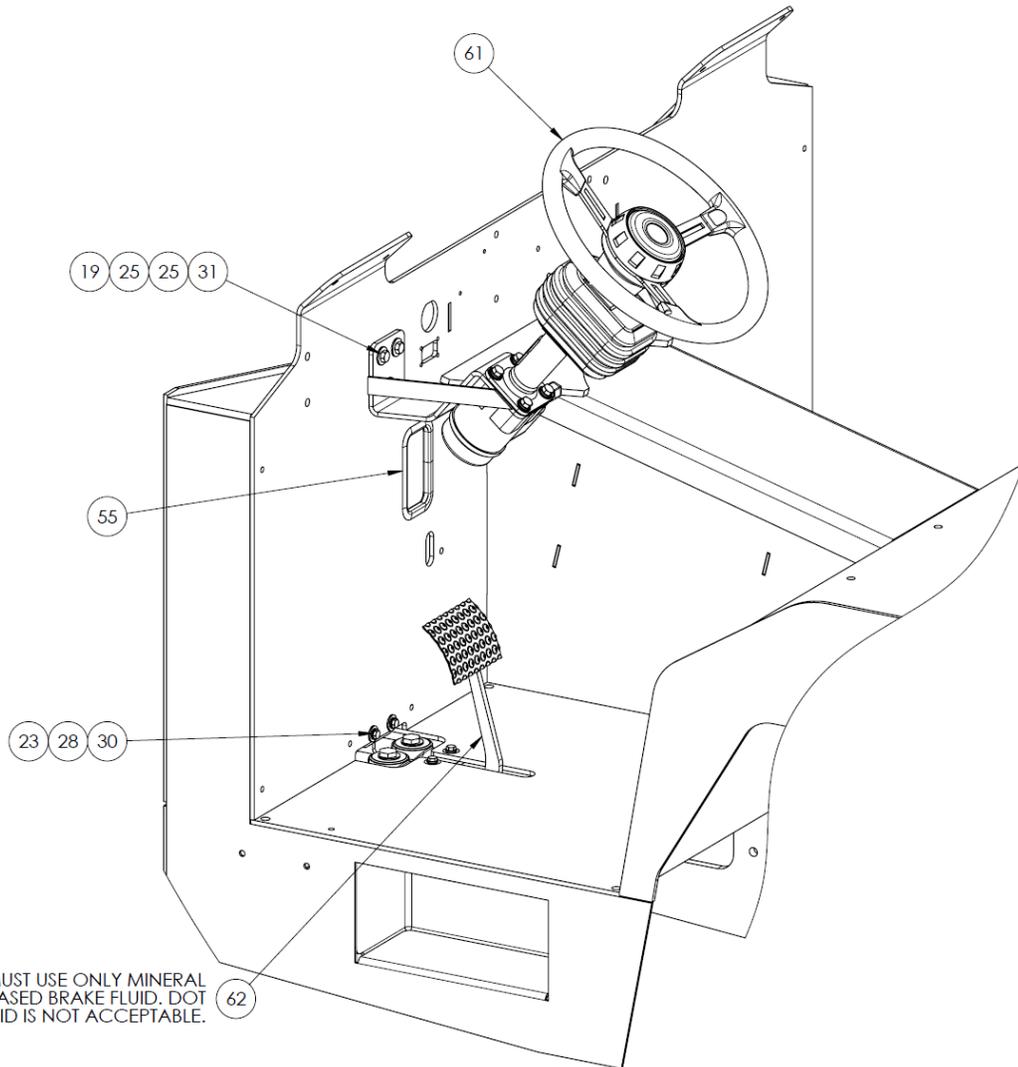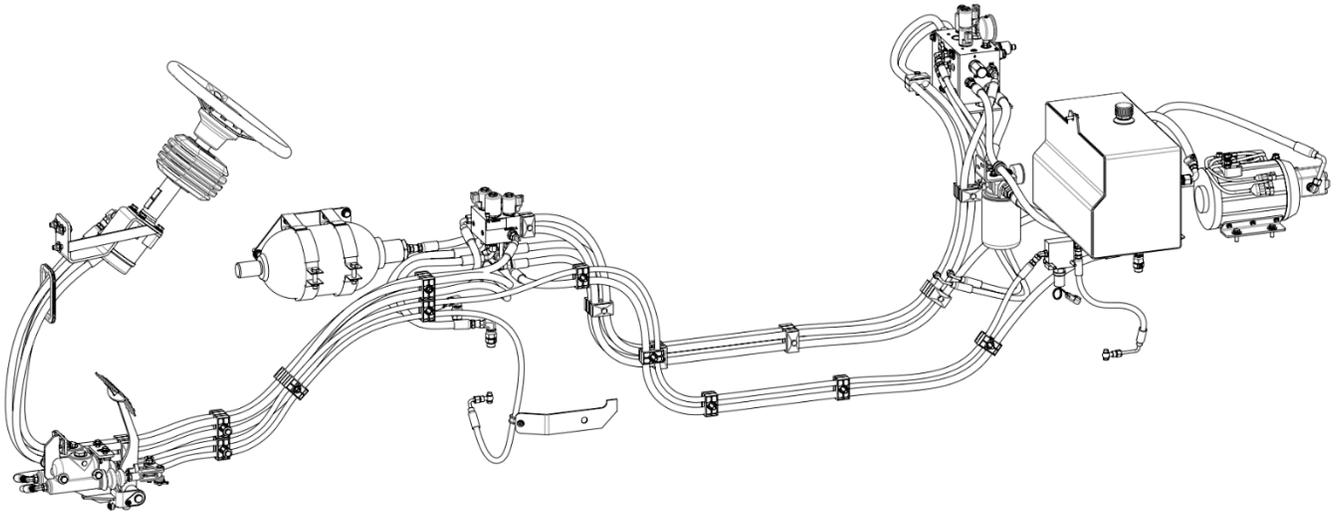


NOTE: MUST USE ONLY MINERAL OIL BASED BRAKE FLUID. DOT FLUID IS NOT ACCEPTABLE.


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

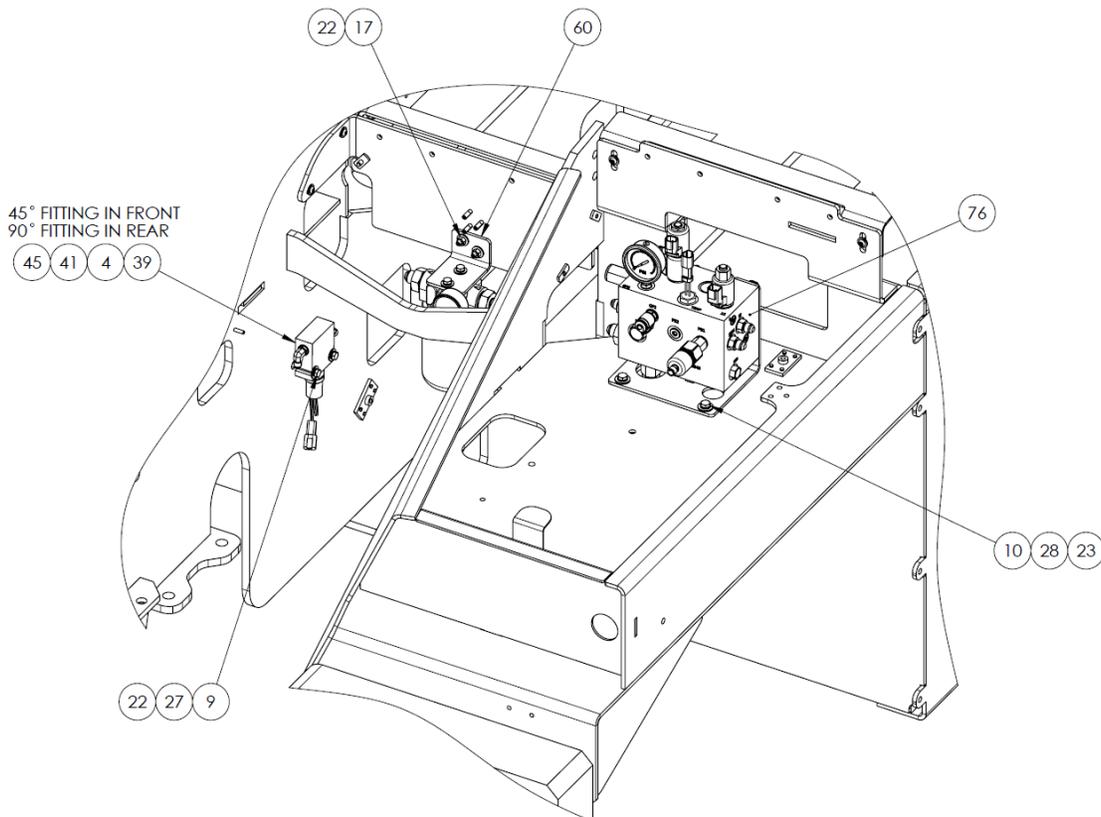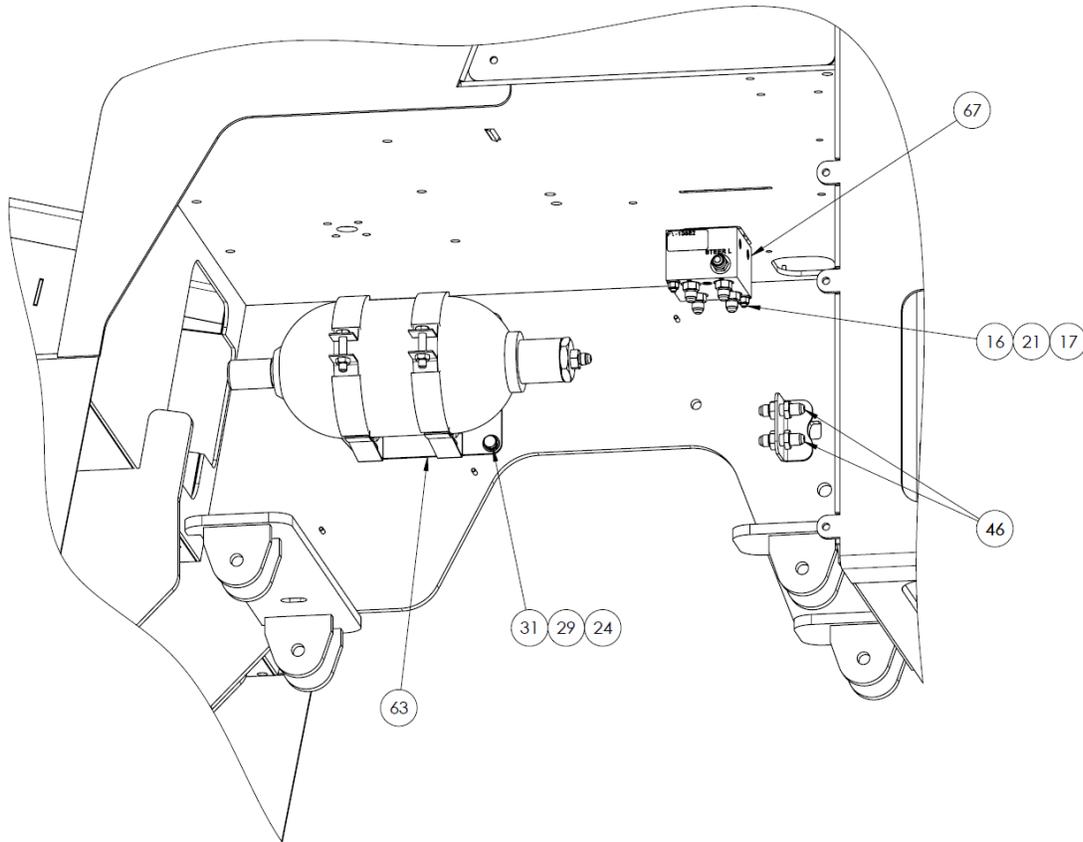


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

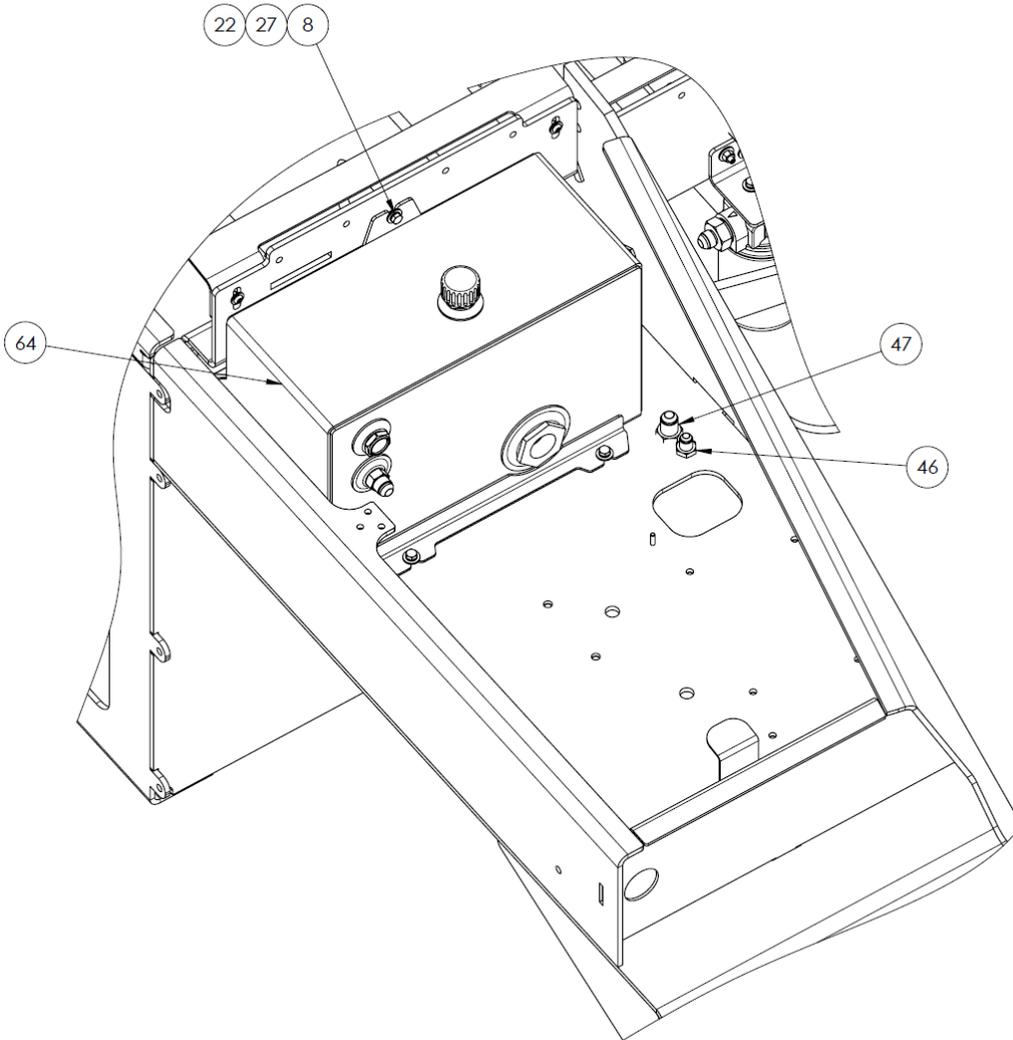


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

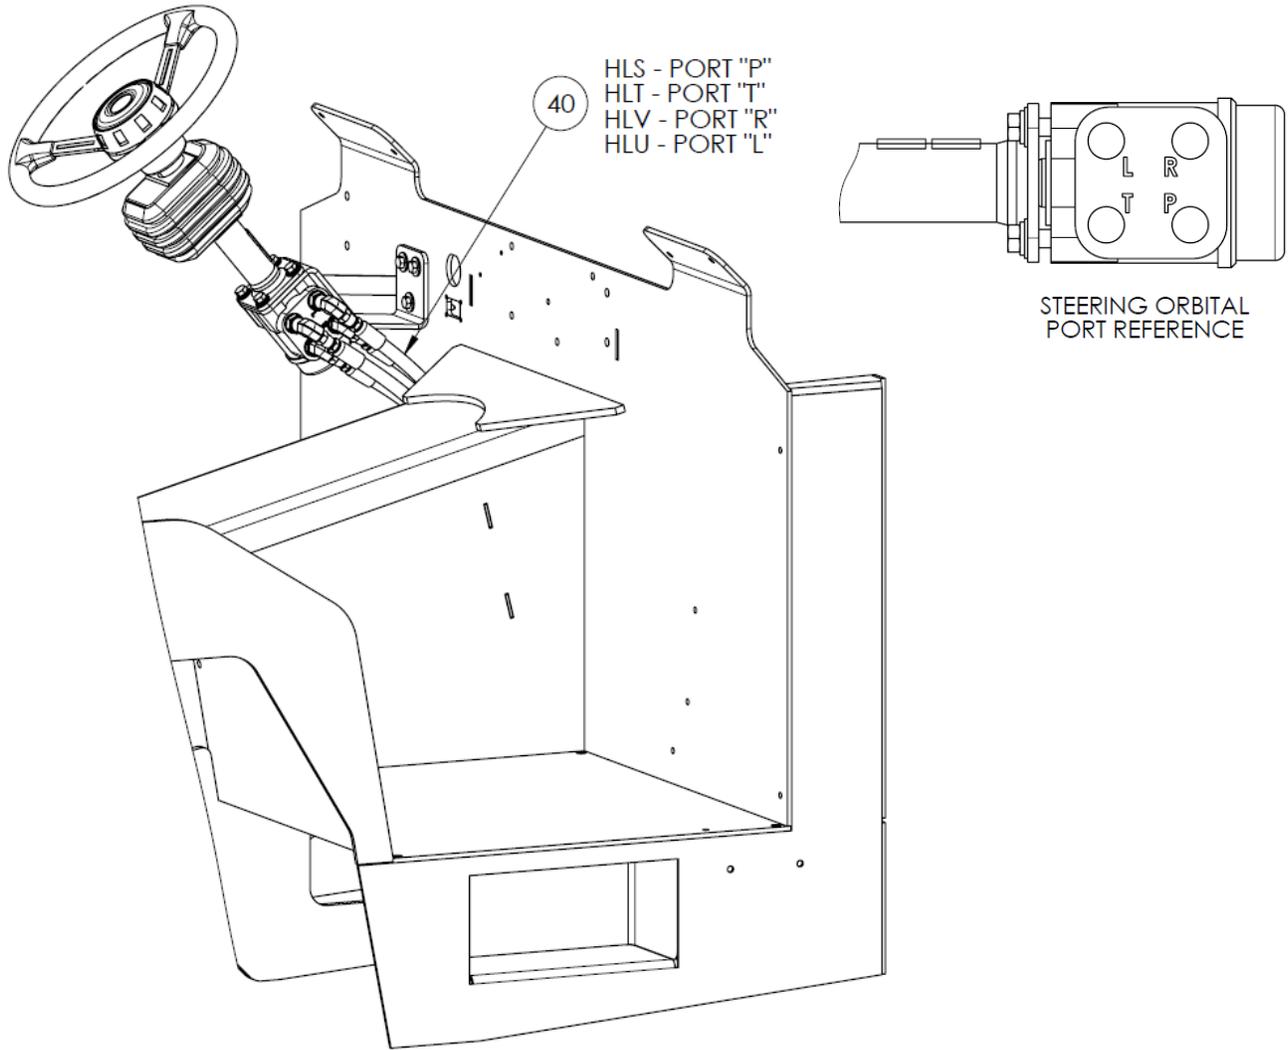


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

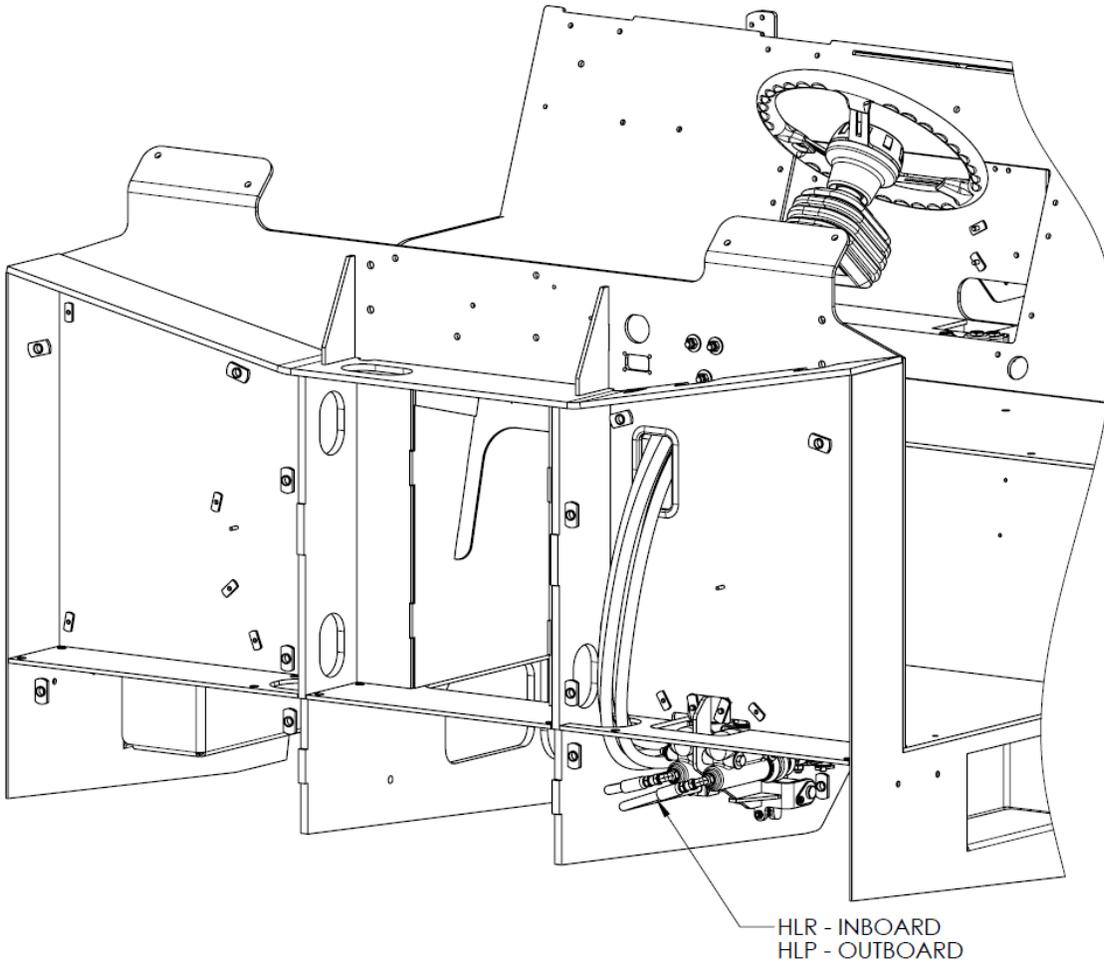



10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

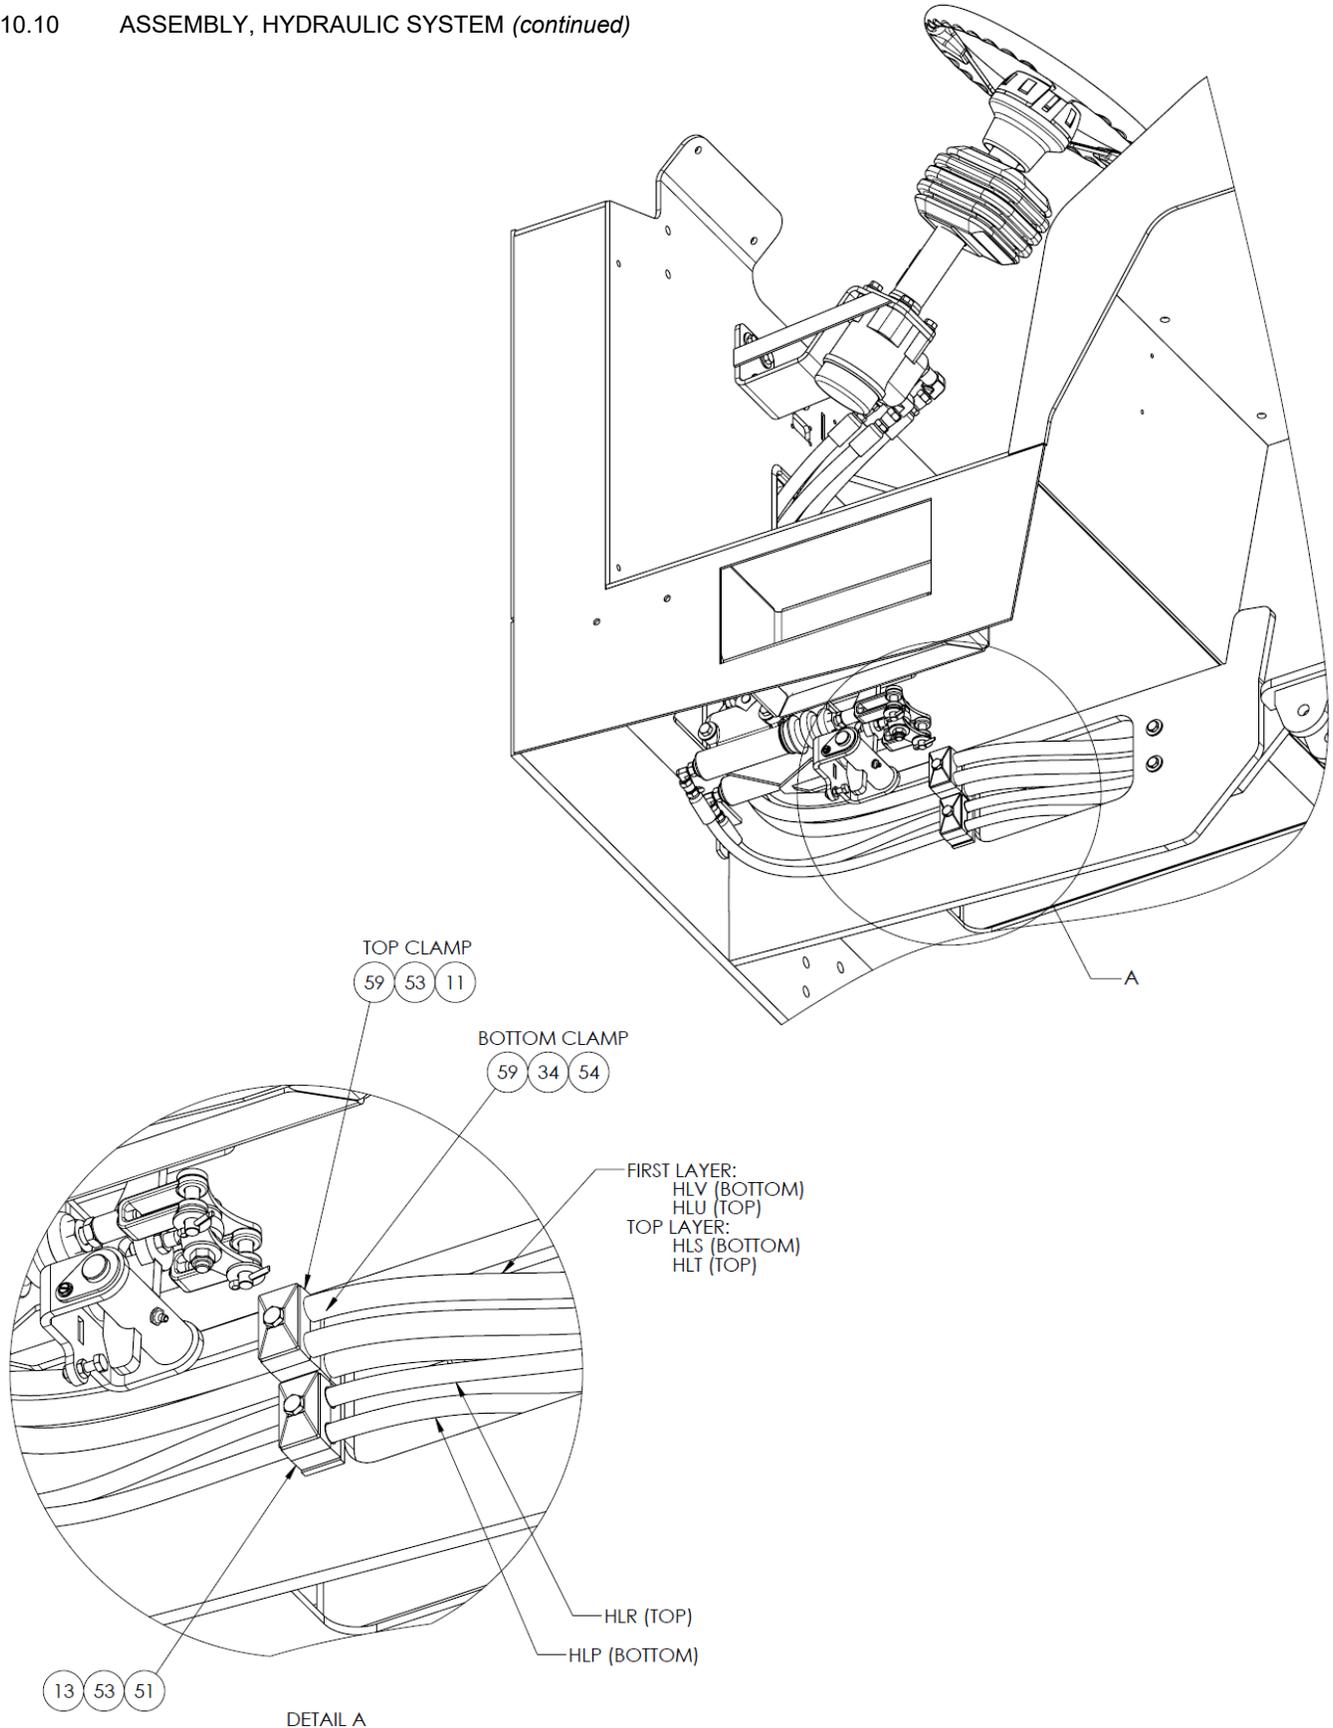


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

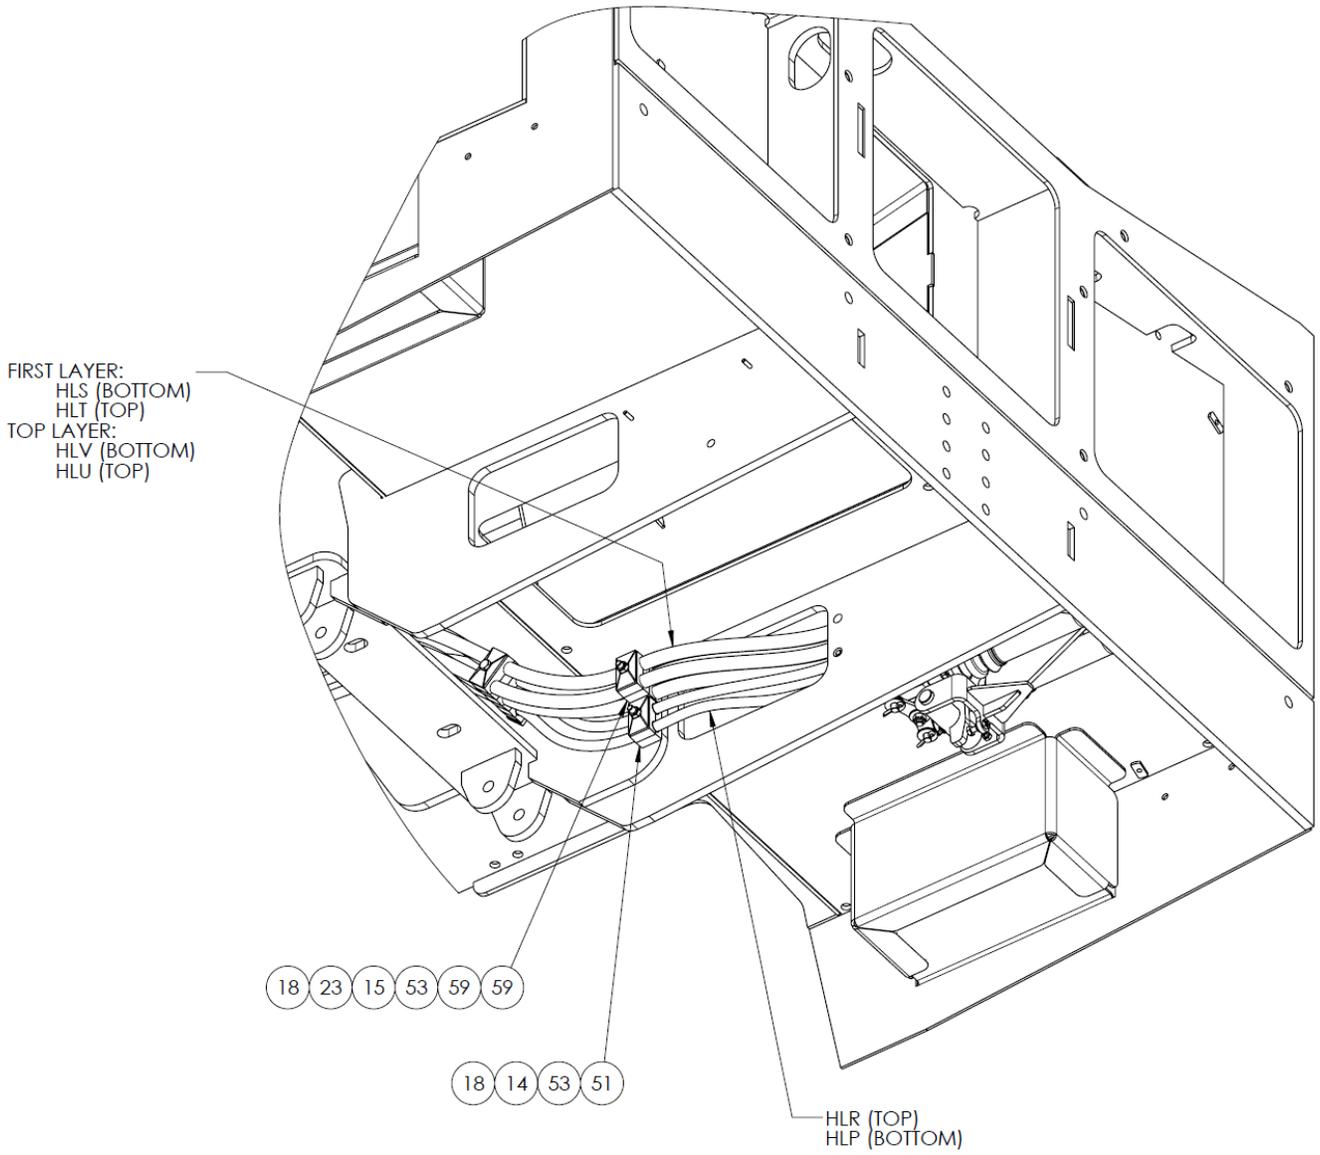

10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

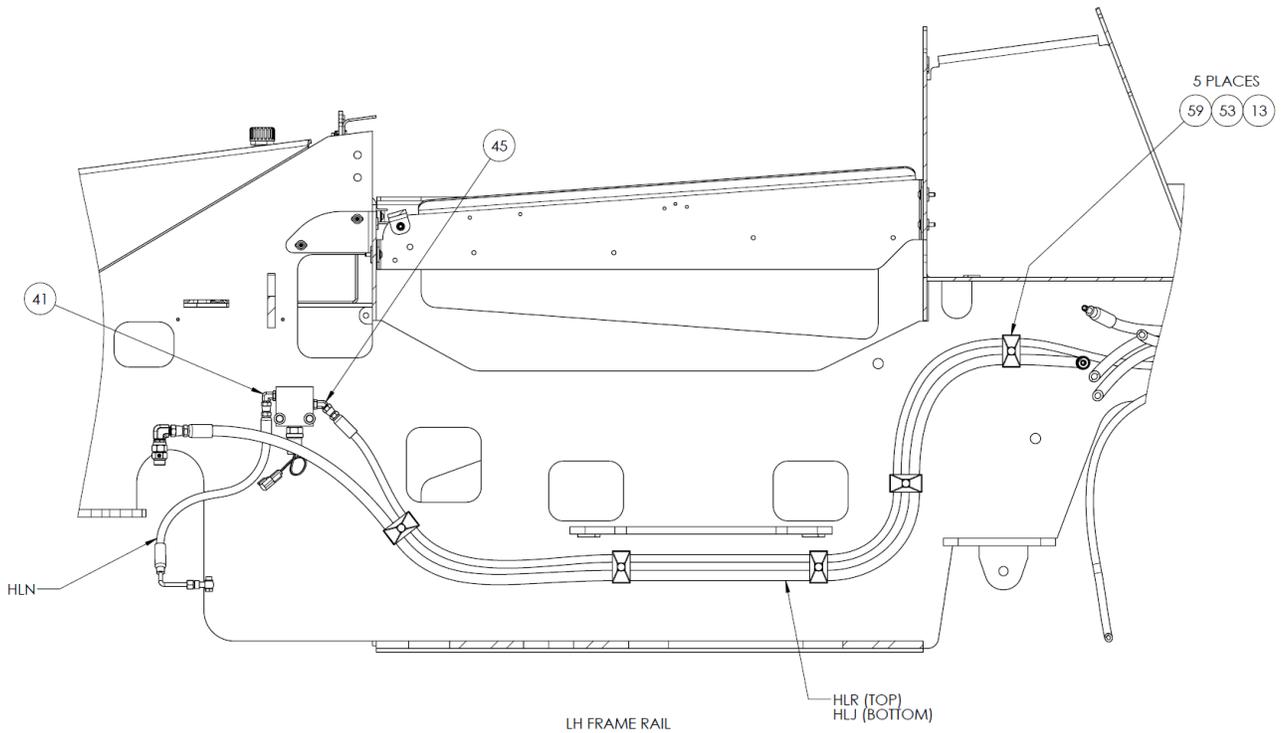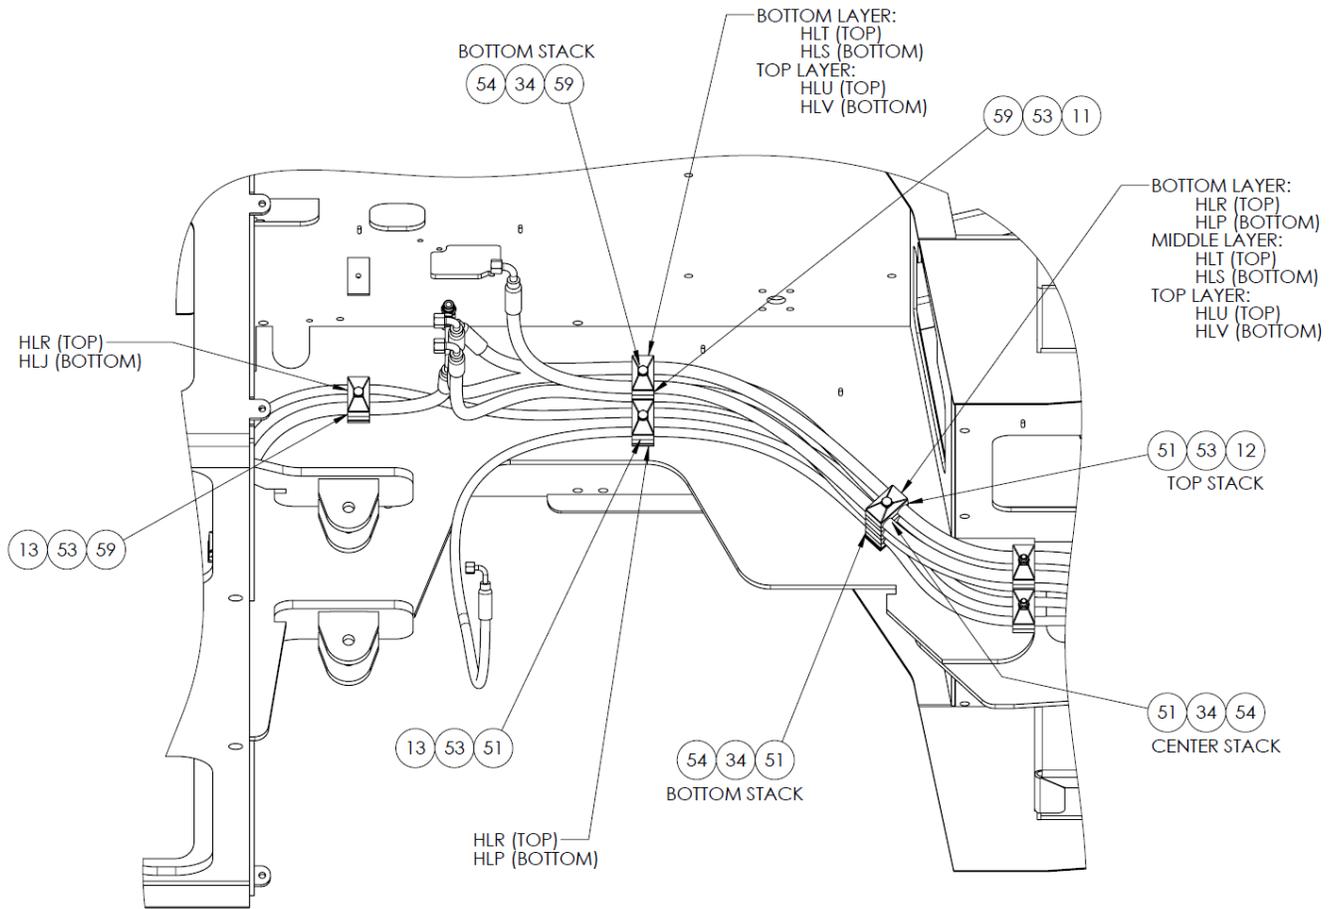


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

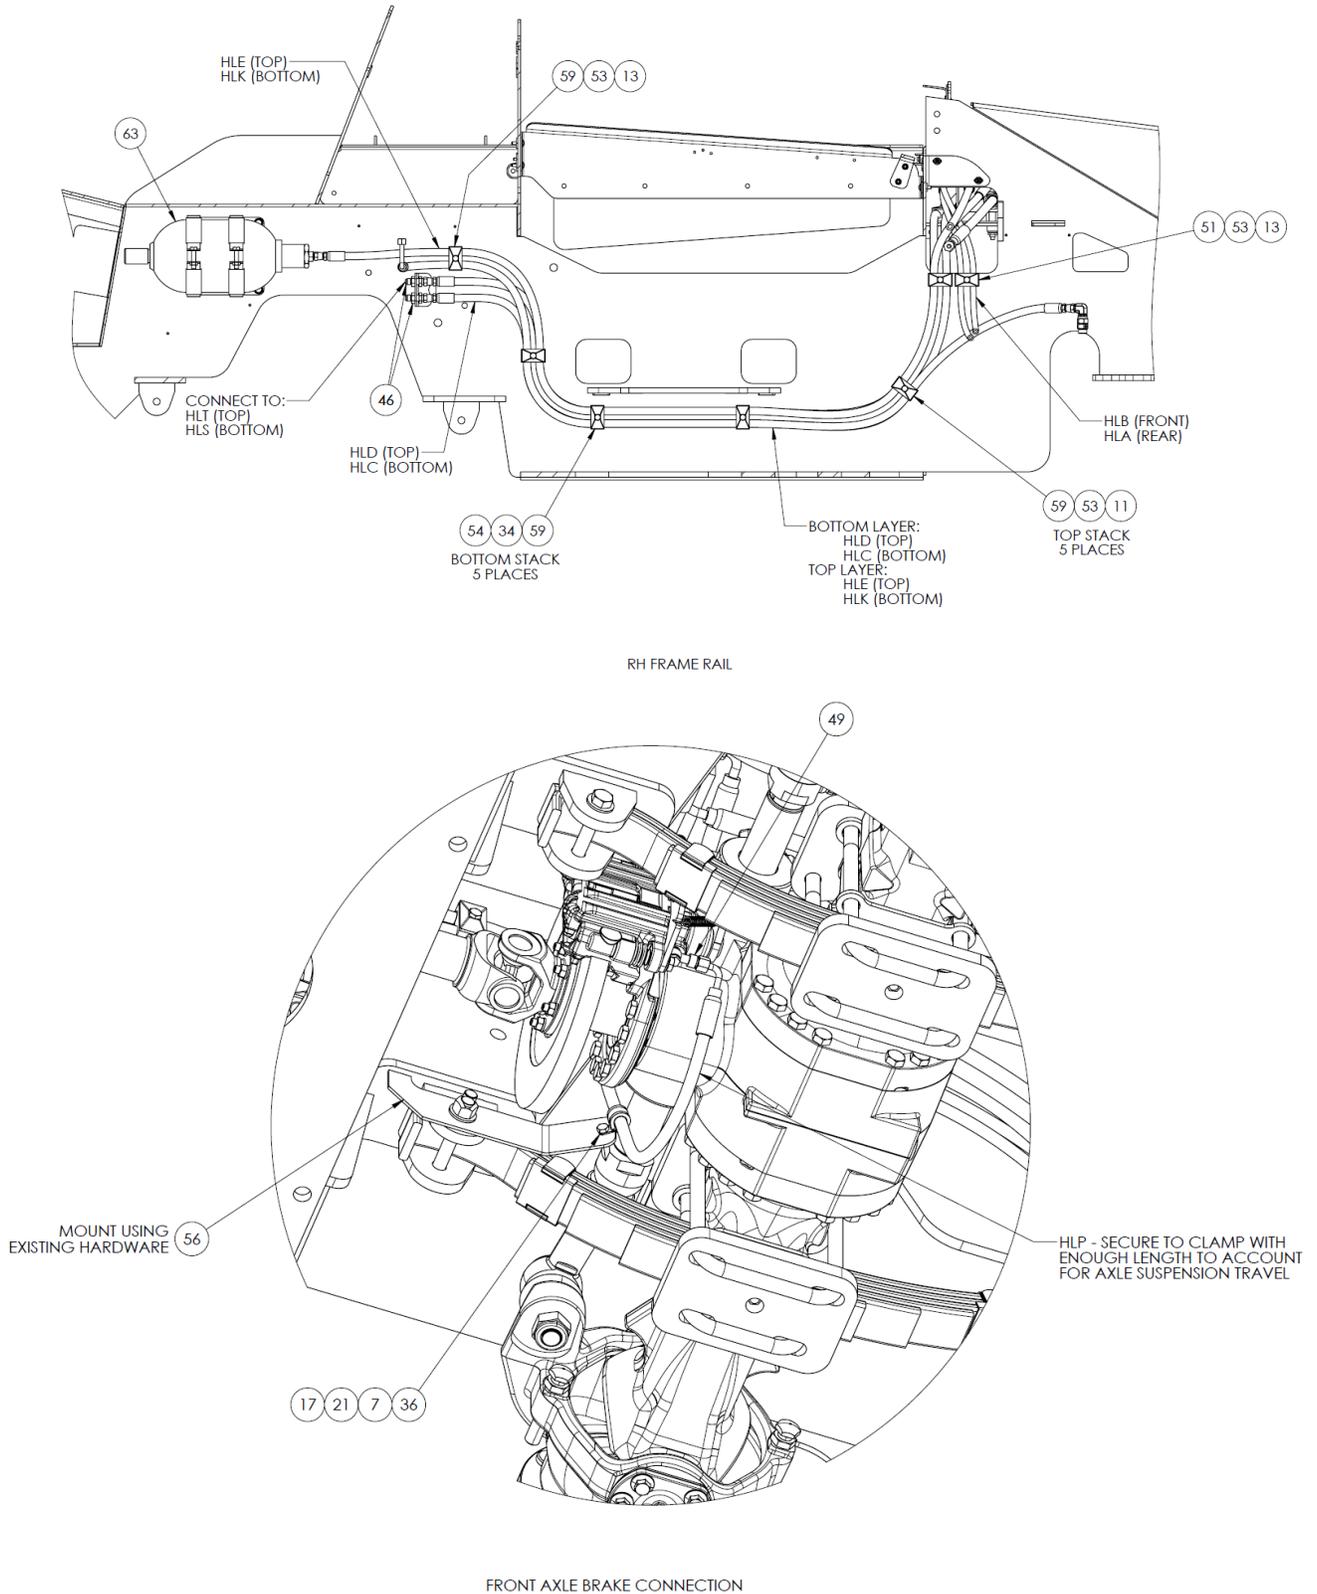

10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)


HLV - PORT "STEER R"
 HLU - PORT "STEER L"
 HLM - PORT "FR"
 HLL - PORT "FL"
 HLK - PORT "RR"
 HLJ - PORT "RL"

HLL - PORT FL TO FRONT AXLE LH STEER PORT
 HLM - PORT FR TO FRONT AXLE RH STEER PORT

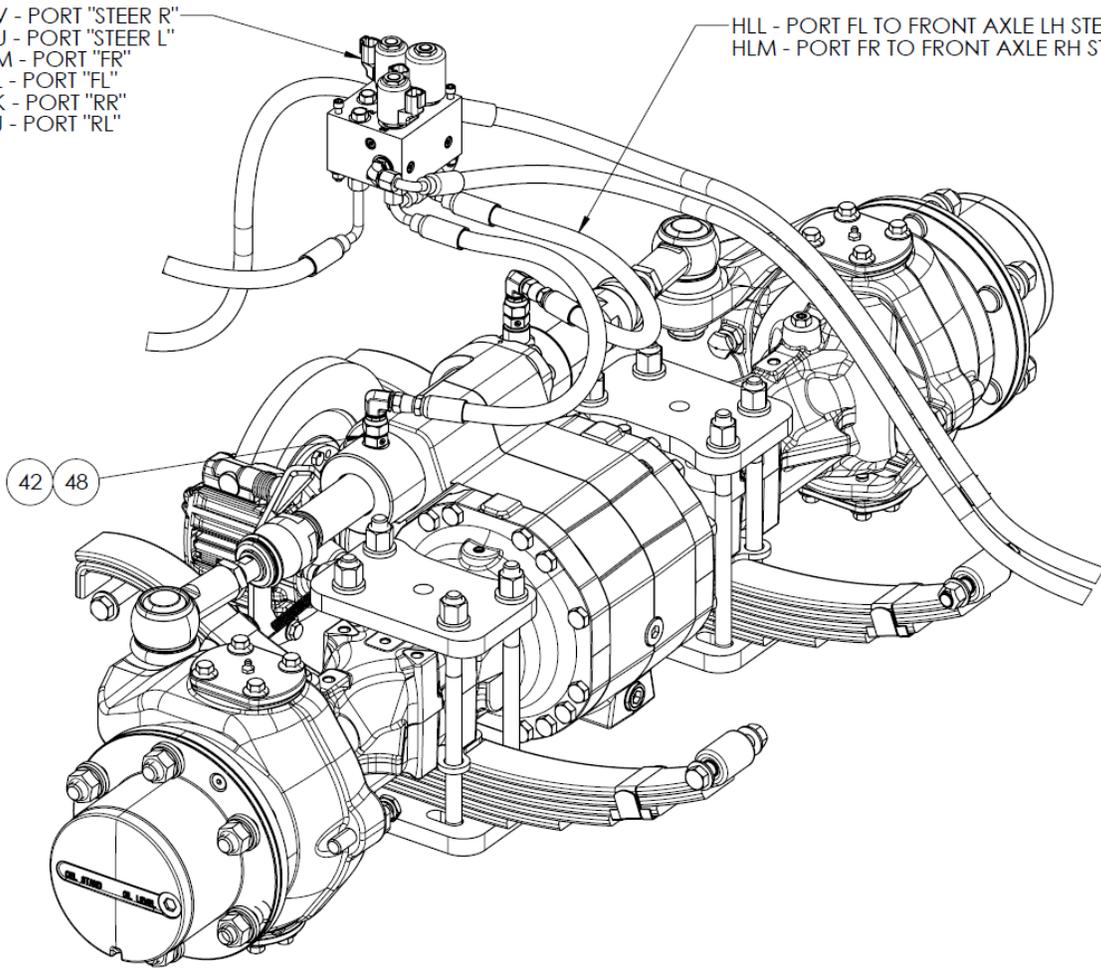


STEER MANIFOLD AND FRONT AXLE
STEERING CONNECTIONS



10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

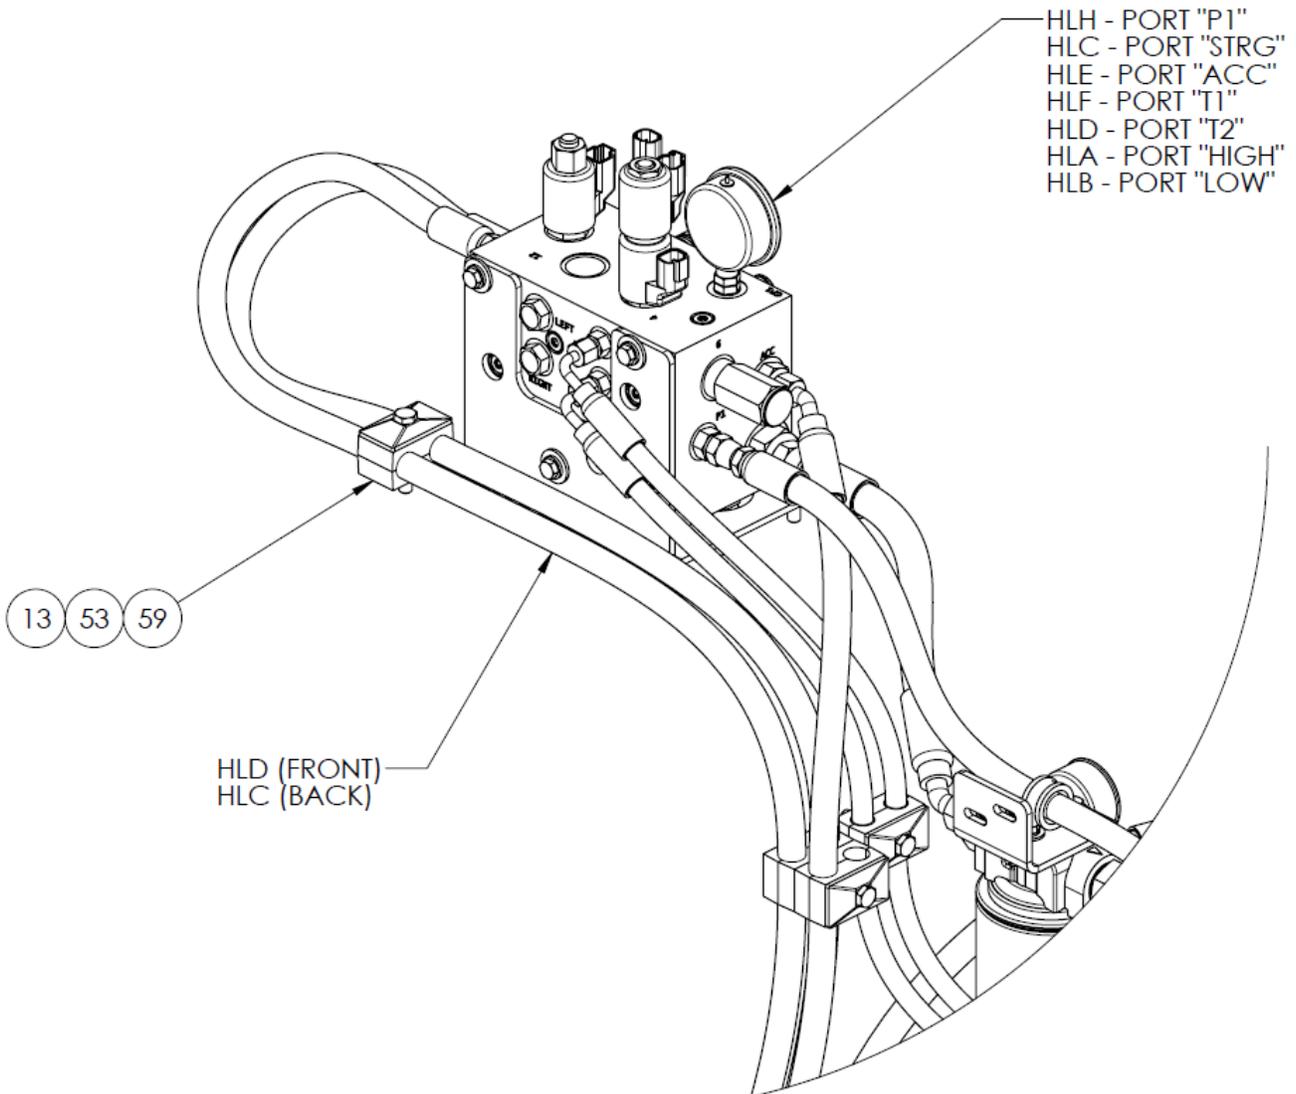

10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

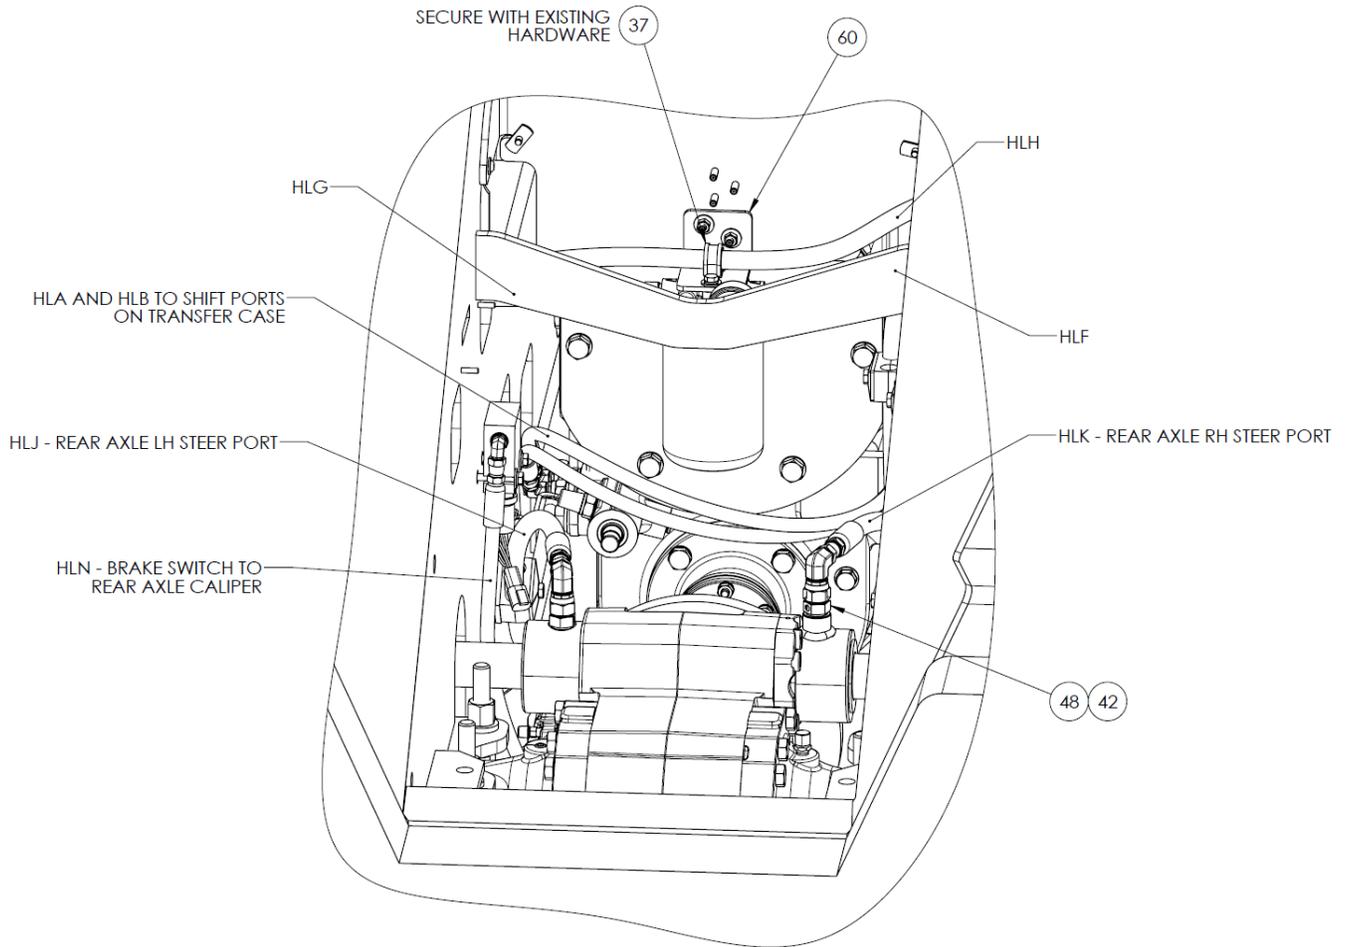


10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

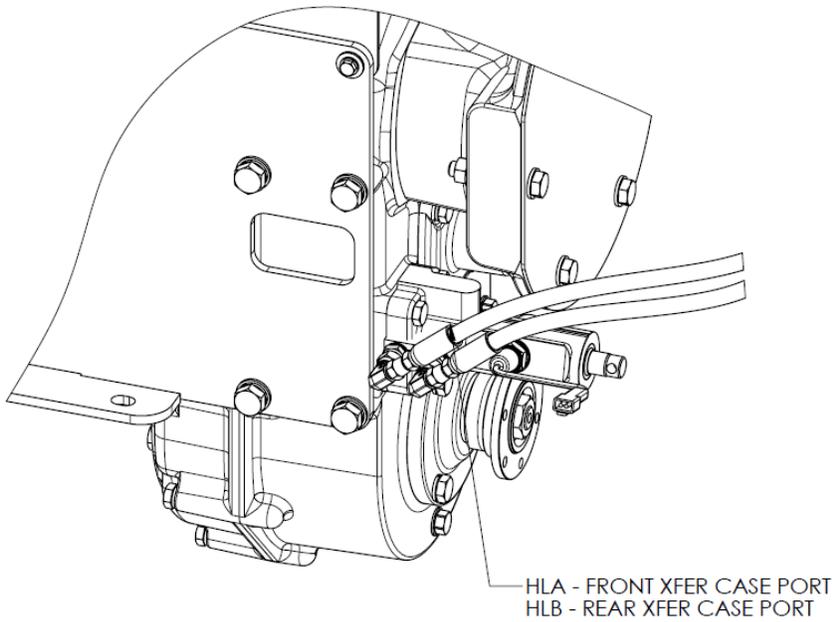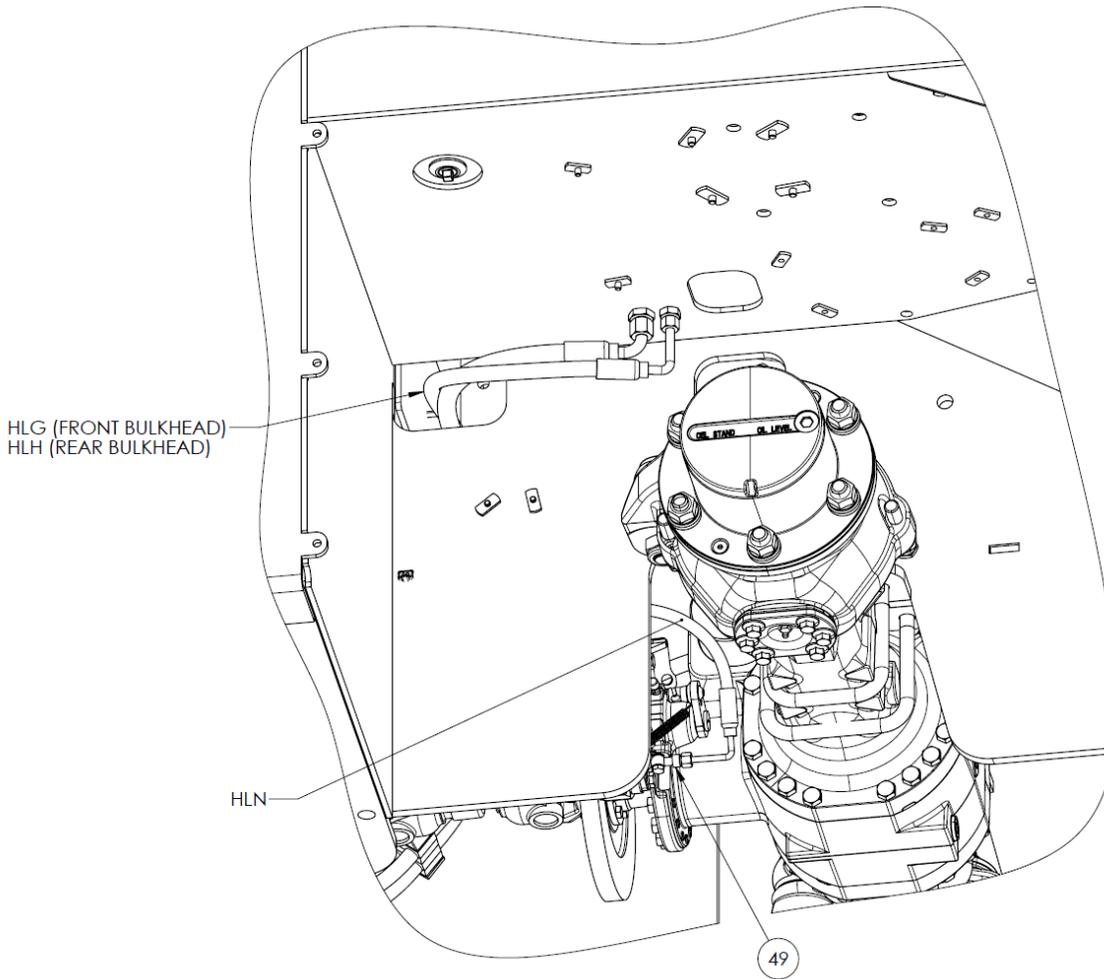

TRANSFER CASE CONNECTIONS

10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

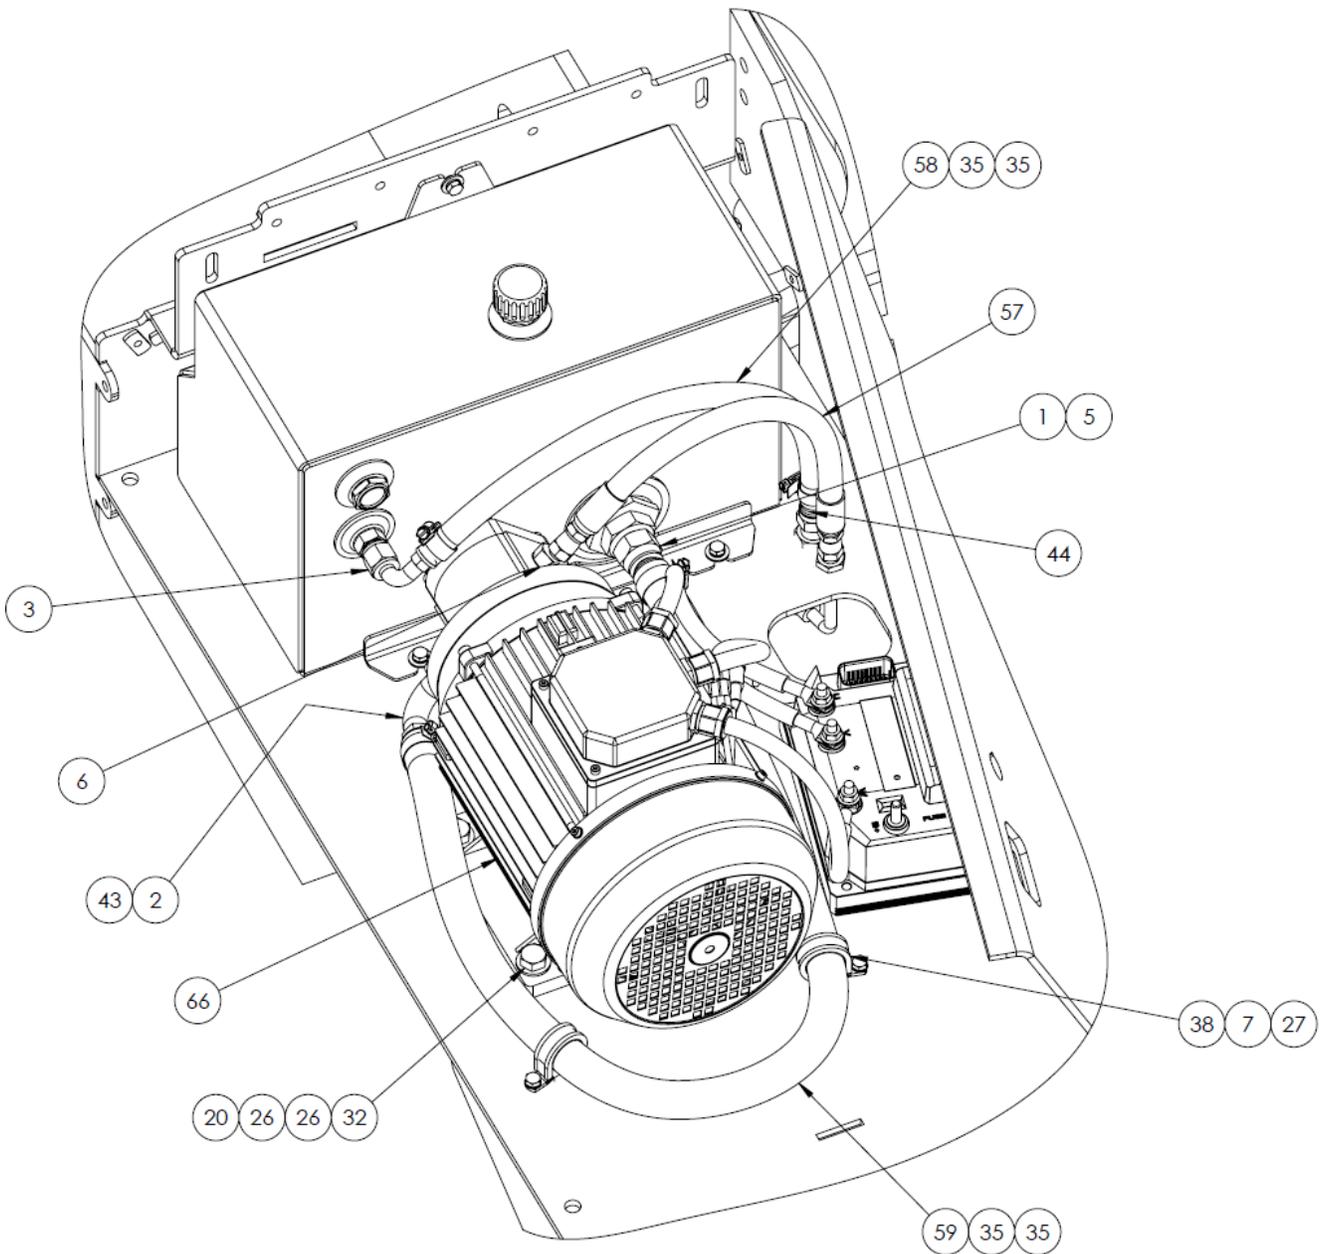



10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.


Item	Part Number	Description	Qty
1	30682-12-12	HOSE BARB, -12 F JIC X 3/4" BARB	1
2	33982-12-12	90 DEG HOSE BARB 12 JIC	1
3	33982-8-8	HOSE BARB, 90° ELBOW, -08 F JIC X 1/2" BARB	1
4	A-ES12-0468-1	BRAKE PRESSURE SWITCH	1
5	C5315X12X16	ADAPTER, -16 M SAE ORB X -12 M JIC	1
6	C5315X6X10	ADAPTER, -10 M SAE ORB X -06 M JIC	1
7	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	3
8	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	3
9	G-1100-105022	BOLT, 1/4-20 X 2-1/4" LG HEX HD GR 5	2
10	G-1100-106012	BOLT, 5/16-18 X 1-1/4" LG. HEX HD GR 5	2
11	G-1100-106014	BOLT, 5/16-18 X 1-1/2" LG. HEX HD GR 5	7
12	G-1100-106016	BOLT, 5/16-18 X 1-3/4" LG. HEX HD GR 5	1
13	G-1100-106020	BOLT, 5/16-18 X 2.0" LG. HEX HD GR 5	10
14	G-1100-106030	BOLT, 5/16-18 X 3" HEX HD GR 5	1
15	G-1100-106040	BOLT, 5/16-18 X 4.0" LG. HEX HD GR 5	1
16	G-1151-105232	SHCS, 1/4-20 X 3.25	2
17	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	5
18	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	2
19	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	3
20	G-1202-1090	STOPNUT, 1/2-13 ELASTIC	4
21	G-1250-1050N	FLATWASHER, 1/4 NARROW	3
22	G-1250-1050W	FLATWASHER, 1/4 WIDE	7
23	G-1250-1060W	FLATWASHER, 5/16 WIDE	8
24	G-1250-1070N	FLATWASHER, 3/8 NARROW	3
25	G-1250-1070W	FLATWASHER, 3/8 WIDE	6
26	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
27	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	7
28	G-1251-1060R	LOCKWASHER, 5/16 REGULAR	6
29	G-1251-1070R	LOCKWASHER, 3/8 REGULAR	3
30	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	4
31	G-1420-107012	BOLT, 3/8-16 X 1.25" HEX HD GR 8	6
32	G-1420-109016	BOLT, 1/2-13 X 1-3/4" HEX HD GR 8	4
33	G-1793-09	NUT, HEX CLASS 8 M8X1.25	3
34	G-1871-03	STACKING BOLT, HYD CLAMP	9
35	H-1426-04	CLAMP, HOSE, SAE -12	6
36	H-3521-04	CLAMP, CUSHIONED LOOP 9/16"	1
37	H-3521-09	CLAMP, CUSHIONED LOOP 7/8"	1
38	H-3521-15	CLAMP, CUSHIONED LOOP 1 1/4"	2
39	HC-2939	3 WAY VALVE BLOCK #4	1
40	K-5577	KIT, HYDR. HOSES ETTX	1



10.10 ASSEMBLY, HYDRAULIC SYSTEM (continued)

Item	Part Number	Description	Qty
41	N-2001-03-S-B	ELBOW, STRAIGHT THREAD	1
42	N-2002-15-S	ELBOW 90°, -08 F JIC X -06 M JIC	4
43	N-2007-18-S-B	ADAPTER, -12 SAE ORB M X -12 JIC M	1
44	N-2026-05-S	HOSE BARB, -08 JIC M X 1/2" BARB	1
45	N-2042-03-S-B	ELBOW 45°, -04 M SAE ORB X -04 M JIC	1
46	N-2061-03-S	BULKHEAD, -06 M JIC X -06 M JIC W/ NUT	3
47	N-2061-04-S	BULKHEAD, -08 M JIC X -08 M JIC, W/NUT	1
48	N-3054-08M18-SB	ADAPTOR, METRIC	4
49	N-3181	BANJO ADAPTER, M10X1.0 M METRIC ORB X -06 M JIC	2
50	NVSP-21-016-CB	M8 BELLEVILLE LOCK WASHER	3
51	NVSP-24-015-CF	HYD CLAMP - DUAL 15MM SMOOTH	7
52	NVSP-24-015-CG	HYD CLAMP - DUAL 16MM SMOOTH	23
53	NVSP-24-017-CC	HYD CLAMP - COVER PLATE	20
54	NVSP-24-018-CB	HYD CLAMP - SAFETY PLATE	9
55	NVSP-24-042-CB	METAL CORE EDGE TRIM	13.5
56	S-4350-00	BRACKET, BRAKE HOSE (P)	1
57	TF-1038-04-17.5	HYDRAULIC HOSE ASSEMBLY	1
58	TF-1105-08	PUSH-LOK HOSE, 1/2" ID	19.5
59	TF-1143-12	SUCTION HOSE, 3/4" ID	43.25
59	Z-11315	ASY, SPIN-ON FILTER	1
61	Z-11403	ASY, STEERING WHEEL	1
62	Z-11783	ASY, BRAKE PEDAL SUBASSEMBLY	1
63	Z-11821	ASY, ACCUMULATOR	1
64	Z-11836	ASY, HYDRAULIC TANK	1
65	Z-11840-2	ASY, MANIFOLD BLOCK, eTT-12X	1
66	Z-11856	ASY, PUMP MOTOR	1
67	Z-11861	ASY, STEER BLOCK	1

11.0 CHASSIS
11.1 ASSEMBLY, CHASSIS SUB

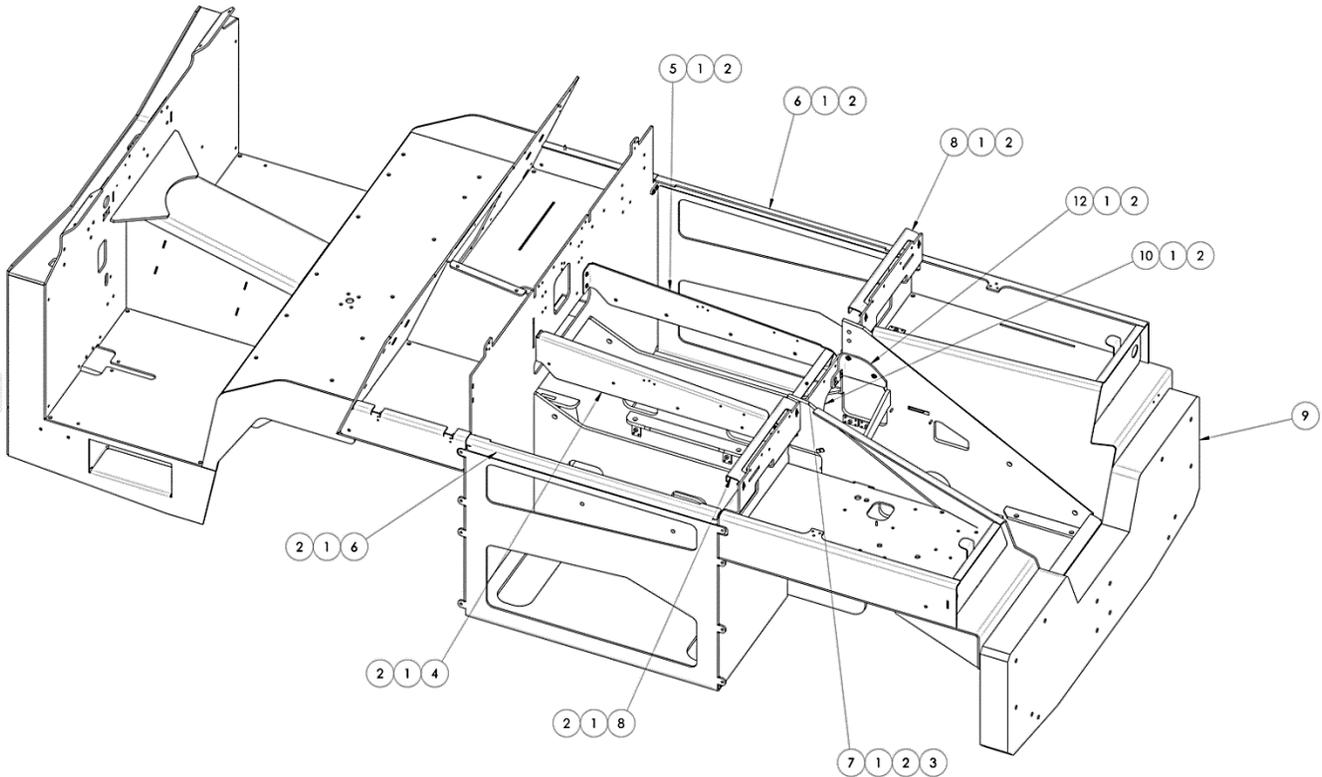


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	27
2	G-1250-1050N	FLATWASHER, 1/4 NARROW	27
3	G-1440-1050-S	NUTSERT, THICK WALL 1/4-20	3
4	J-7896-00	INSIDE BULKHEAD, LH (WP)	1
5	J-7897-00	BATTERY BULKHEAD, RH (WP)	1
6	J-8037-00	BATTERY TRIM (WP)	2
7	J-8260-00	MIDDLE DOOR STRIKE PLATE (P)	1
8	Z-11538-00	WLD, BATTERY DOOR STRIKE PLATE (WP)	2
9	Z-12105-00	WLD, VEHICLE CHASSIS (WP)	1
10	Z-12336-00	WLD, FILTER MOUNT PLATE (P)	1
11	Z-12337-00	WLD, LH BRACKET (P)	1
12	Z-12338-00	WLD, RH BRACKET (P)	1

- 12.0 OPERATOR COMPARTMENT
- 12.1 PRX SENSOR BUZZLITE W CONNECT

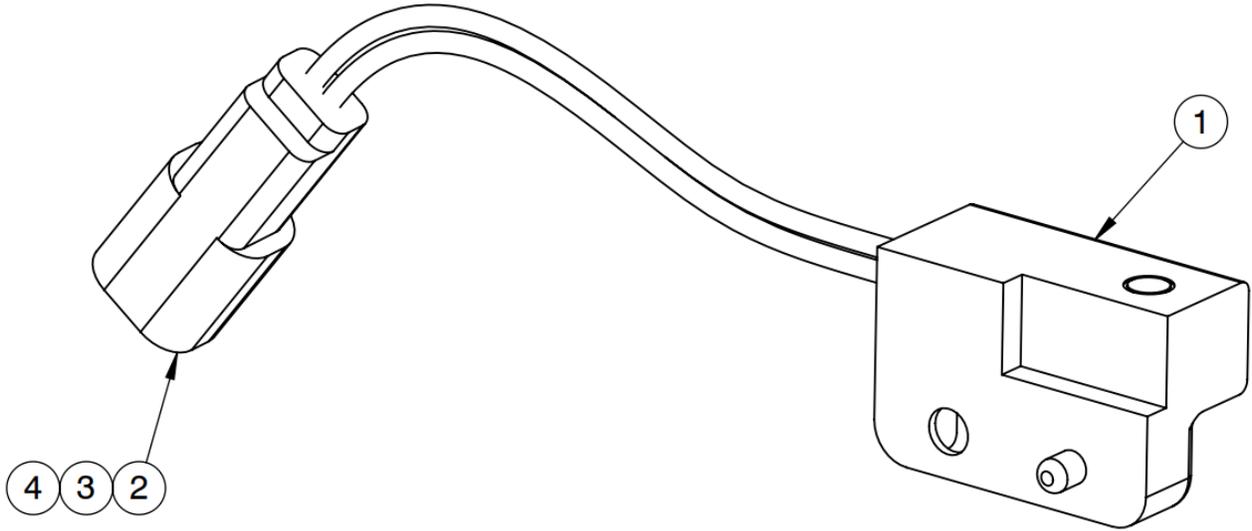


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	82050000	PROXIMITY SENSOR BUZZLITE	1
2	DT04-2P	DEUTSCH CONNECTOR	1
3	W2P	DEUTSCH LOCK	1
4	0460-215-16141	DEUTSCH TERMINAL	2

12.2 ASSEMBLY, PARKING BRAKE CABLE

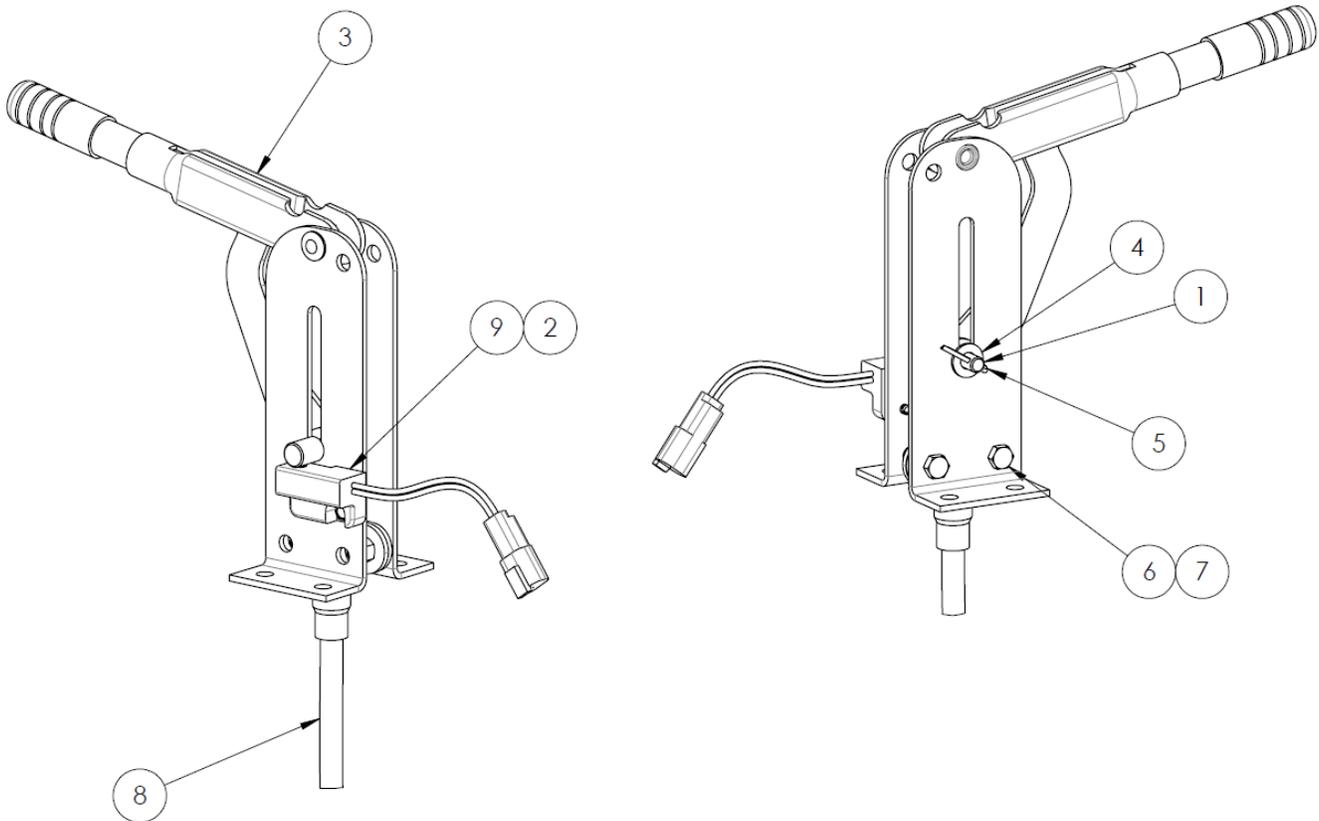


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	81008429	BUZZLITE PRK BRAKE CONTACT PIN	1
2	82066700	MOUNTING SCREW BUZZLITE	1
3	A-TT4-00141	BRAKE LEVER-HAND	1
4	G-1250-1060N	FLATWASHER, 5/16 NARROW	1
5	G-1301-01	PIN, 3/32 X 1 LG COTTER	1
6	G-1420-106006	BOLT, 5/16-18 X 3/4" LG. HEX HD GR 8	2
7	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	2
8	H-5051	CABLE, PARKING BRAKE	1
9	Refer above section	PRX SENSOR BUZZLITE W CONNECT	1

12.3 ASSEMBLY, DASH PANEL

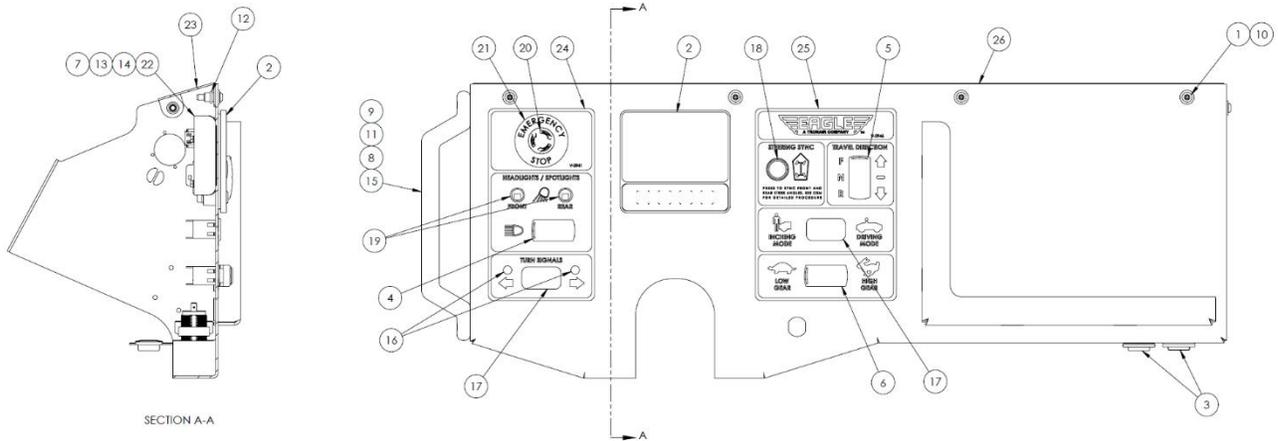


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	6
2	EC-3309	OPERATOR DISPLAY MODULE	1
3	EC-3404	OUTLET, 12V USB+SOCKET, PANEL	1
4	EC-3450-01	LIGHTS SWITCH	1
5	EC-3450-03	FNR SWITCH	1
6	EC-3450-05	HIGH/LOW SWITCH	1
7	G-1114-040008	BOLT, METRIC, CLASS 8.8, M4X0.7X8	4
8	G-1154-106212	SCR, 5/16-18 SOC BUT HD CAP	2
9	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	2
10	G-1250-1050N	FLATWASHER, 1/4 NARROW	6
11	G-1250-1060N	FLATWASHER, 5/16 NARROW	2
12	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	6
13	G-1514-M40R	SPLIT LOCK WASHER (M4)	4
14	G-1515-M40	FLAT WASHER, M4	4
15	H-1584	HANDLE	1
16	H-4693-05	PANEL PLUG, Ø5/16	2
17	H-4992	SVR EMPTY SWITCH PLUG	2
18	NVSP-05-042-CA	MOMENTARY SWITCH PUMP CONTROL	1
19	NVSP-14-008-CA	SPOTLIGHT SWITCH DASH ILLUMINATED	2
20	NVSP-14-041-CA	E-STOP BUTTON	1
21	NVSP-14-042-CA	E-STOP PLACARD	1
22	S-3926-00	DISPLAY BRACKET	1
23	S-4377-00	BEAUTY COVER, DASH (P)	1
24	V-2941	LABEL, ETTX DASH LH	1
25	V-2946	LABEL, ETT-8 DASH RH	1
26	Z-11807-00	WLD, DASH PANEL (P)	1

12.4 ASSEMBLY, OPERATOR COMPARTMENT

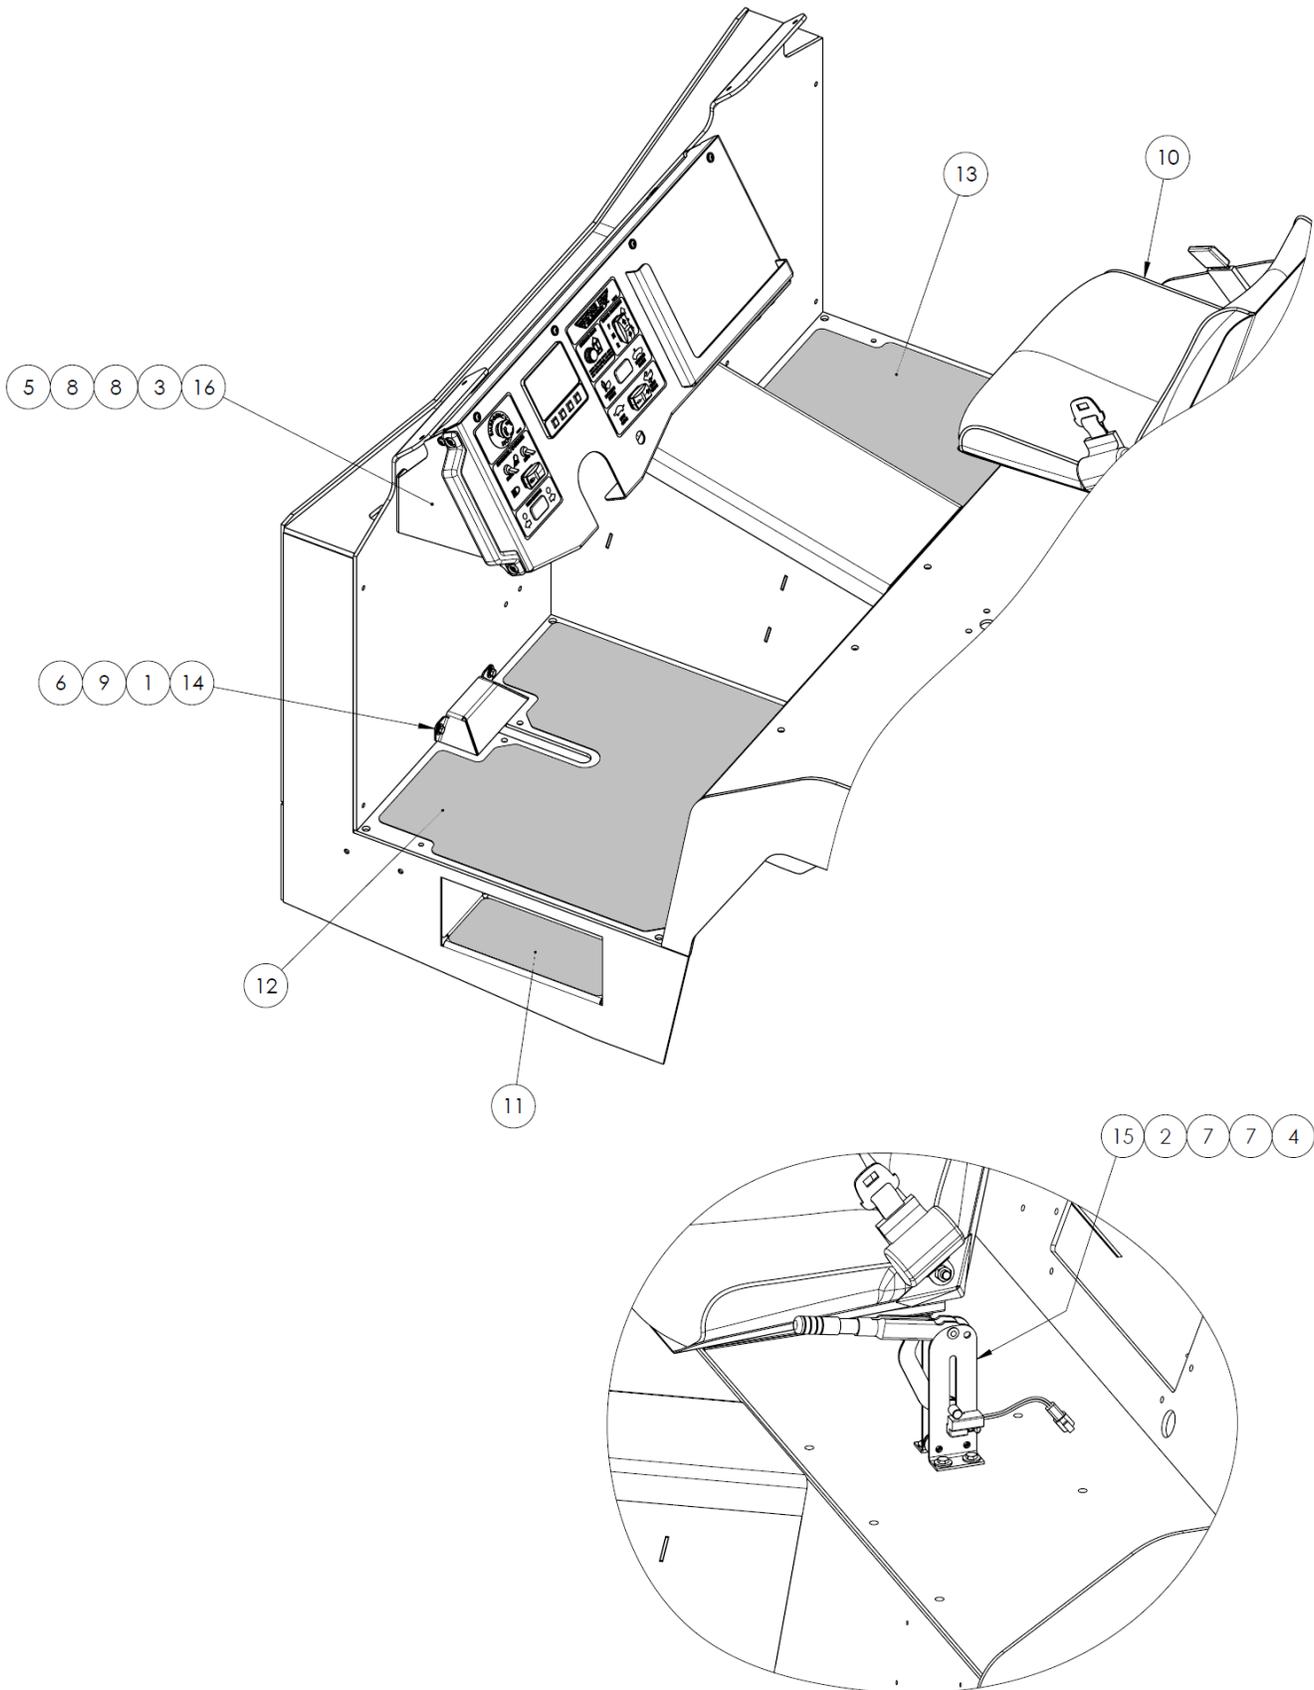

12.4 ASSEMBLY, OPERATOR COMPARTMENT (continued)


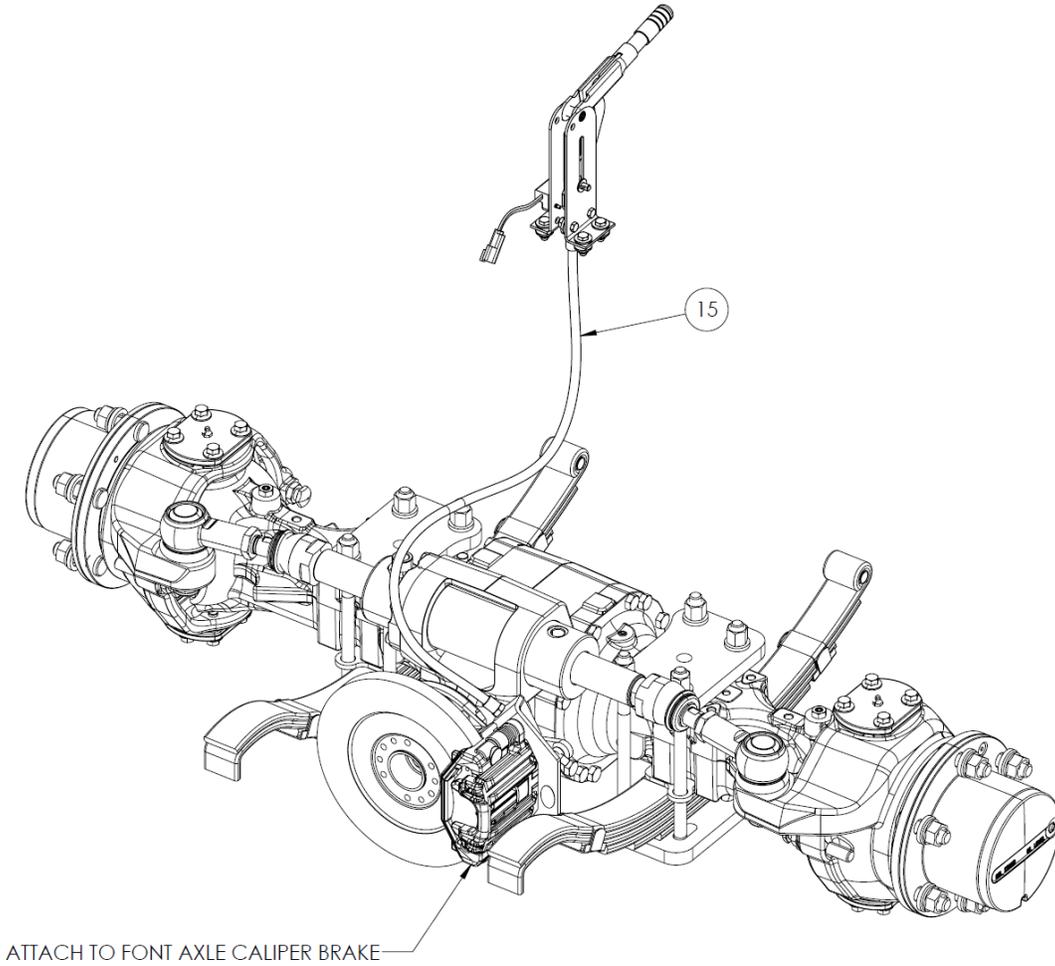


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	2
2	G-1100-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 5	4
3	G-1154-107212	SCREW, 3/8-16 X 1-1/4" LG. SOCKET BUTT HD CAP	4
4	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	4
5	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	4
6	G-1250-1050W	FLATWASHER, 1/4 WIDE	2
7	G-1250-1060W	FLATWASHER, 5/16 WIDE	8
8	G-1250-1070N	FLATWASHER, 3/8 NARROW	8
9	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	2
10	H-4912	OPERATOR SEAT (W/ SWITCH MOUNT)	1
11	H-4915	GRIP TAPE, STEP	2
12	H-5186	FLOOR MAT, LH	1
13	H-5187	FLOOR MAT, RH	1
14	S-4332-00	SHIELD, MASTER CYLINDER (P)	1
15	Z-11903	ASY, PARKING BRAKE CABLE	1
16	Z-12265	ASY, DASH PANEL TRANSIT	1


13.0 ELECTRICAL SYSTEM
13.1 ASSEMBLY, BATTERY CABLES

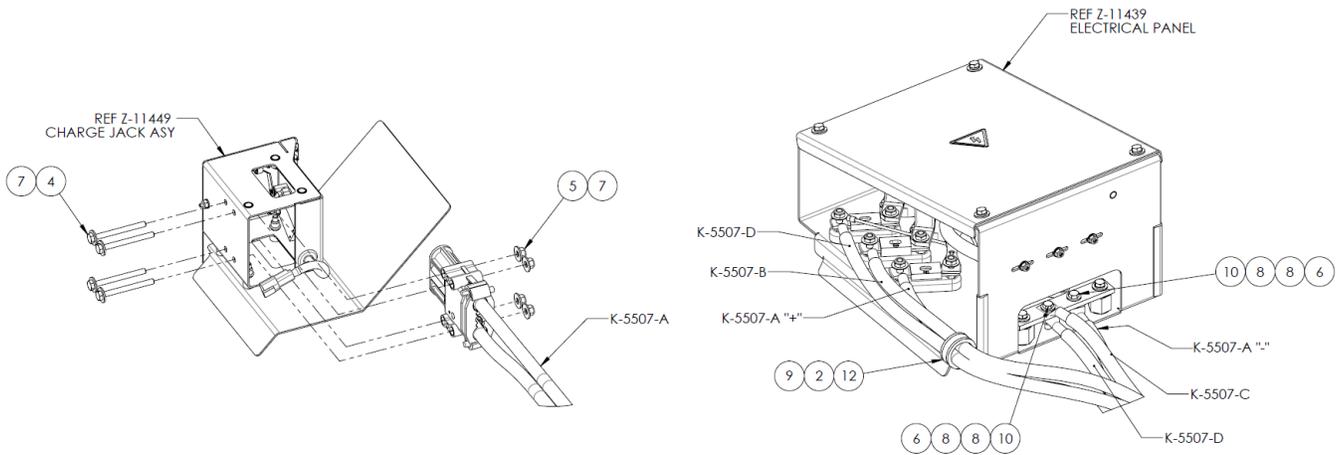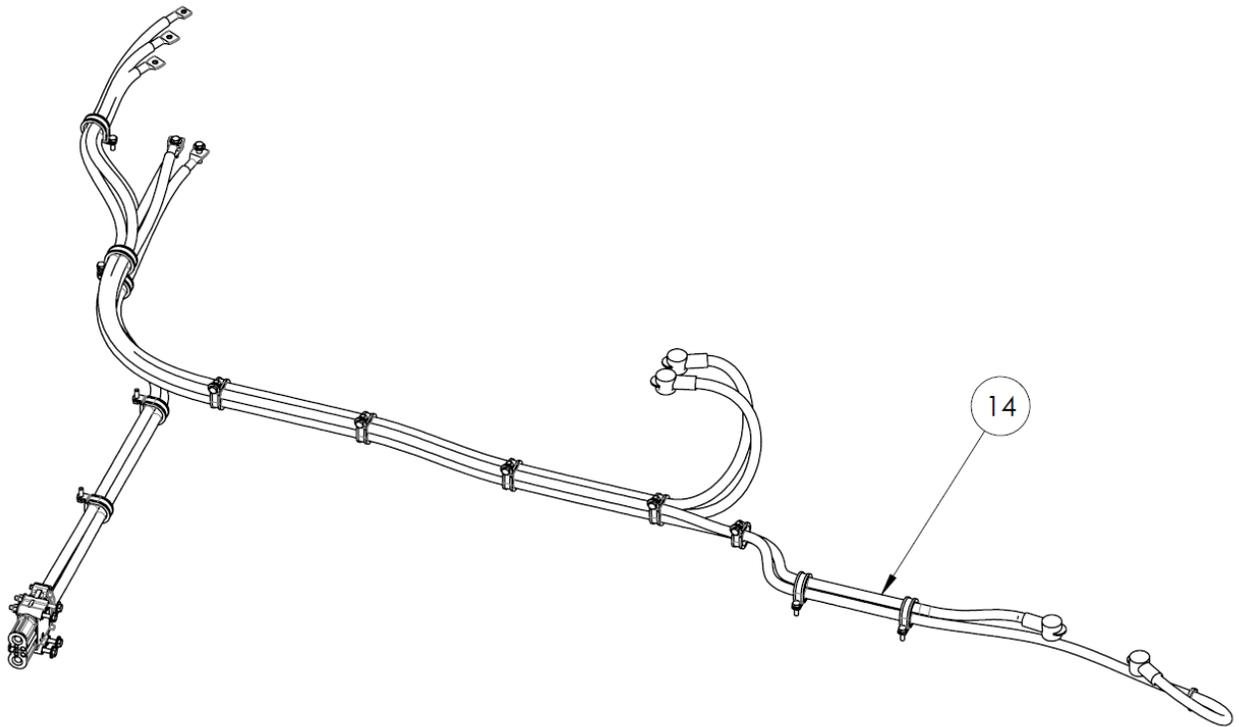

13.1 ASSEMBLY, BATTERY CABLES (continued)


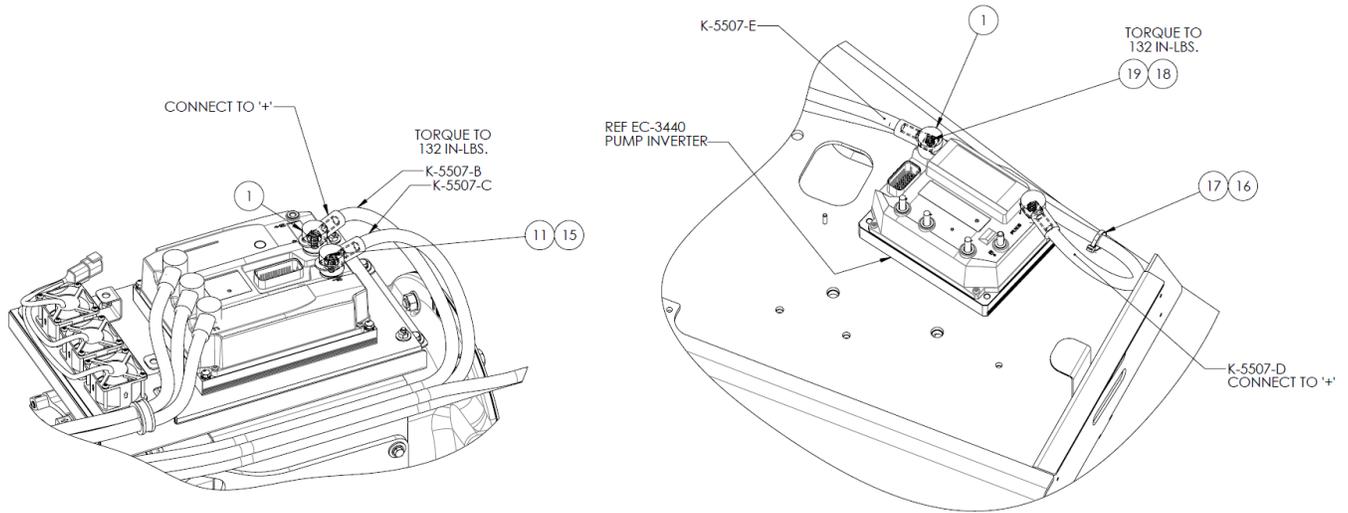


NOTE: SOME COMPONENTS ARE HIDDEN FOR CLARITY

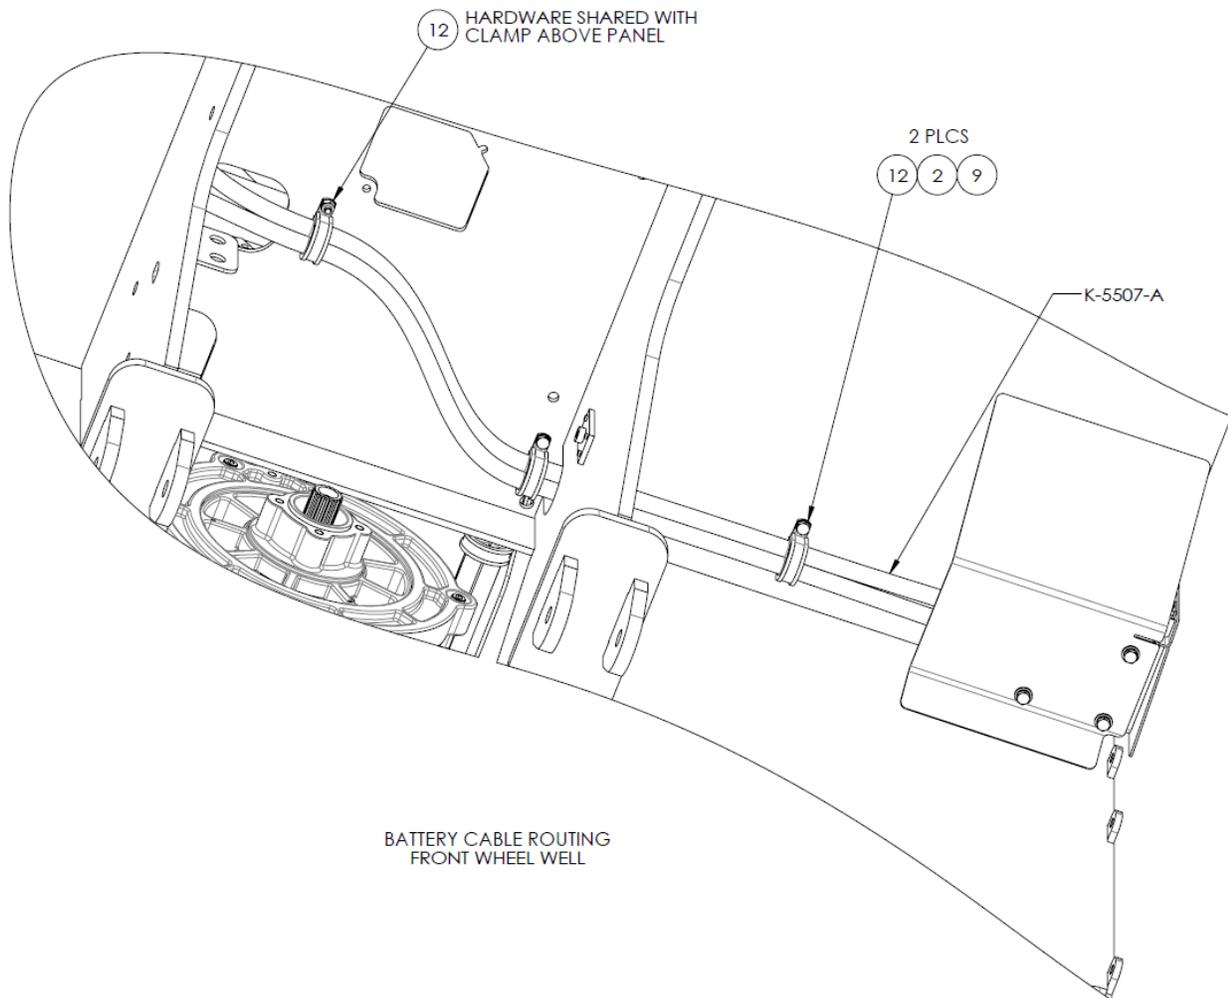


BATTERY CABLE ROUTING
FRONT WHEEL WELL

13.1 ASSEMBLY, BATTERY CABLES (continued)

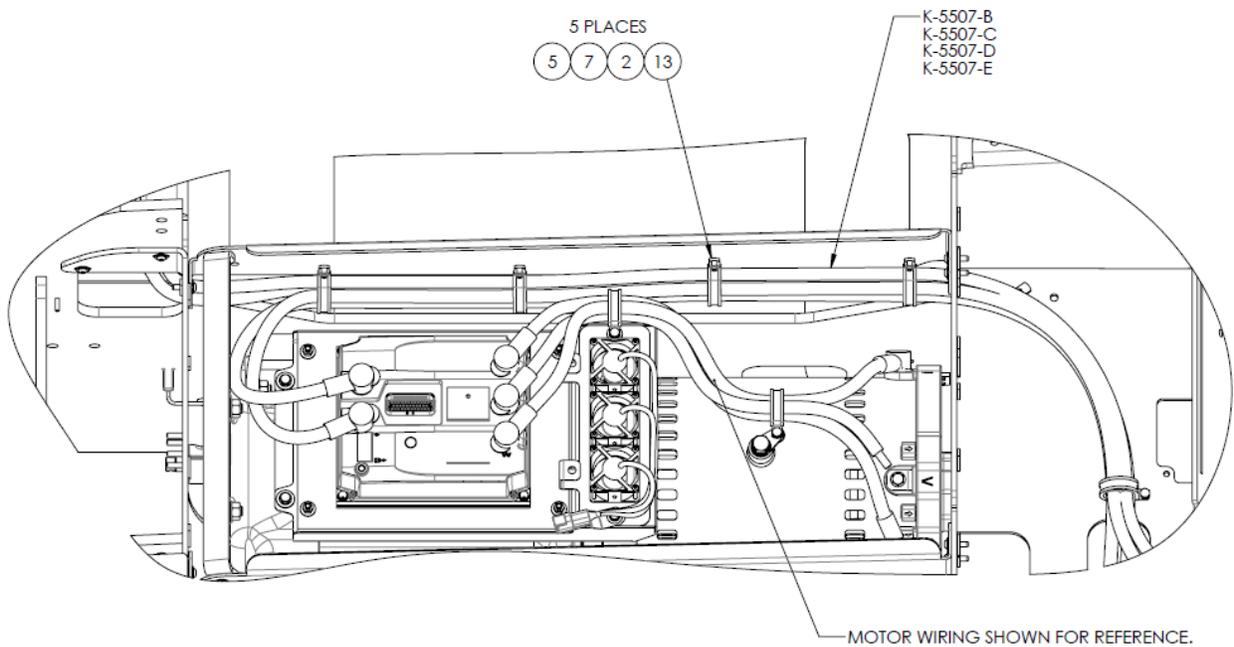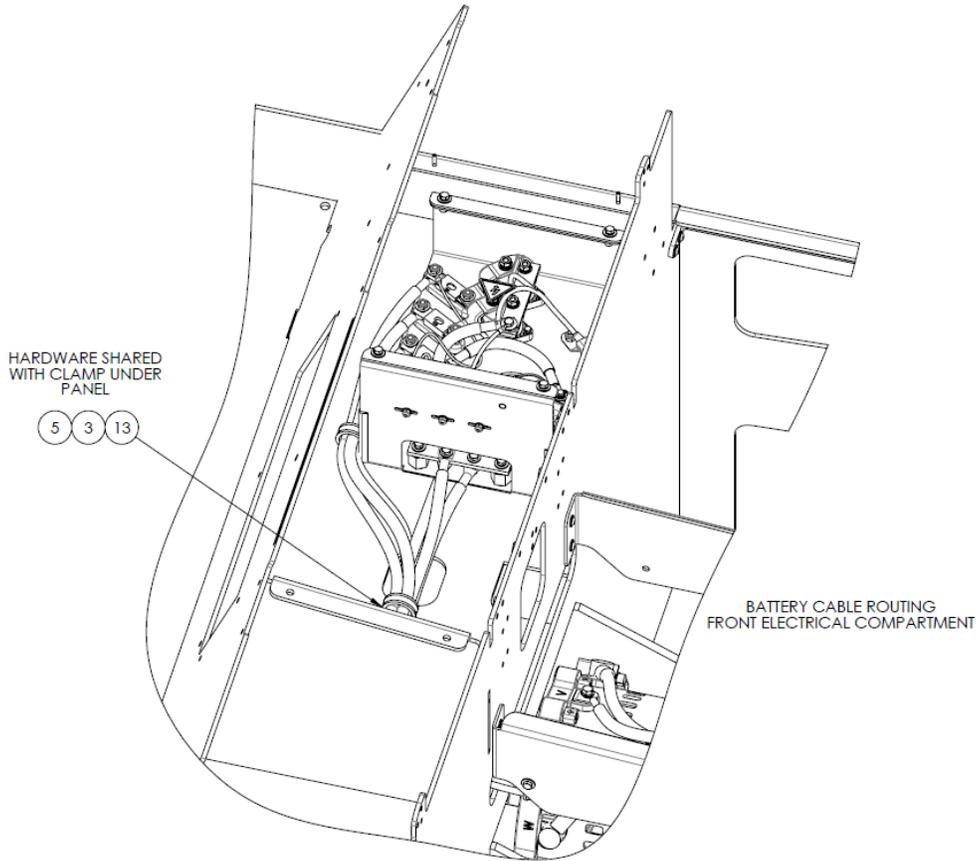

BATTERY CABLE ROUTING
CENTER TUNNEL

13.1 ASSEMBLY, BATTERY CABLES (continued)


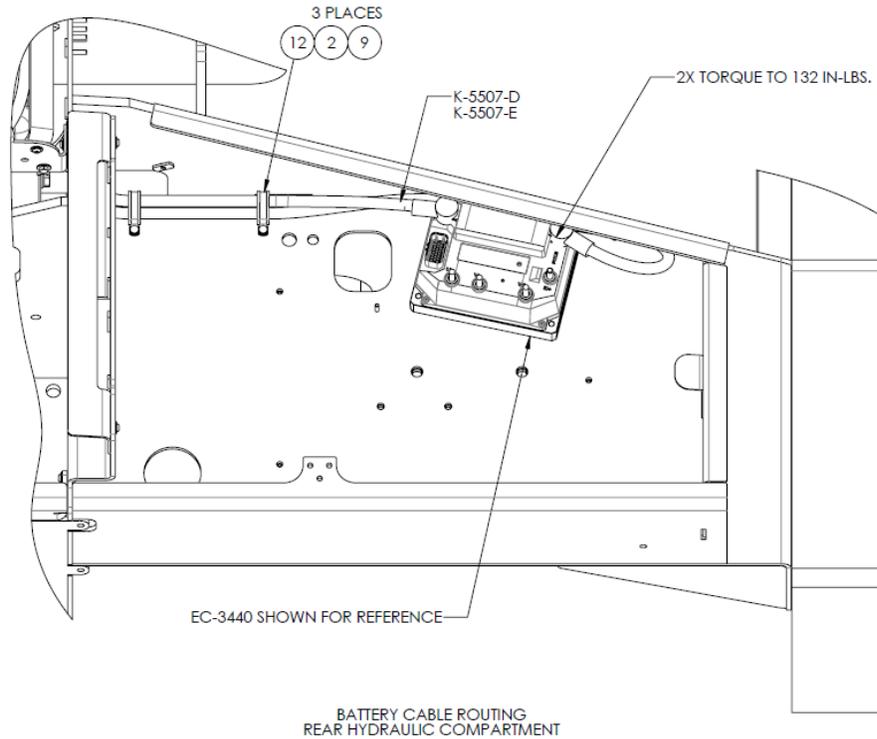


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.



Item	Part Number	Description	Qty
1	EC-2110	BATTERY, TERMINAL INSULATOR	4
2	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	10
3	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	1
4	G-1100-105026	BOLT, 1/4-20 X 2-3/4" LG HEX HD GR 5	4
5	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	10
6	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	2
7	G-1250-1050W	FLATWASHER, 1/4 WIDE	13
8	G-1250-1060N	FLATWASHER, 5/16 NARROW	4
9	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	5
10	G-1420-106012	BOLT, 5/16-18 X 1-1/4" LG. HEX HD GR 8	2
11	G-1533-080016	BOLT M8-1.25 X 16mm LG. CLASS 10.9	2
12	H-3521-15	CLAMP, CUSHIONED LOOP 1 1/4"	7
13	H-3521-19	CLAMP, CUSHIONED LOOP 1 1/2"	5
14	K-5507	BATTERY CABLE KIT	1
15	NVSP-21-016-CB	M8 BELLEVILLE LOCK WASHER	2
16	NVSP-24-022-CA	CABLE TIE ANCHOR STD (Ø.375 X .27 THK)	1
17	N/A	CABLE TIE	1
18	G-1250-1020N	FLATWASHER, #8 NARROW	2
19	G-1202-1020	STOPNUT, #8-32 ELASTIC	2

13.2 ASSEMBLY, ELECTRICAL PANEL

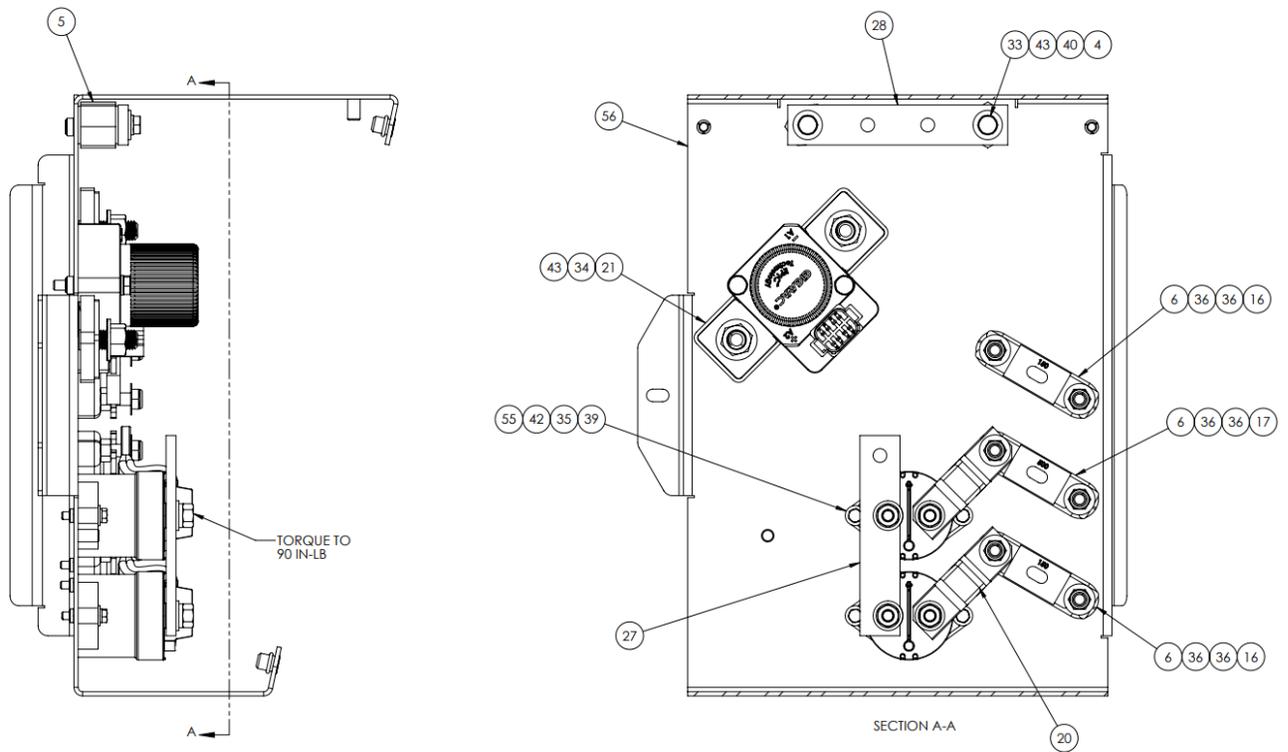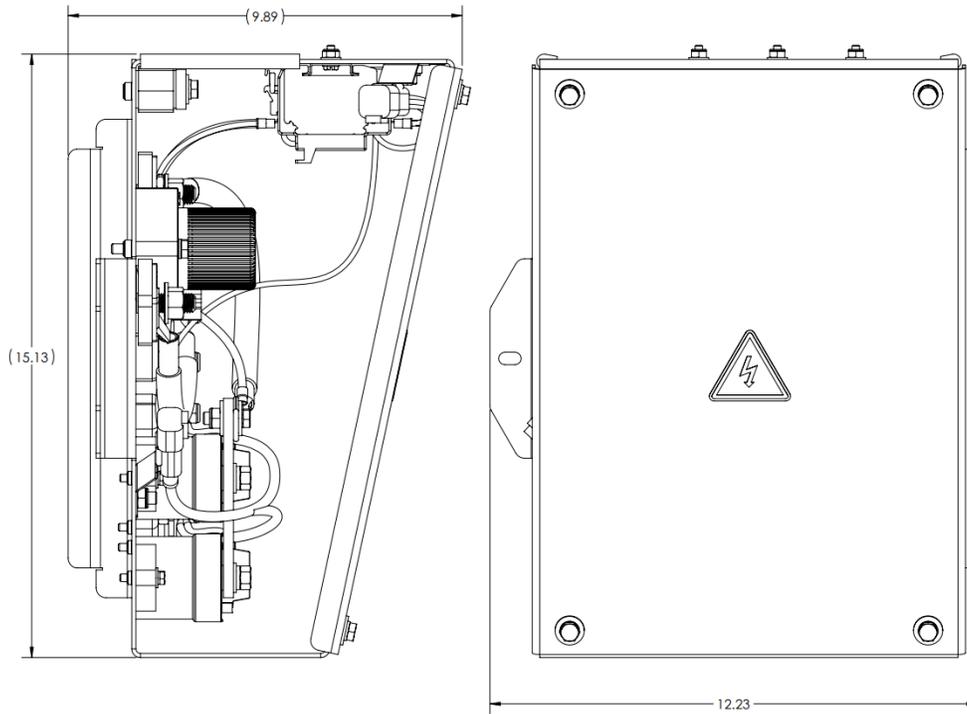

STEP 1


13.2 ASSEMBLY, ELECTRICAL PANEL (continued)

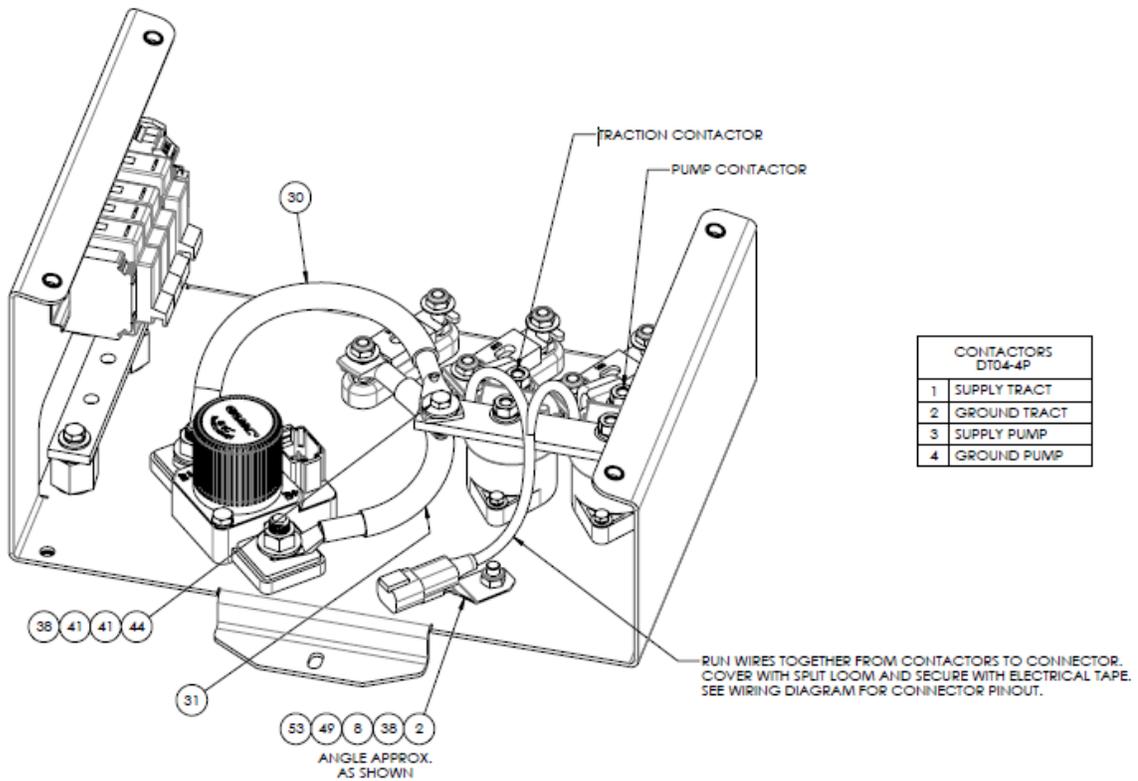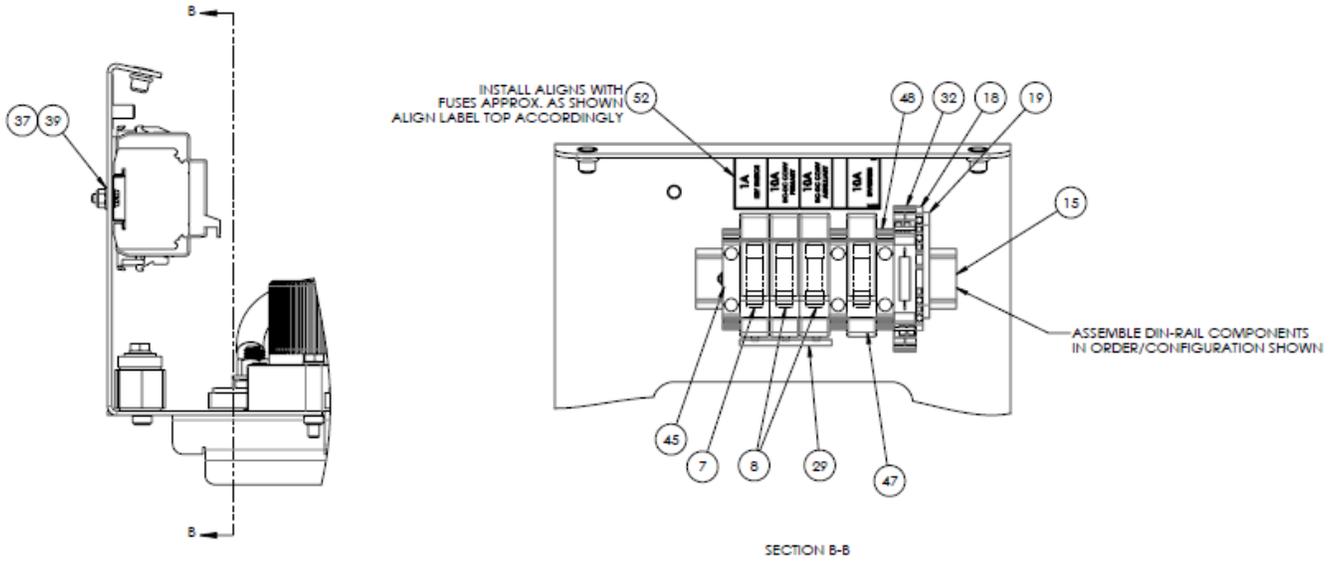

CONTACTORS DT04-4P	
1	SUPPLY TRACT
2	GROUND TRACT
3	SUPPLY PUMP
4	GROUND PUMP

STEP 2

13.2 ASSEMBLY, ELECTRICAL PANEL (continued)

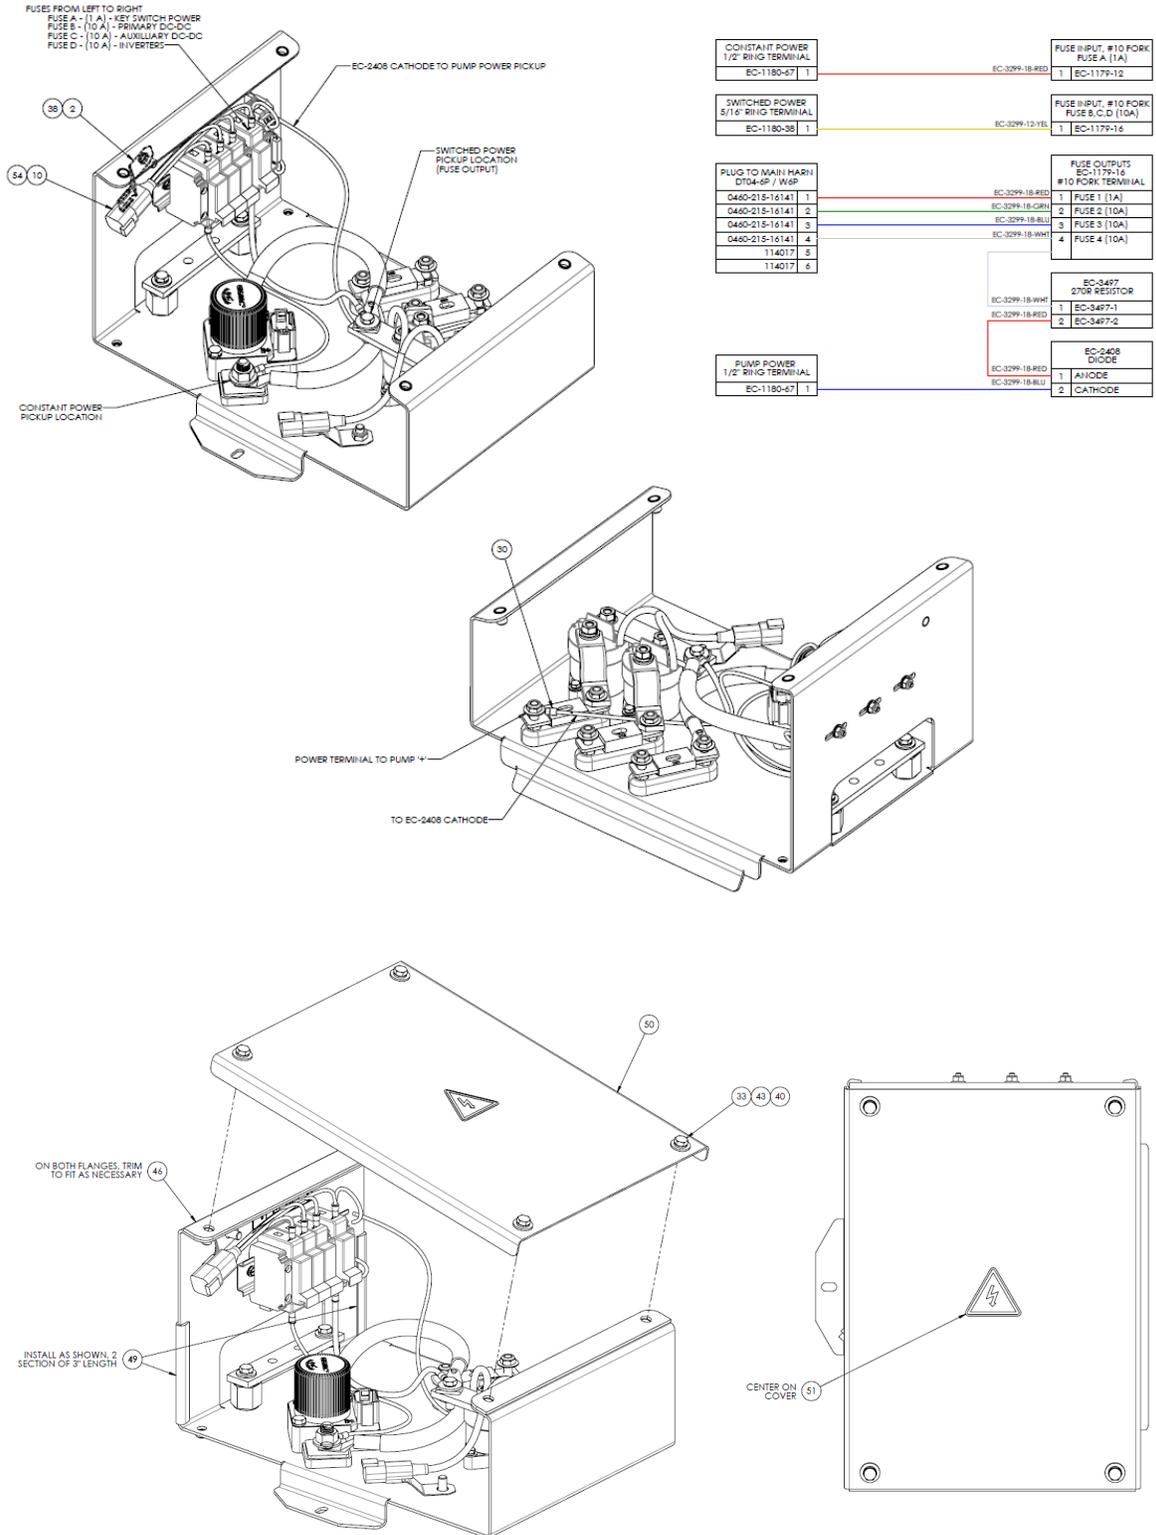



13.2 ASSEMBLY, ELECTRICAL PANEL (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	0460-215-16141	DEUTSCH TERMINAL	4
2	1027-003-1200	DEUTSCH RETAINER CLIP	2
3	114017	DEUTSCH EMPTY SOCKET PLUG	2
4	12050	SPLIT LOOM, 3/8"	7"
5	13015	RECTIFIER ISOLATOR	2
6	A-MTT5-0225	ANN FUSE HOLDER	3
7	BLN-1	10X38 FUSE, 250V, 1A	1
8	BLN-10	10X38 FUSE, 250V, 10A	3
9	DT04-4P	DEUTSCH CONNECTOR	1
10	DT04-6P	DEUTSCH CONNECTOR	1
11	EC-1179-12	#10 FORK TERMINAL, 14-18 AWG.	5
12	EC-1179-16	#10 FORK TERMINAL, 10-12 AWG.	1
13	EC-1180-38	TERMINAL, RING YEL 5/16, 10 AWG	2
14	EC-1180-67	TERMINAL, RING BLUE 1/2	1
15	EC-1514*006.00	35MM DIN RAIL	1
16	EC-1619-09	FUSE, ANL 150	2
17	EC-1619-19	FUSE, ANL-500	1
18	EC-2408	TERMINAL BLOCK, DIODE 4COND.	1
19	EC-2411	PLATE, END DIODE BLOCK	1
20	EC-2998	CABLE, FLEXIBLE BRAIDED	2
21	EC-3006	CONTACTOR, 600A, 12V	1
22	EC-3299-12-YEL	TXL WIRE, 18 AWG, YELLOW	10
23	EC-3299-18-BLU	TXL WIRE, 18 AWG, BLUE	21
24	EC-3299-18-GRN	TXL WIRE, 18 AWG, GREEN	6
25	EC-3299-18-RED	TXL WIRE, 18 AWG, RED	17
26	EC-3299-18-WHT	TXL WIRE, 18 AWG, WHITE	6
27	EC-3316	BUSBAR, ETT	1
28	EC-3317	BUSBAR, ETT	1
29	EC-3361-3	FUSE INPUT BUS, 3 POLE	1
30	EC-3389	BATTERY CABLE	1
31	EC-3390	BATTERY CABLE	1
32	EC-3497	RESISTOR, DIN MOUNTED, 270R	1
33	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	6
34	G-1100-105016	BOLT, 1/4-20 X 1-3/4" LG HEX HD GR 5	2
35	G-1150-103510	SCREW, #10-32 X 1.0" LG HEX HD MACHINE	4
36	G-1152-103510	SCREW, #10-32 X 1.0" LG SOCKET FLAT HD CAP	6
37	G-1202-1035	STOPNUT, #10-32 ELASTIC	3
38	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	3
39	G-1250-1030N	FLATWASHER, #10 NARROW	7




13.2 ASSEMBLY, ELECTRICAL PANEL (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
40	G-1250-1050W	FLATWASHER, 1/4 WIDE	6
41	G-1250-1060W	FLATWASHER, 5/16 WIDE	2
42	G-1251-1030R	LOCKWASHER, #10 REGULAR	4
43	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	8
44	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	1
45	G-1720-103504	SCR,#10-32X0.5 MACH HEX WSH HD	3
46	H-1204-10	TAPE, NEOPRENE FOAM SEALING	2
47	LAVT-05-006-CA	10X 38 DIN DIN RAIL MOUNTED FUSE HOLDER	4
48	LAVT-05-009-CA	35MM DIN RAIL END STOP	3
49	NVSP-24-042-CA	METAL CORE EDGE TRIM, 1/8	6
50	S-4211-00	COVER PANEL (P)	1
51	V-1050	LABEL, ISO ELECTRICAL SHOCK	1
52	V-2944	LABEL, FUSE BLOCK	1
53	W4P	DEUTSCH LOCK	1
54	W6P	DEUTSCH CONNECTOR LOCK	1
55	Z-11102	ASY, CONTACTOR AND TERMINALS	2
56	Refer above section	ASY, ELECTRICAL PANEL	1

13.3 ASSEMBLY, ELECTRICAL PANEL



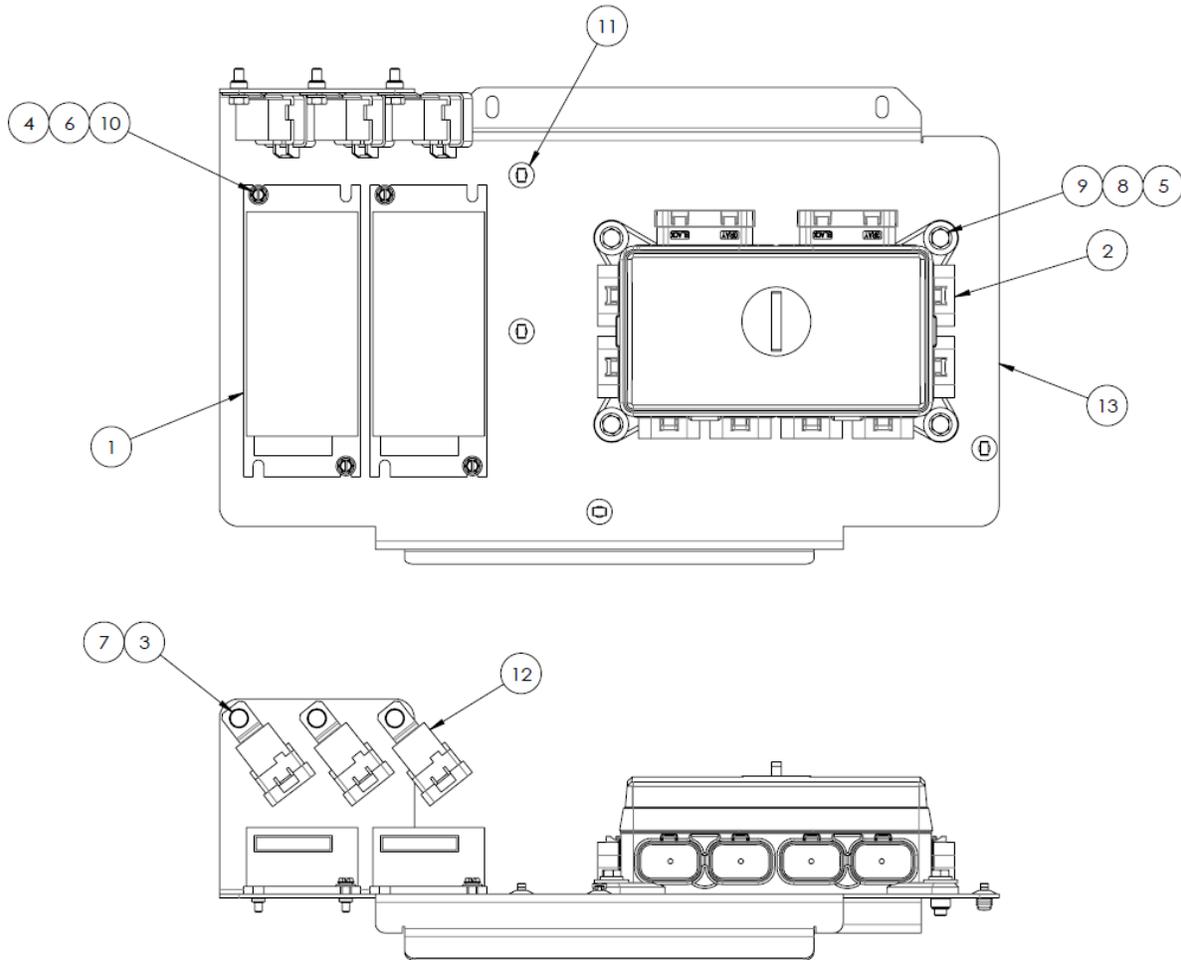


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	AE-OPT-0320-B	DC-DC CONVERTER, 300W	2
2	EC-3391	FUSE BOX, MOD	1
3	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	3
4	G-1250-1030N	FLATWASHER, #10 NARROW	4
5	G-1250-1060W	FLATWASHER, 5/16 WIDE	4
6	G-1251-1030R	LOCKWASHER, #10 REGULAR	4
7	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	3
8	G-1251-1060R	LOCKWASHER, 5/16 REGULAR	4
9	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	4
10	G-1720-103506	SCR,#10-32X.75 MACH HEX WSH HD	4
11	NVSP-24-022-CA	CABLE TIE ANCHOR STD (Ø.375 X .27 THK)	4
12	NVSP-31-002-CA	SEALED RELAY	3
13	S-4134-00	PANEL, ELECTRICAL (P)	1


13.4 ASSEMBLY, ELECTRICAL SYSTEM

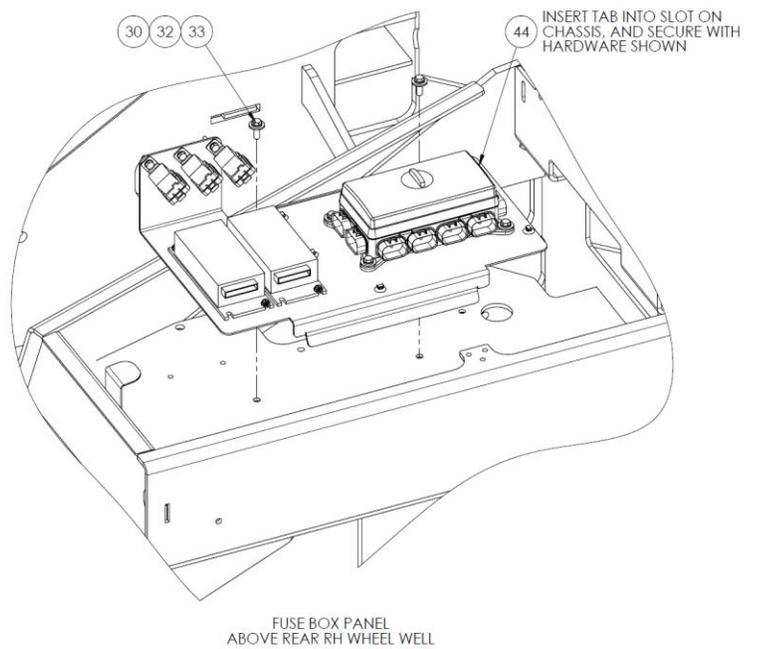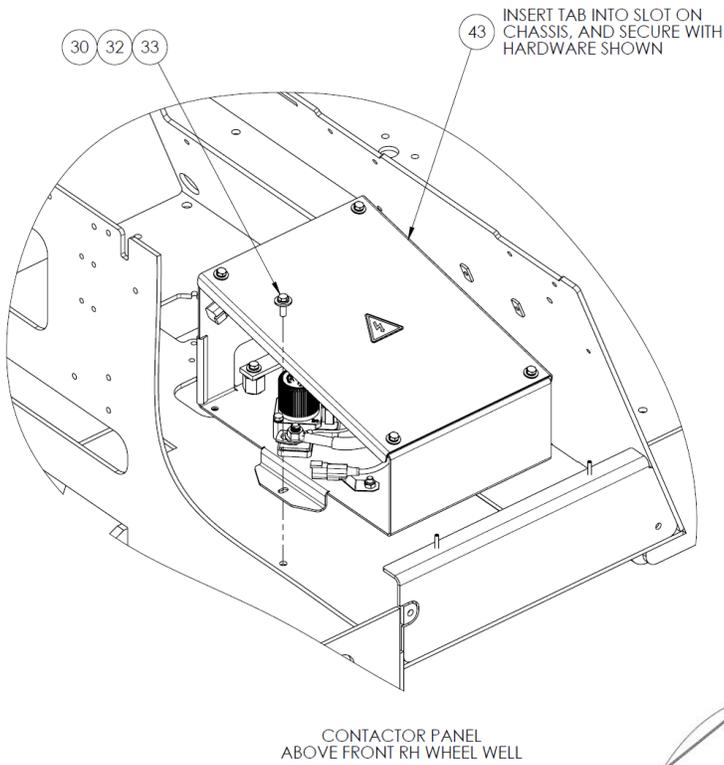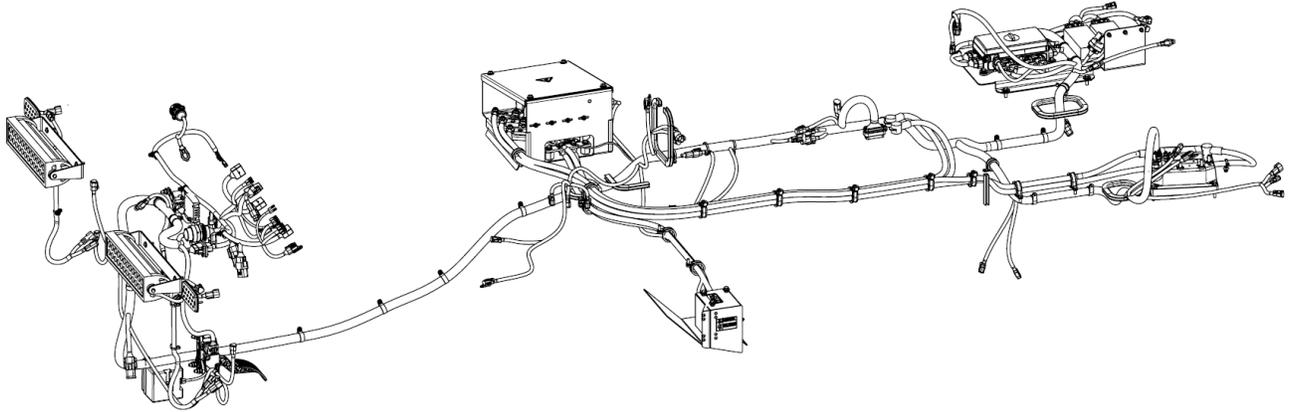

13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

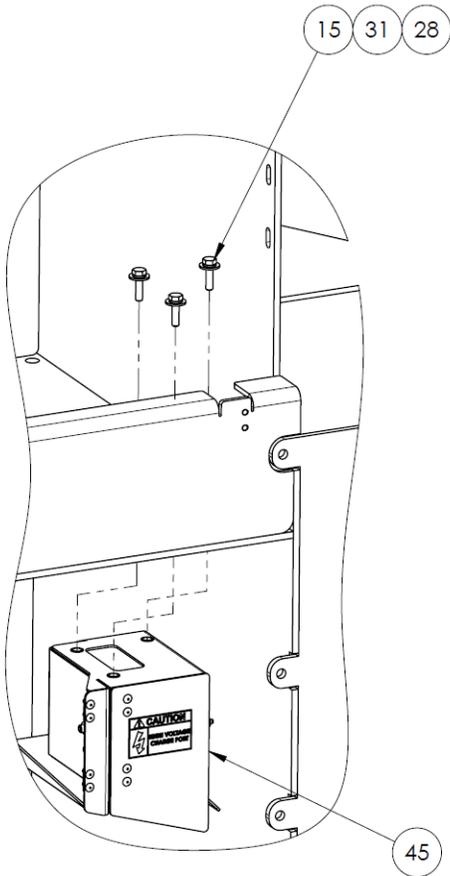


CHARGE JACK
ABOVE FRONT LH WHEEL WELL

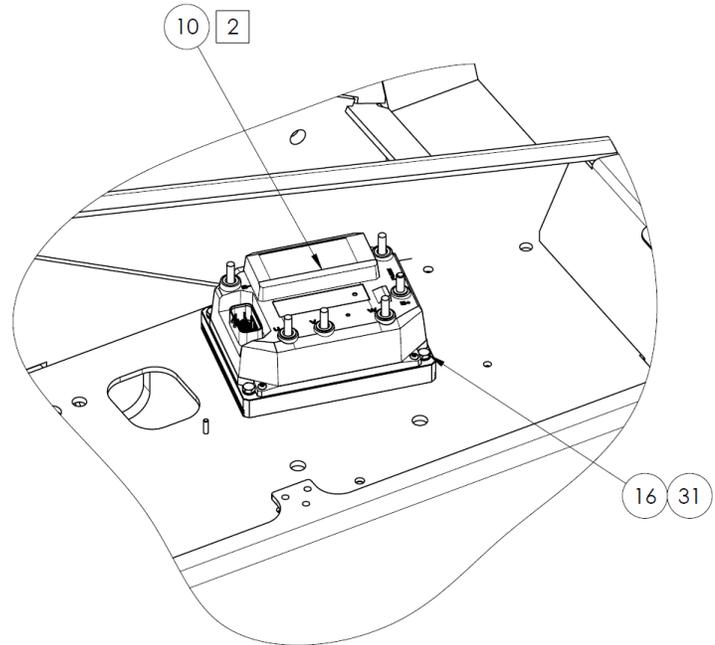

PUMP INVERTER
ABOVE REAR LH WHEEL WELL


- 2 APPLY A THIN UNINTERRUPTED LAYER OF THERMAL INTERFACE COMPOUND SUCH AS LOCTITE TC 4 OR EQUIVALENT TO BOTTOM OF DRIVE BEFORE MOUNTING TO CHASSIS.

13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

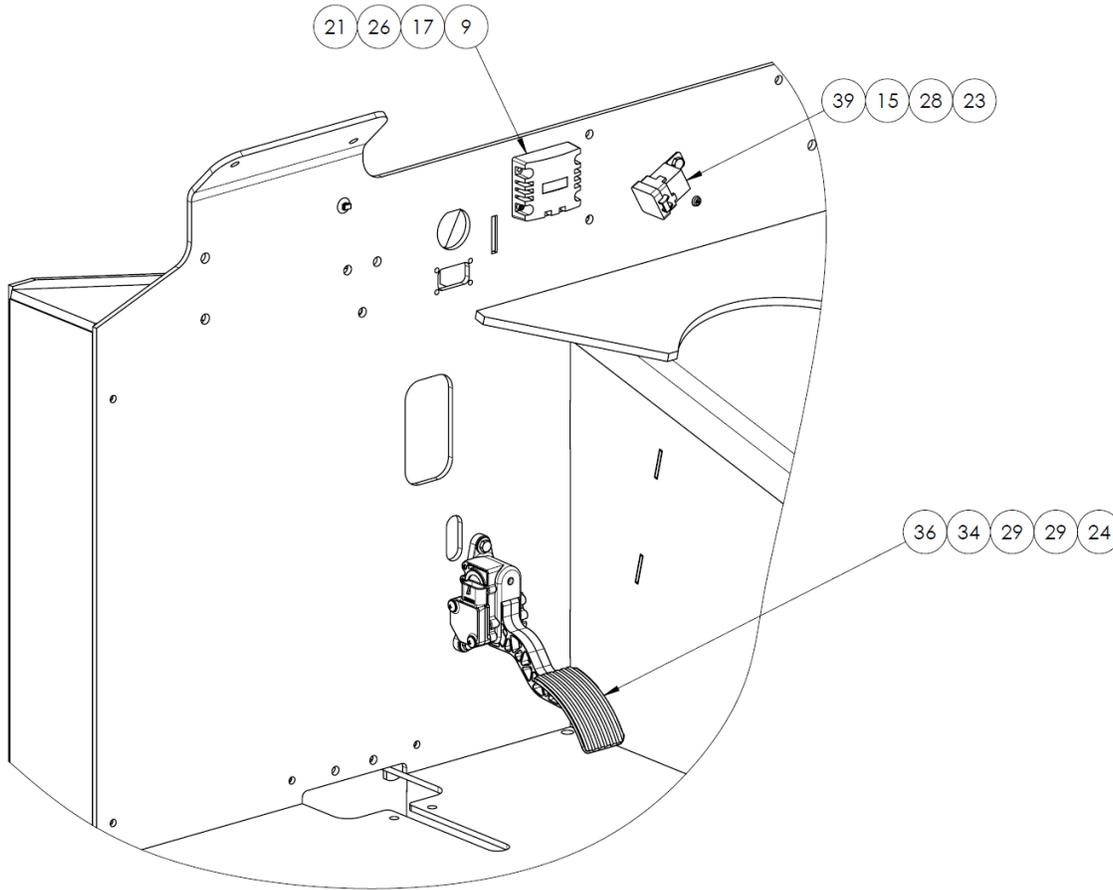


OPERATOR COMPARTMENT ITEMS



13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

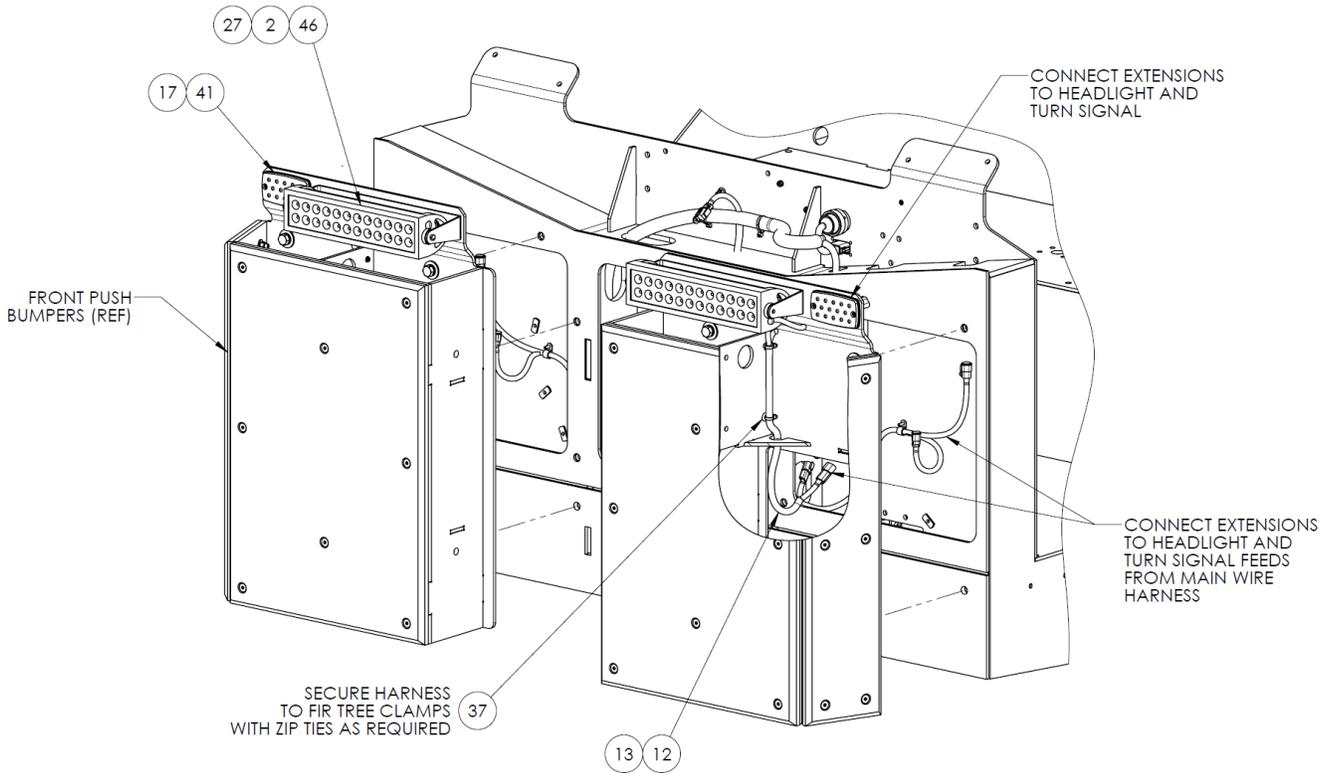



FORWARD LIGHTING

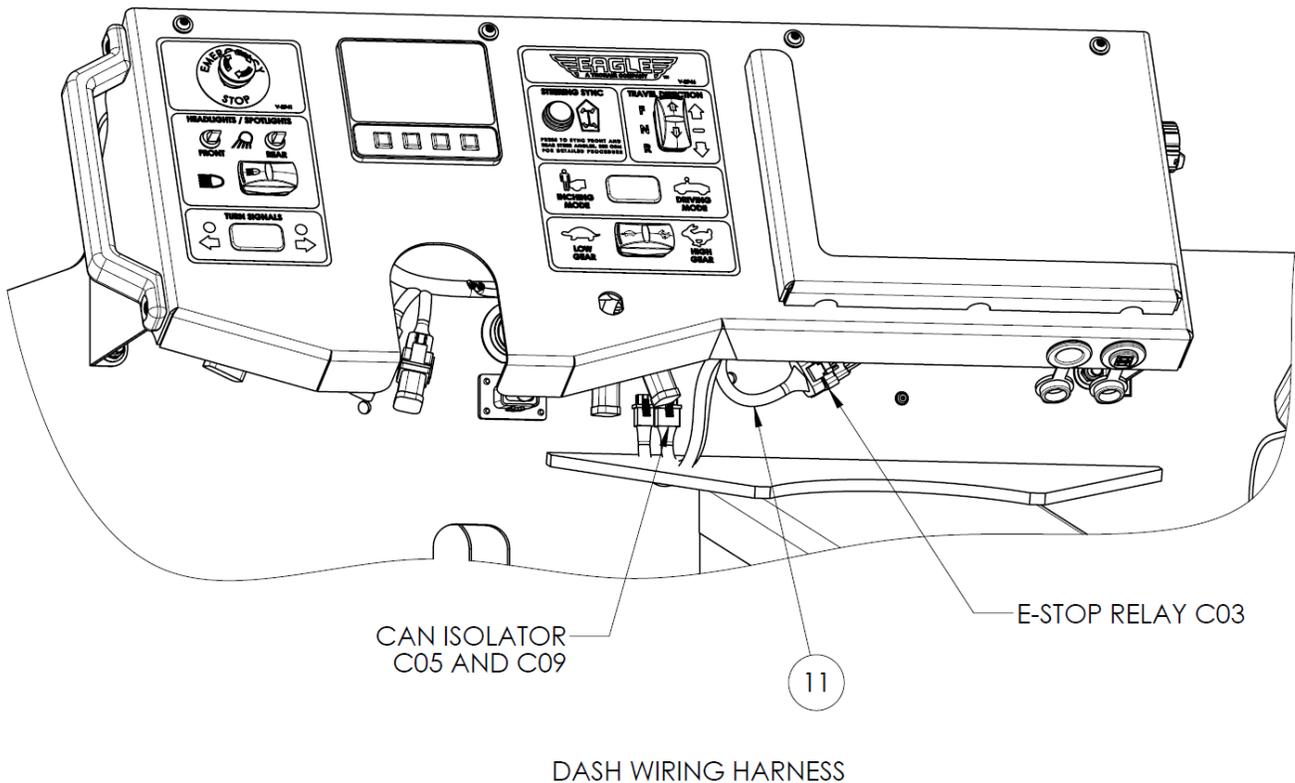


13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

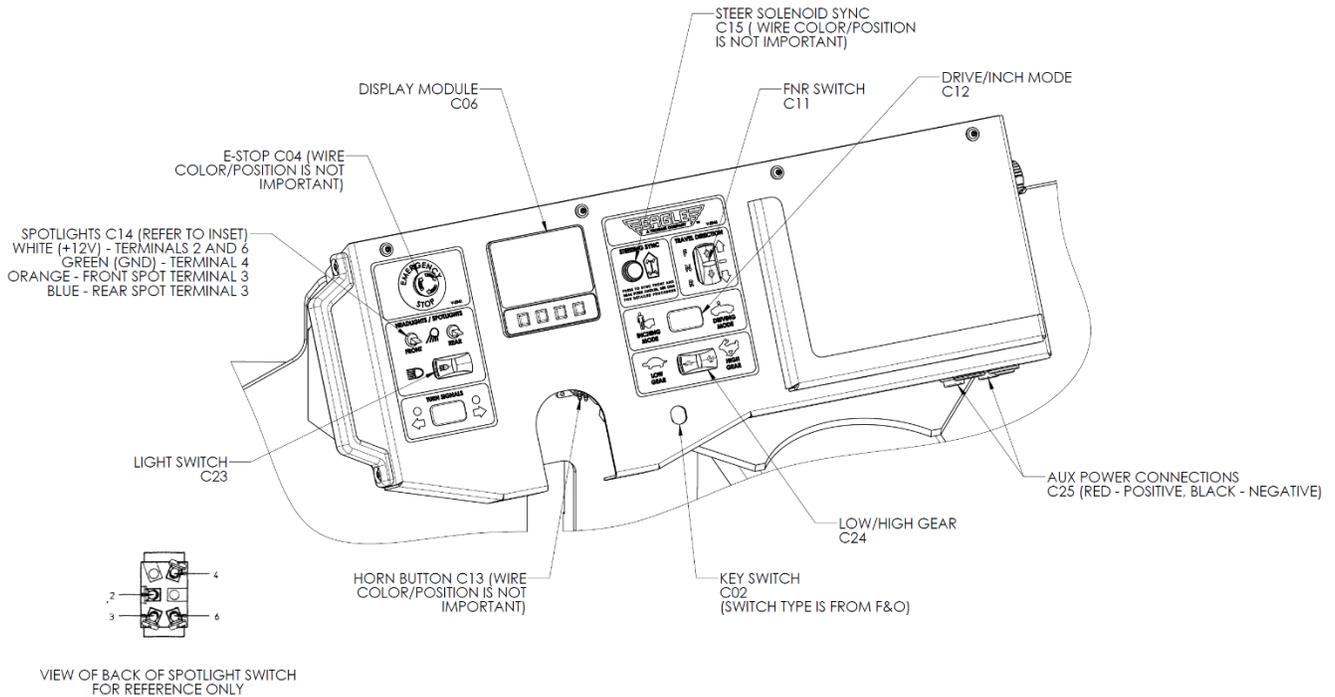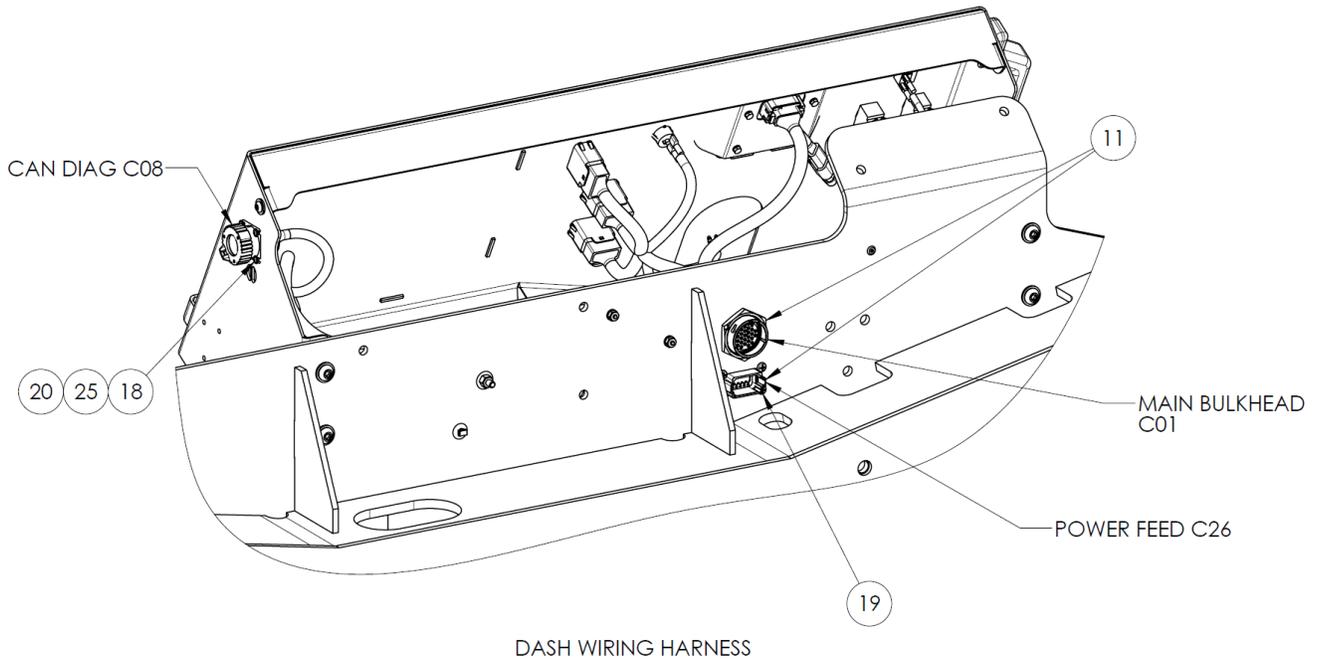

13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

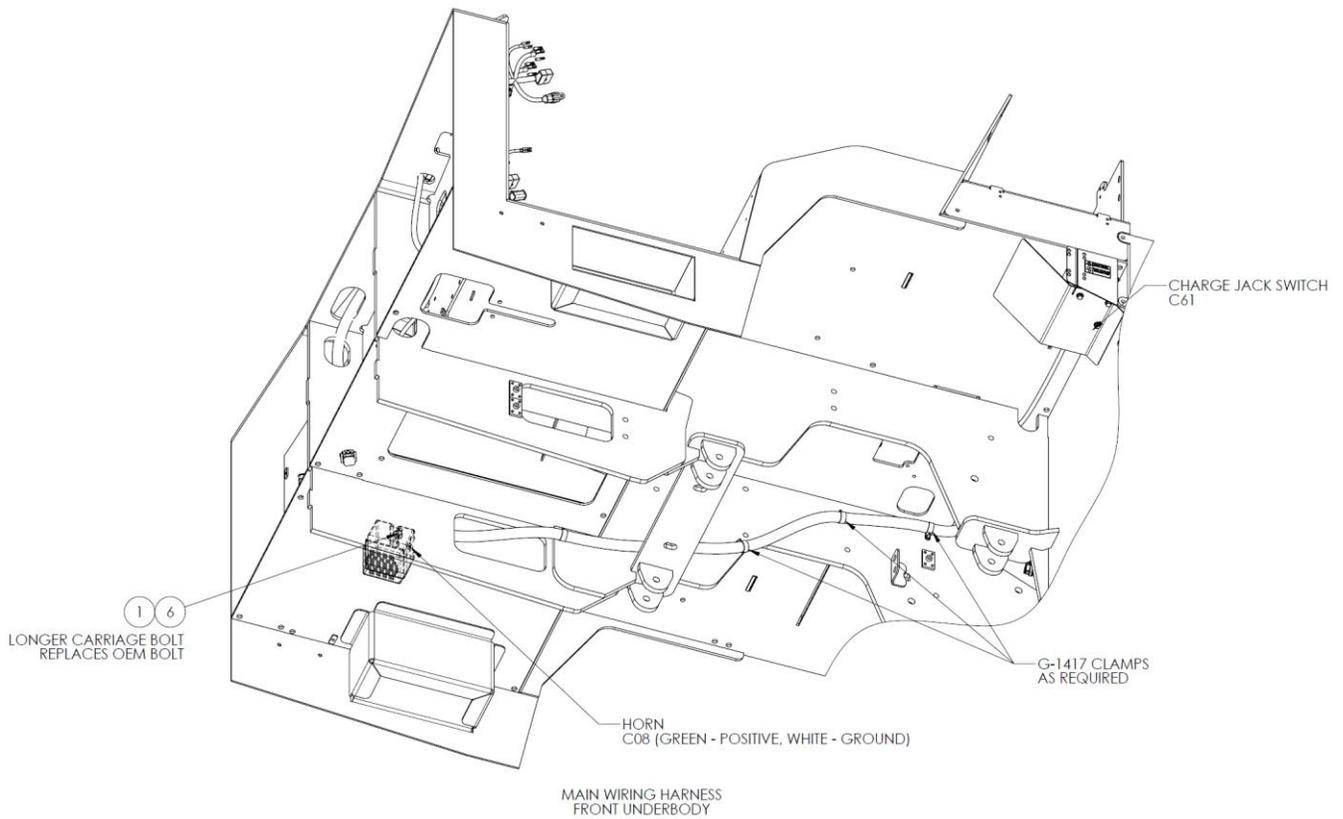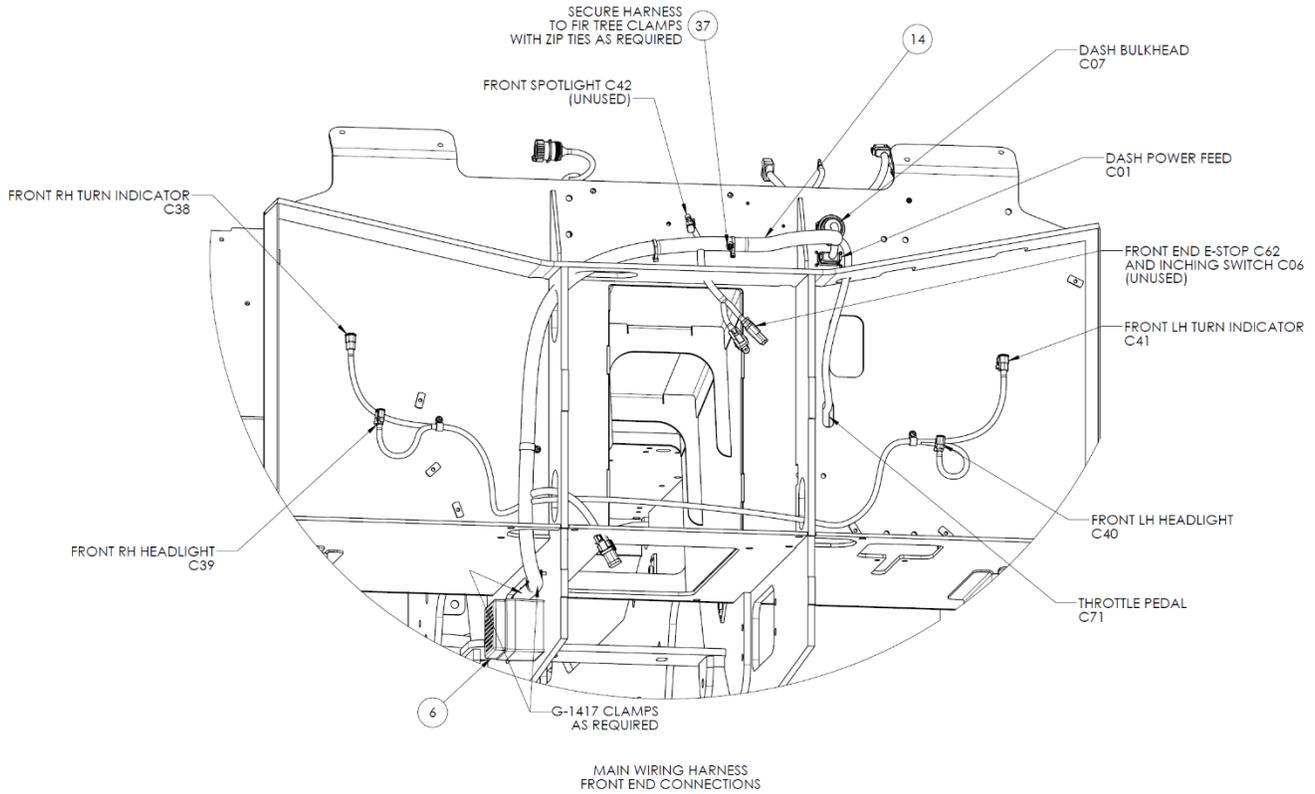


13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

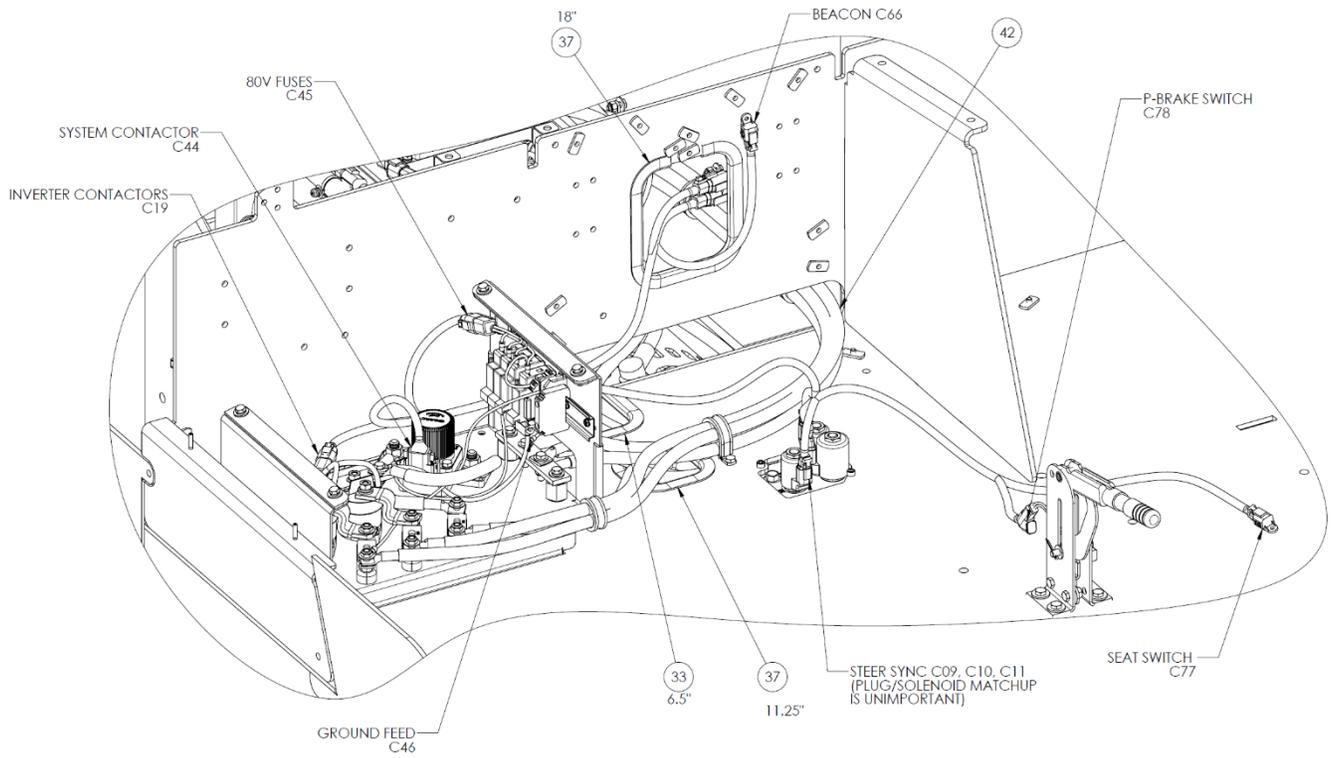


MAIN WIRING HARNESS
CONTACTOR PANEL AND STEER SYNC
SOME COMPONENTS NOT SHOWN IN THIS VIEW



13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

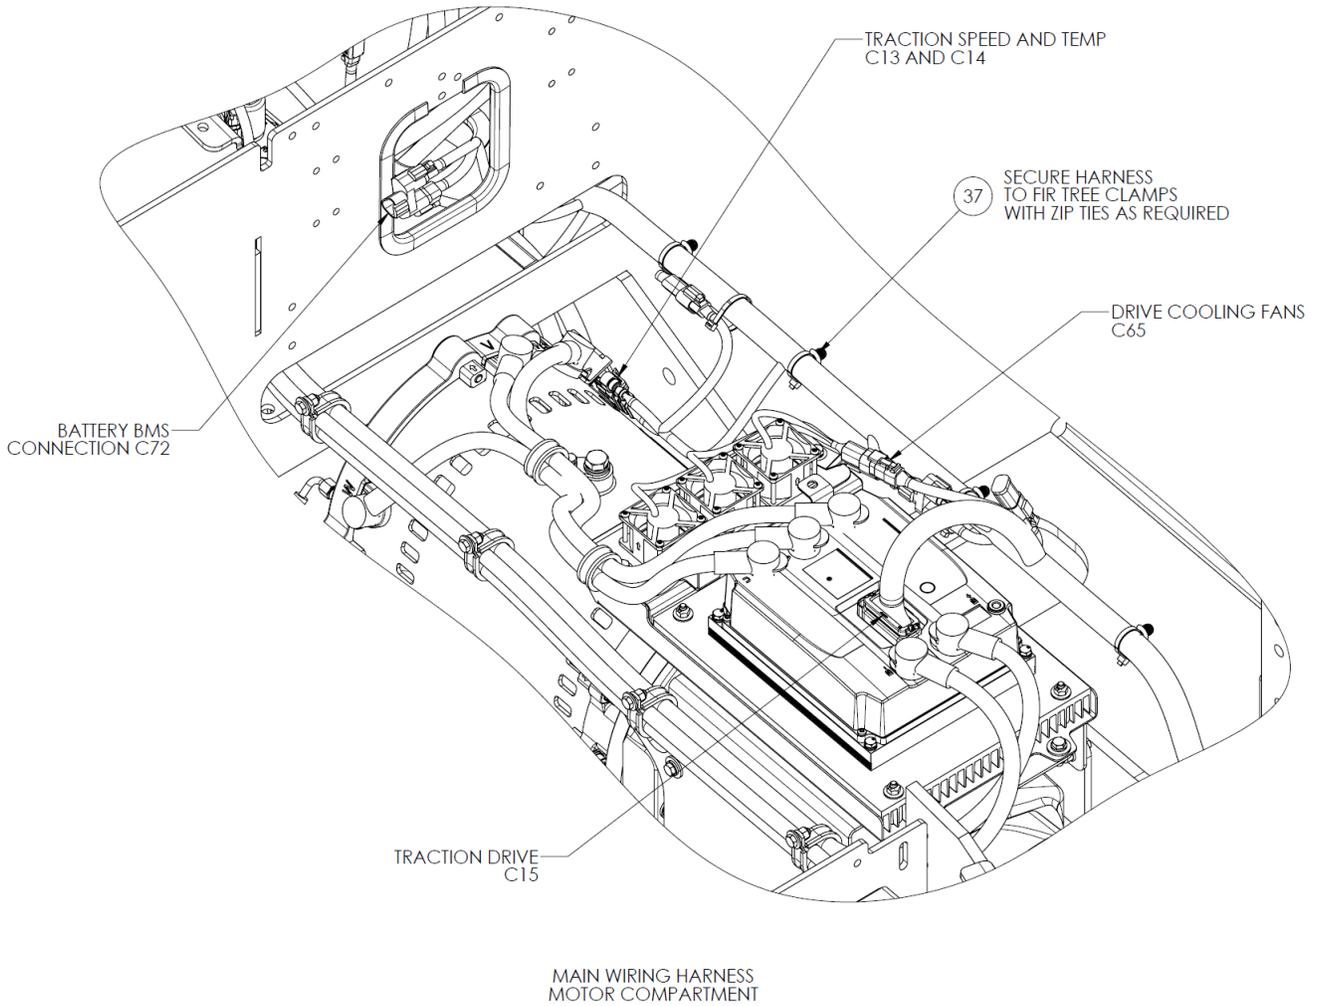

13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

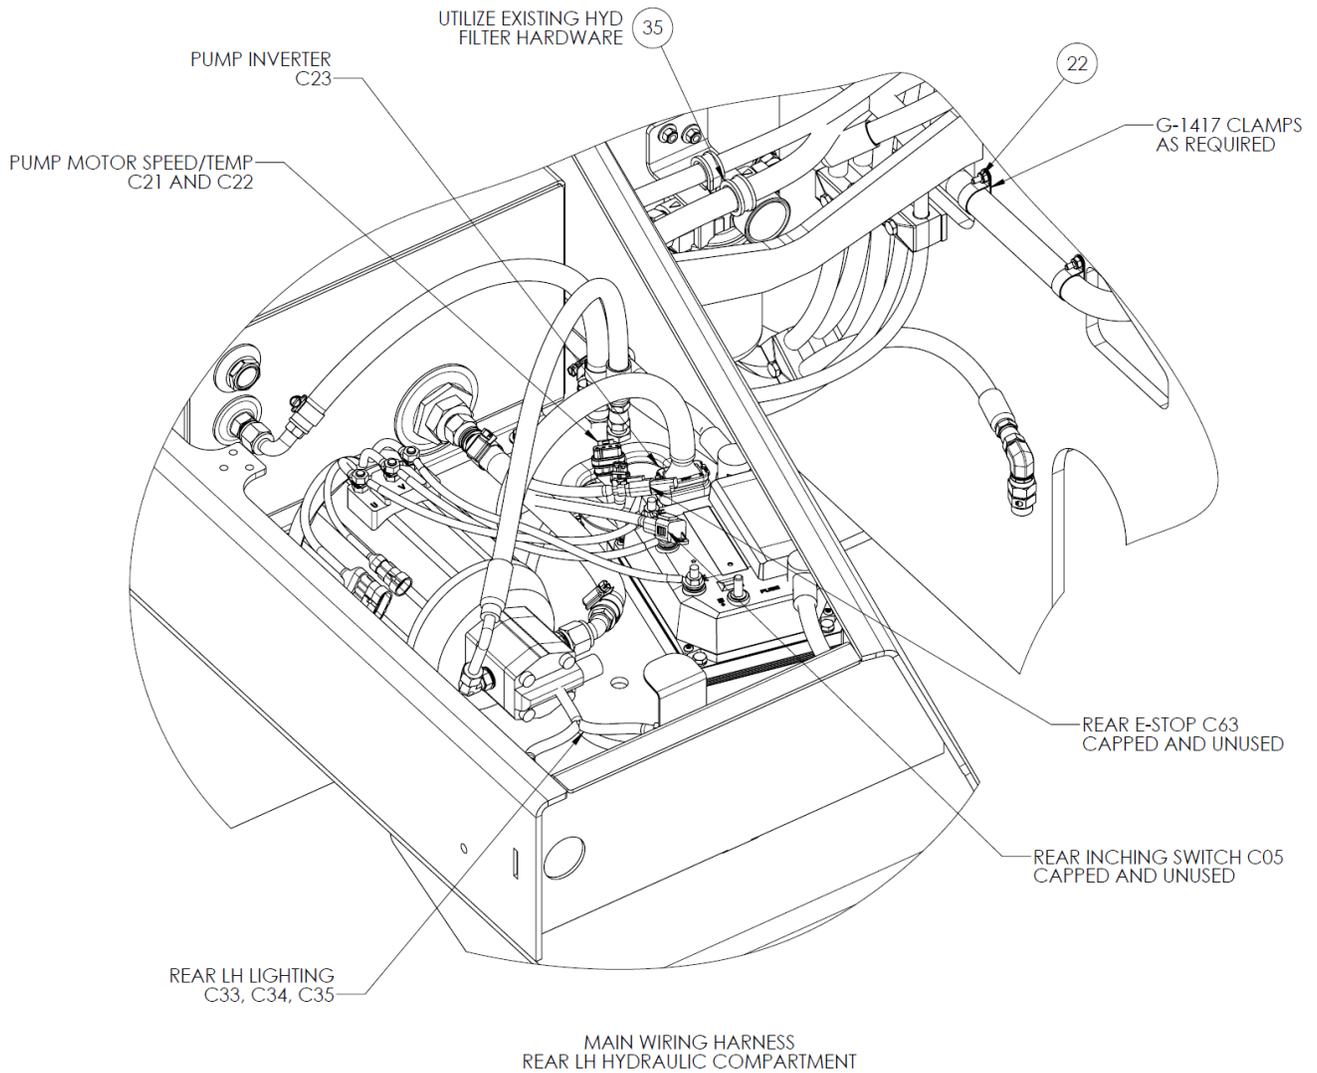

13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

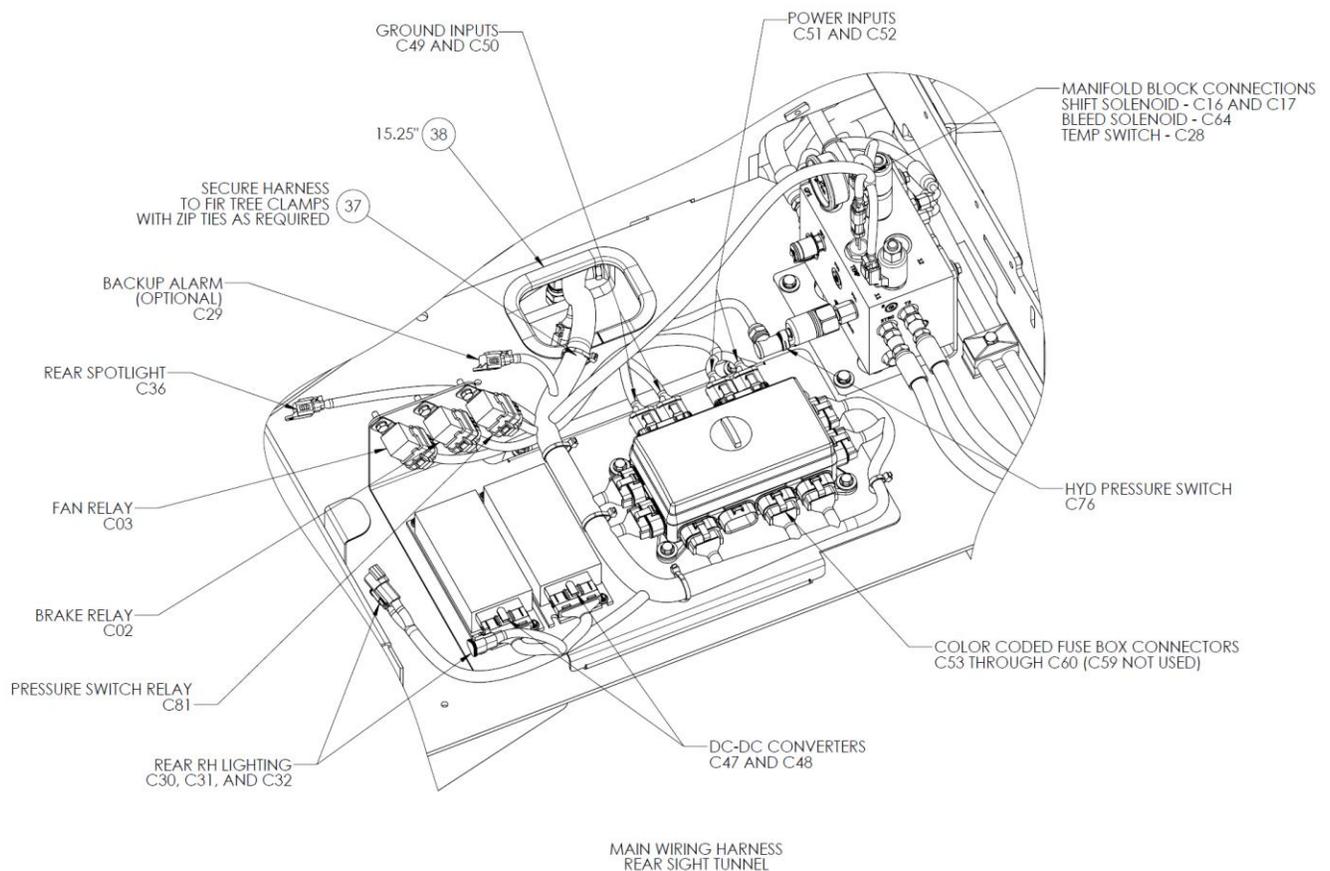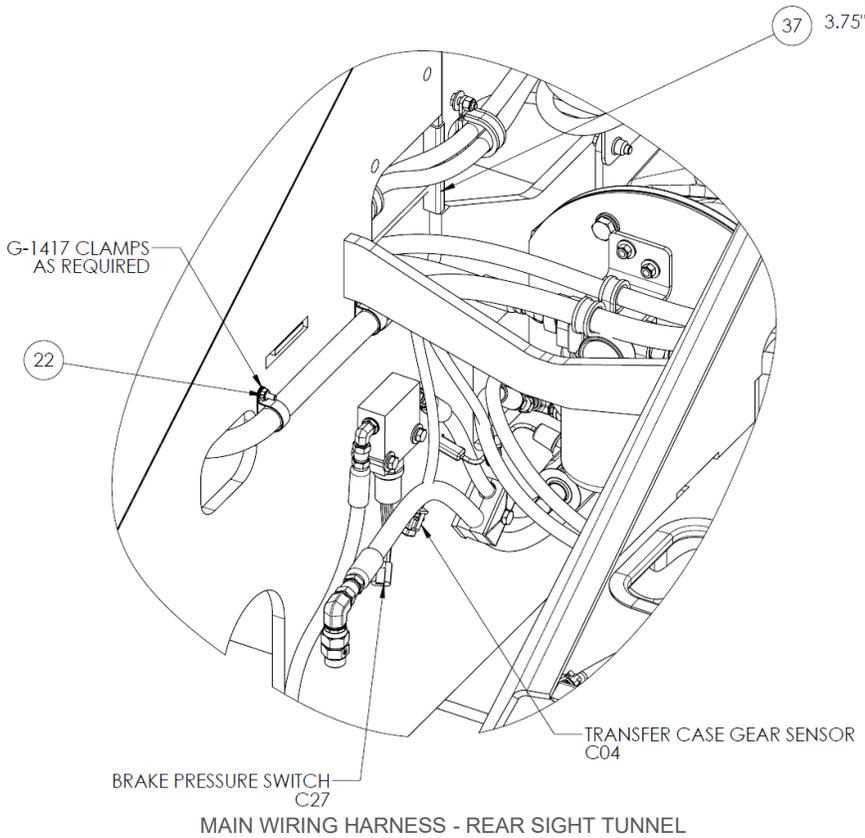



13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	324-042	BOLT, CARRIAGE, 3/8-16 X 1 1/2 SS	1
2	326-009	BHCS, 1/4-20 x 1" LG	4
3	0460-215-16141	DEUTSCH TERMINAL	2
4	1011-344-0205	DUST CAP, DT06-2S	2
5	114017	DEUTSCH EMPTY SOCKET PLUG	1
6	A-RTT12-00052	ELECTRONIC HORN	1
7	DT04-3P	DEUTSCH CONNECTOR	1
8	EC-3299-18-RED	TXL WIRE, 18 AWG, RED	5"
9	EC-3356	CAN ISOLATOR	1
10	EC-3440	PUMP DRIVE-INMOTION ACS80S	1
11	EC-3483	DASH HARNESS	1
12	EC-3518-02-036	DEUTSCH EXTENSION, 2-PIN STD	2
13	EC-3518-03-036	DEUTSCH EXTENSION, 3-PIN STD	2
14	EC-3584	MAIN HARNESS, MOD	1
15	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	4
16	G-1100-105016	BOLT, 1/4-20 X 1-3/4" LG HEX HD GR 5	4
17	G-1151-102006	SCREW, #8-32 X 3/4" SOCKET HD CAP	6
18	G-1154-100004	SCREW, #4-40 X 1/2" LG. SOC BUTT. HD CAP	4
19	G-1178-103005	SCREW, #10 X 5/8 PAN HEAD SELF TAPPING	4
20	G-1202-1000	STOPNUT, #4-40 ELASTIC	4
21	G-1202-1020	STOPNUT, #8-32 ELASTIC	2
22	G-1202-1035	STOPNUT, #10-32 ELASTIC	14
23	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	1
24	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	3
25	G-1250-1000N	FLATWASHER, #4 NARROW	4
26	G-1250-1020N	FLATWASHER, #8 NARROW	2
27	G-1250-1050N	FLATWASHER, 1/4 NARROW	4
28	G-1250-1050W	FLATWASHER, 1/4 WIDE	4
29	G-1250-1060N	FLATWASHER, 5/16 NARROW	6
30	G-1250-1060W	FLATWASHER, 5/16 WIDE	3
31	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	7
32	G-1251-1060R	LOCKWASHER, 5/16 REGULAR	3
33	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	3
34	G-1420-106012	BOLT, 5/16-18 X 1-1/4" LG. HEX HD GR 8	3
35	H-3521-11	CLAMP, CUSHIONED LOOP 1"	1
36	NVSP-14-033-CA	THROTTLE PEDAL DUAL ANALOG	1
37	NVSP-24-022-CA	CABLE TIE ANCHOR STD (Ø.375 X .27 THK)	14
38	NVSP-24-042-CB	METAL CORE PLASTIC EDGE TRIM - 1/4	70"
39	NVSP-31-002-CA	SEALED RELAY	1
40	W3P	DEUTSCH LOCK	1



13.4 ASSEMBLY, ELECTRICAL SYSTEM (continued)




Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
41	Z-9826	ASY, TURN IND W/CONNECTOR	2
42	REF	ASY, BATTERY CABLES	1
43	Z-11439	ASY, ELECTRICAL PANEL	1
44	Z-11444	ASSY, ELECTRICAL PANEL	1
45	REF	ASY, CHARGE JACK SUB	REF
46	Z-12123	ASY, WORKLIGHT AND BRACKET	2

14.0 ASSEMBLY, STD COLOR PANELS

14.1 ASSEMBLY, REAR MIDDLE DOOR

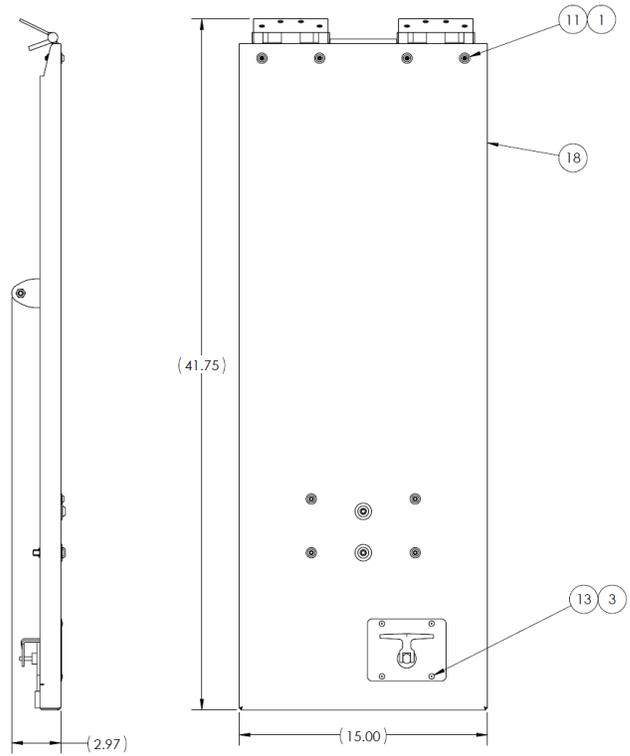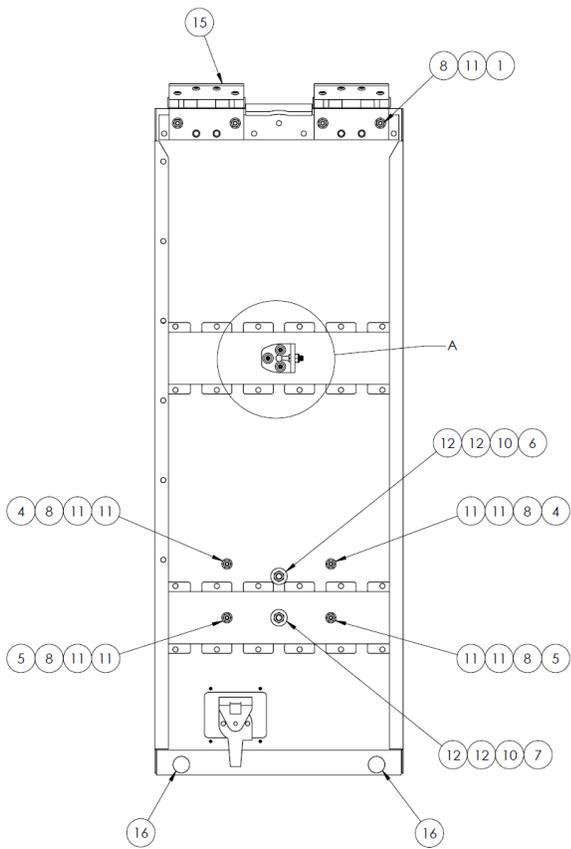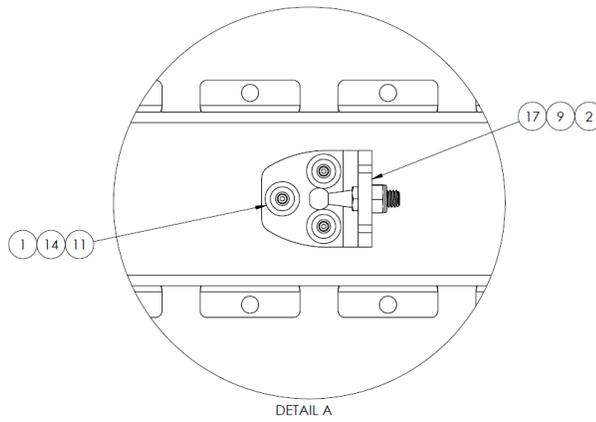




14.1 ASSEMBLY, REAR MIDDLE DOOR (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	7
2	394-069	BALL STUD FOR GAS SPRING	1
3	C-TT4-0012-2	T HANDLE LATCH	1
4	G-1154-105006	SCREW, 1/4-20 X 3/4" LG. SOC BUTT. HD CAP	2
5	G-1154-105216	SCREW, 1/4-20 X 1 3/4" LG. SOC BUTT. HD CAP	2
6	G-1154-107206	SCREW, 3/8-16 X 3/4" LG. SOCKET BUTT HD CAP	1
7	G-1154-107216	SCREW, 3/8-16 X 1-3/4" LG. SOCKET BUTT HD CAP	1
8	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	8
9	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	1
10	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	2
11	G-1250-1050N	FLATWASHER, 1/4 NARROW	19
12	G-1250-1070W	FLATWASHER, 3/8 WIDE	4
13	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	4
14	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3
15	H-5034	HINGE	2
16	NVSP-21-004-CA	RUBBER PRESS-IN BUMPER	2
17	S-4348-00	MOUNT BRACKET (P)	1
18	Z-11874-00	WLD, REAR MIDDLE DOOR (WP)	1

14.2 ASSEMBLY, MOTOR DOOR

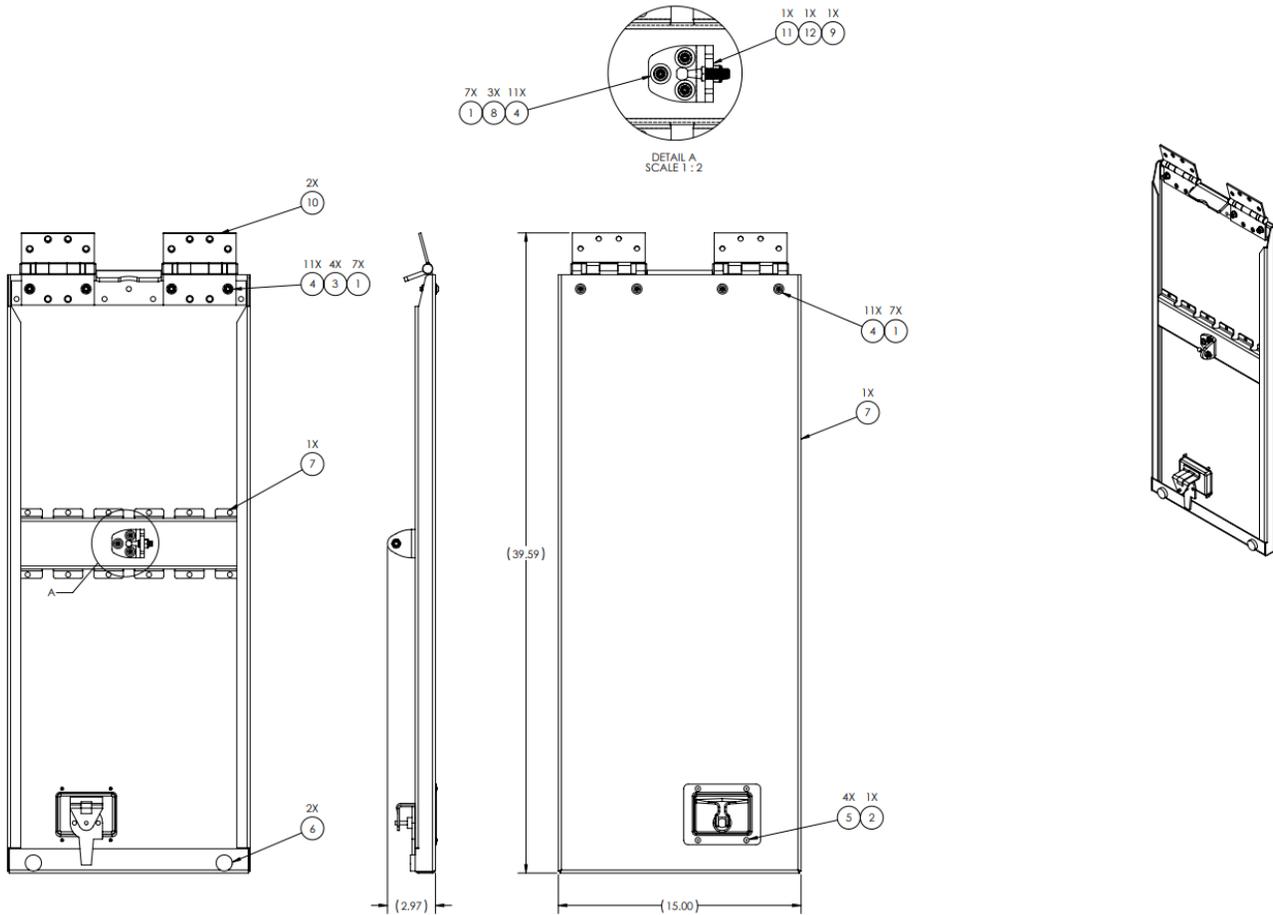


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	7
2	C-TT4-0012-2	T HANDLE LATCH	1
3	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
4	G-1250-1050N	FLATWASHER, 1/4 NARROW	11
5	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	4
6	NVSP-21-004-CA	RUBBER PRESS-IN BUMPER	2
7	Z-11877-00	WLD, MOTOR DOOR (WP)	1
8	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3
9	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	1
10	H-5034	HINGE	2
11	S-4348-00	MOUNT BRACKET (P)	1
12	394-069	BALL STUD FOR GAS SPRING	1


14.3 ASSEMBLY, STANDARD COLOR PANELS

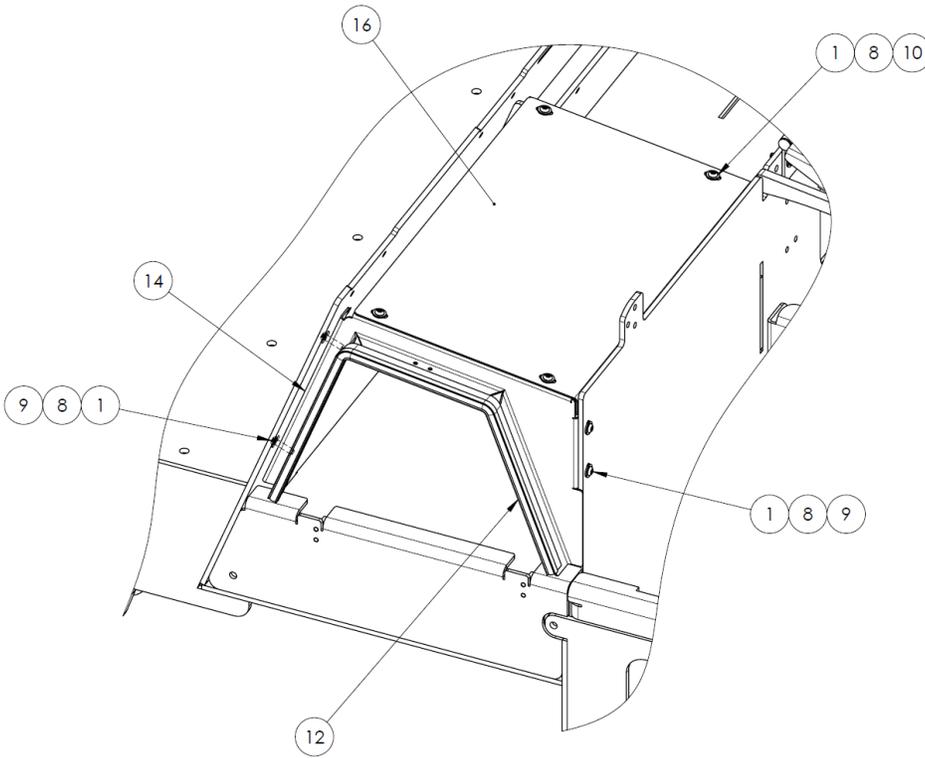

LOCKER COMPARTMENT

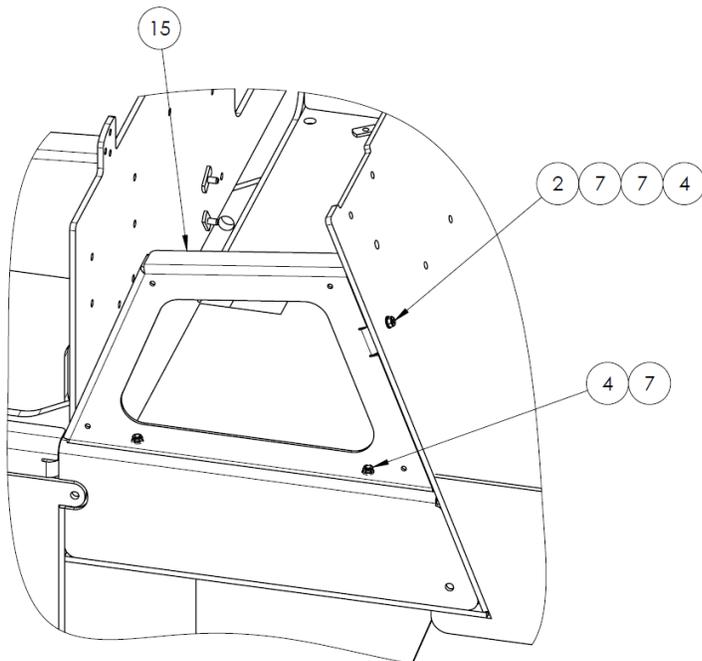


ELECTRICAL COMPARTMENT PANEL

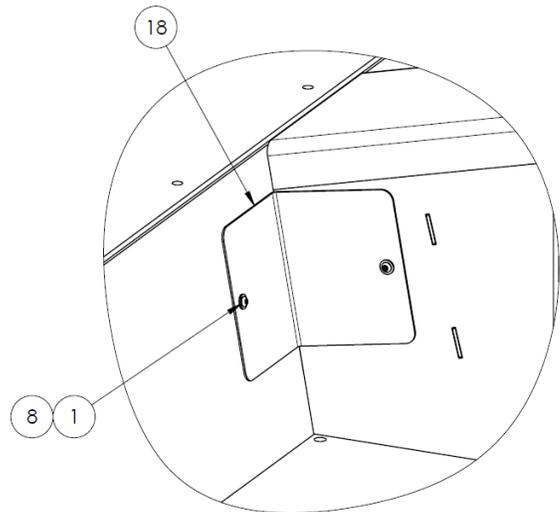


ACCUMULATOR ACCESS PANEL

14.3 ASSEMBLY, STANDARD COLOR PANELS (continued)

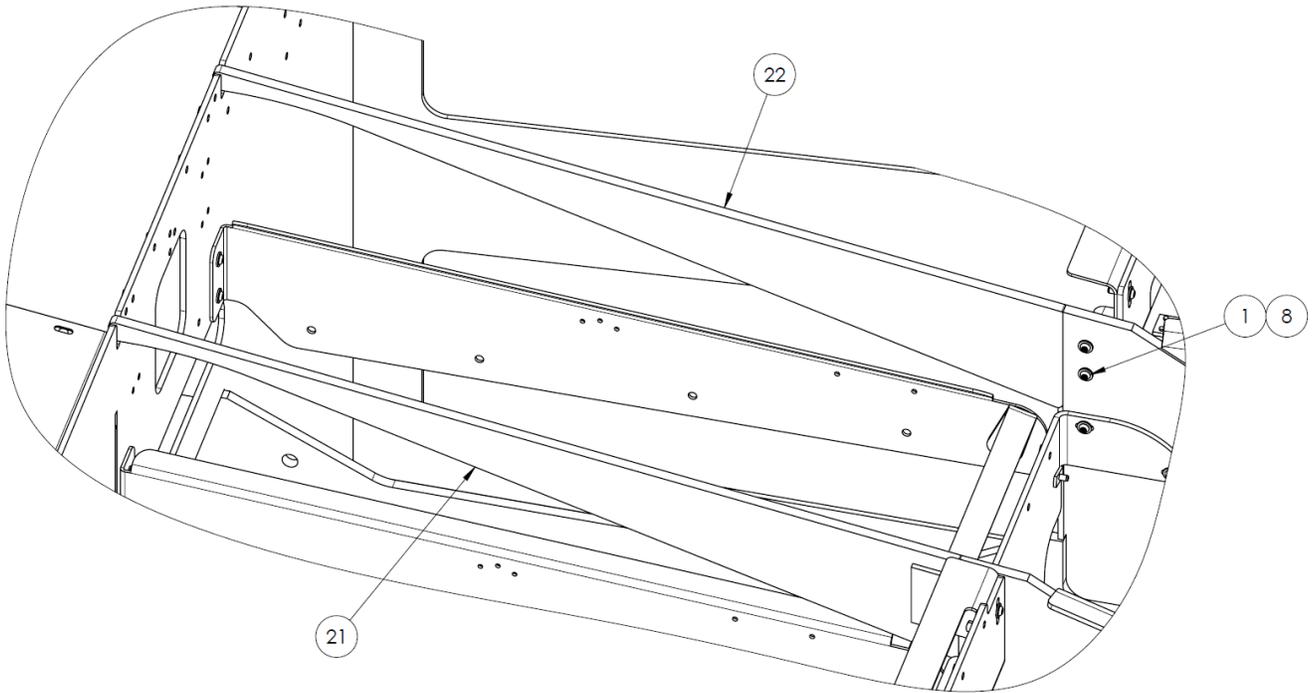


FRAME EXTENSIONS

14.3 ASSEMBLY, STANDARD COLOR PANELS (continued)

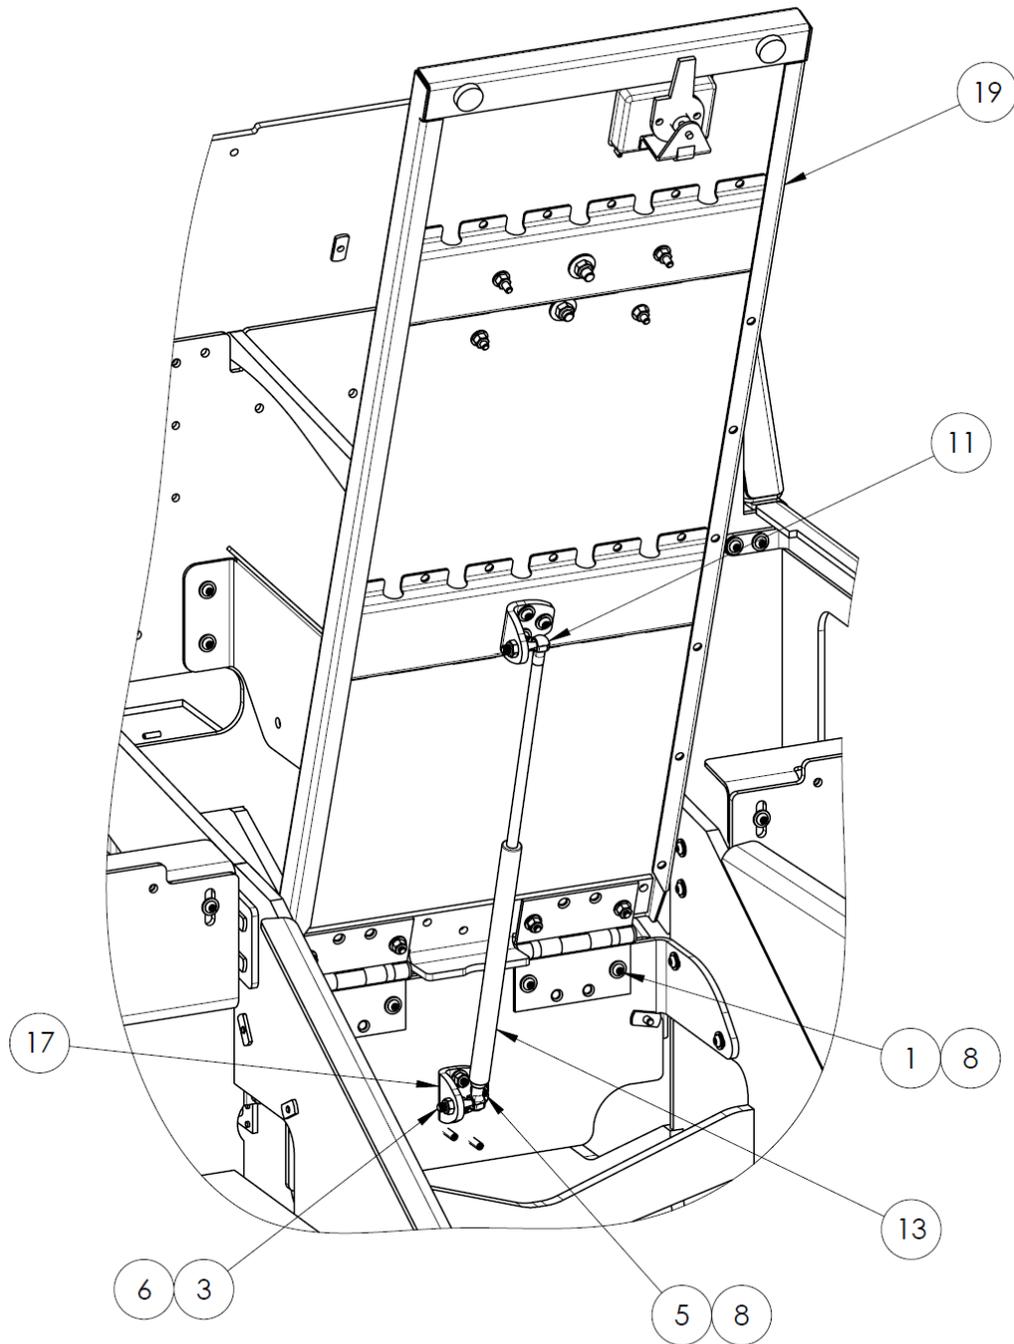

REAR CENTER ACCESS PANEL

14.3 ASSEMBLY, STANDARD COLOR PANELS (continued)

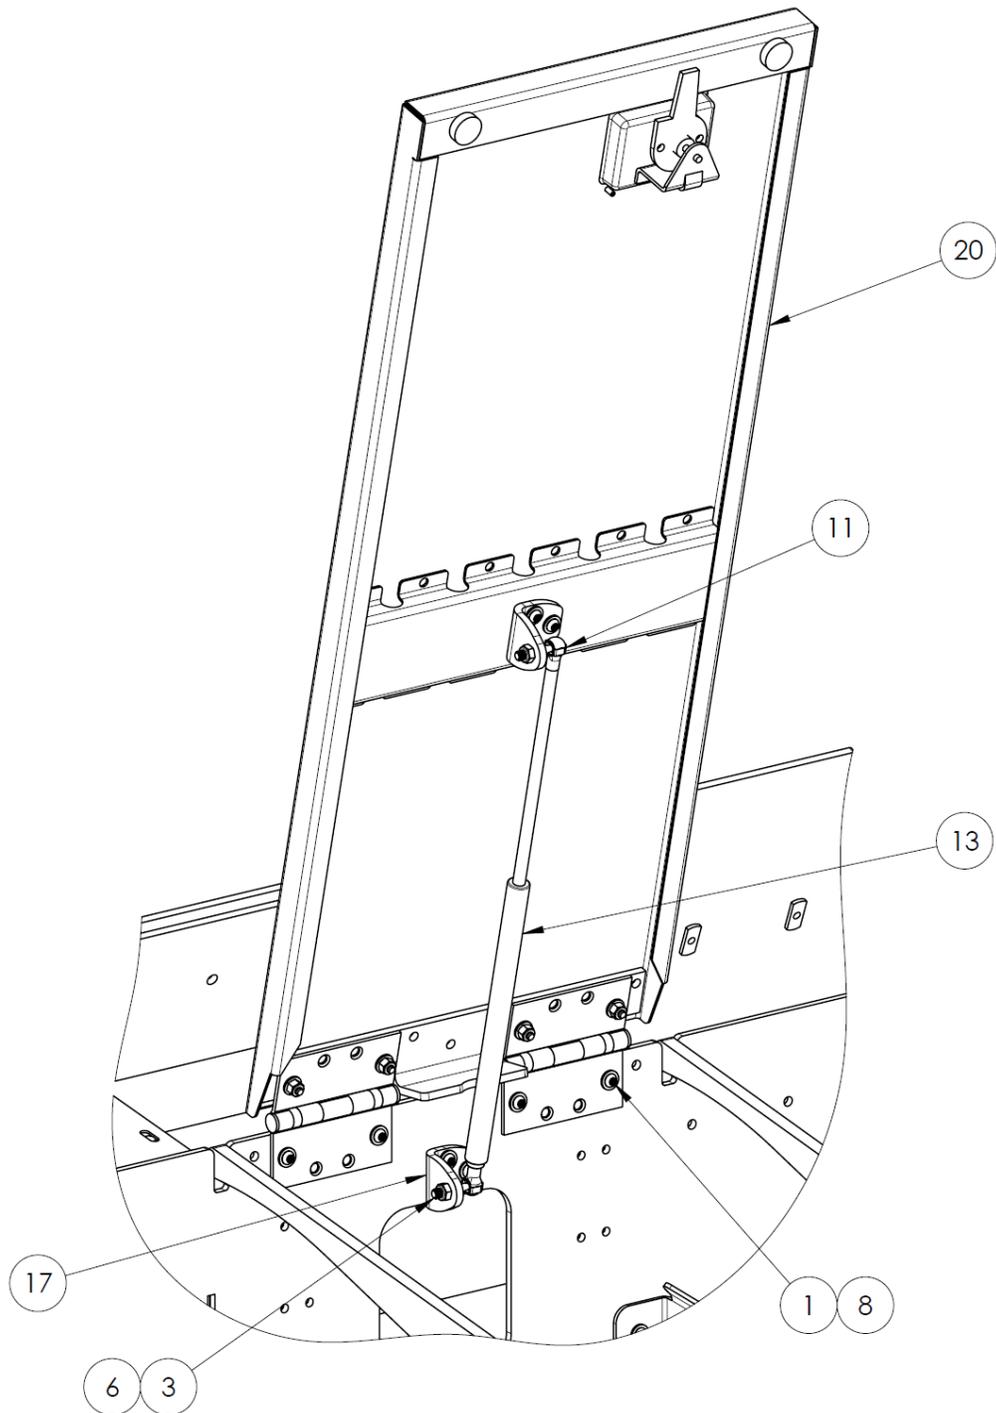

FRONT CENTER ACCESS PANEL




14.3 ASSEMBLY, STANDARD COLOR PANELS (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	25
2	326-038	BHCS, 10-32 x 3/4 LG	1
3	394-069	BALL STUD FOR GAS SPRING	2
4	G-1202-1035	STOPNUT, #10-32 ELASTIC	3
5	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	3
6	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	2
7	G-1250-1030N	FLATWASHER, #10 NARROW	4
8	G-1250-1050N	FLATWASHER, 1/4 NARROW	28
9	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	6
10	G-1440-1050-S	NUTSERT, THICK WALL 1/4-20	4
11	H-4652	END FITTING FOR GAS SPRING	4
12	H-4931-26.1	BULB SEAL, PUSH ON	1
13	H-5043	GAS SPRING	2
14	S-4198-00	LOCKER THRESHOLD (P)	1
15	S-4213-00	ELECTRICAL FAUX FRAME (P)	1
16	S-4214-00	LOCKER ROOF (WP)	1
17	S-4348-00	MOUNT BRACKET (P)	2
18	S-4528-00	COVER, ACCUMULATOR (WP)	1
19	Z-11873	ASY, REAR MIDDLE DOOR	1
20	Z-11876	ASY, MOTOR DOOR	1
21	Z-11882-00	WLD, GAP PATCH, LH (WP)	1
22	Z-11883-00	WLD, GAP PATCH, RH (WP)	1

15.0 ASSEMBLY, ALT COLOR PANELS
15.1 STORAGE DOOR SUB

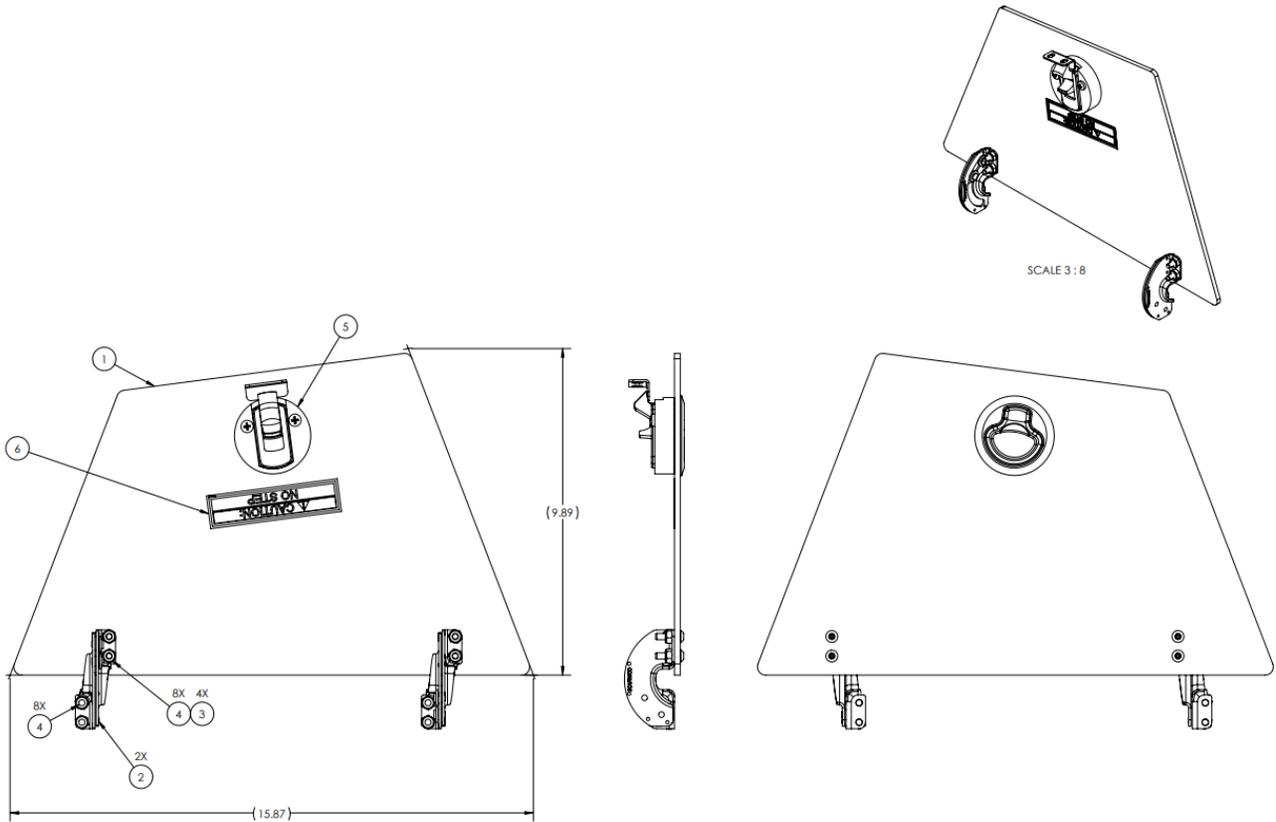


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	J-8229-00	STORAGE ACCESS DOOR (P)	1
2	H-5028	HINGE, CONCEALED, 90	2
3	326-038	BHCS, 10-32 x 3/4 LG	4
4	G-1202-1035	STOPNUT, #10-32 ELASTIC	8
5	H-4927	LATCH, STAINLESS, 1/8"-1/4" DOOR THICKNESS	1
6	V-2545	LABEL, NO STEP	1

15.2 ASSEMBLY, BATTERY DOOR, LH

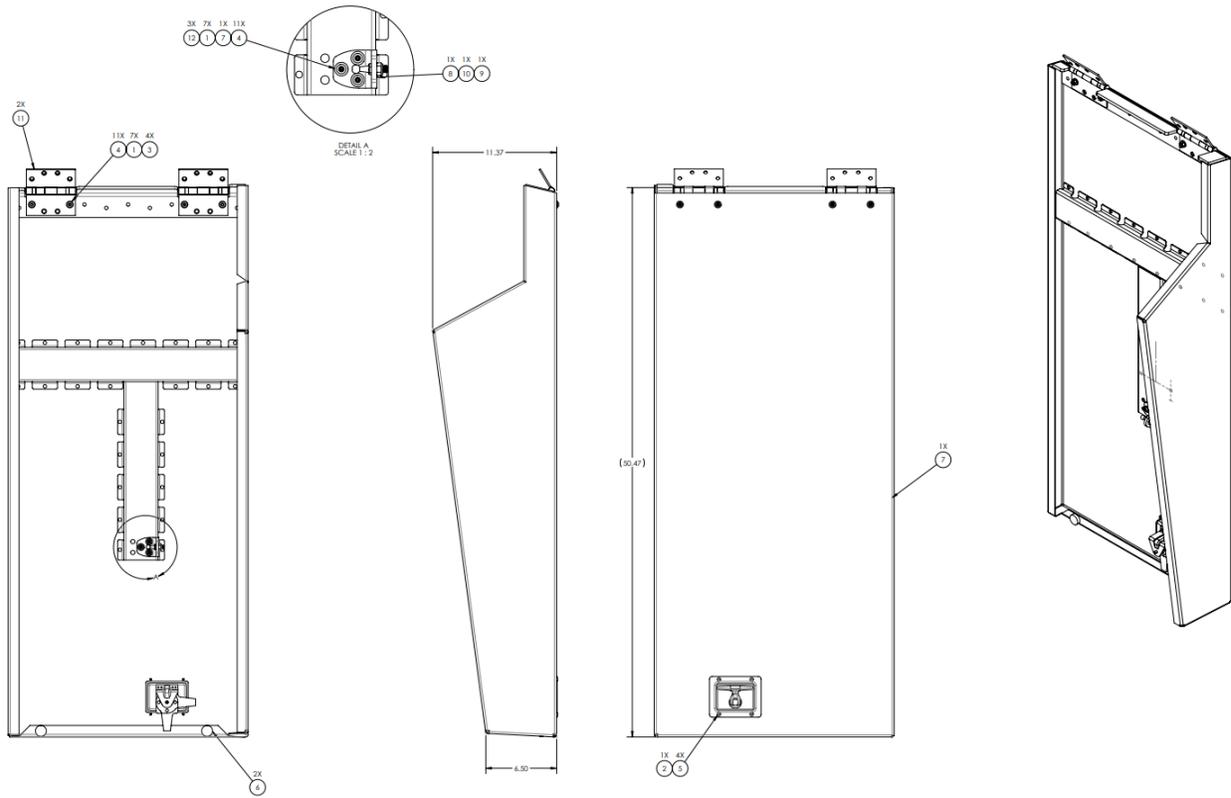


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	7
2	C-TT4-0012-2	T HANDLE LATCH	1
3	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
4	G-1250-1050N	FLATWASHER, 1/4 NARROW	11
5	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	4
6	NVSP-21-004-CA	RUBBER PRESS-IN BUMPER	2
7	Z-11858-00	WLD, BATTERY DOOR, LH (P)	1
8	S-4348-00	MOUNT BRACKET (P)	1
9	394-069	BALL STUD FOR GAS SPRING	1
10	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	1
11	H-5034	HINGE	2
12	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3

15.3 ASSEMBLY, BATTERY DOOR, RH

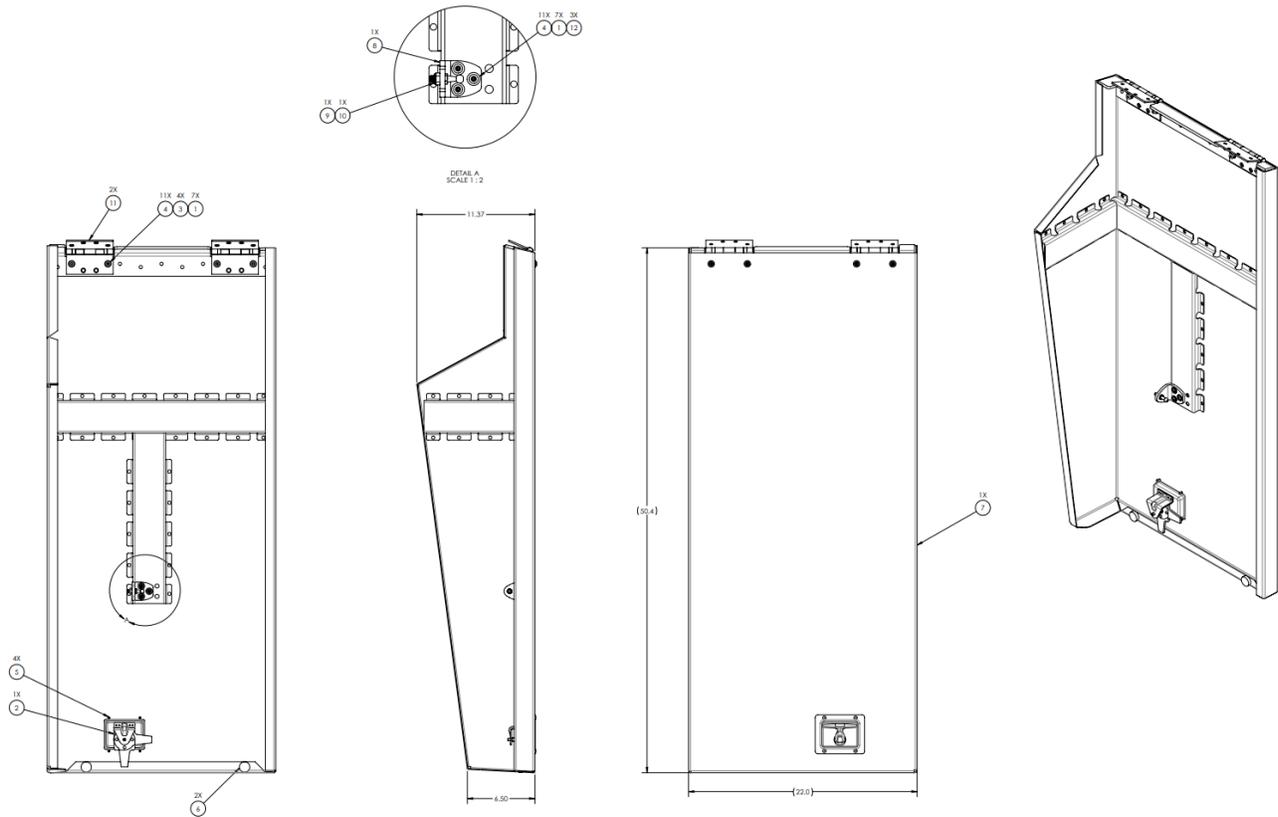


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	7
2	C-TT4-0012-2	T HANDLE LATCH	1
3	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
4	G-1250-1050N	FLATWASHER, 1/4 NARROW	11
5	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	4
6	NVSP-21-004-CA	RUBBER PRESS-IN BUMPER	2
7	Z-11864-00	WLD, BATTERY DOOR, RH (P)	1
8	S-4348-00	MOUNT BRACKET (P)	1
9	394-069	BALL STUD FOR GAS SPRING	1
10	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	1
11	H-5034	HINGE	2
12	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3

15.3 ASSEMBLY, REAR DOOR, LH (continued)

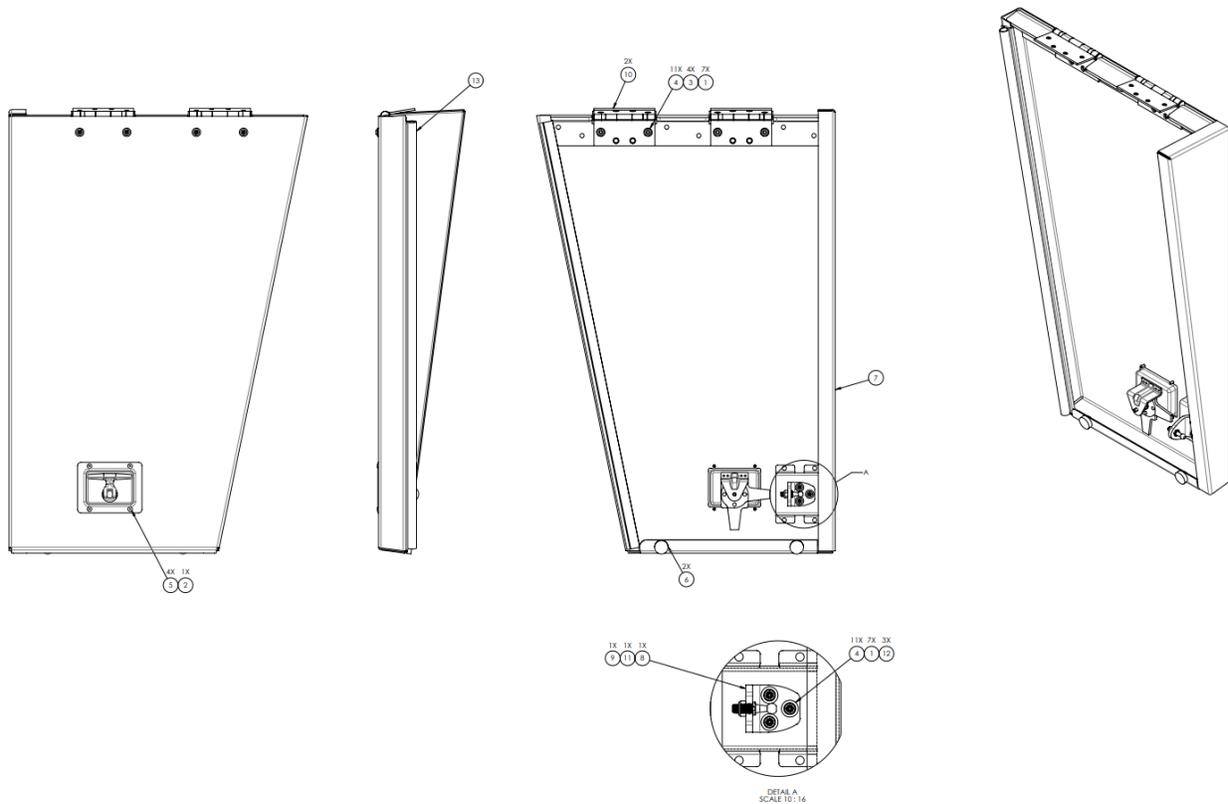


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	7
2	C-TT4-0012-2	T HANDLE LATCH	1
3	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
4	G-1250-1050N	FLATWASHER, 1/4 NARROW	11
5	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	4
6	NVSP-21-004-CA	RUBBER PRESS-IN BUMPER	2
7	Z-11870-00	WELD, REAR DOOR, LH (P)	1
8	S-4348-00	MOUNT BRACKET (P)	1
9	394-069	BALL STUD FOR GAS SPRING	1
10	H-5034	HINGE	2
11	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	1
12	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3
13	H-5040	PUSH-ON BULB SEAL	1

15.3 ASSEMBLY, REAR DOOR, LH (continued)

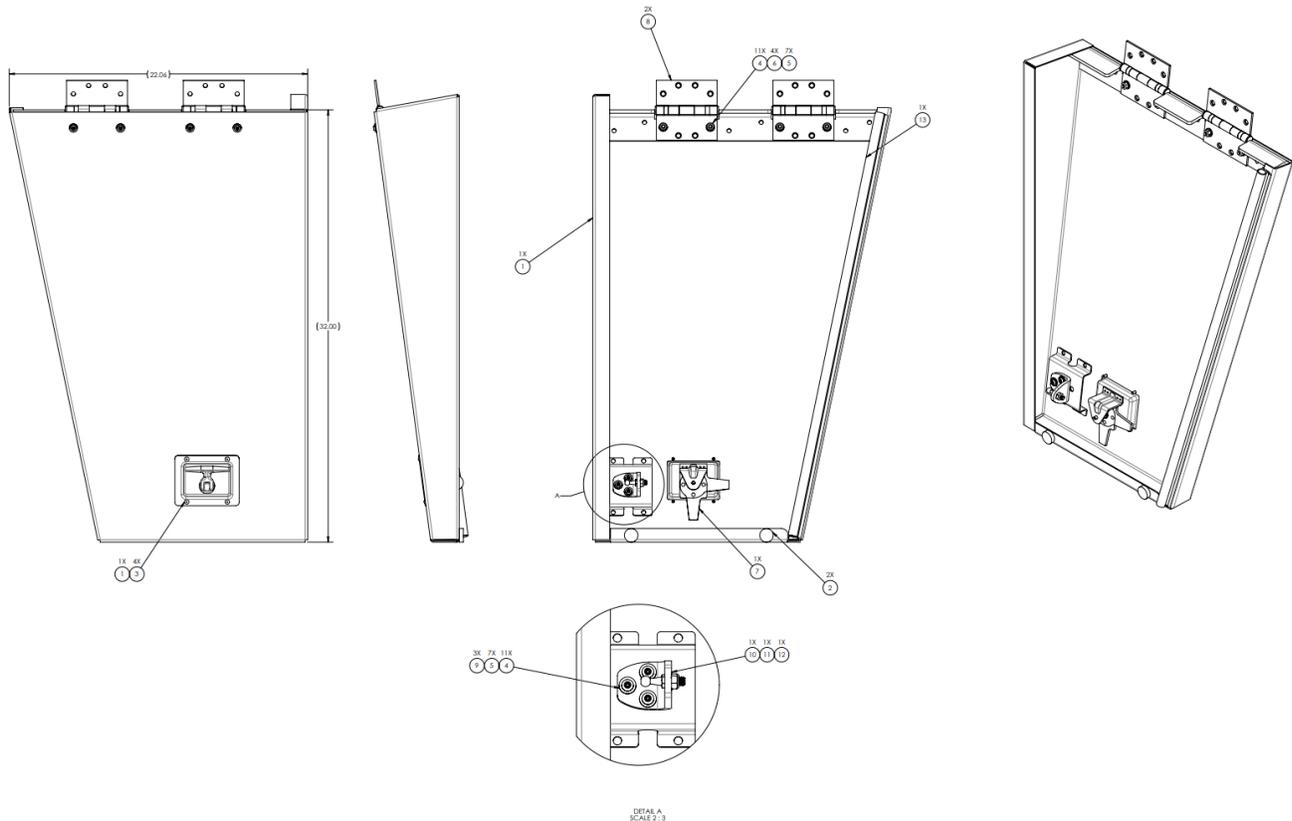

Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	Z-11872-00	WELD, REAR DOOR, RH (P)	1
2	NVSP-21-004-CA	RUBBER PRESS-IN BUMPER	2
3	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	4
4	G-1250-1050N	FLATWASHER, 1/4 NARROW	11
5	326-009	BHCS, 1/4-20 x 1" LG	7
6	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
7	C-TT4-0012-2	T HANDLE LATCH	1
8	H-5034	HINGE	2
9	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3
10	S-4348-00	MOUNT BRACKET (P)	1
11	394-069	BALL STUD FOR GAS SPRING	1
12	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	1
13	H-5040	PUSH-ON BULB SEAL	1



This page left blank intentionally.

15.4 ASSEMBLY, ALT COLOR PANELS

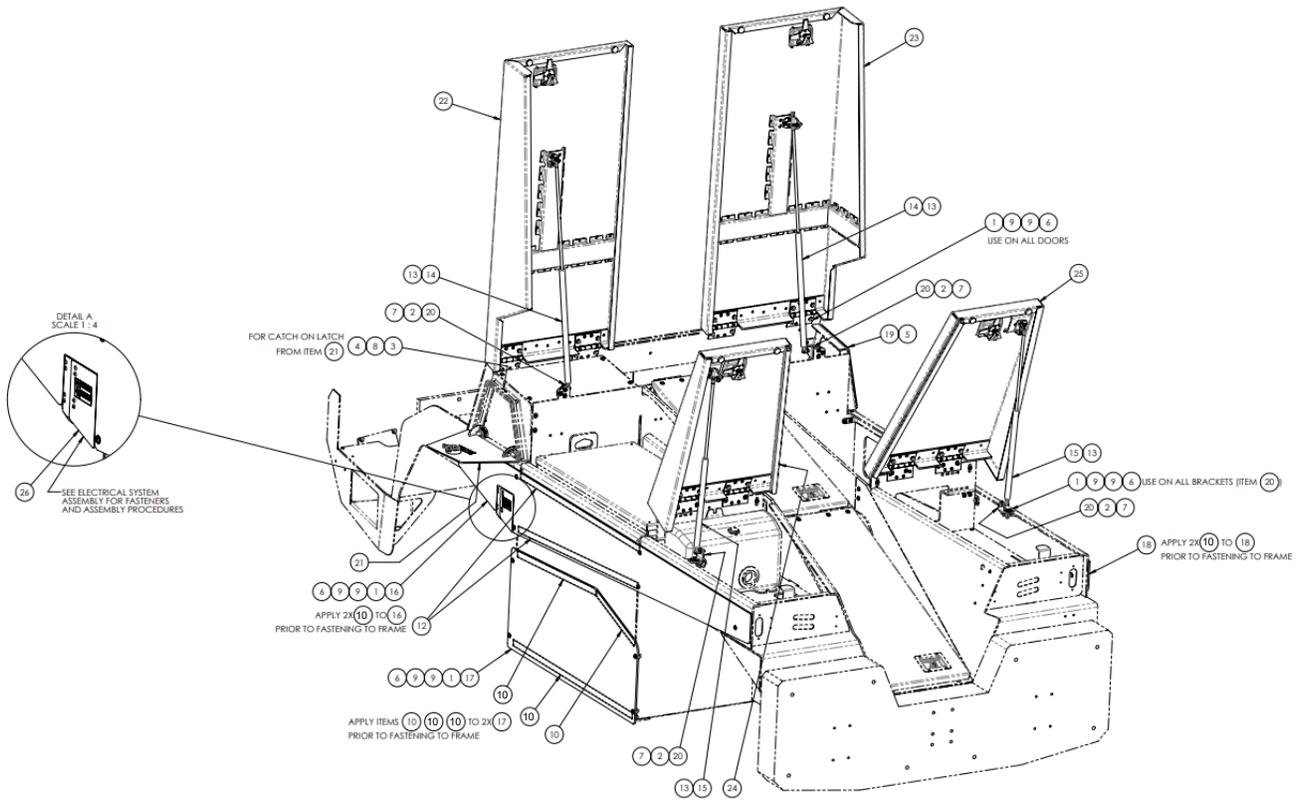

NOTE:

ORDER OF ASSEMBLY OF DOORS FOR EASE OF INSTALLATION:

- 1 Z-11869 ASY, REAR DOOR, LH (ASSEMBLE HYDRAULIC OIL TANK TO FRAME PRIOR TO ASSEMBLY OF THIS DOOR.)
- 2 Z-11871 ASY, REAR DOOR, RH
- 3 Z-11857 ASSY, BATTERY DOOR, LH
- 4 Z-11863 ASY, BATTERY DOOR, RH



15.4 ASSEMBLY, ALT COLOR PANELS (continued)



Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	48
2	394-069	BALL STUD FOR GAS SPRING	4
3	G-1154-102204	SCREW, #8-32 X .50" LG. SOC BUTT. HD CAP	2
4	G-1202-1020	STOPNUT, #8-32 ELASTIC	2
5	G-1202-1035	STOPNUT, #10-32 ELASTIC	4
6	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	40
7	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	4
8	G-1250-1020N	FLATWASHER. #8 NARROW	2
9	G-1250-1050N	FLATWASHER, 1/4 NARROW	88
10	H-1204-10	TAPE, NEOPRENE FOAM SEALING	As Needed
13	H-4652	END FITTING FOR GAS SPRING	8
14	H-4950	GAS SPRING	2
15	H-5031	GAS SPRING	2
16	J-7973-00	UPPER SIDE ARMOR, LH (P)	1
17	J-7974-00	LOWER SIDE ARMOR (P)	2
18	J-7975-00	UPPER SIDE ARMOR, RH (P)	1
19	J-8041-00	ELECTRICAL FAUX DOOR (P)	1
20	S-4348-00	MOUNT BRACKET (P)	4
21	Refer above section	STORAGE DOOR SUB	1
22	Refer above section	ASSY, BATTERY DOOR, LH	1
23	Refer above section	ASY, BATTERY DOOR, RH	1
24	Refer above section	ASY, REAR DOOR, LH	1
25	Refer above section	ASY, REAR DOOR, RH	1
26	Refer above section	ASY, CHARGE JACK SUB	1



16.0 ASSEMBLY, DECALS & LABELS

16.1 ASSEMBLY, DECALS & LABELS

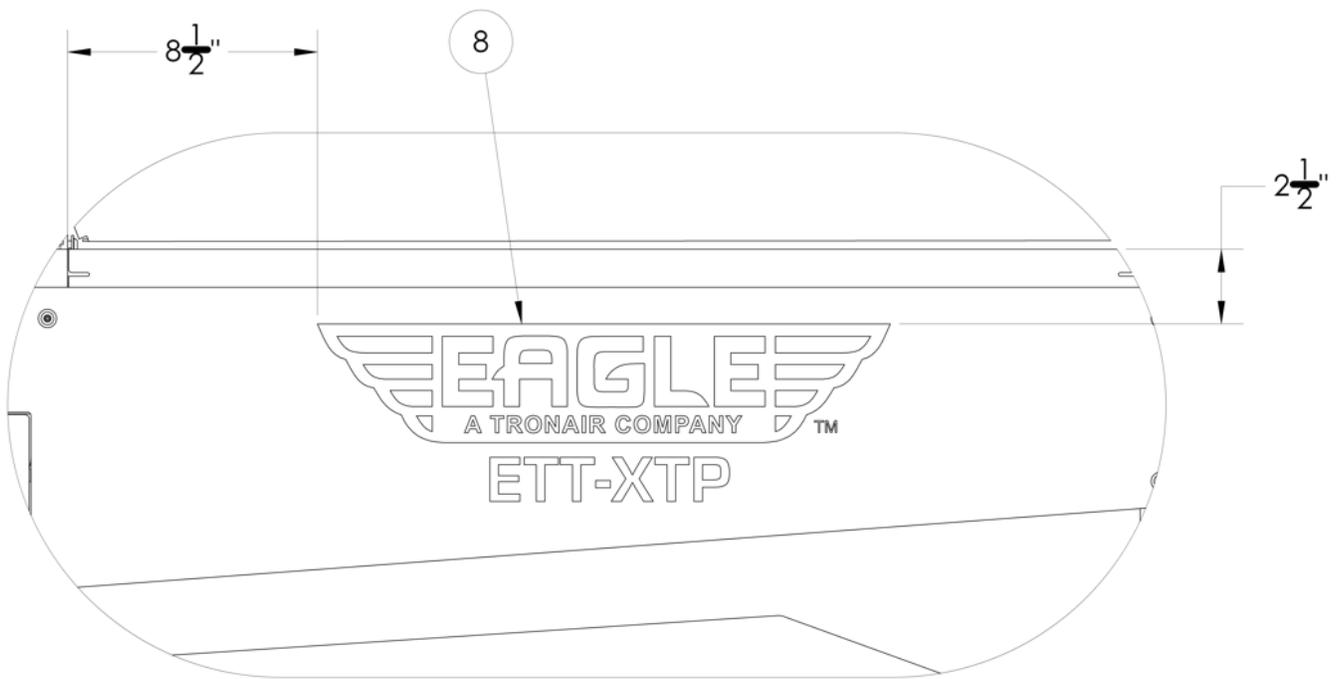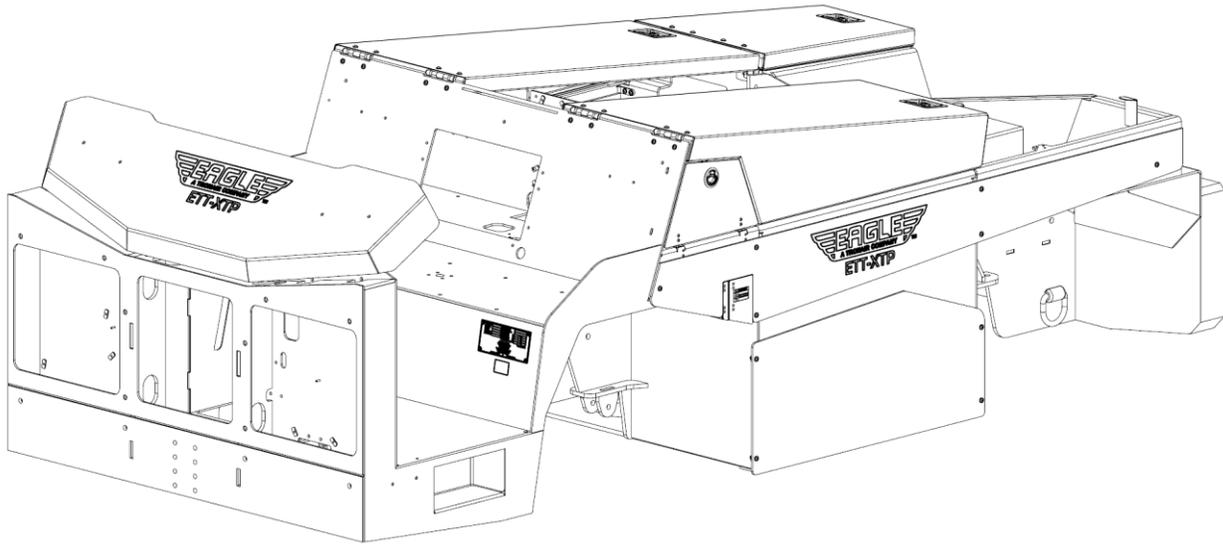


DETAIL A
2 PLCS, BOTH SIDES OF TRACTOR

16.1 ASSEMBLY, DECALS & LABELS (continued)

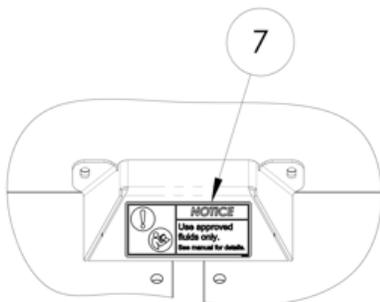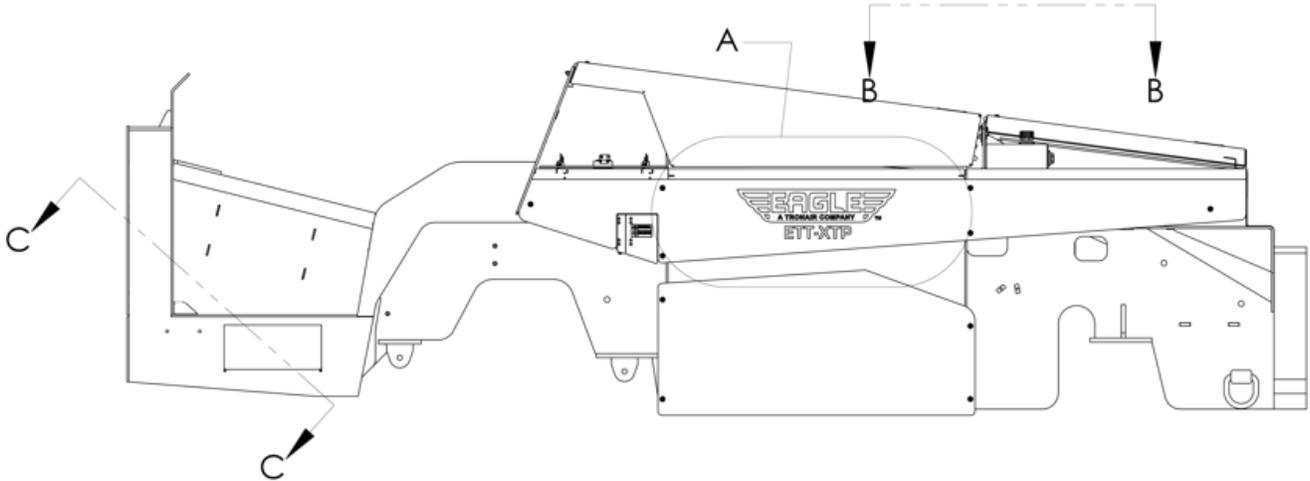



SECTION C-C

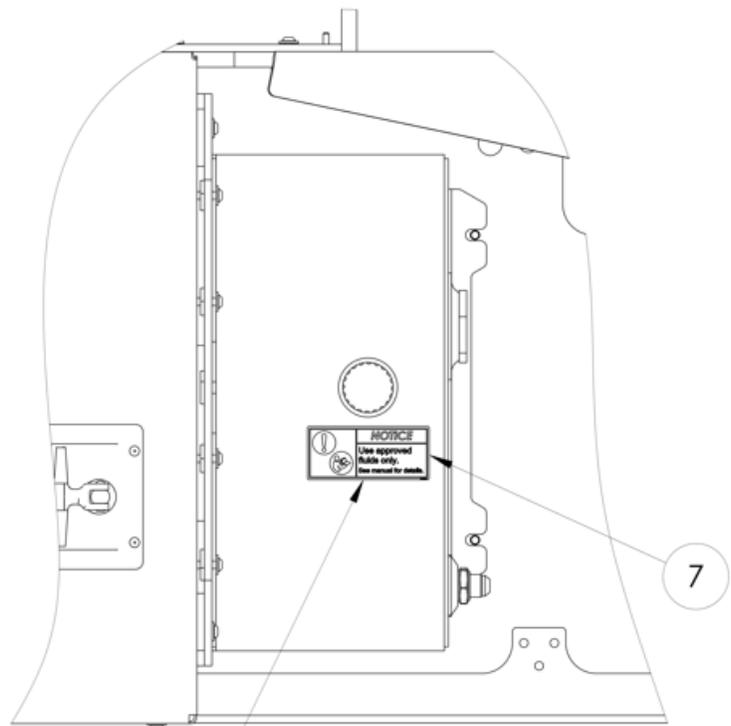

LOCATE ADJACENT TO
FILL PORT AS SHOWN



SECTION B-B
LH REAR DOOR NOT SHOWN

16.1 ASSEMBLY, DECALS & LABELS (continued)

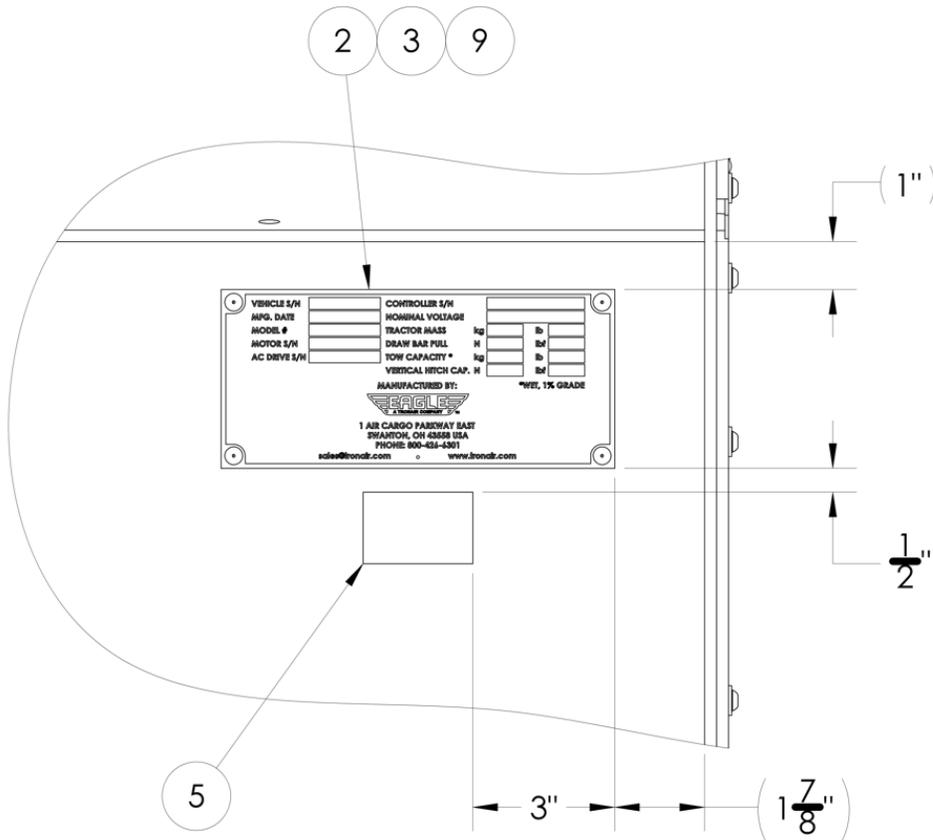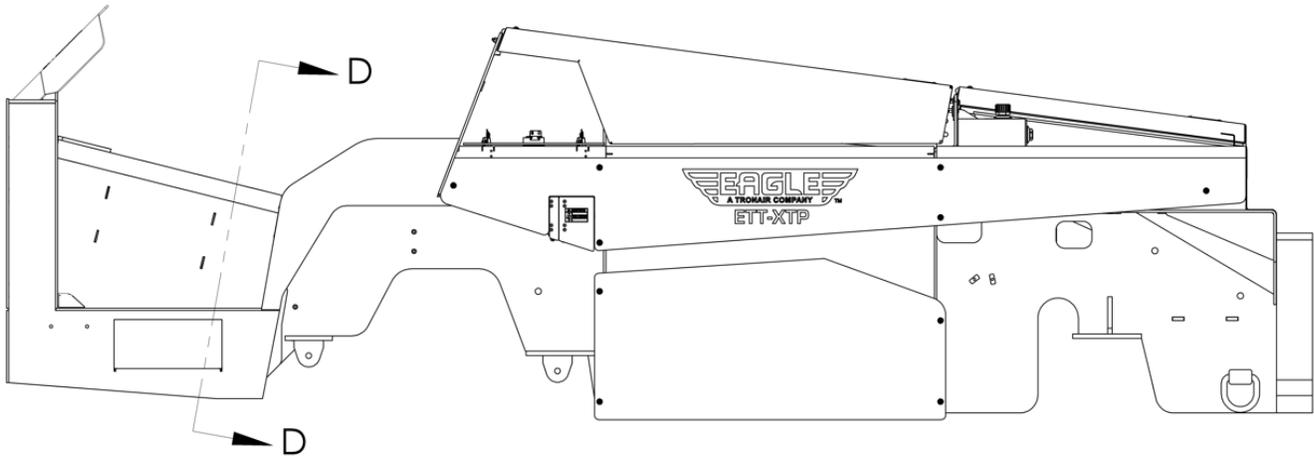


SECTION D-D

16.1 ASSEMBLY, DECALS & LABELS (continued)

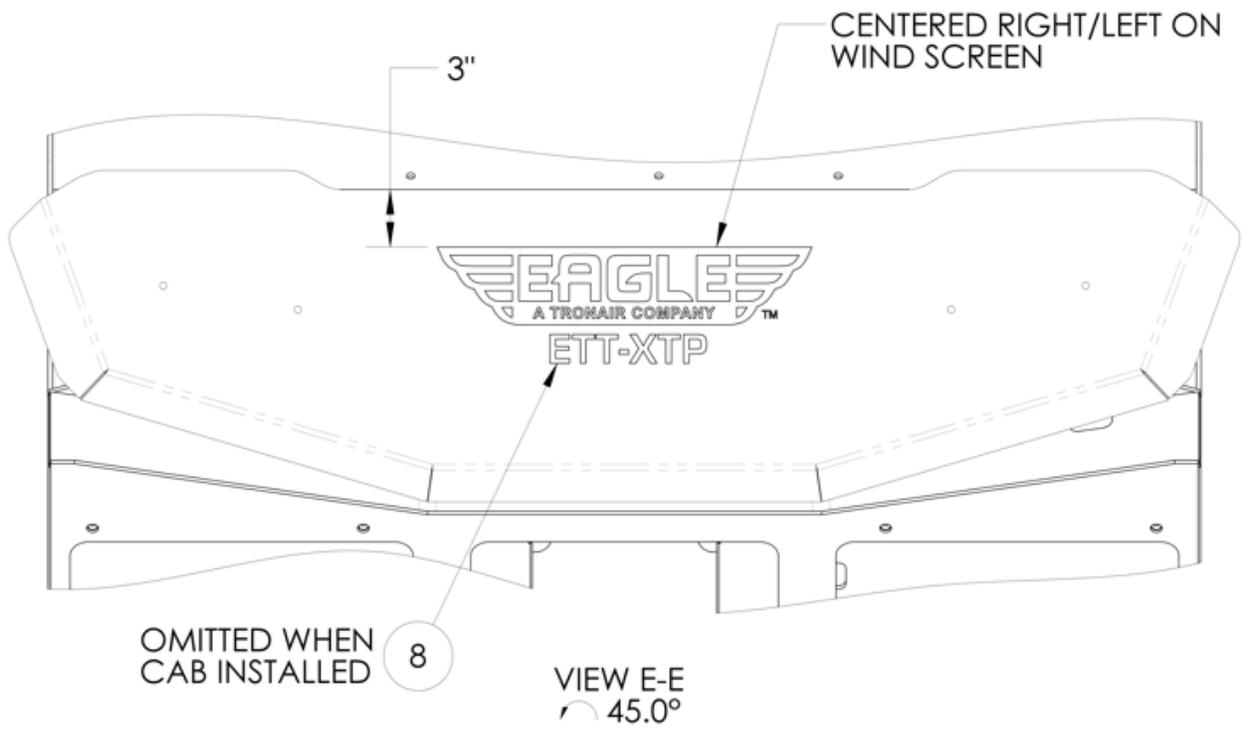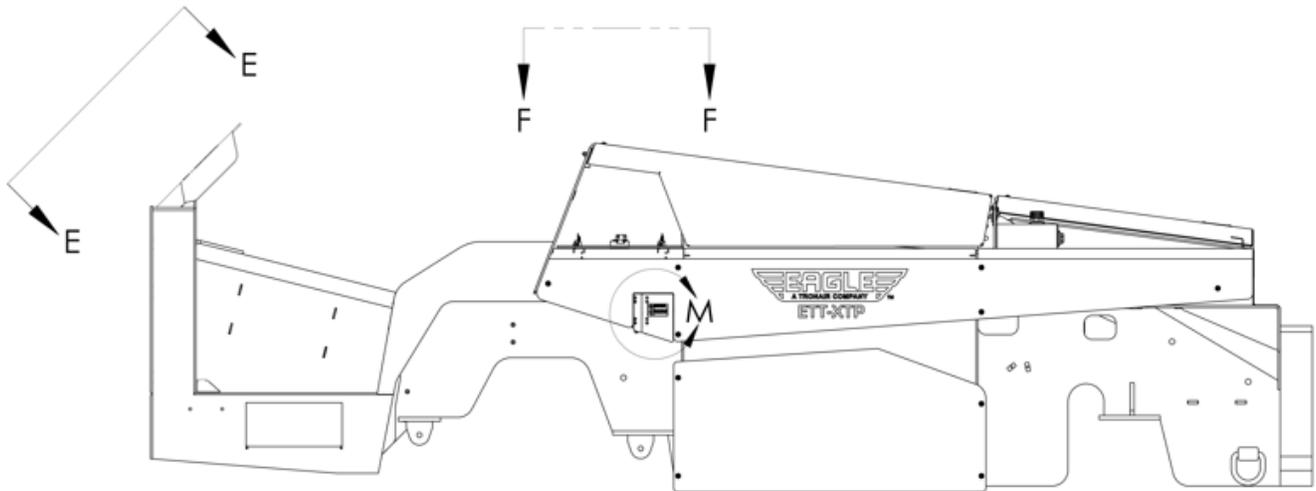

16.1 ASSEMBLY, DECALS & LABELS (continued)

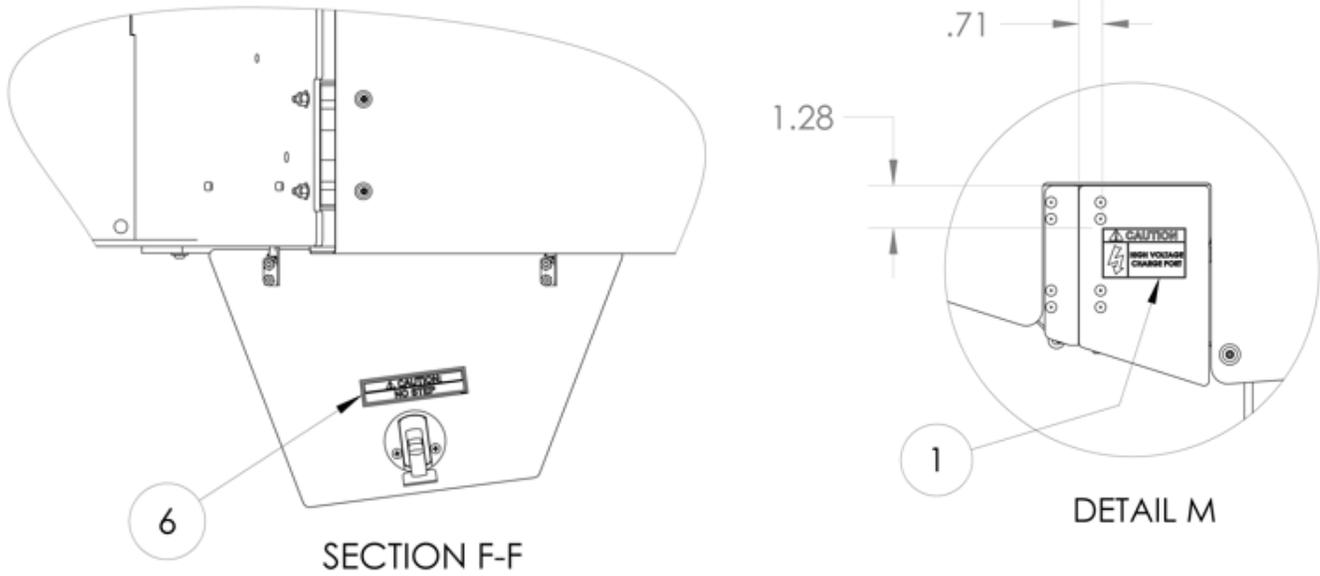


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ETT12-00494	ETT12 BATTERY CHARGE DECAL	1
2	ET00-14-005-SA	DATA PLATE - ETT AND MTT	1
3	G-1351-26-SS	RIVET, 3/16 X .501-.625 OPEN-END SS	4
4	INS-2731	INS, ELECTRIC TUGS DATA PLATES	1
5	V-1001	LABEL, MADE IN USA	1
6	V-2545	LABEL, NO STEP	1
7	V-2745	LABEL, APPROVED FLUIDS NOTICE	2
8	V-2977	TRACTOR DECAL, ETT-XTP	3


17.0 TAIL SHELF / COMPRESSOR

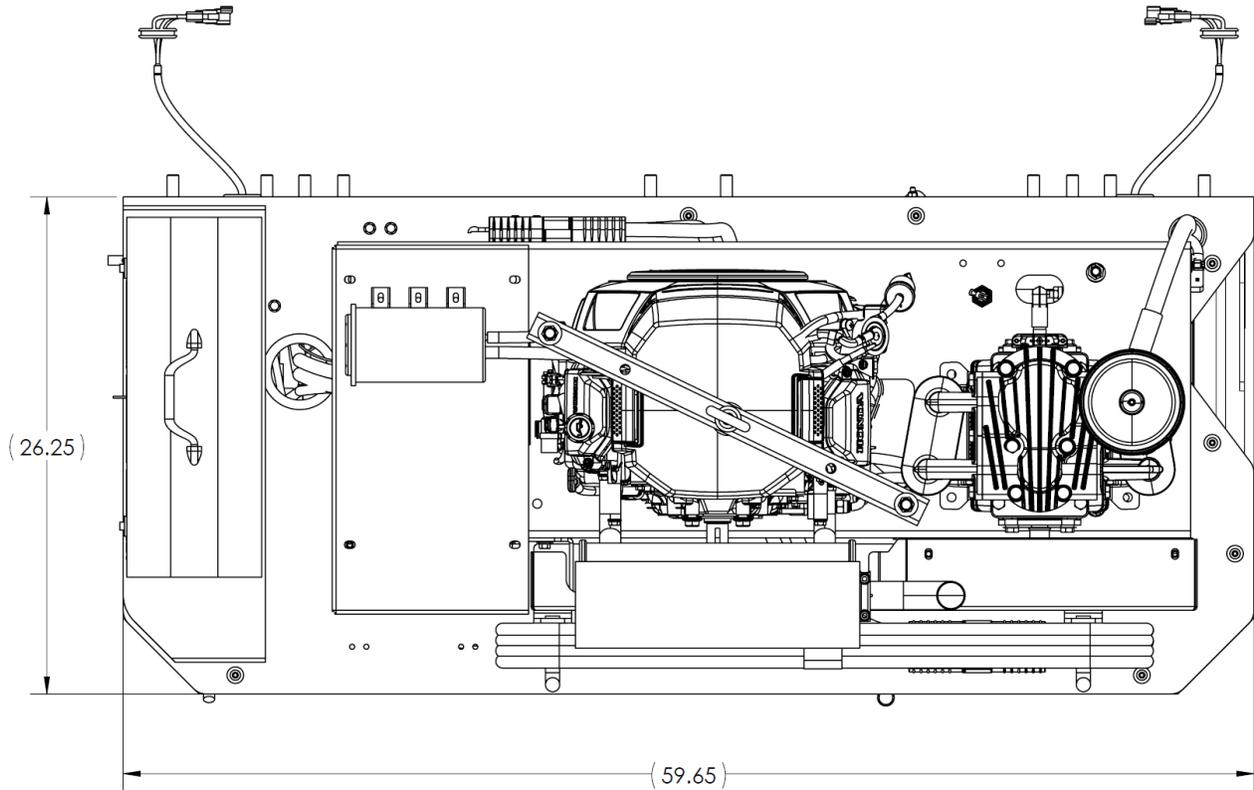


17.0 TAIL SHELF / COMPRESSOR (continued)

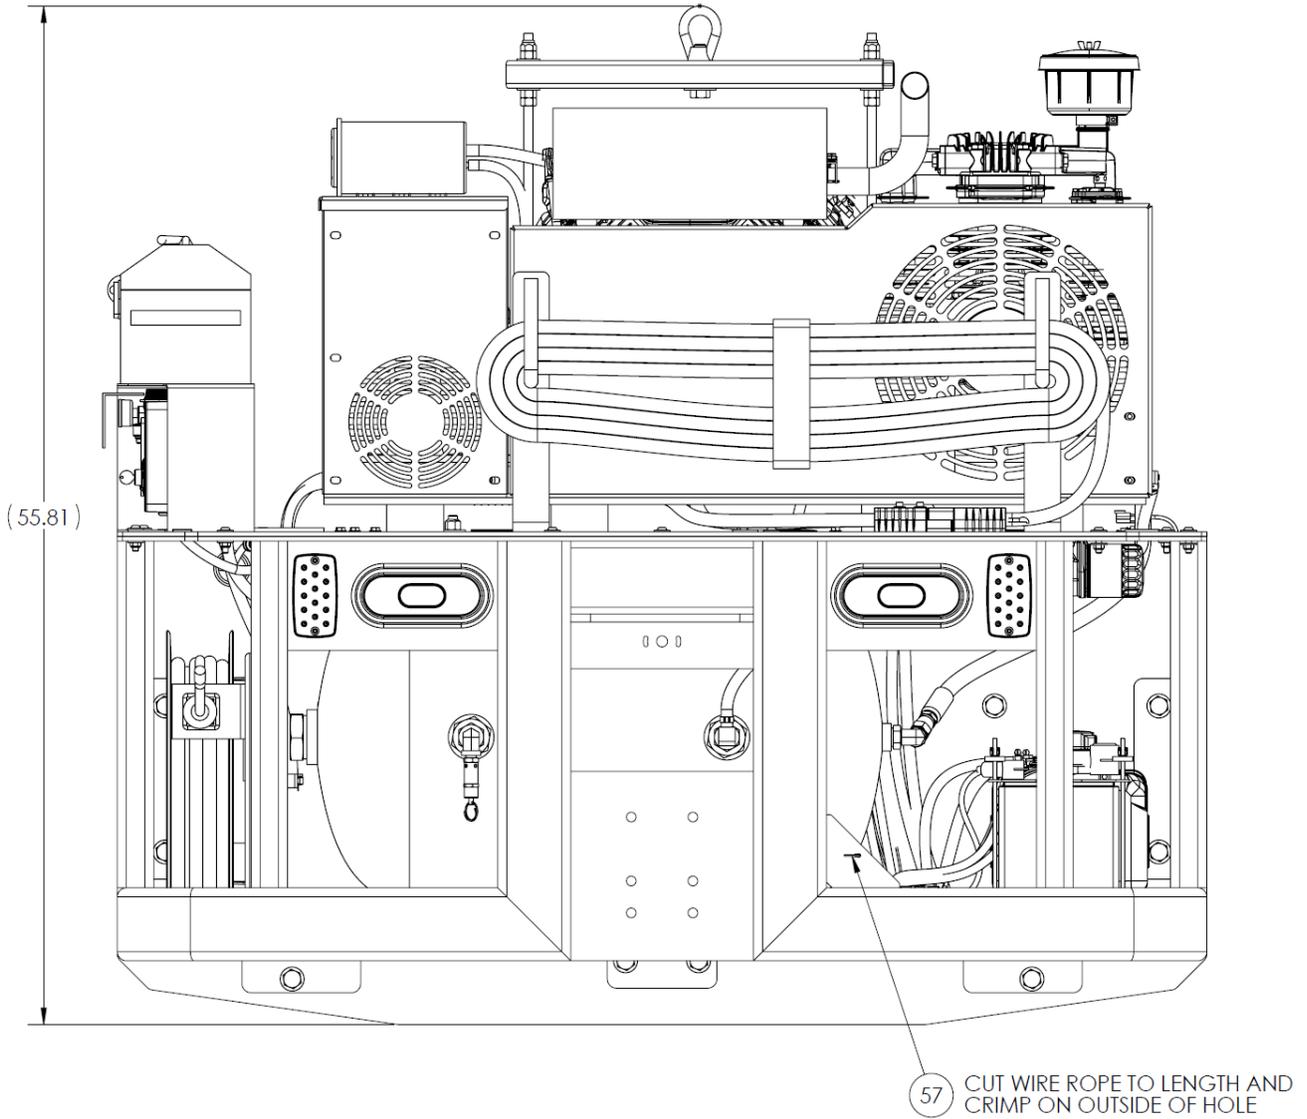


17.0 TAIL SHELF / COMPRESSOR (continued)

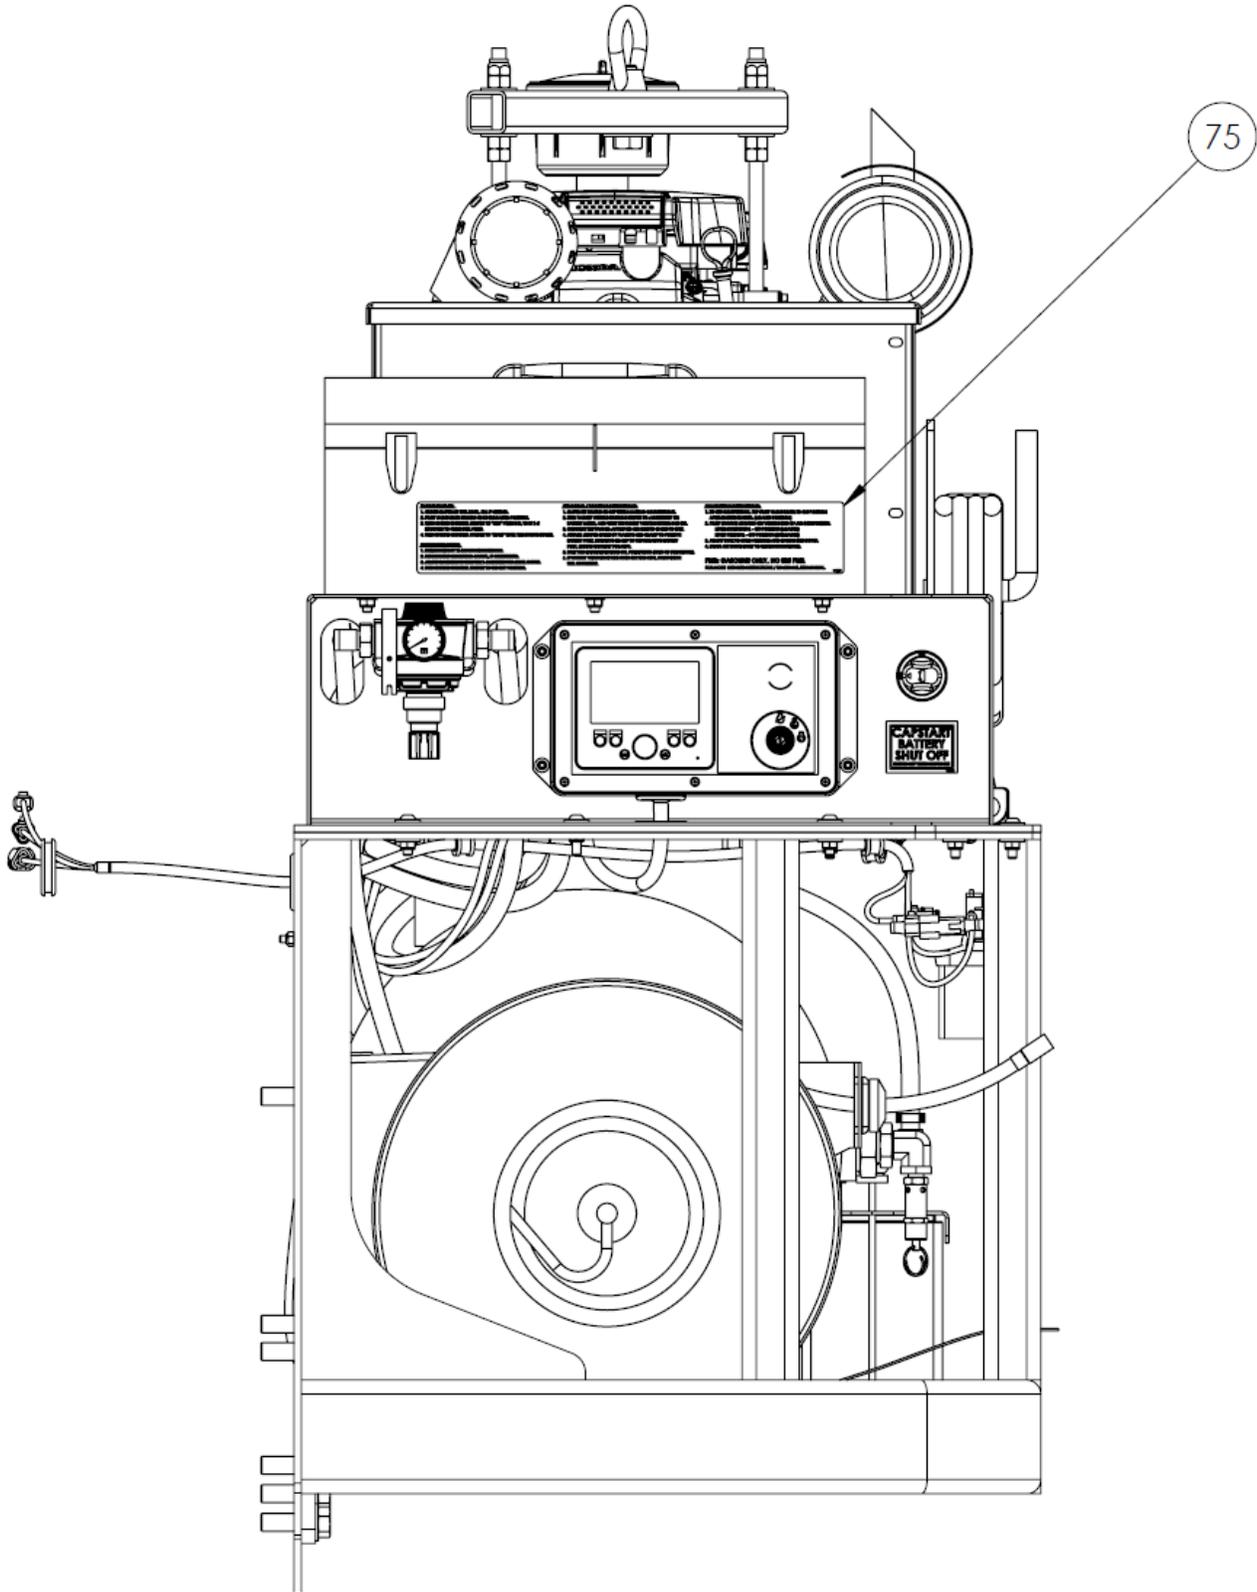



17.0 TAIL SHELF / COMPRESSOR (continued)

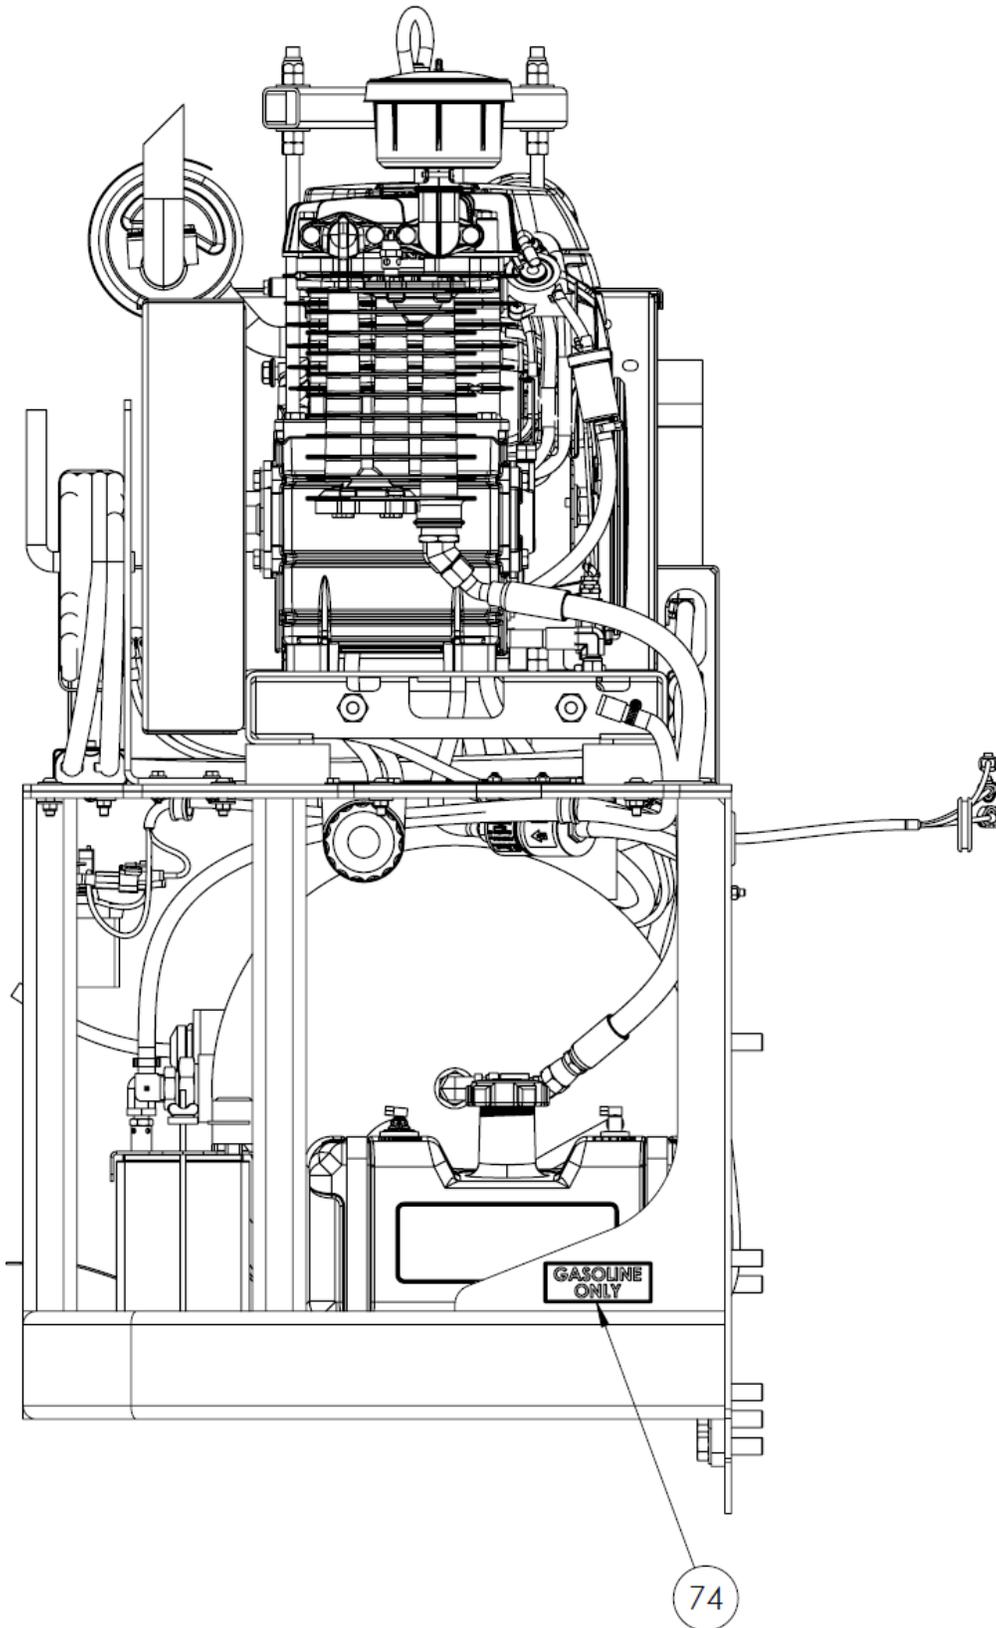



17.0 TAIL SHELF / COMPRESSOR (continued)

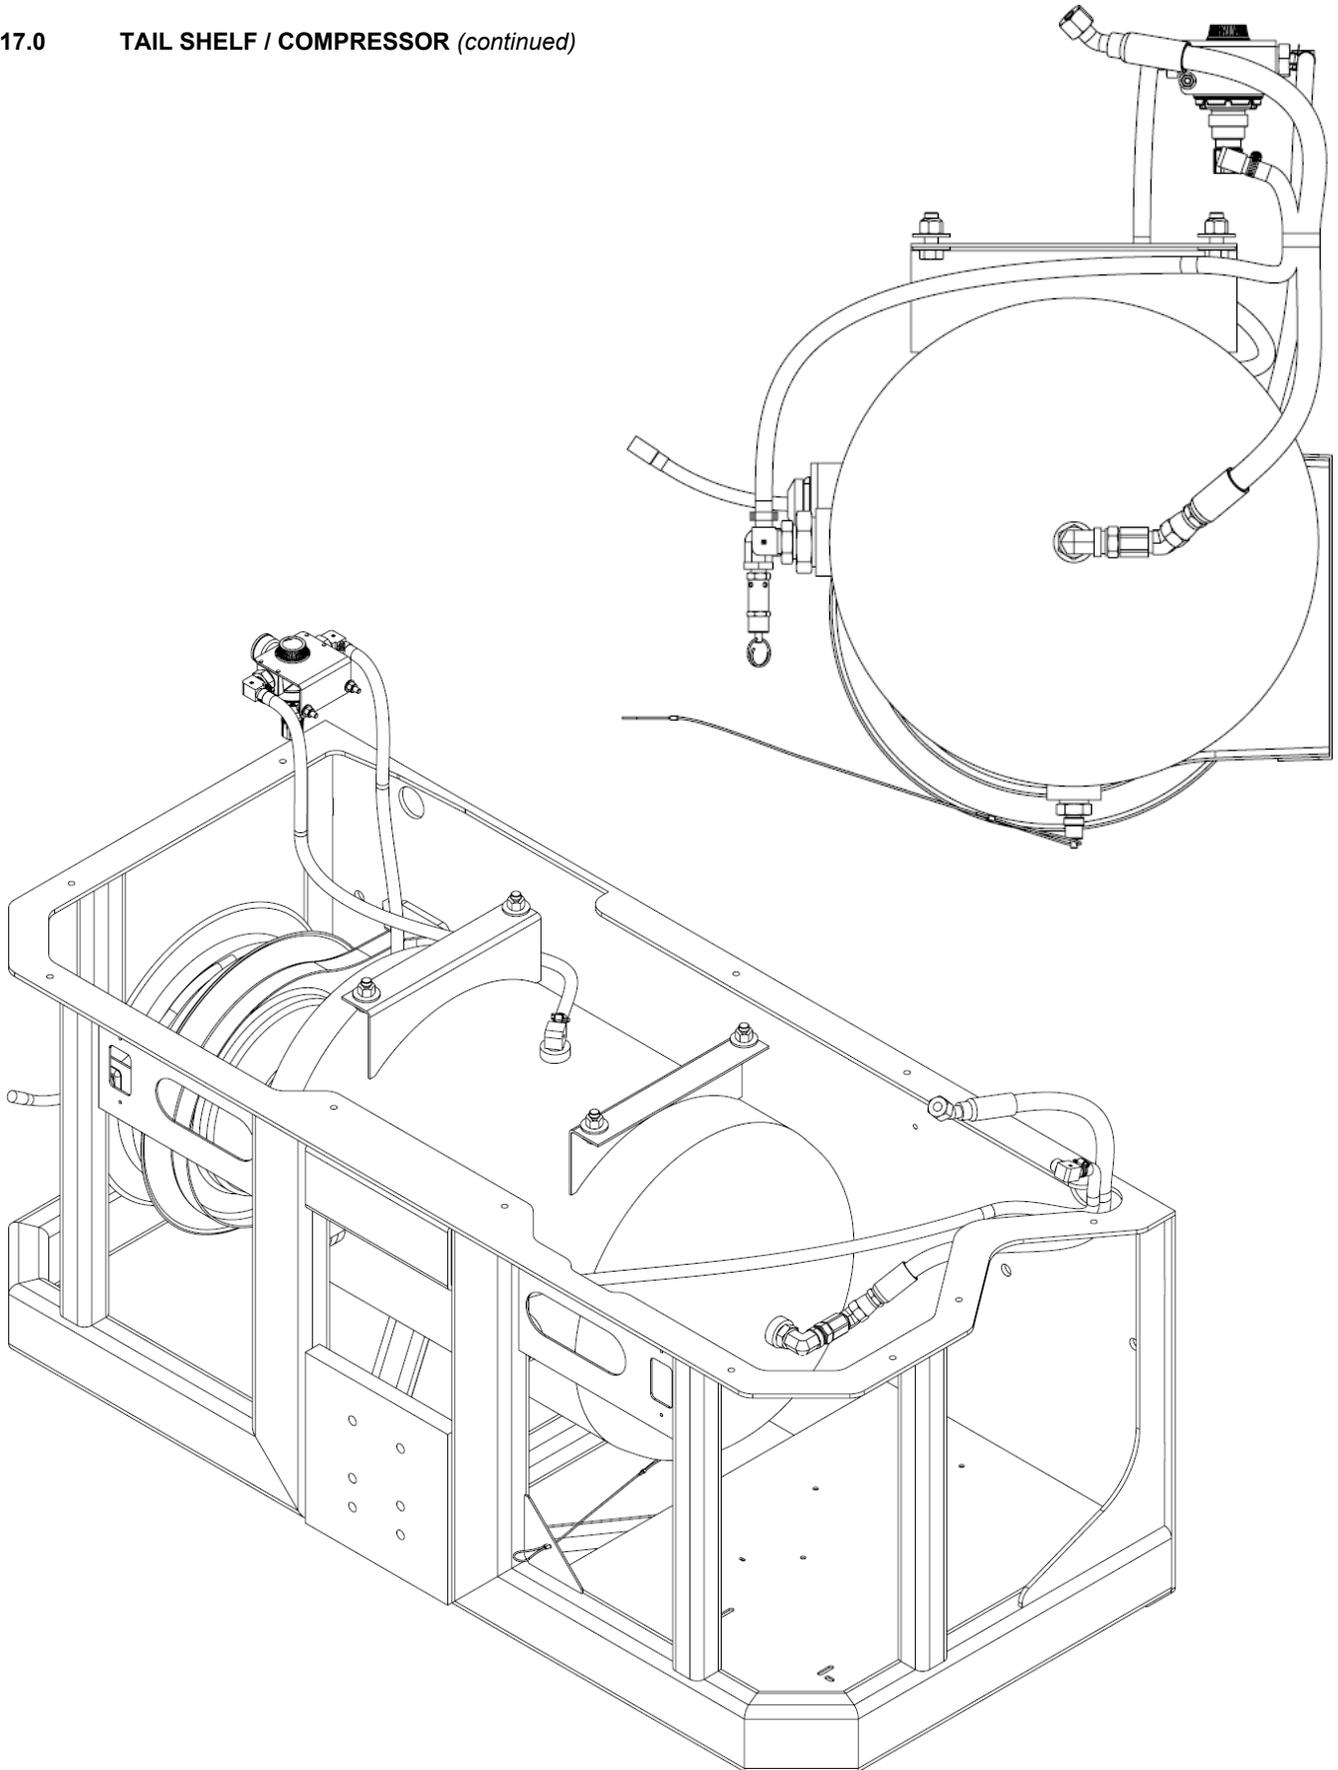


17.0 TAIL SHELF / COMPRESSOR (continued)

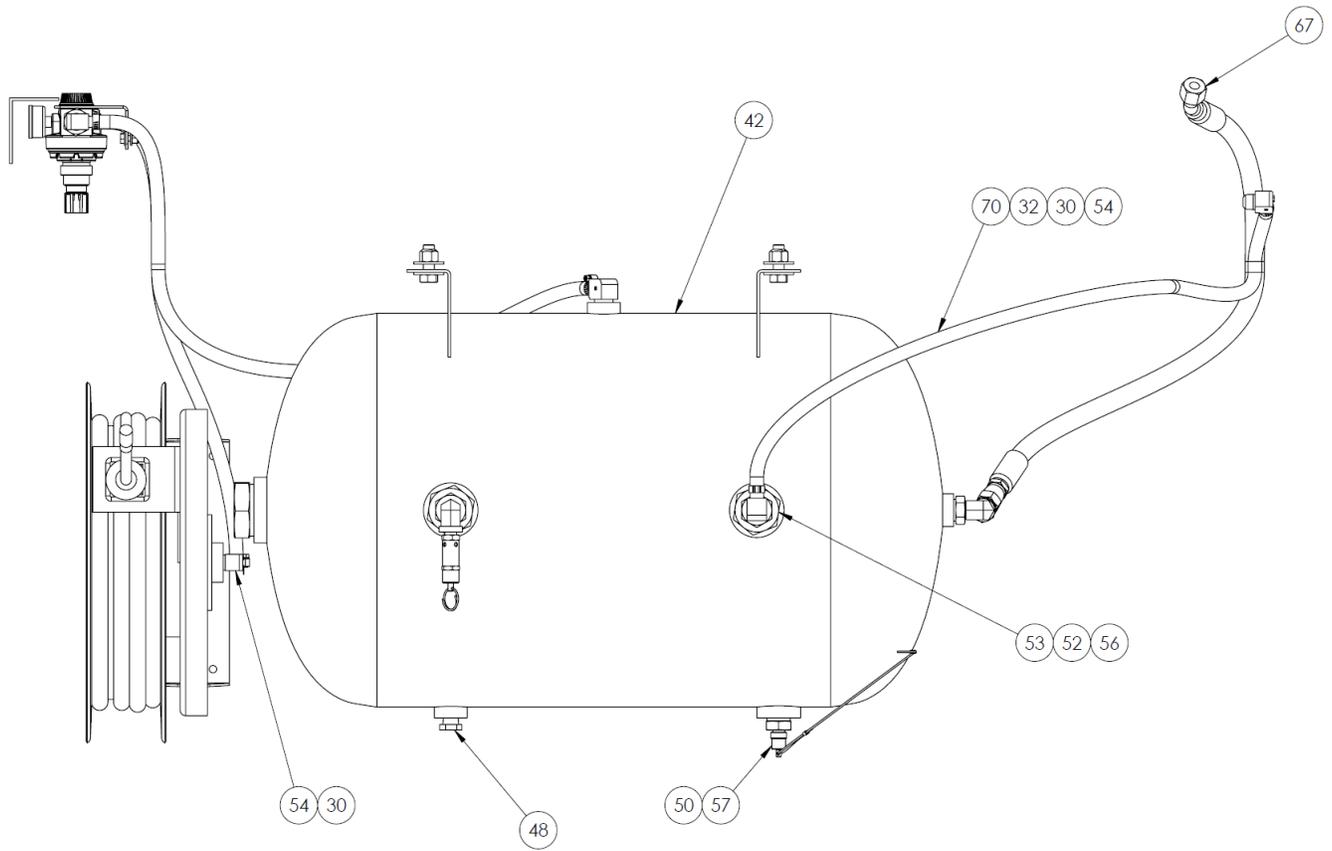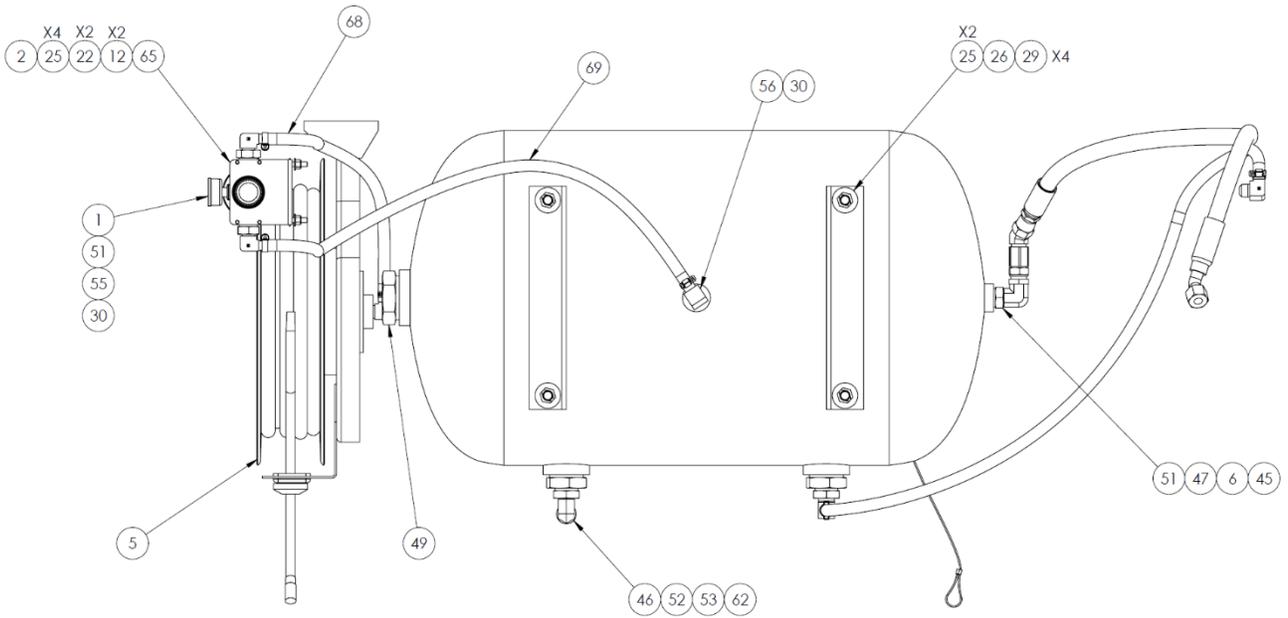


17.0 TAIL SHELF / COMPRESSOR (continued)

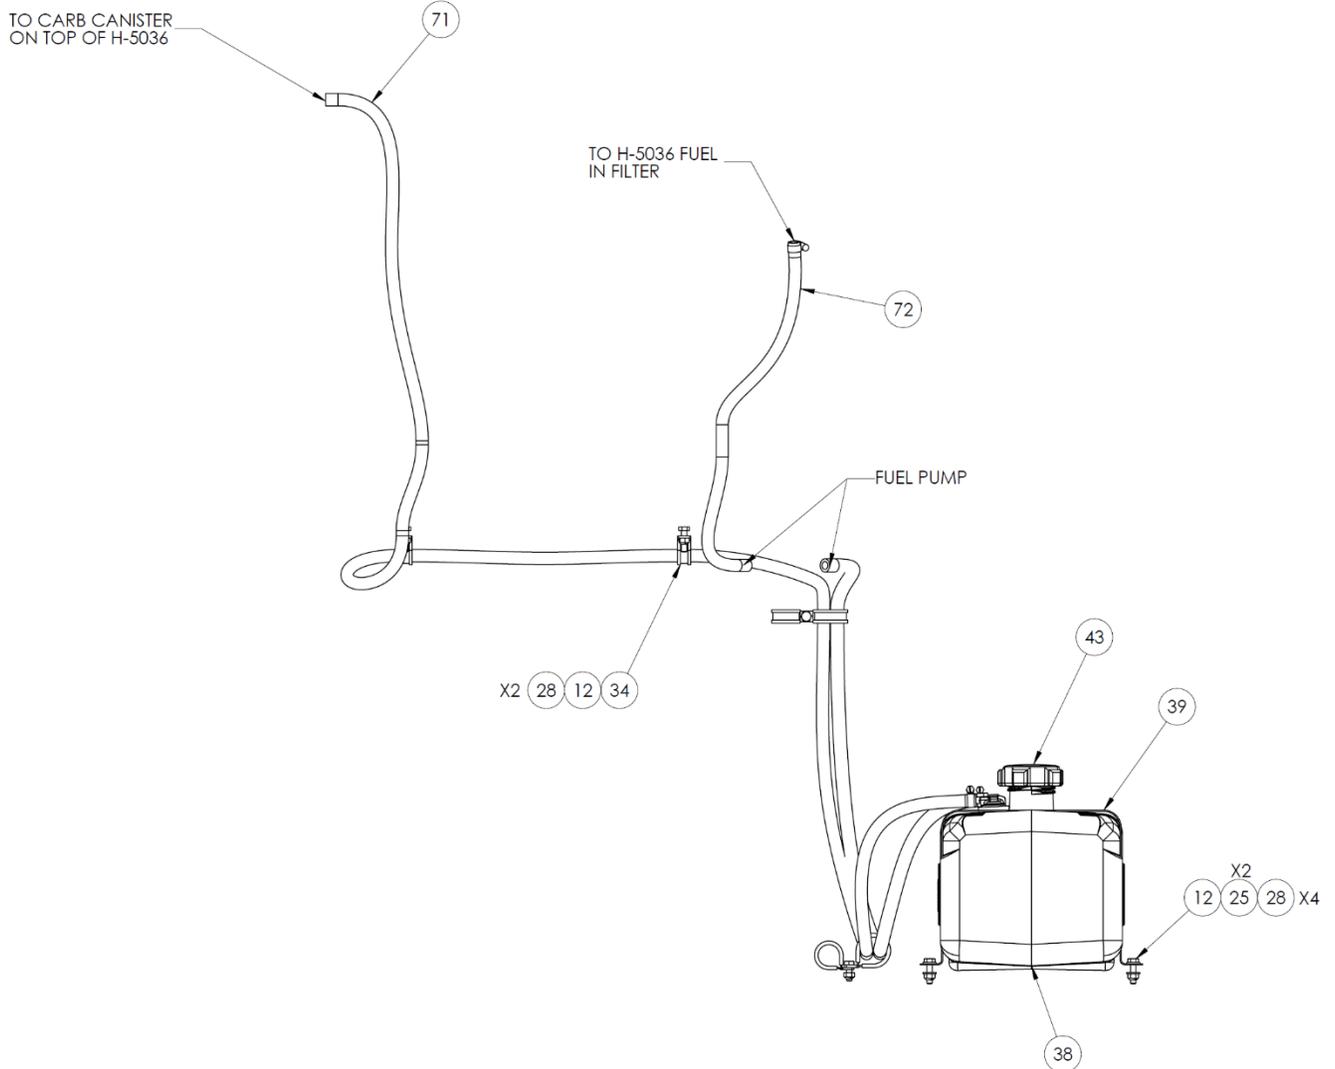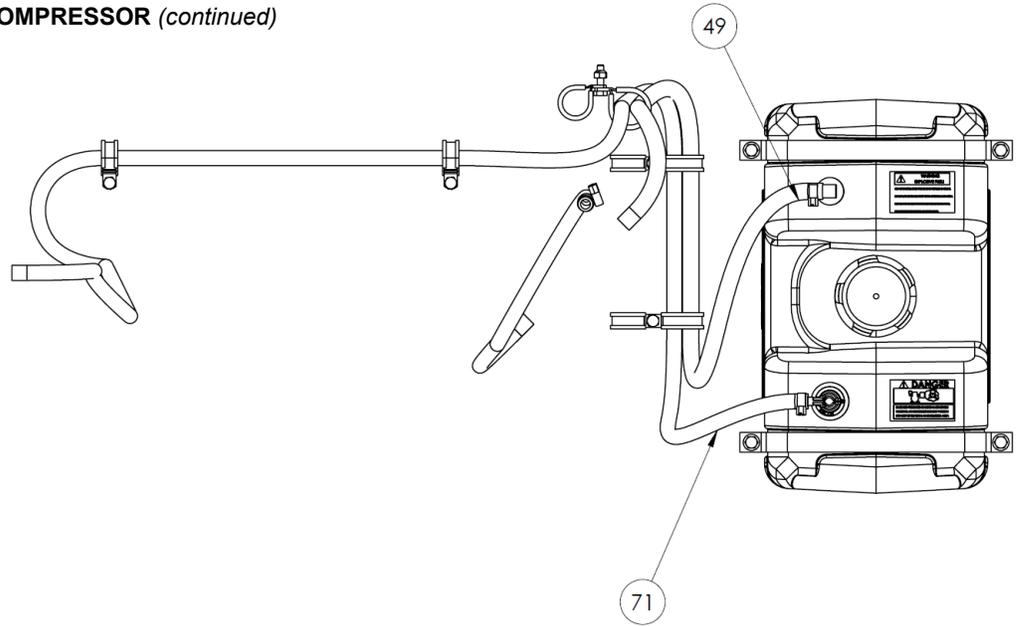



17.0 TAIL SHELF / COMPRESSOR (continued)

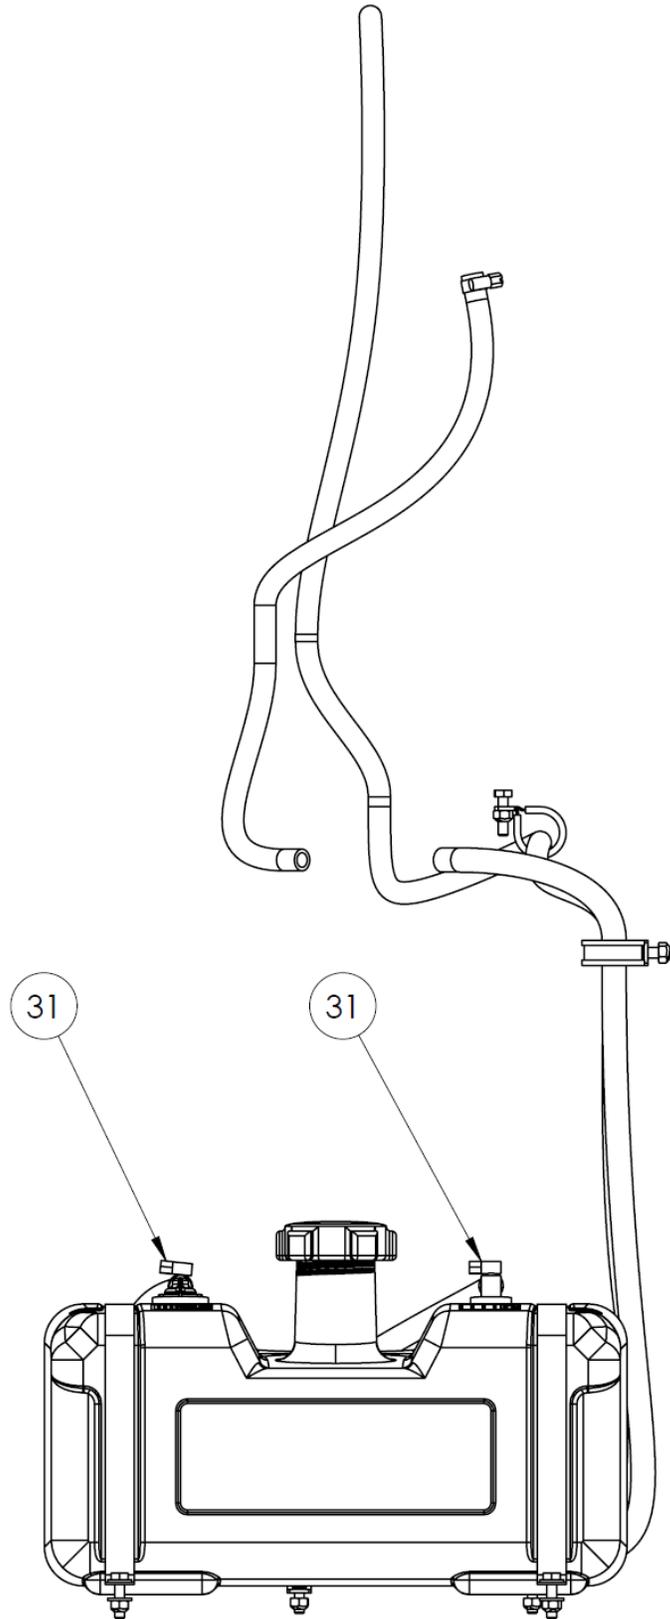


17.0 TAIL SHELF / COMPRESSOR (continued)

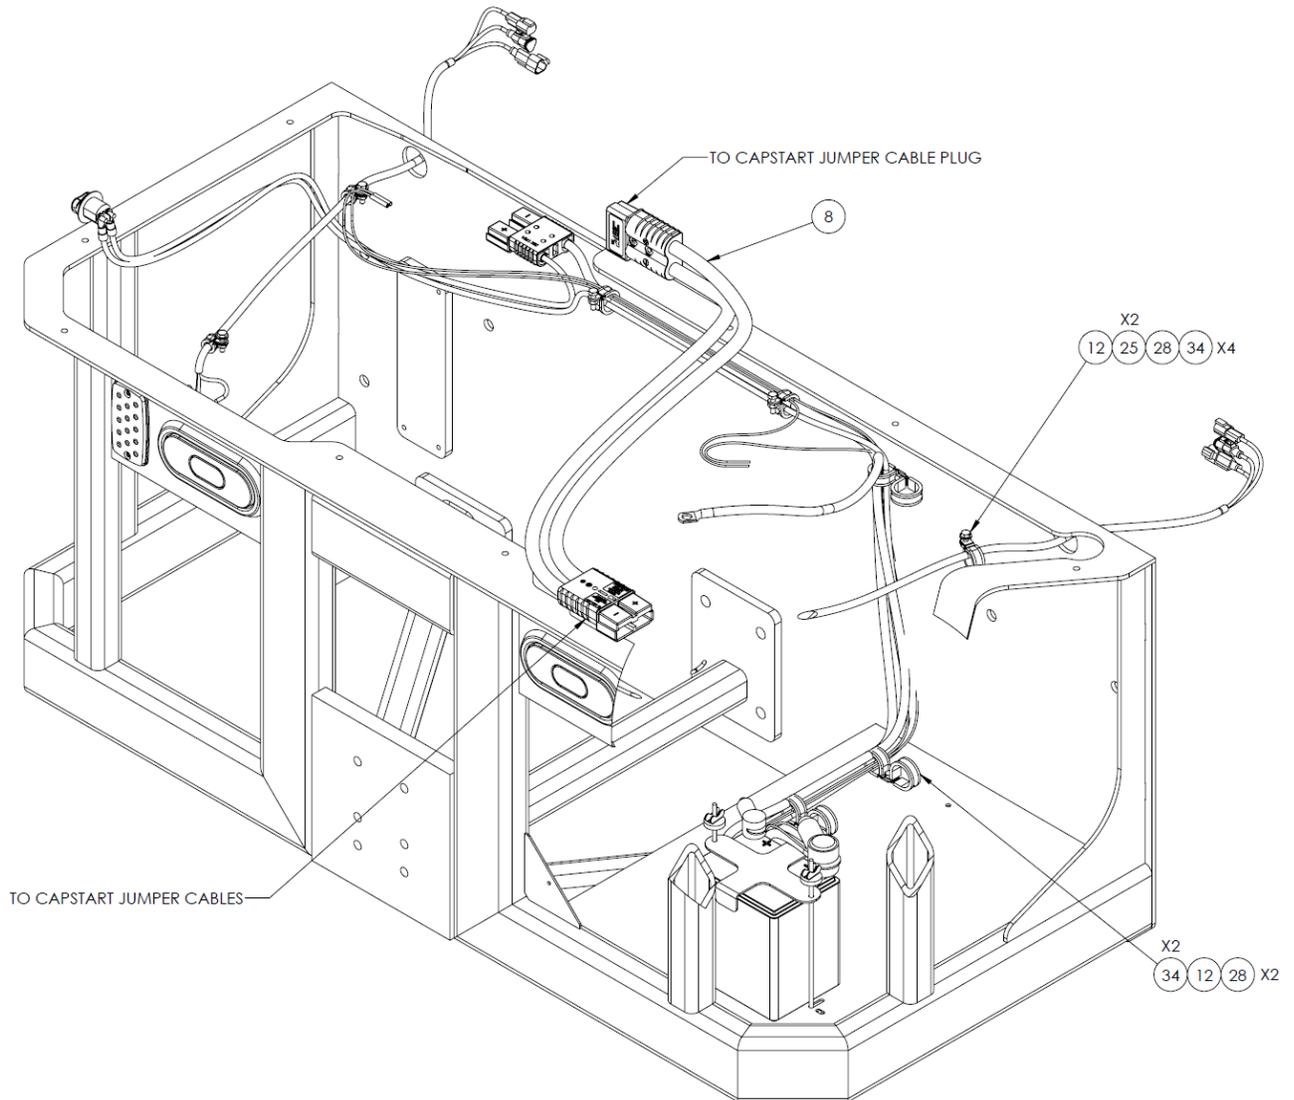



17.0 TAIL SHELF / COMPRESSOR (continued)

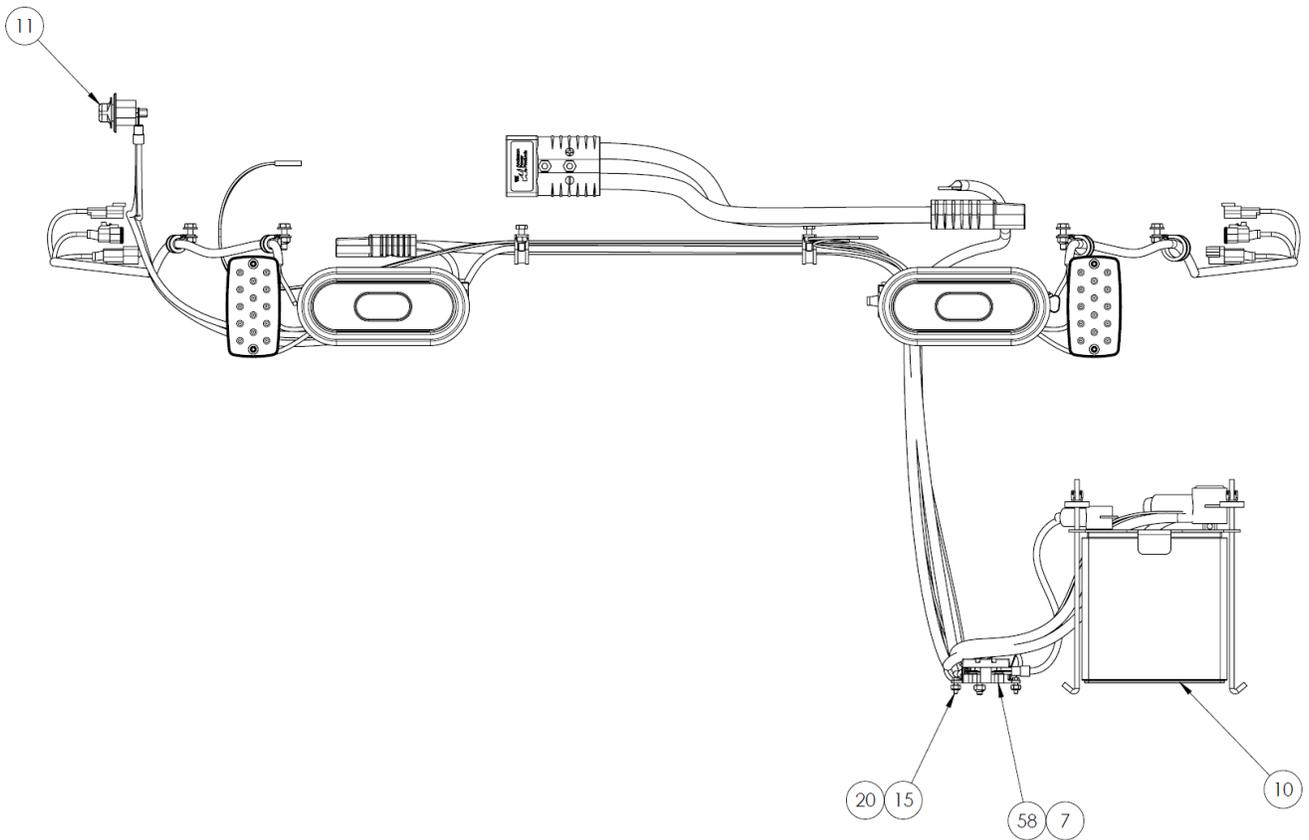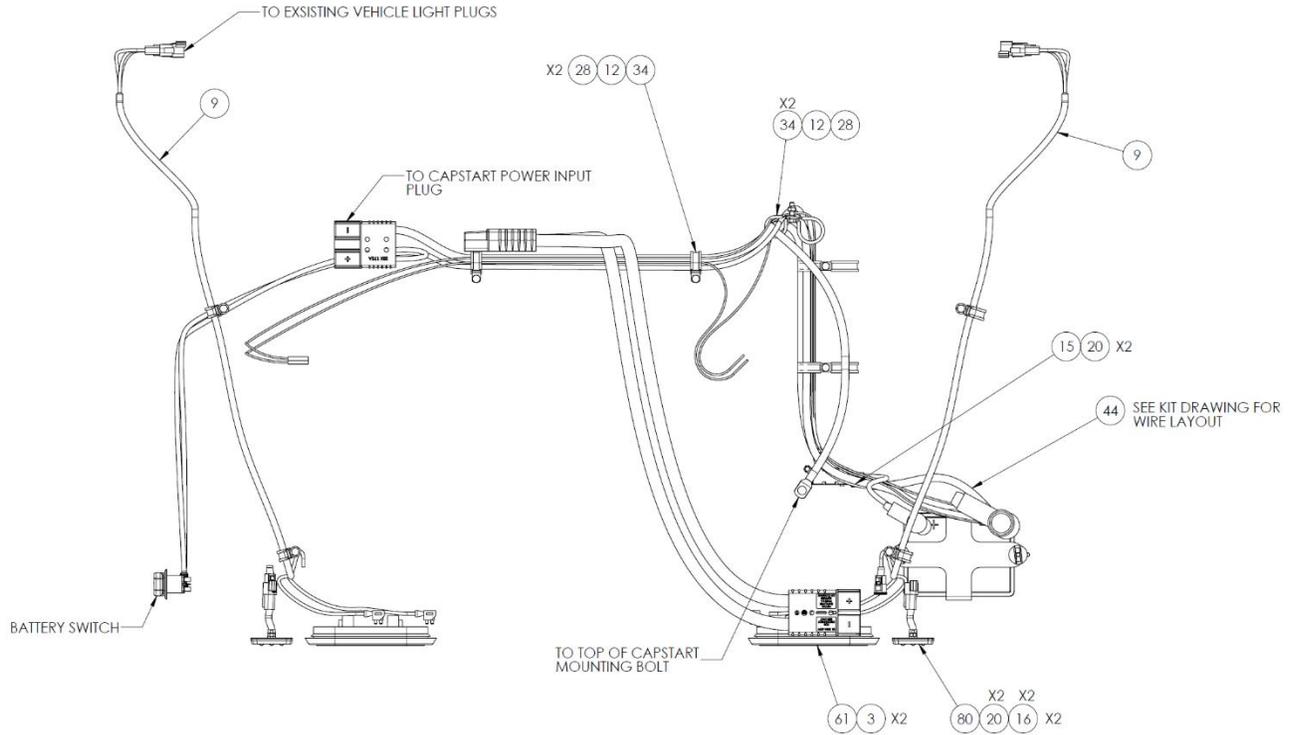


17.0 TAIL SHELF / COMPRESSOR (continued)

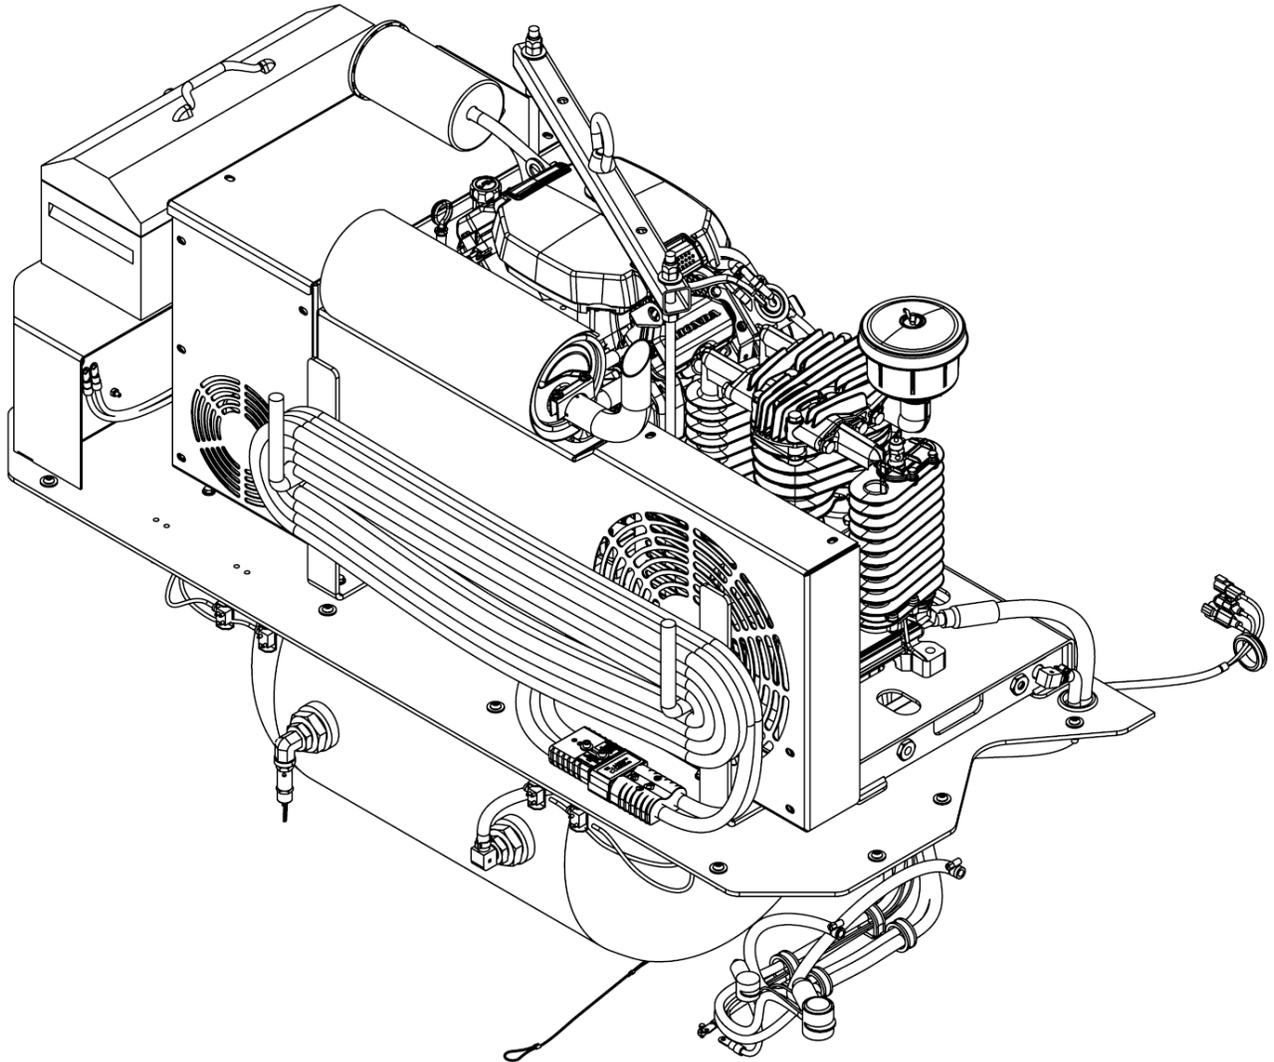


17.0 TAIL SHELF / COMPRESSOR (continued)

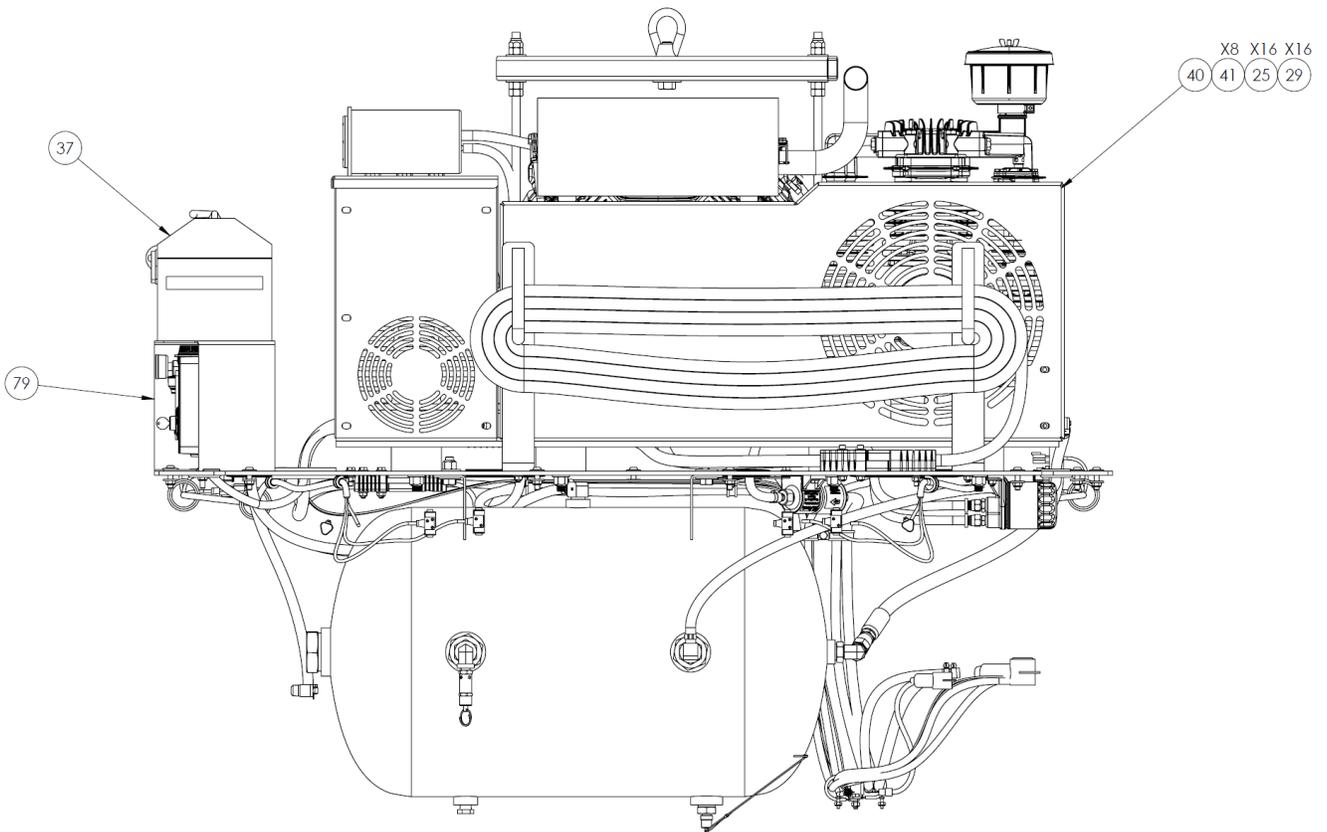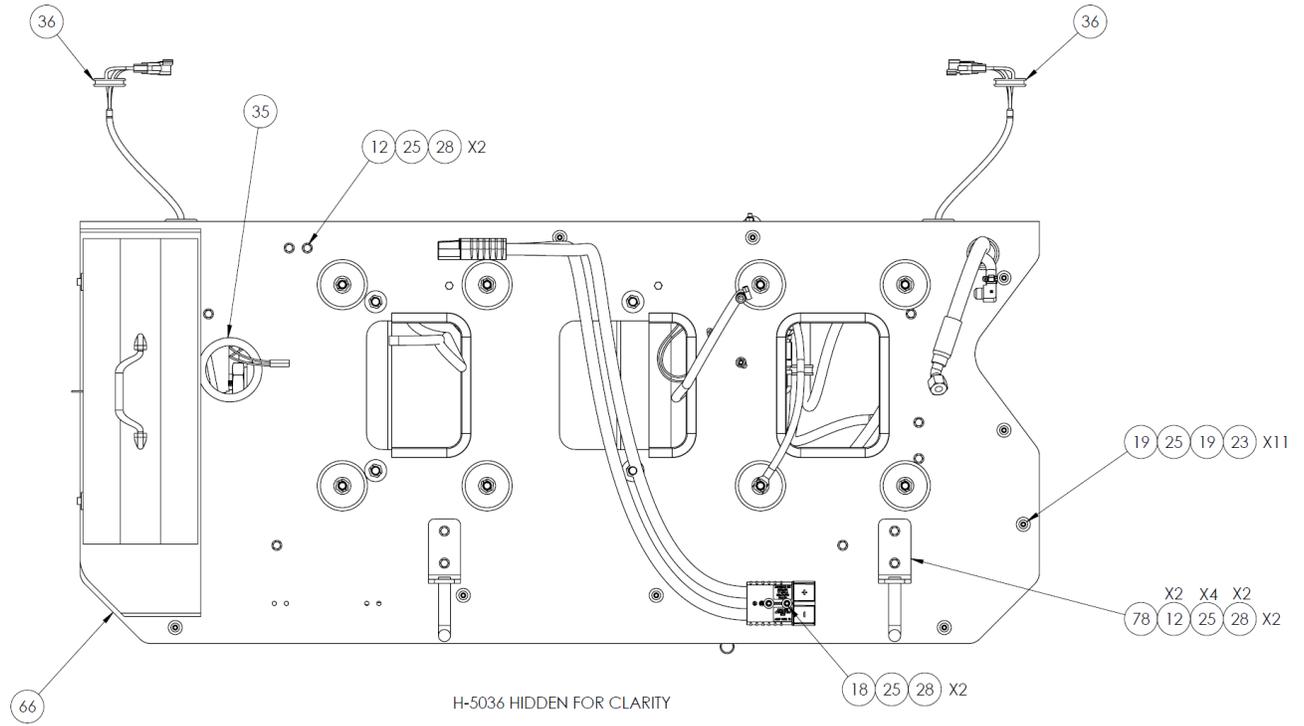



17.0 TAIL SHELF / COMPRESSOR (continued)

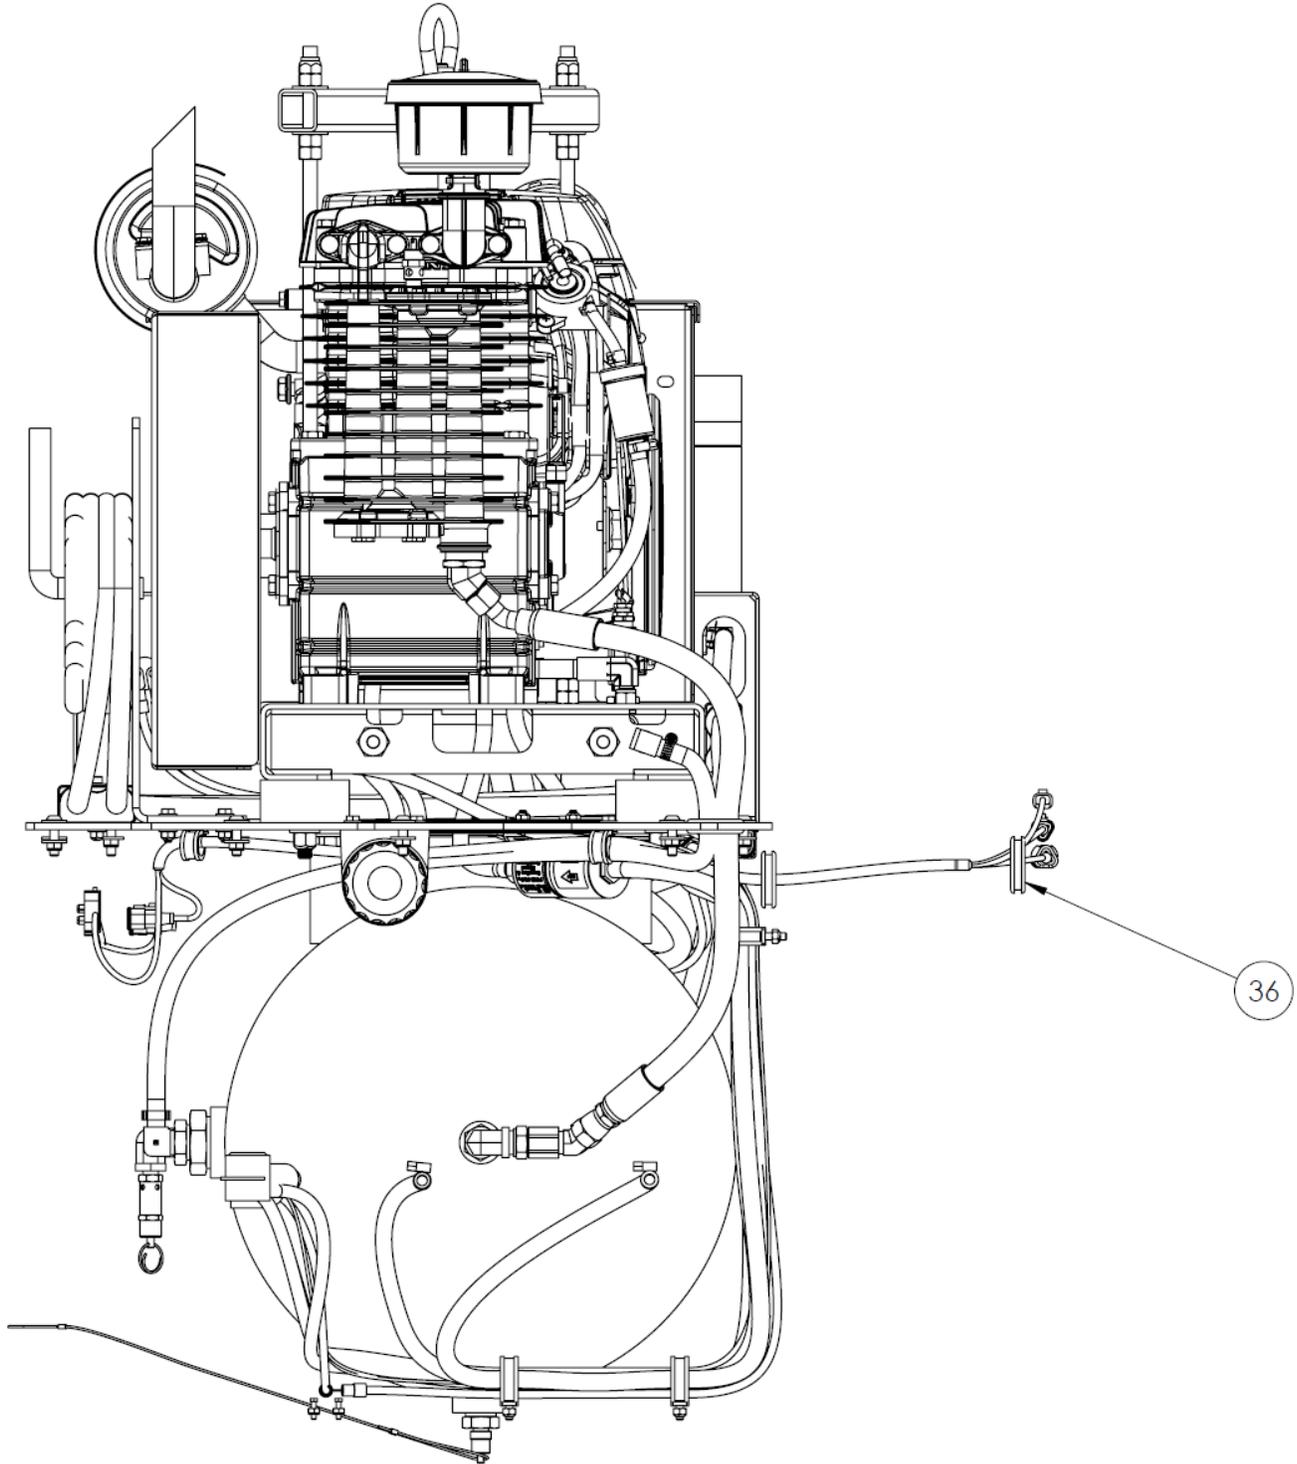


17.0 TAIL SHELF / COMPRESSOR (continued)

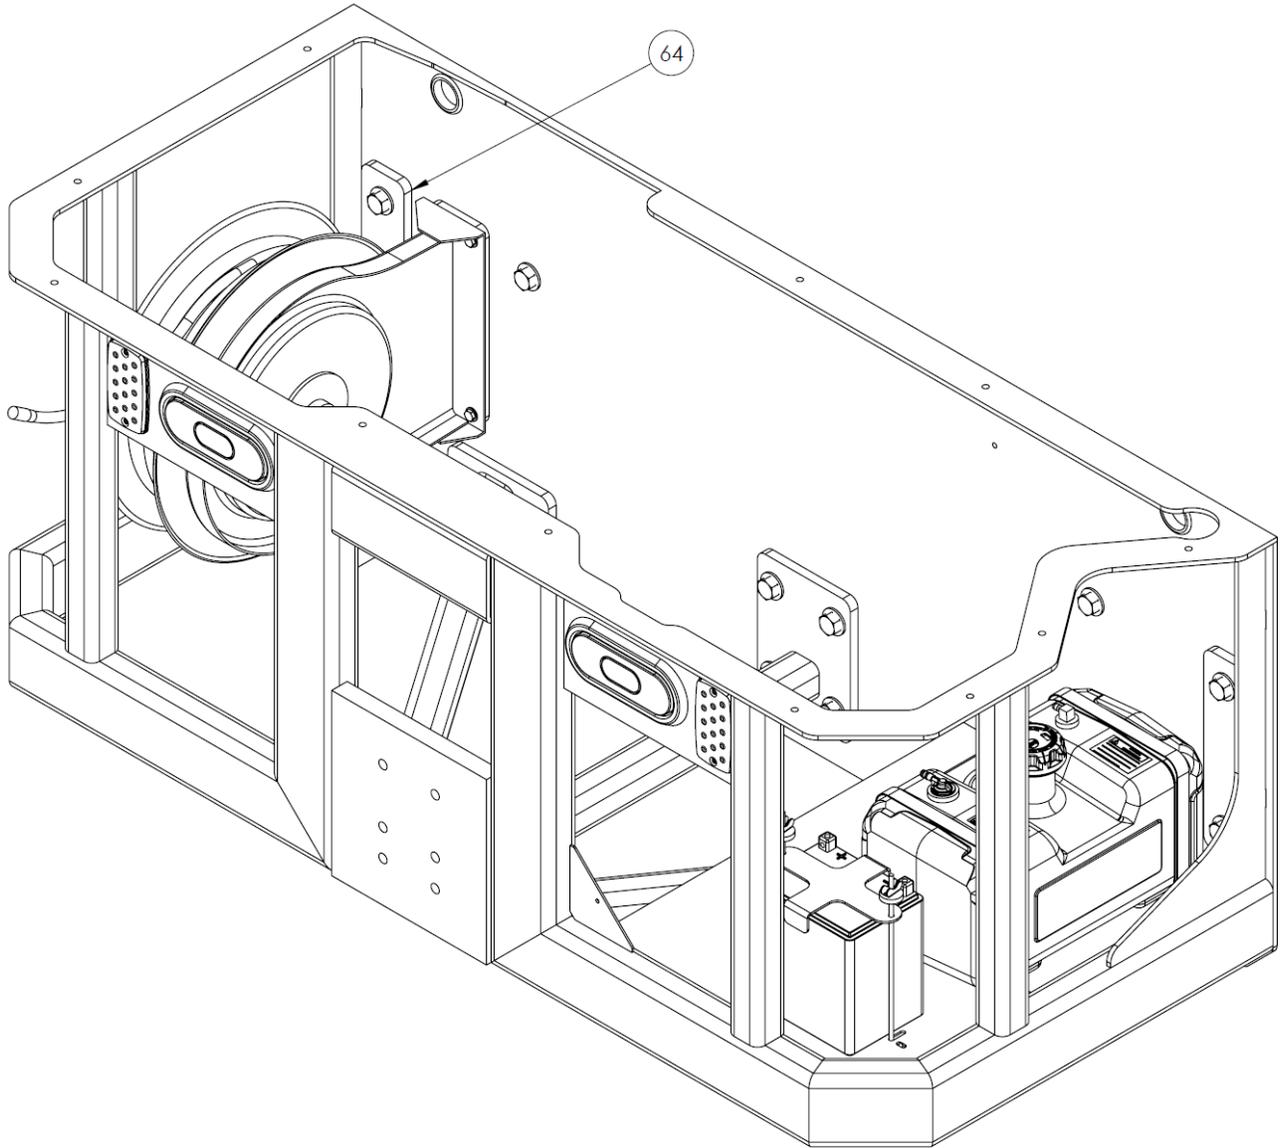


17.0 TAIL SHELF / COMPRESSOR (continued)

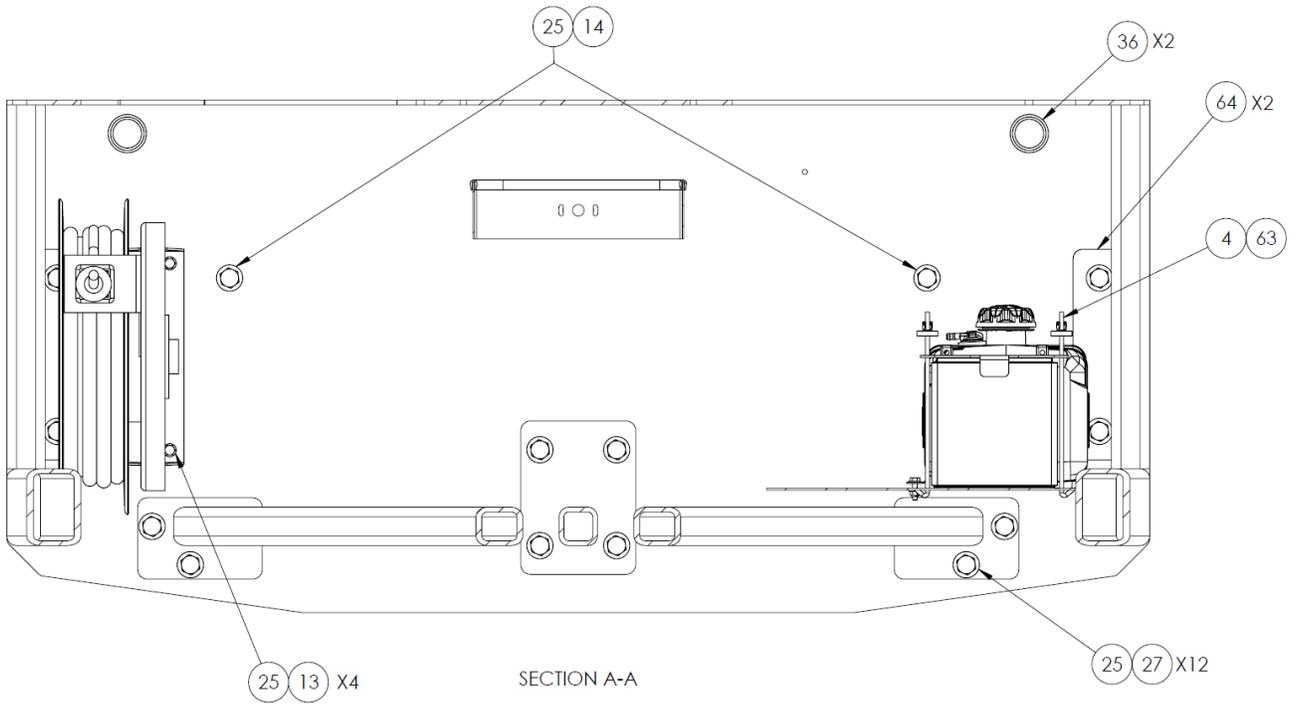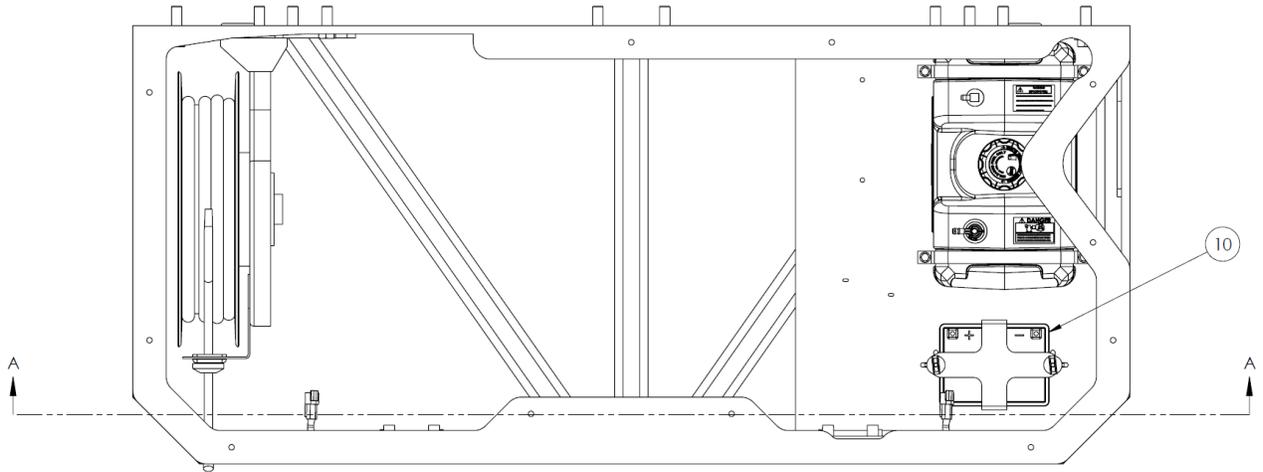


17.0 TAIL SHELF / COMPRESSOR (continued)

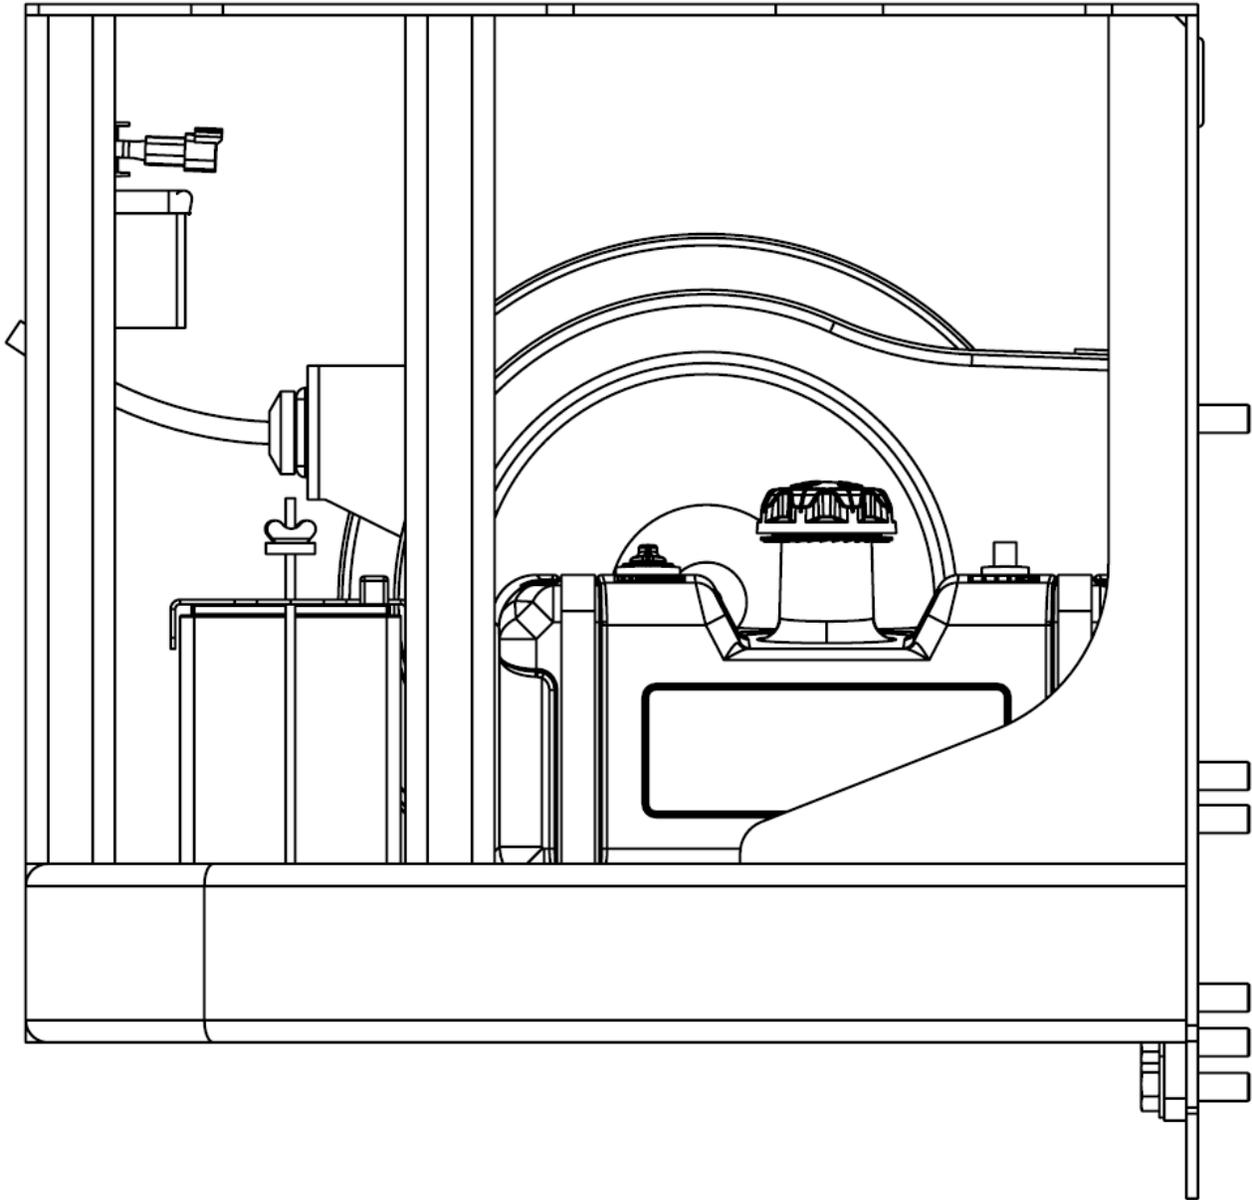

17.0 TAIL SHELF / COMPRESSOR (continued)

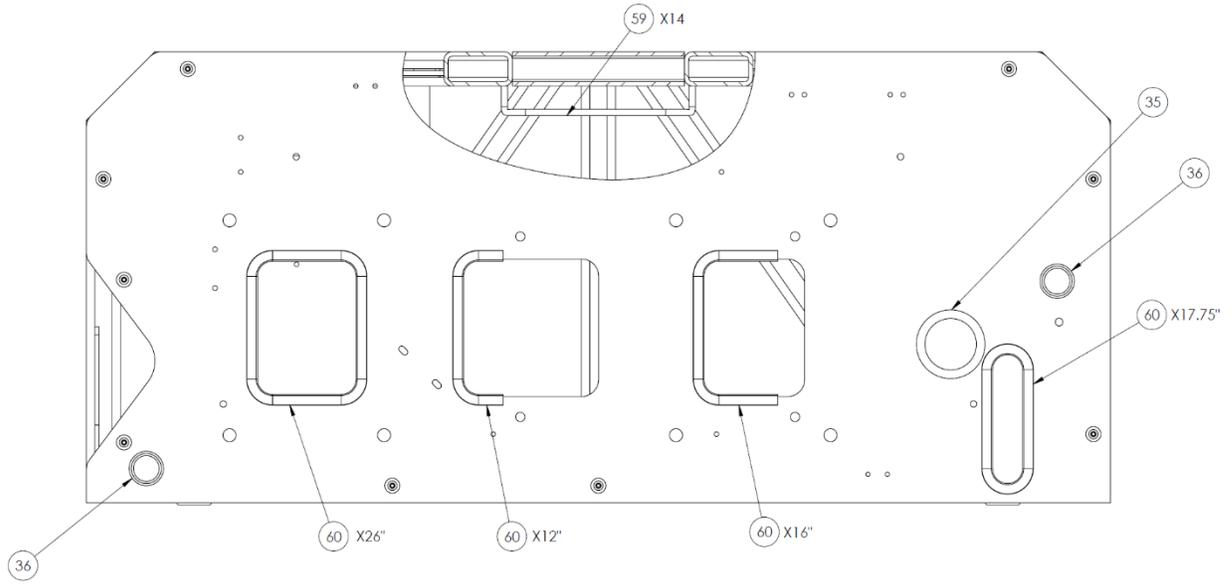

17.0 TAIL SHELF / COMPRESSOR (continued)

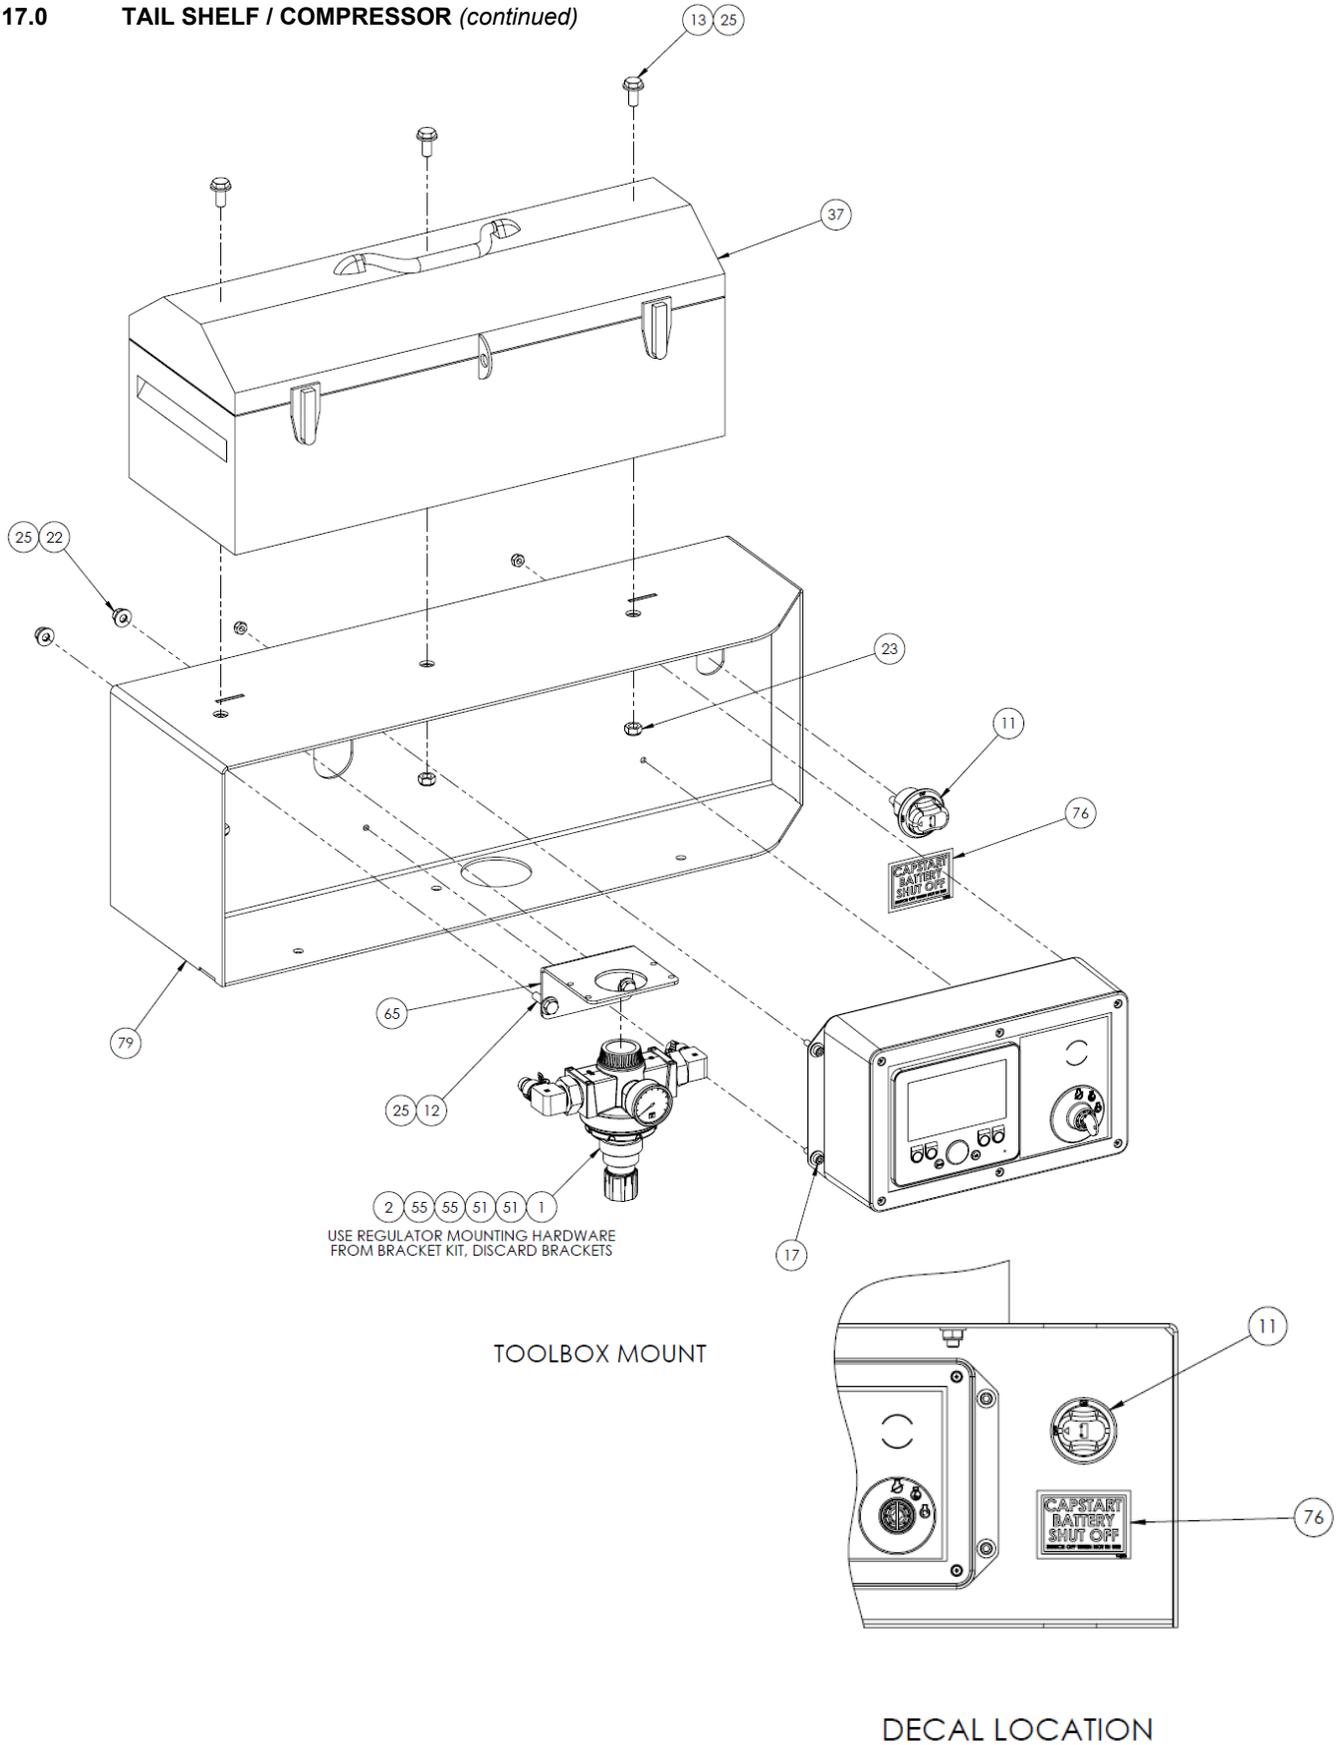



17.0 TAIL SHELF / COMPRESSOR (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	450A7210	REGULATOR	1
2	450A7224	MOUNTING BRACKET KIT (SET OF 2)	1
3	A-RTT12E-00287	TAIL LIGHT GROMMET	2
4	A-TT3-0002	BATTERY HOLD DOWN BOLTS	1
5	AE-OPT-0133	50' HOSE REEL 3/8" HOSE	1
6	AE-OPT-0147-16	CHECK/UNLOADER VALVE, 1/2 NPT	1
7	EC-3146-08	100A FUSE, MIDI/AMI	1
8	EC-3572-034	EXTENSION, SB350	1
9	EC-3573	HARNESS, REAR LIGHTS	2
10	EC-3594	BATTERY, 30AH	1
11	EC-3661	BATTERY SWITCH, 100A	1
12	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	25
13	G-1100-106506	BOLT, 5/16-24 X 3/4" LG. HEX HD GR 5	7
14	G-1100-110014	BOLT, 5/8-11 X 1-1/2" HEX HD GR 5	2
15	G-1150-102005	SCREW, #8-32 X 5/8" LG HEX HD MACHINE	2
16	G-1151-102005	SCREW, #8-32 X 5/8" SOCKET HD CAP	4
17	G-1151-103006	SCREW, #10-24 X 3/4" SOCKET HD CAP	4
18	G-1151-105220	SCREW, 1/4-20 X 2.0" LG SOCKET HD CAP	2
19	G-1154-106212	SCR, 5/16-18 SOC BUT HD CAP	12
20	G-1202-1020	STOPNUT, #8-32 ELASTIC	6
21	G-1202-1030	STOPNUT, #10-24 ELASTIC	4
22	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	2
23	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	15
24	G-1250-1030N	FLATWASHER, #10	4
25	G-1250-1050N	FLATWASHER, 1/4 NARROW	116
26	G-1420-109013	BOLT, 1/2-13 X 1-3/8" HEX HD GR 8	4
27	G-1420-110020	BOLT, 5/8-11 X 2" HEX HD GR 8	12
28	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	25
29	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	20
30	H-1426-01	HOSE CLAMP - .38" - .87"	5
31	H-1426-22	CLAMP, HOSE	3
32	H-1516-11	CLAMP, 2-EAR HOSE	1
33	H-2220-35-30.0	STRAP, VELCRO, 2" WIDE	1
34	H-3521-11	CLAMP, CUSHIONED LOOP 1"	12
35	H-4040-01	GROMMET, 3.0 IN. I.D.G3319 (65 DURO,SBR)	1
36	H-4040-02	GROMMET, 1.5 IN. I.D.G3061	6
37	H-4765	TOOLBOX, MODIFIED	1
38	H-4775	TANK, FUEL 3 GAL	1
39	H-4777	STRAP, FUEL TANK 3 GAL	2



17.0 TAIL SHELF / COMPRESSOR (continued)


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.


Item	Part Number	Description	Qty
40	H-5036	STARTING UNIT	1
41	H-5155	VIBRATION ISOLATOR	8
42	H-5159	AIR TANK, 30 GAL	1
43	H-5199	FUEL CAP, WITH GAUGE	1
44	K-5659	HARNESS, POWER	1
45	N-2021-16-S	ELBOW, MALE 45 DEG	1
46	N-2200-08-B	ELBOW, STREET	1
47	N-2200-10-S	ELBOW, STREET	1
48	N-2206-05-S	PLUG, HEX HEAD	1
49	N-2206-09-S	PLUG, HEX HEAD	1
50	N-2210-11-S	REDUCER, PIPE, 3/4 NPT X 1/4 NPT	1
51	N-2210-13-B	REDUCER, PIPE THREAD	3
52	N-2210-16-S	REDUCER, PIPE THREAD	2
53	N-2210-22-S	REDUCER, PIPE THREAD	2
54	N-2410-05	ELBOW, 90° MALE 3/8 BARB X 3/8 NPT	2
55	N-2410-06	ELBOW, 90 DEG MALE	2
56	N-2410-14	ELBOW, 90 DEG MALE	2
57	N-3226	CABLE TANK DRAIN	1
58	NVSP-05-025-CA	LMI FUSE HOLDER	1
59	NVSP-24-042-CA	METAL CORE EDGE TRIM - 1/8	14
60	NVSP-24-042-CB	METAL CORE EDGE TRIM - 1/4	72
61	NVSP-34-010-CA	6 IN OVAL COMBINATION LIGHT	2
62	PC-1017-02-200	VALVE, SAFTEY	1
63	S-4527-00	BATTERY TIE DOWN (P)	1
64	S-4537-00	PLATE, MOUNTING (P)	2
65	S-4538-00	REGULATOR MOUNT (P)	1
66	S-4555-00	FRAME, TOP PLATE (P)	1
67	TF-1038-48-34.0	ASSEMBLY, HOSE	1
68	TF-1080-06-28.0	HOSE, PUSH ON	1
69	TF-1080-06-36.0	HOSE, PUSH ON	1
70	TF-1080-06-41.0	HOSE, PUSH ON	1
71	TF-1152-01-100	HOSE, FUEL LINE	1
72	TF-1152-01-24.0	HOSE, FUEL LINE	1
49	TF-1152-01-45.0	HOSE, FUEL LINE	1
74	V-2780	LABEL, GASOLINE ONLY	1
75	V-2979	ETT, TP INSTRUCTIONS	1
76	V-3010	LABEL, BATTERY SWITCH	1
77	Z-12175-00	FRAME, ETT-XTP (P)	1
78	Z-12190-00	ETT CABLE HANGER (P)	2
79	Z-12244-00	TOOLBOX MOUNT (P)	1
80	Z-9826	ASY, TURN IND W/CONNECTOR	2

17.0 TAIL SHELF / COMPRESSOR (continued)

FUEL SCHEMATIC

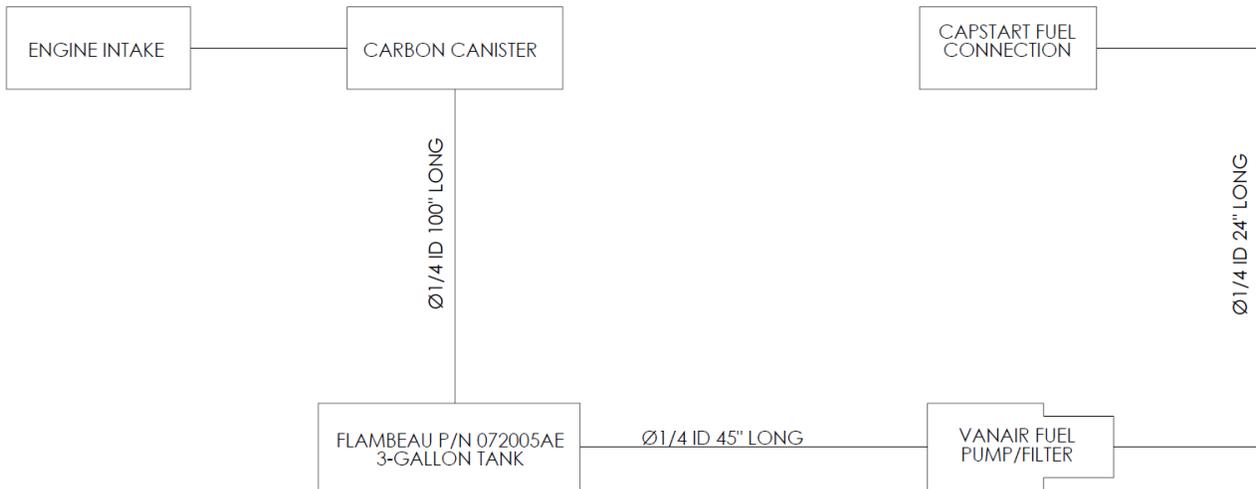


AIR SCHEMATIC

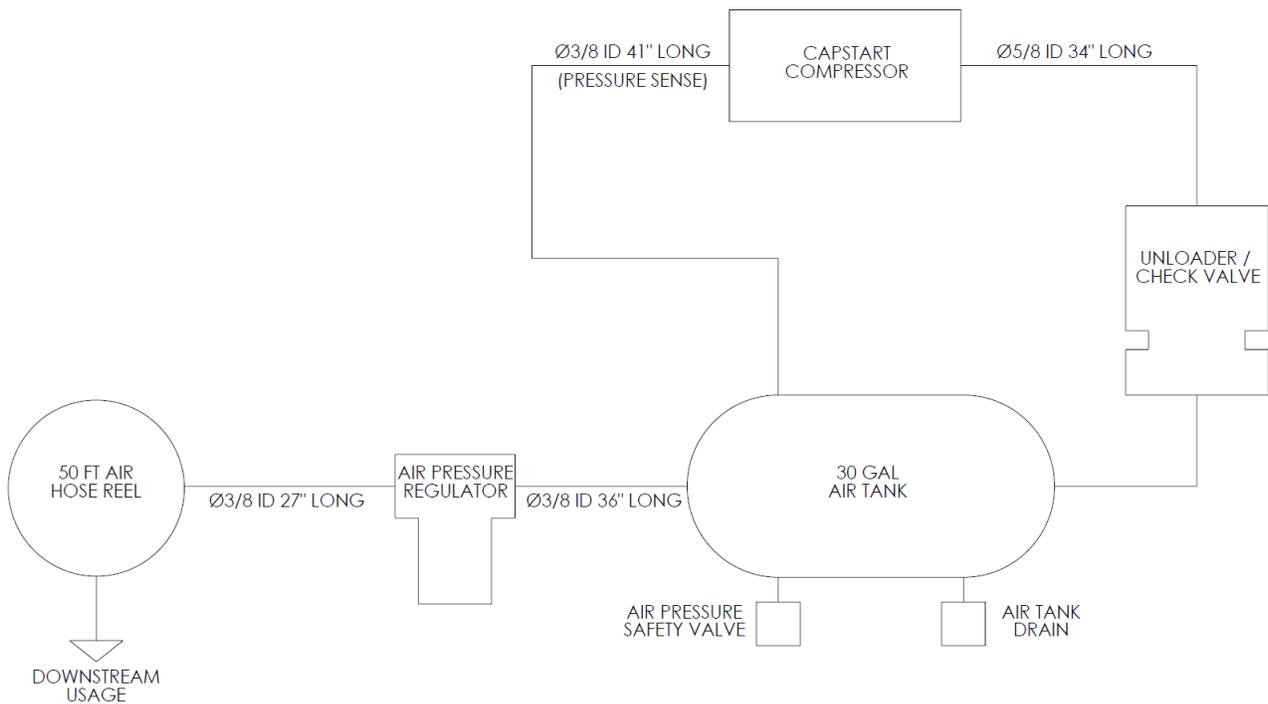


17.0 TAIL SHELF / COMPRESSOR (continued)

ELECTRICAL SCHEMATIC

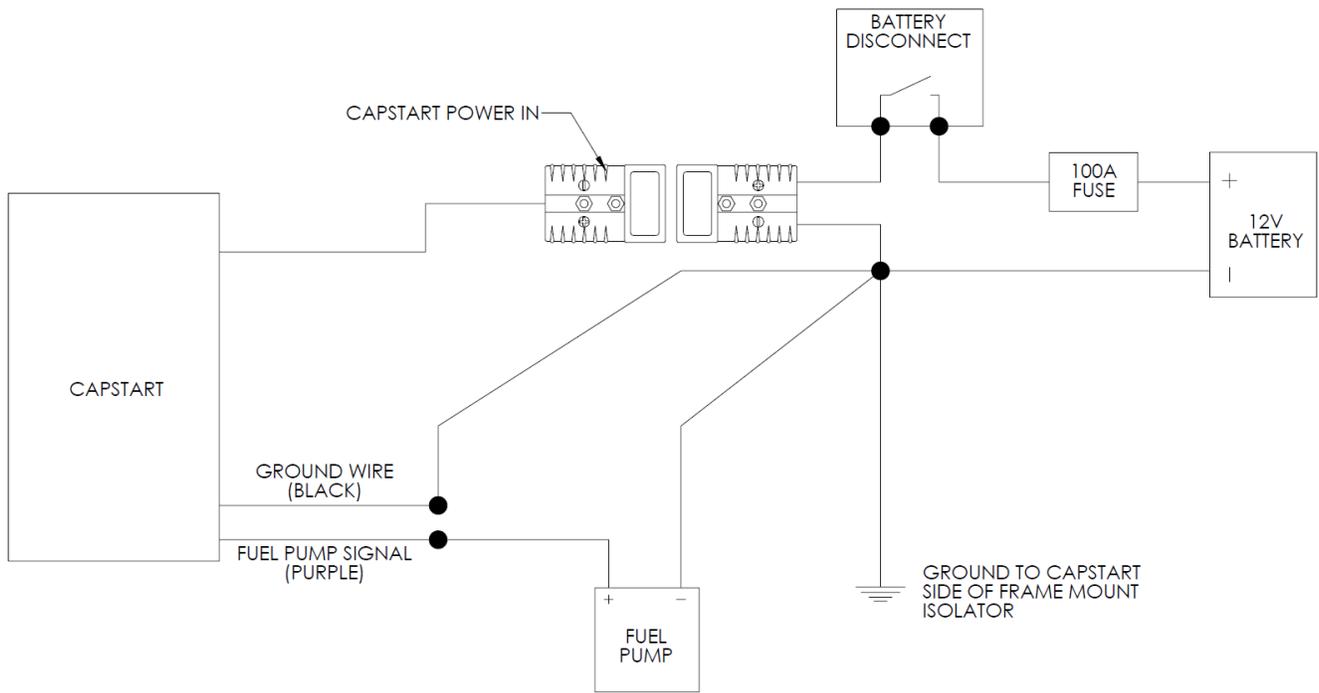

18.0 BALLAST ASSEMBLY & TIRE/RIM

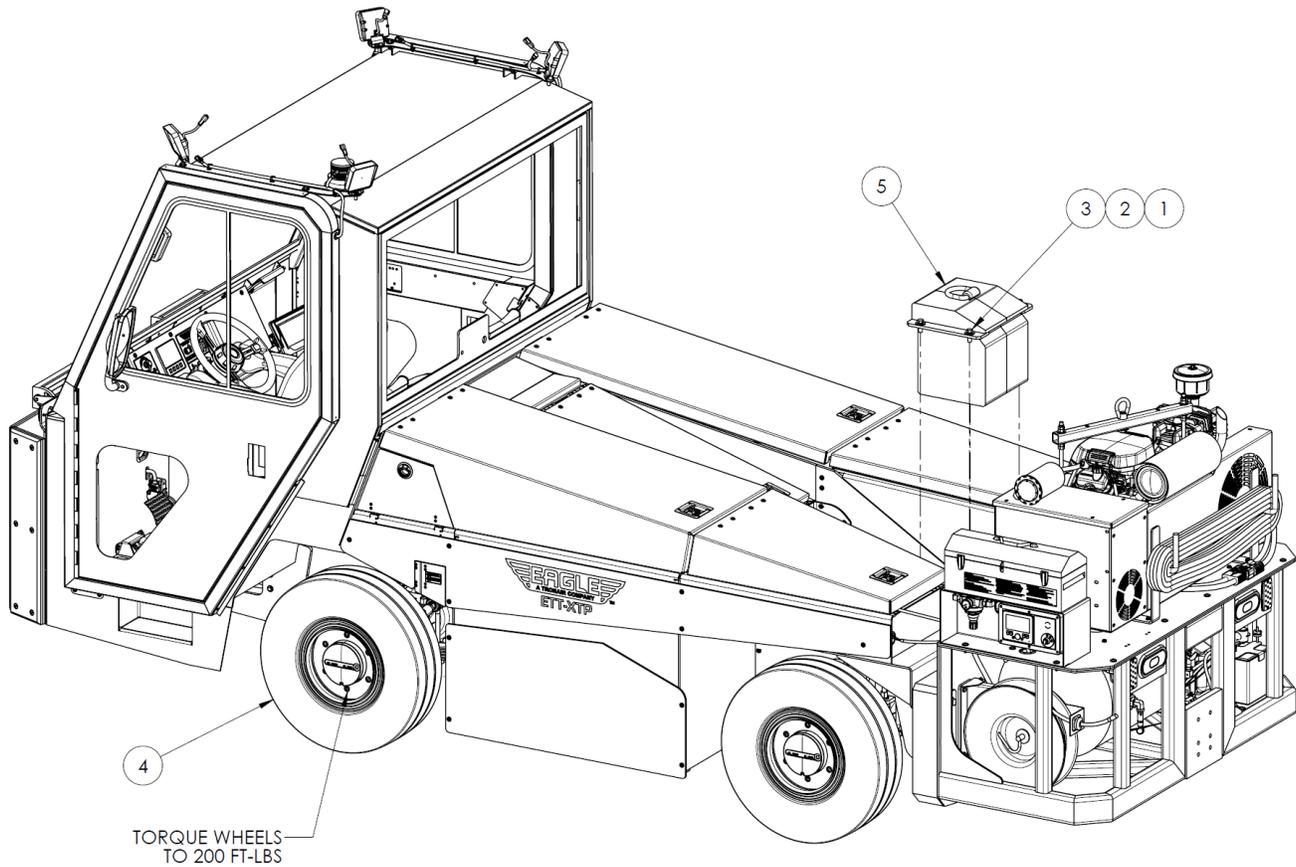

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1250-1090W	FLATWASHER, 1/2 WIDE	4
2	G-1251-1090R	LOCKWASHER, 1/2 REGULAR	4
3	G-1420-109014	BOLT, 1/2-13 X 1-1/2" HEX HD GR 8	4
4	Z-11795	ASY, TIRE AND RIM, FOAM, 700R12	4
5	Z-11951-00	WLD, REAR CENTER BALLAST (WP)	1

19.0 eTT-XTP FEATURES AND OPTIONS


19.1 CHARGER COMPATIBILITY OPTION A - GECI

DESCRIPTION:


Standard charger prep.

COMPATIBILITY NOTES:


Only applicable with Aqua Diamond charger (EC-3771)

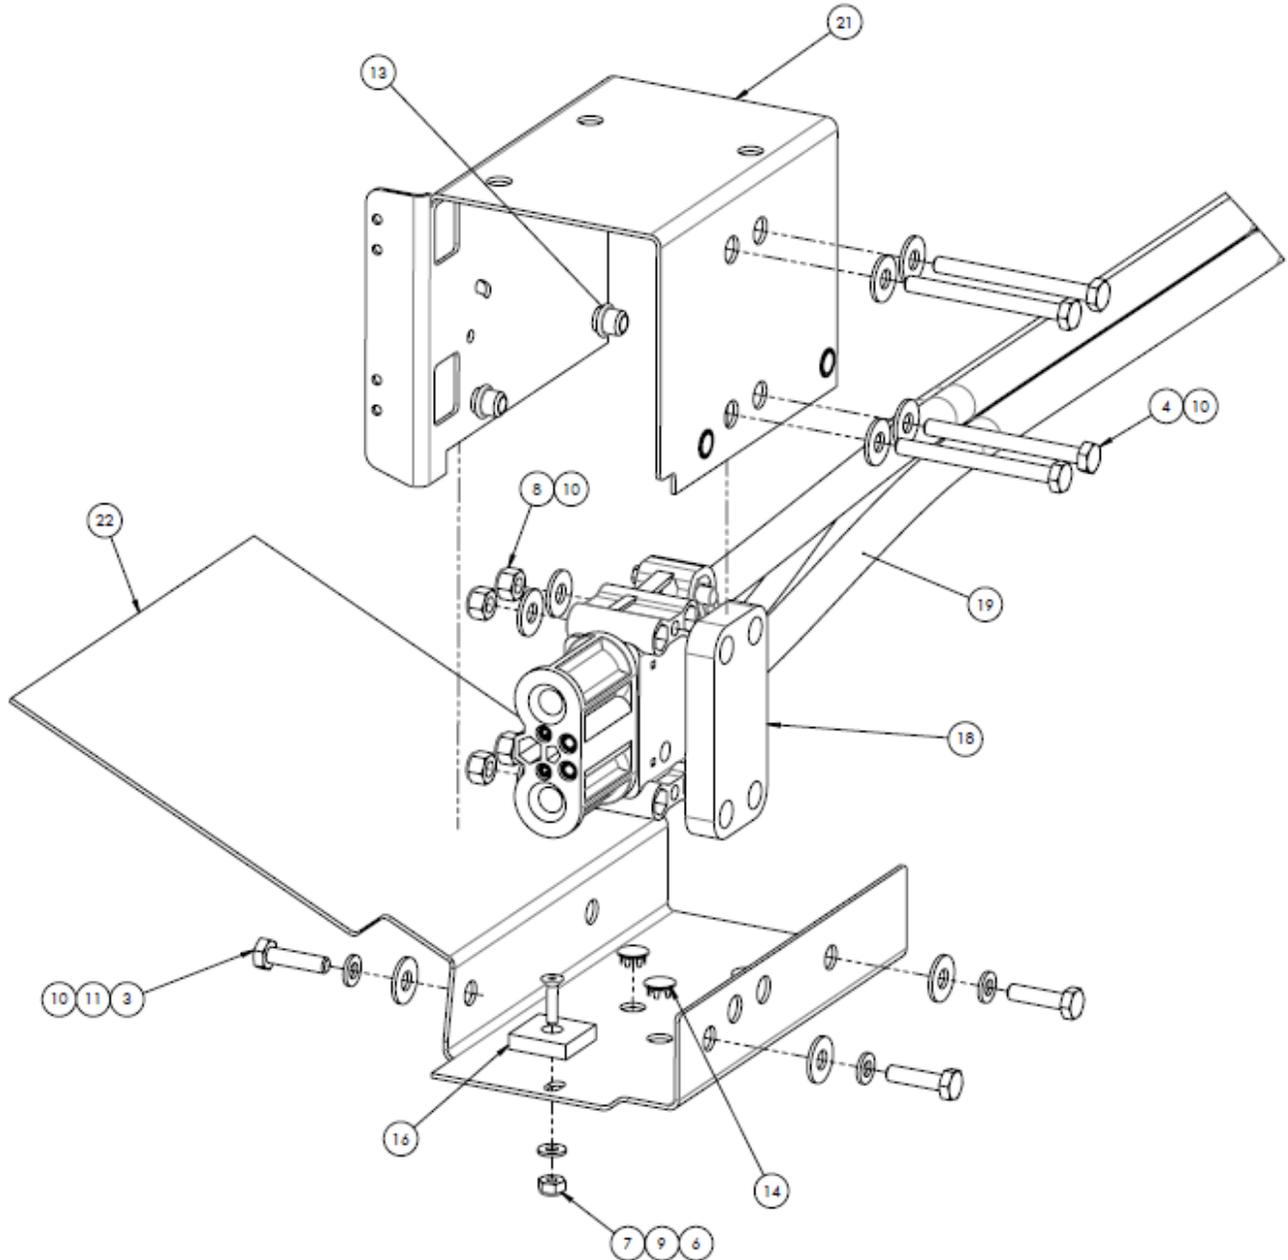

19.1 CHARGER COMPATIBILITY OPTION A – GECI (continued)

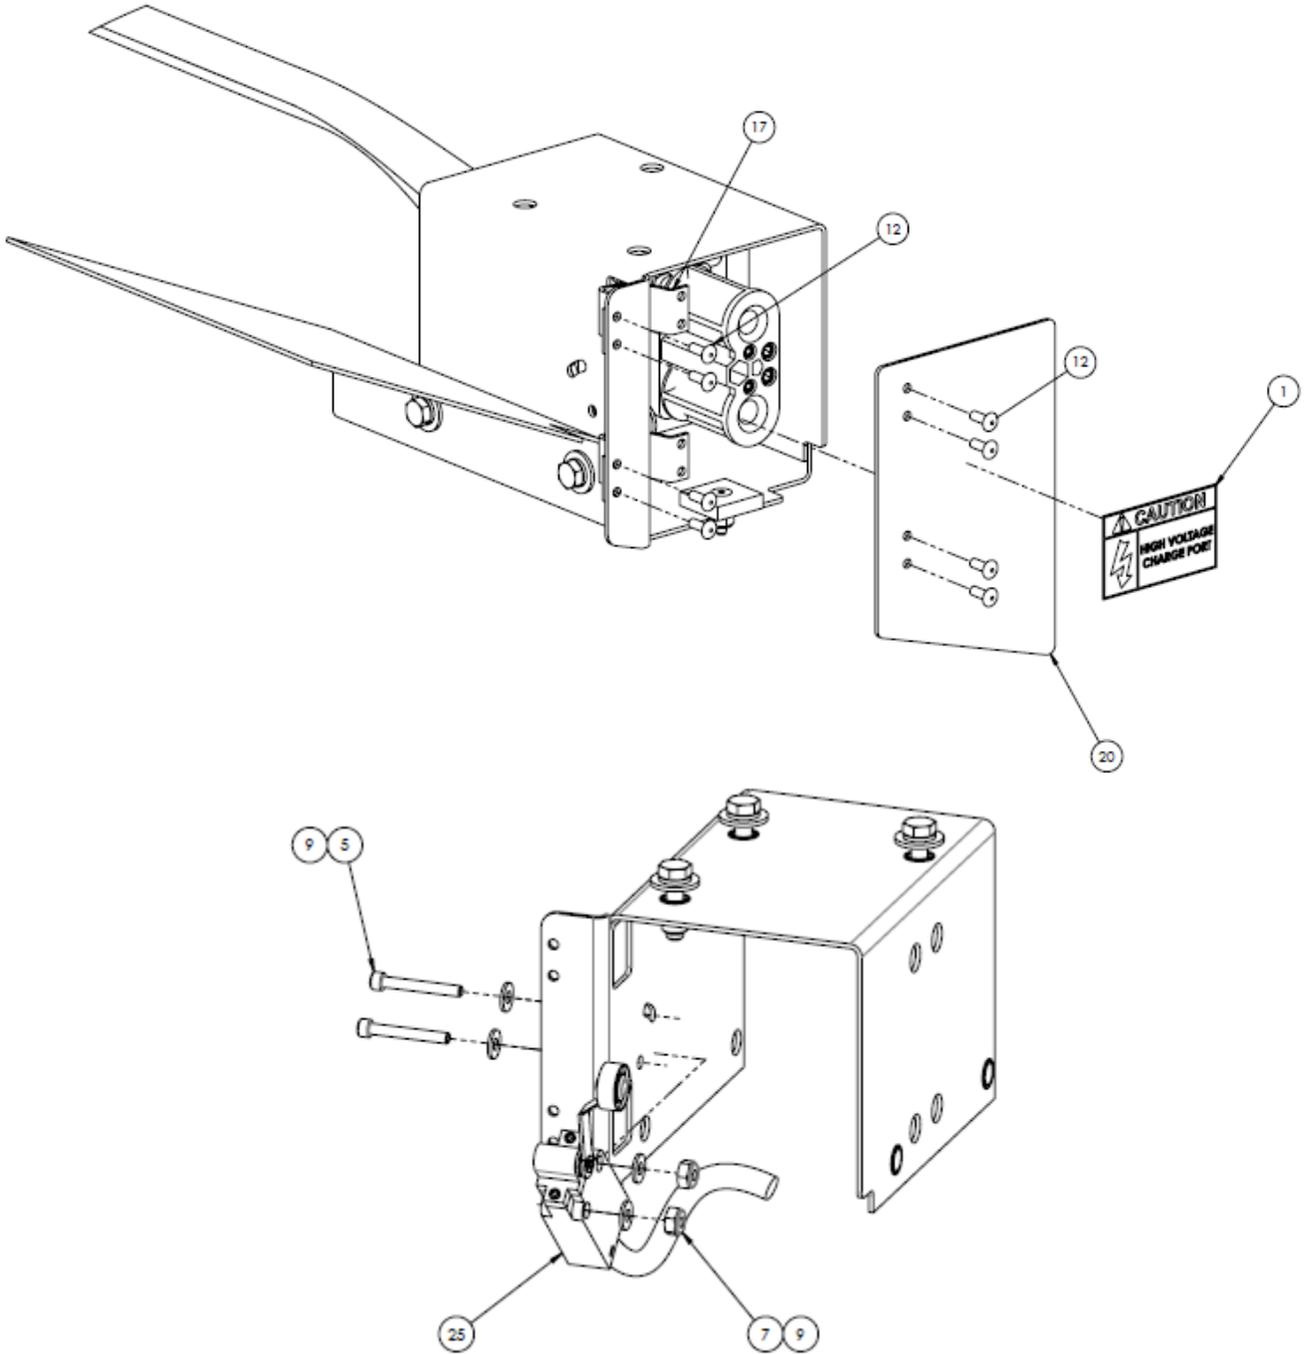

19.1 CHARGER COMPATIBILITY OPTION A – GECl (continued)

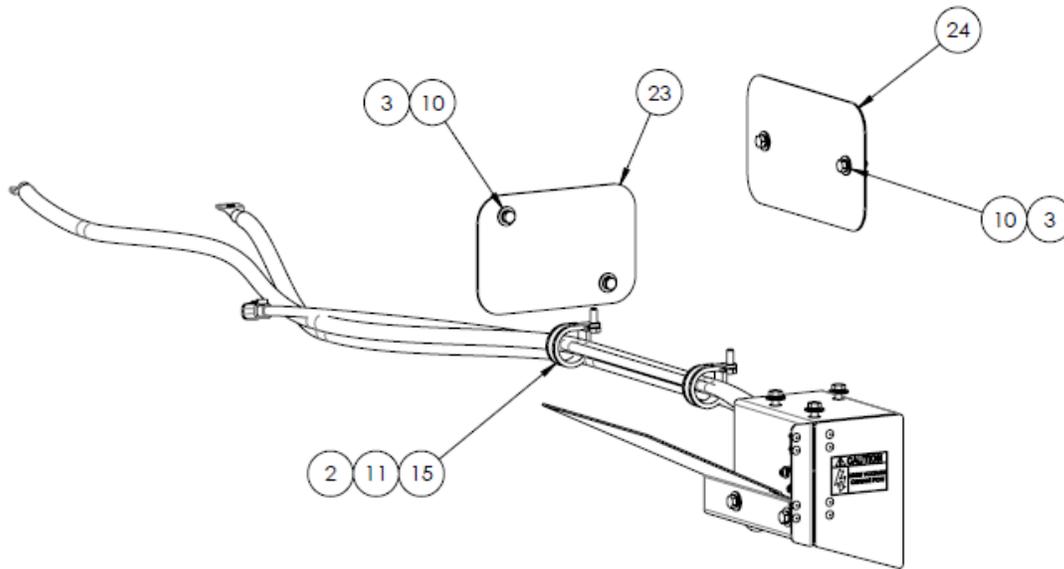

Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ETT12-00494	ETT12 BATTERY CHARGE DECAL	1
2	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	2
3	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	11
4	G-1100-105026	BOLT, 1/4-20 X2- 3/4" LG HEX HD GR 5	4
5	G-1151-102012	SCREW, #8-32 X 1-1/4" SOCKET HD CAP	2
6	G-1152-102110	SCR, SOC FLT HD 82 DEG CAP	1
7	G-1202-1020	STOPNUT, #8-32 ELASTIC	3
8	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
9	G-1250-1020N	FLATWASHER, #8 NARROW	5
10	G-1250-1050W	FLATWASHER, 1/4 WIDE	19
11	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	13
12	G-1351-13-SS	RIVET, 5/32 OPEN-END SS	8
13	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	7
14	H-2056-02	METAL SNAP-IN PANEL PLUGS	3
15	H-3521-15	CLAMP, CUSHIONED LOOP 1 1/4"	2
16	H-4844	MAGNET, CHARGE JACK DOOR	1
17	H-4874	HINGE, BLIND	2
18	J-9031-00	PLATE, CHARGE JACK SPACER	1
19	K-5780	CABLE KIT, EURO CHARGER	1
20	S-4092-00	DOOR, CHARGE JACK (P)	1
21	S-4819-00	PANEL, CHARGE JACK	1
22	S-4820-00	CRUD DEFLECTOR, CHARGE JACK (P)	1
23	S-4822-00	PLATE, COVER STORAGE COMP (P)	1
24	S-4823-00	PLATE, COVER STORAGE COMP (P)	1
25	Z-11091	ASSY, LIMIT SW WITH CONN	1

19.2 CHARGER COMPATIBILITY OPTION B – ON-BOARD

DESCRIPTION:
Onboard charger

COMPATIBILITY NOTES:
Only applicable with J-1772 charger



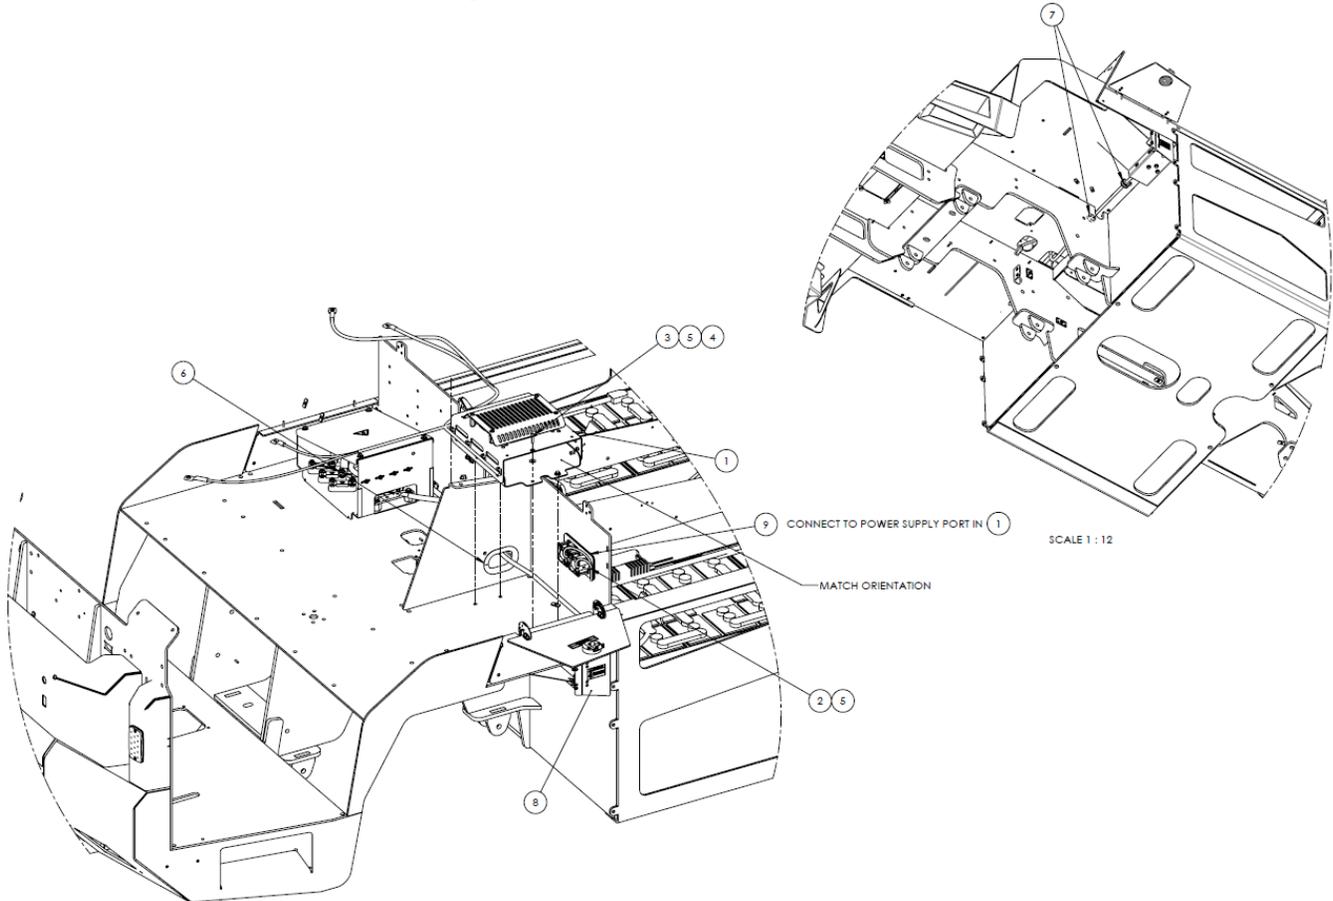


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	EC-3767	ON-BOARD CHARGER	1
2	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	4
3	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	4
4	G-1250-1050W	FLATWASHER, 1/4 WIDE	4
5	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	8
6	H-2990-010.50	TRIM, VINYL EDGE 10.50" LONG	1
7	H-3521-15	CLAMP, CUSHIONED LOOP 1 1/4"	2
8	Z-12664	ASSY, CHARGE JACK SUB	1
9	Z-12710	ASSY, COOLING FANS	1

19.2 CHARGER COMPATIBILITY OPTION B - ON-BOARD (continued)

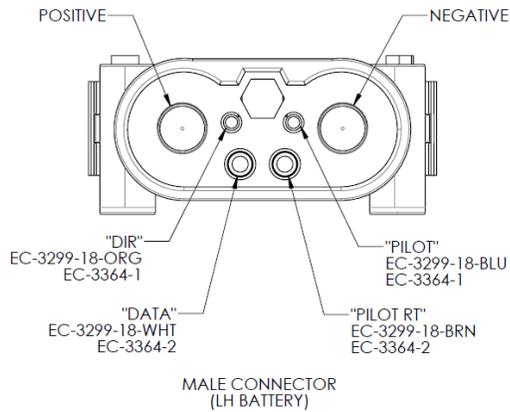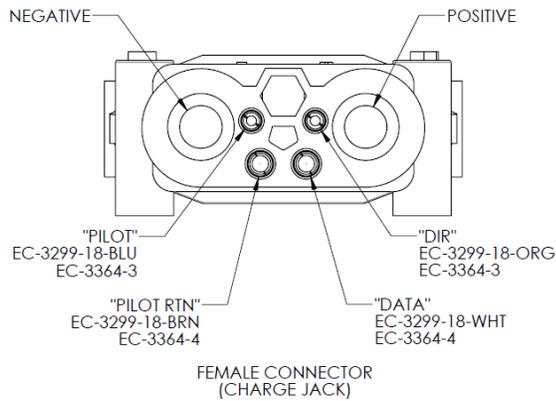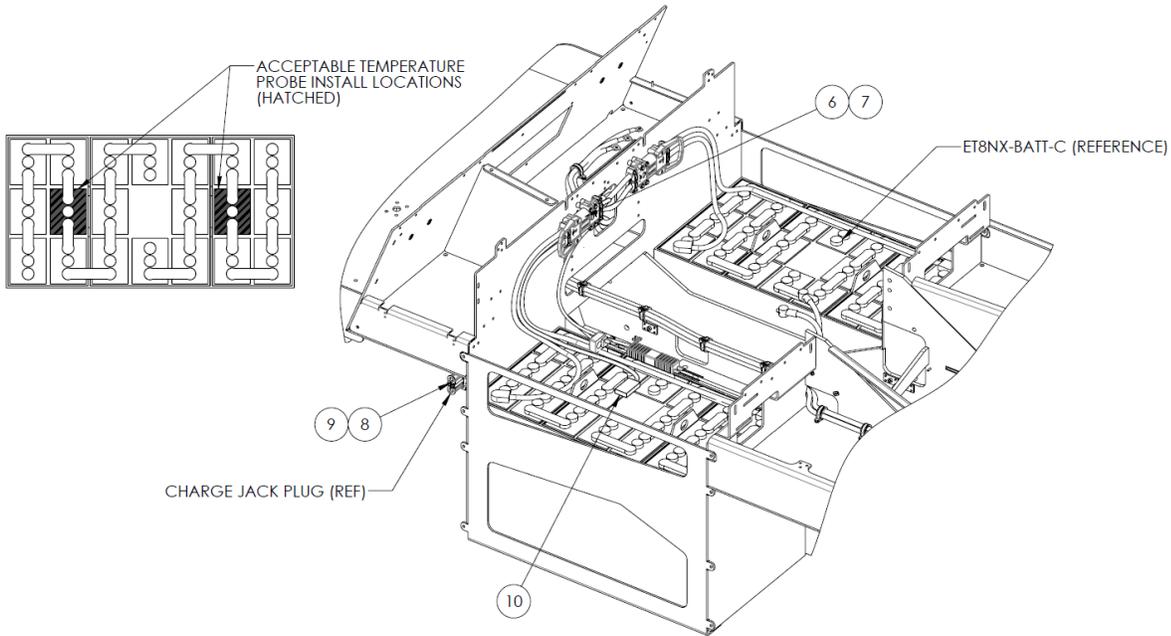

9 8

FEMALE CONNECTOR (CHARGE JACK)	
DESC.	TERMINAL P/N
PILOT	EC-3364-3
DIR	EC-3364-3
PILOT RTN	EC-3364-4
DATA	EC-3364-4

1 2 3 4 5

EC-3299-18-BLU (BLUE, 18AWG), 60" WIRE LENGTH

EC-3299-18-ORG (ORANGE, 18AWG) 60" WIRE LENGTH


EC-3299-18-BRN (BROWN, 18AWG) 60" WIRE LENGTH

EC-3299-18-WHT (WHITE, 18AWG) 60" WIRE LENGTH

6 7

MALE CONNECTOR (LH BATTERY CONNECTOR)	
DESC.	TERMINAL P/N
PILOT	EC-3364-1
DIR	EC-3364-1
PILOT RTN	EC-3364-2
DATA	EC-3364-2

20.0 IGNITION FEATURE
20.1 KEYED IGNITION OPTION A

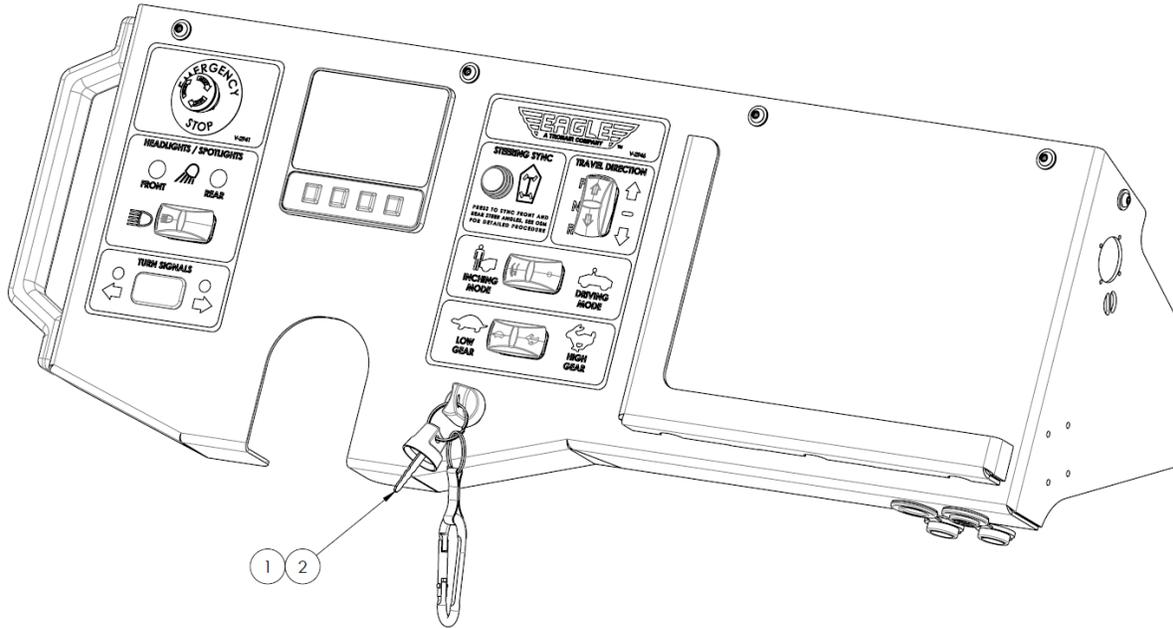


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	H-4725	CARABINER, EAGLE KEYCHAIN	1
2	NVSP-05-005-CA	IGNITION SWITCH, 3-POS, KEYED	1

20.2 KEYLESS IGNITION OPTION B

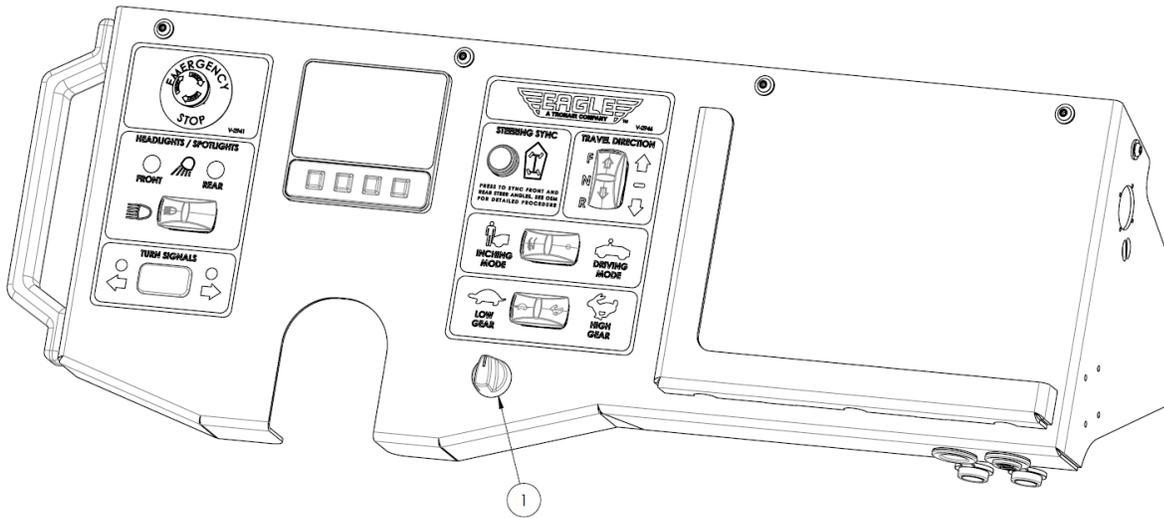


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	NVSP-05-005-CB	KEYLESS IGNITION SWITCH, 3 POS	1

21.0 **BATTERY FEATURE**
21.1 OPTION A - 510 LEAD ACID BATTERY KIT

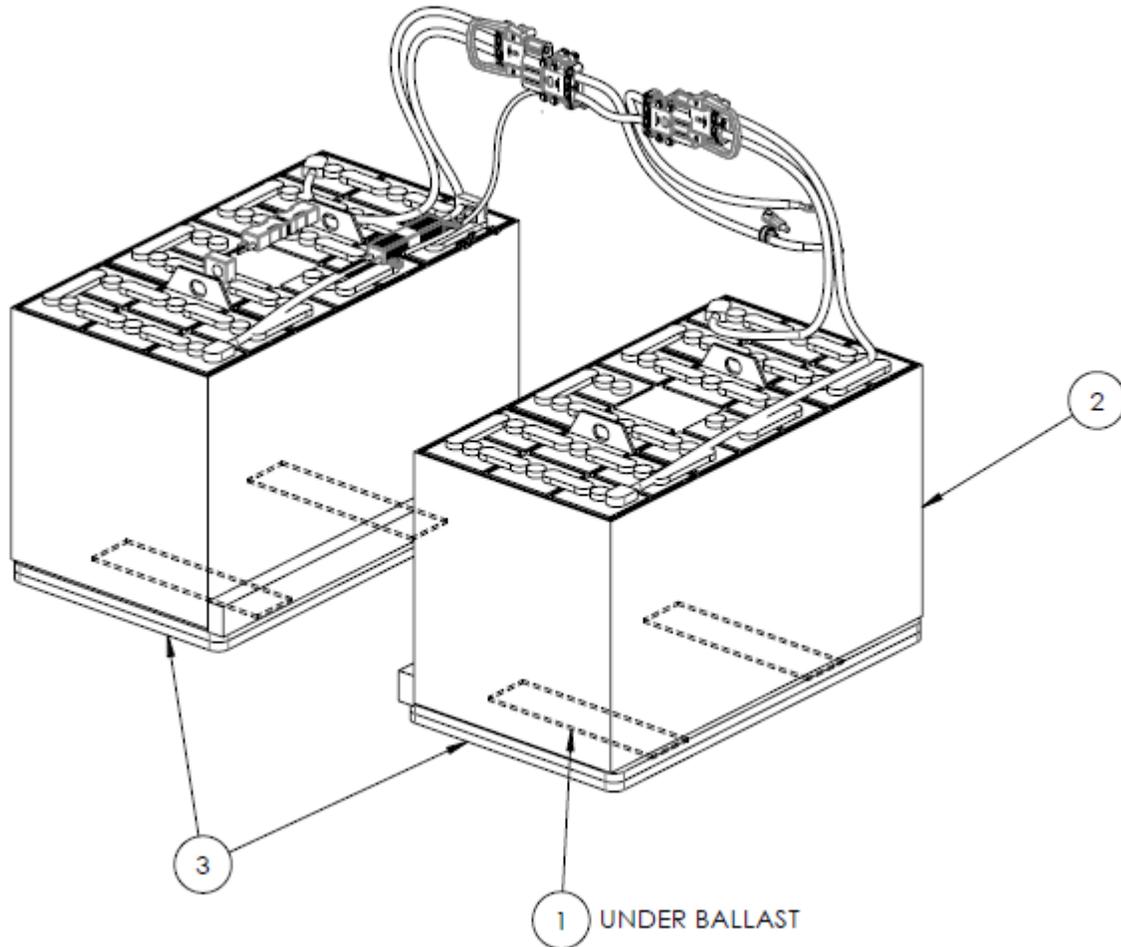


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ES12-0448	EPDM RUBBER PAD, ADHESIVE BACKED	512
2	K-5788	KIT, BATTERY LEADACID	1
3	Z-12255-00	BALLAST, UNDER-BATTERY (P)	2


21.2 OPTION B - 420 AH LITHIUM BATTERY

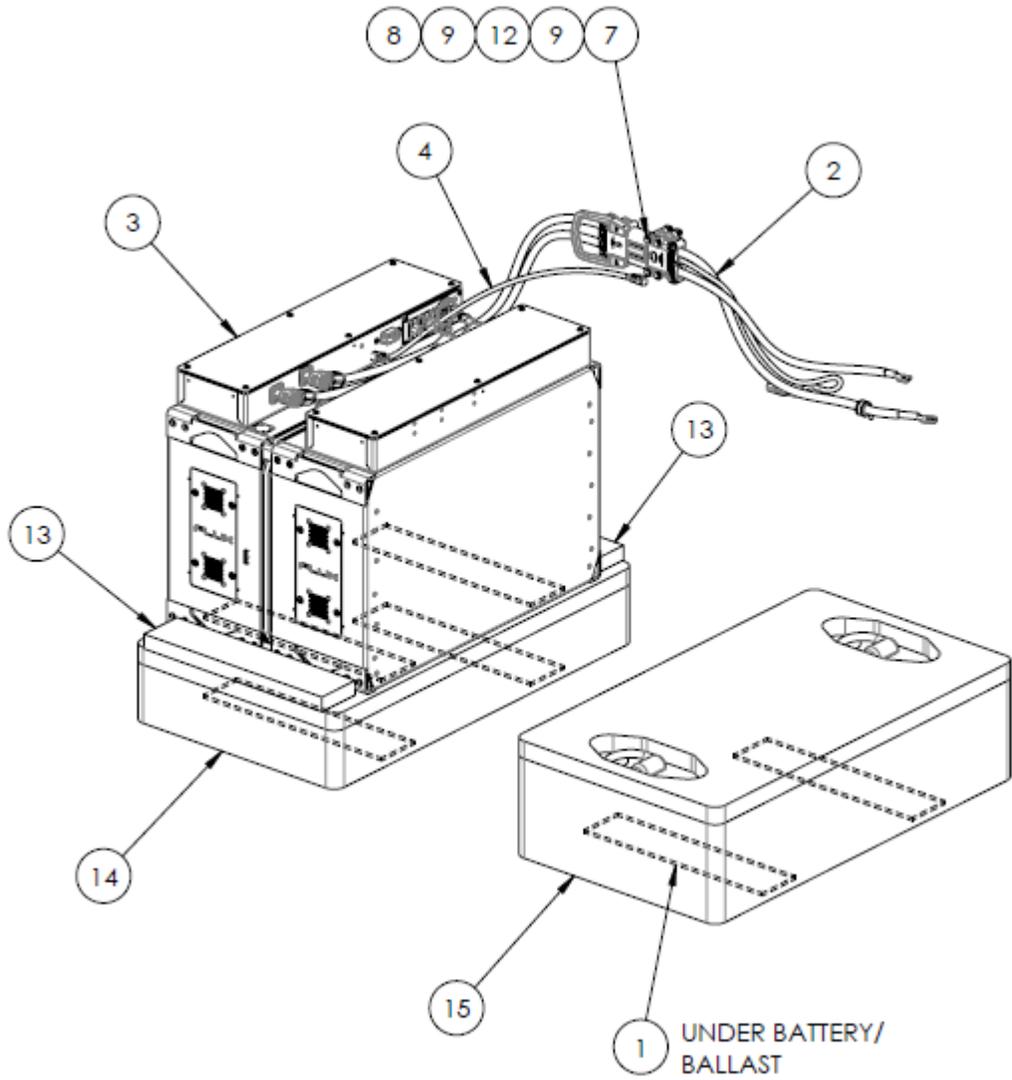


21.2 OPTION B - 420 AH LITHIUM BATTERY (continued)

SECURE POWER CABLE
TO INPUT LUG OF MAIN CONTACTOR



SECURE GROUND CABLE
TO BUSBAR USING EXISTING
HARDWARE

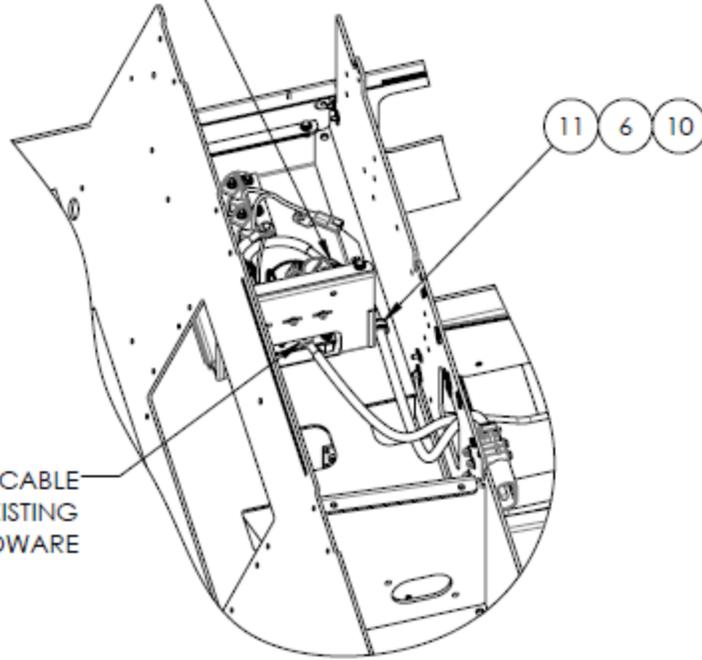

SECURE TO FRONT OF BATTERY
COMPARTMENT USING SPACERS
AS SHOWN

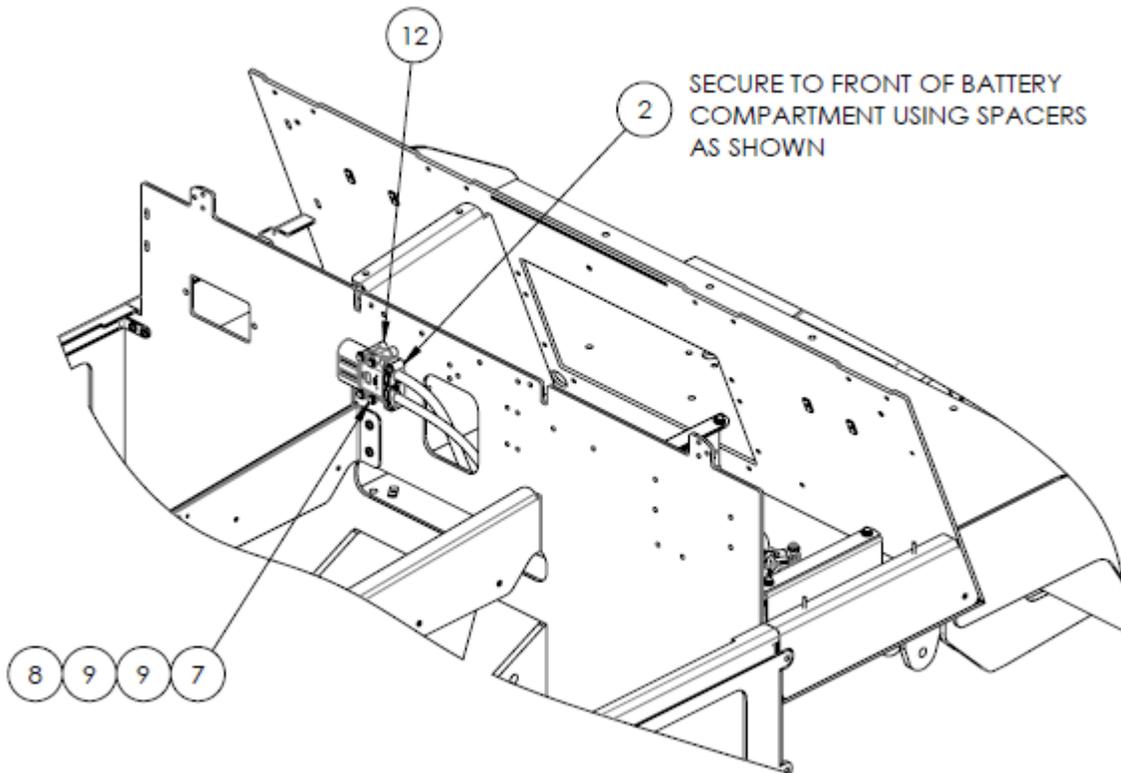


21.2 OPTION B - 420 AH LITHIUM BATTERY (continued)

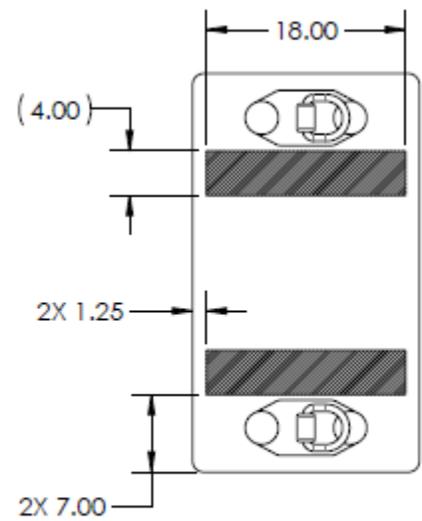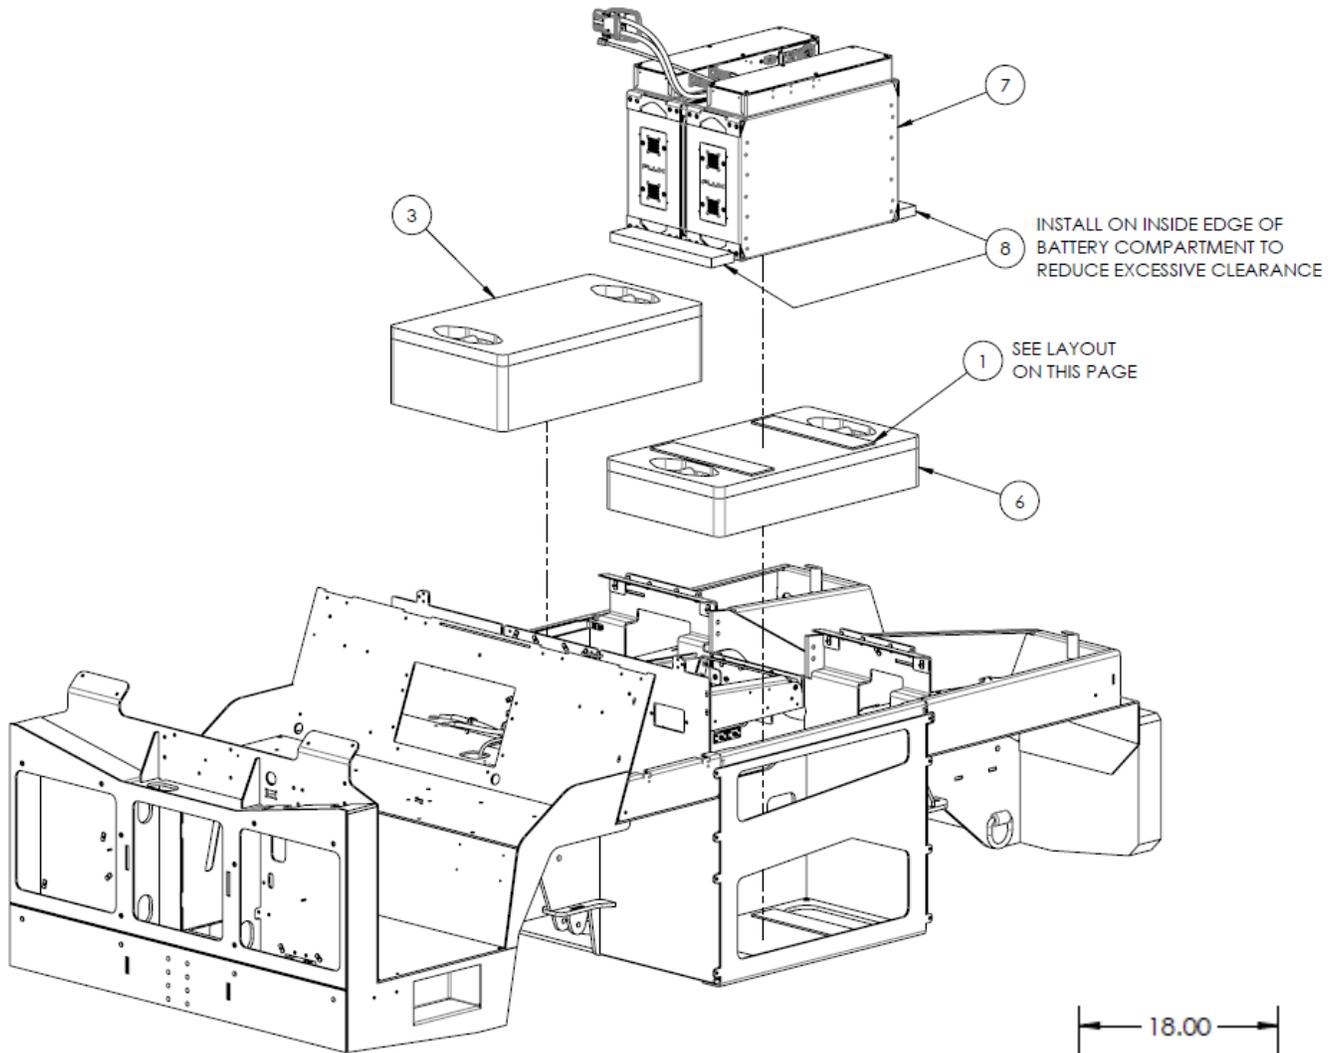

BATTERY PAD LAYOUT -
BALLAST BLOCKS

21.2 OPTION B - 420 AH LITHIUM BATTERY (continued)

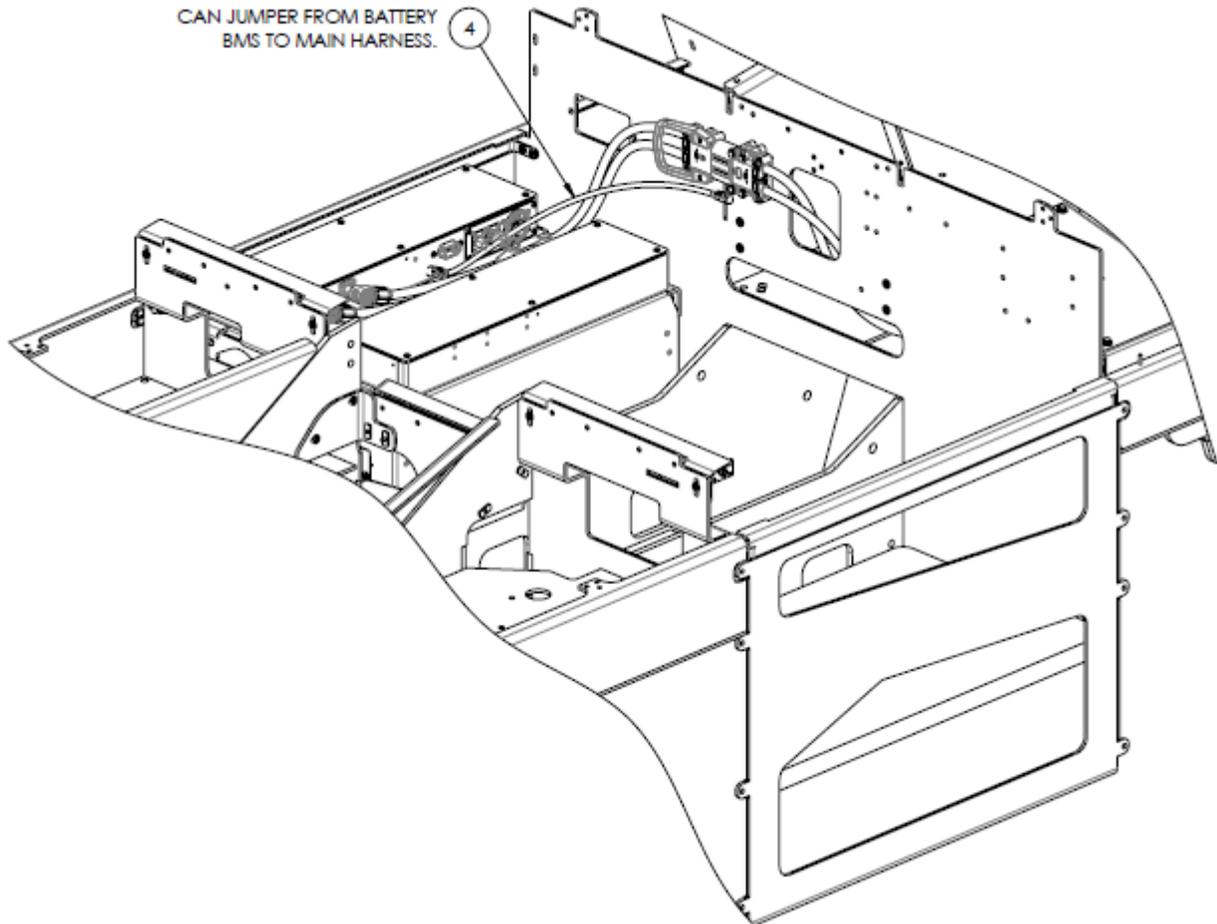


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ES12-0448	EPDM RUBBER PAD, ADHESIVE BACKED	432
2	EC-3405	BATTERY CABLE	1
3	EC-3555	BATTERY 420AH, LITHIUM	1
4	EC-3566	HARNESS, BATTERY CAN	1
5	EC-3780	BATTERY CABLE, SINGLE LITHIUM	1
6	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	1
7	G-1100-105026	BOLT, 1/4-20 X 2-3/4" LG HEX HD GR 5	4
8	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
9	G-1250-1050W	FLATWASHER, 1/4 WIDE	8
10	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	1
11	H-3521-09	CLAMP, CUSHIONED LOOP 7/8"	1
12	H-4566-04	SPACER, 1/4 ID X 5/8 OD X 1/2" LG STL	4
13	H-5145	UHMW SPACER	2
14	Z-12259-00	BALLAST, UNDER-BATTERY (P)	1
15	Z-12260-00	BALLAST, UNDER-BATTERY (P)	1


21.3 OPTION C - CUSTOMER FURNISHED LEAD ACID BATTERY

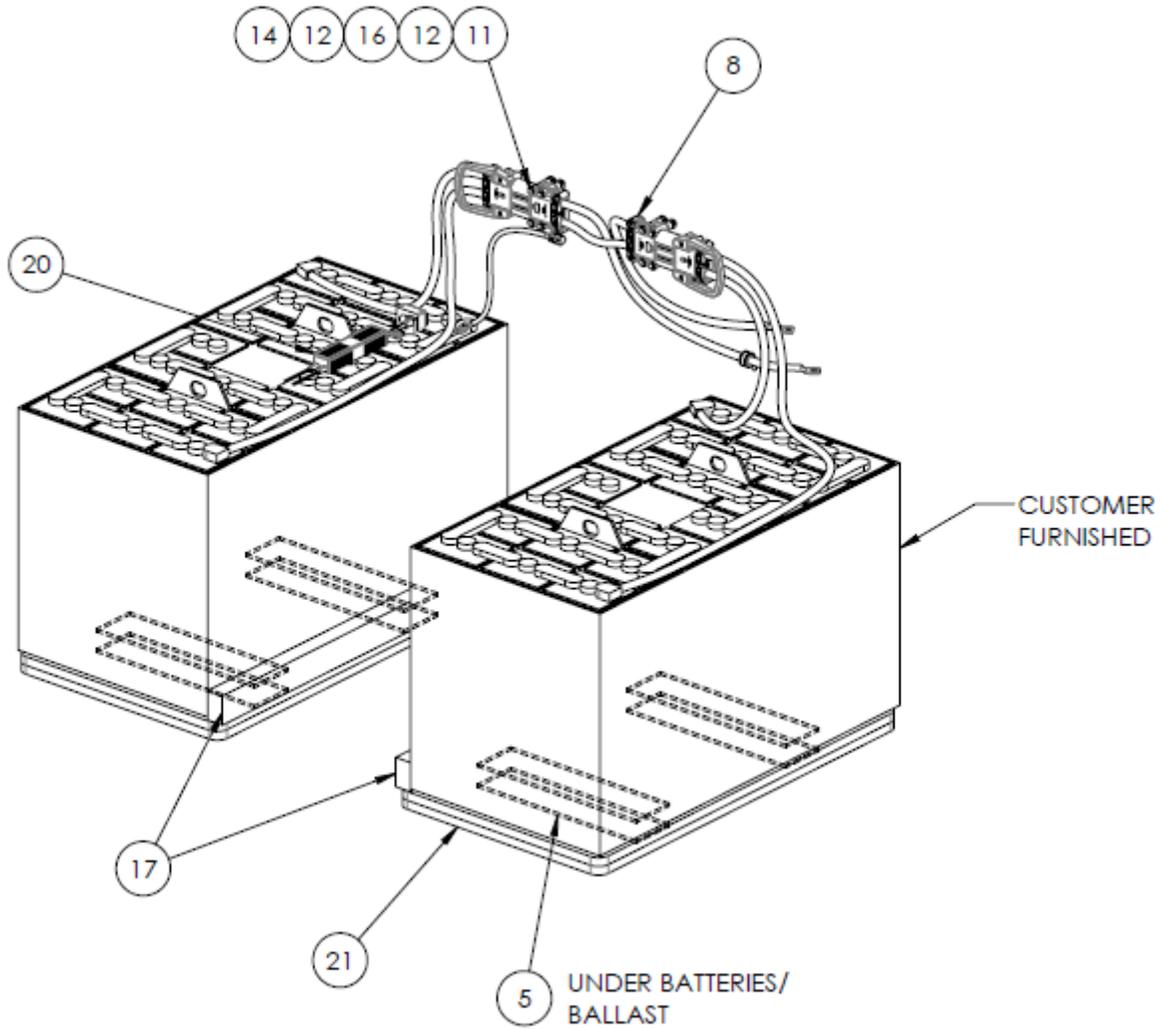

21.3 OPTION C - CUSTOMER FURNISHED LEAD ACID BATTERY (continued)


SECURE POWER CABLE
TO INPUT LUG OF MAIN CONTACTOR

SECURE GROUND CABLE
TO BUSBAR USING EXISTING
HARDWARE

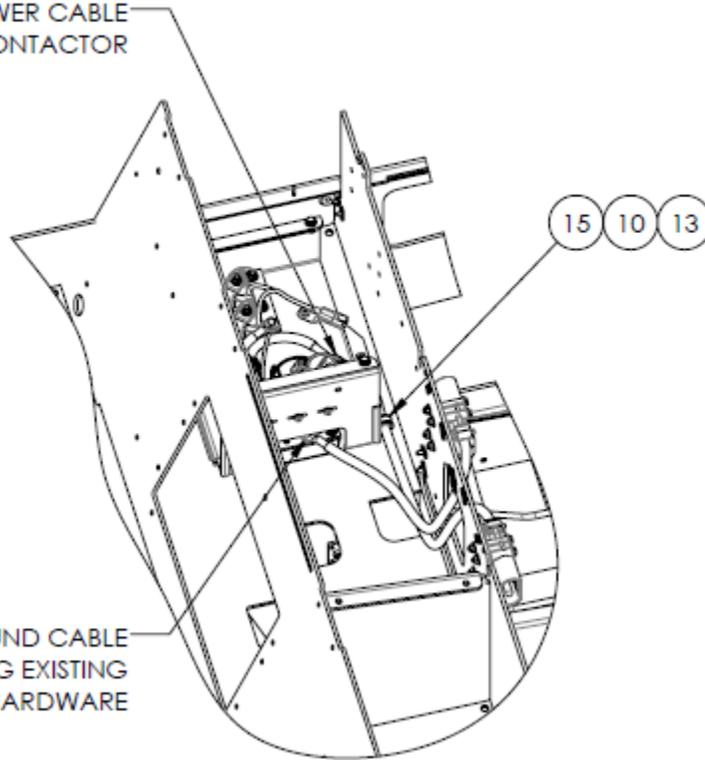



POSITIVE OUTPUT TO
FUSE/CONTACTOR PANEL

SECURE TO FRONT OF BATTERY
COMPARTMENT USING SPACERS
AS SHOWN

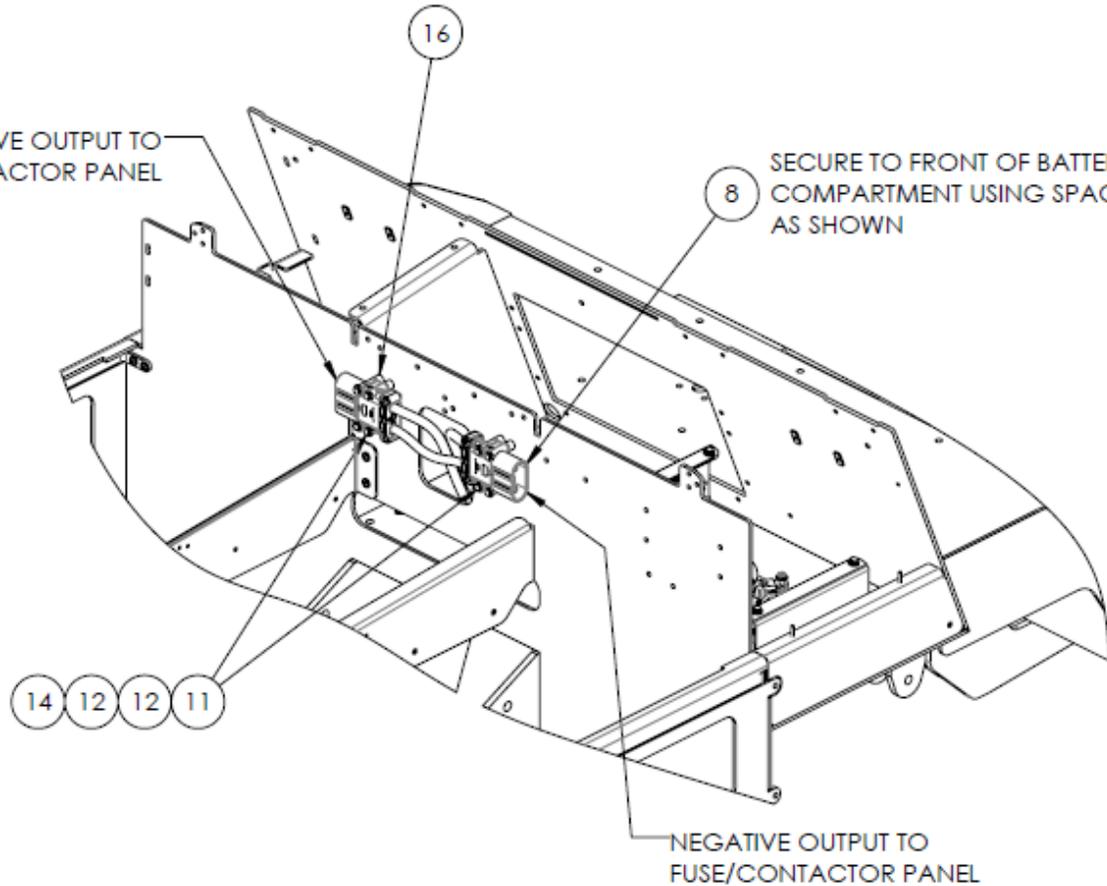


NEGATIVE OUTPUT TO
FUSE/CONTACTOR PANEL

21.3 OPTION C - CUSTOMER FURNISHED LEAD ACID BATTERY (continued)

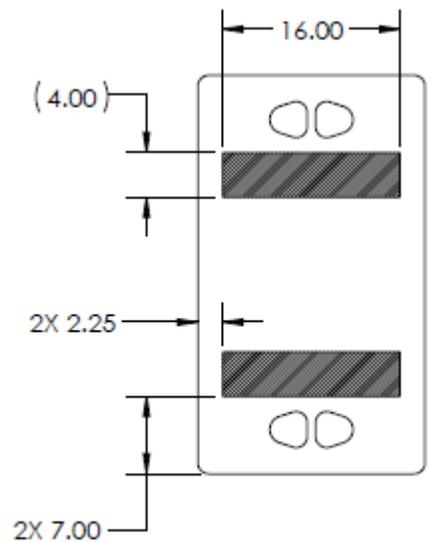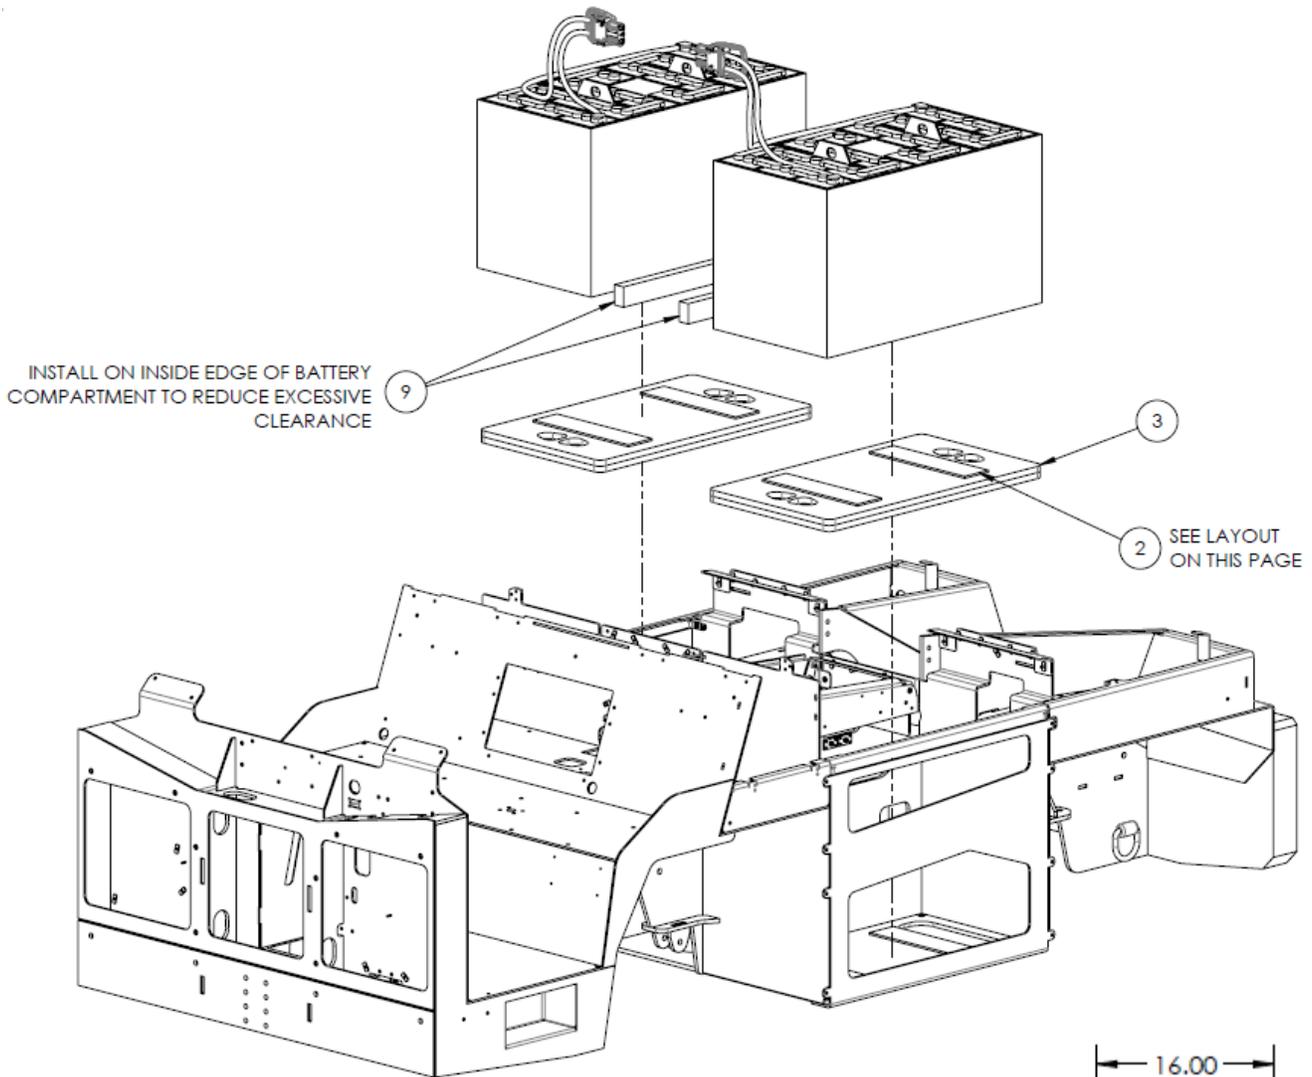

BATTERY PAD LAYOUT -
BALLAST BLOCKS

21.3 OPTION C - CUSTOMER FURNISHED LEAD ACID BATTERY (continued)

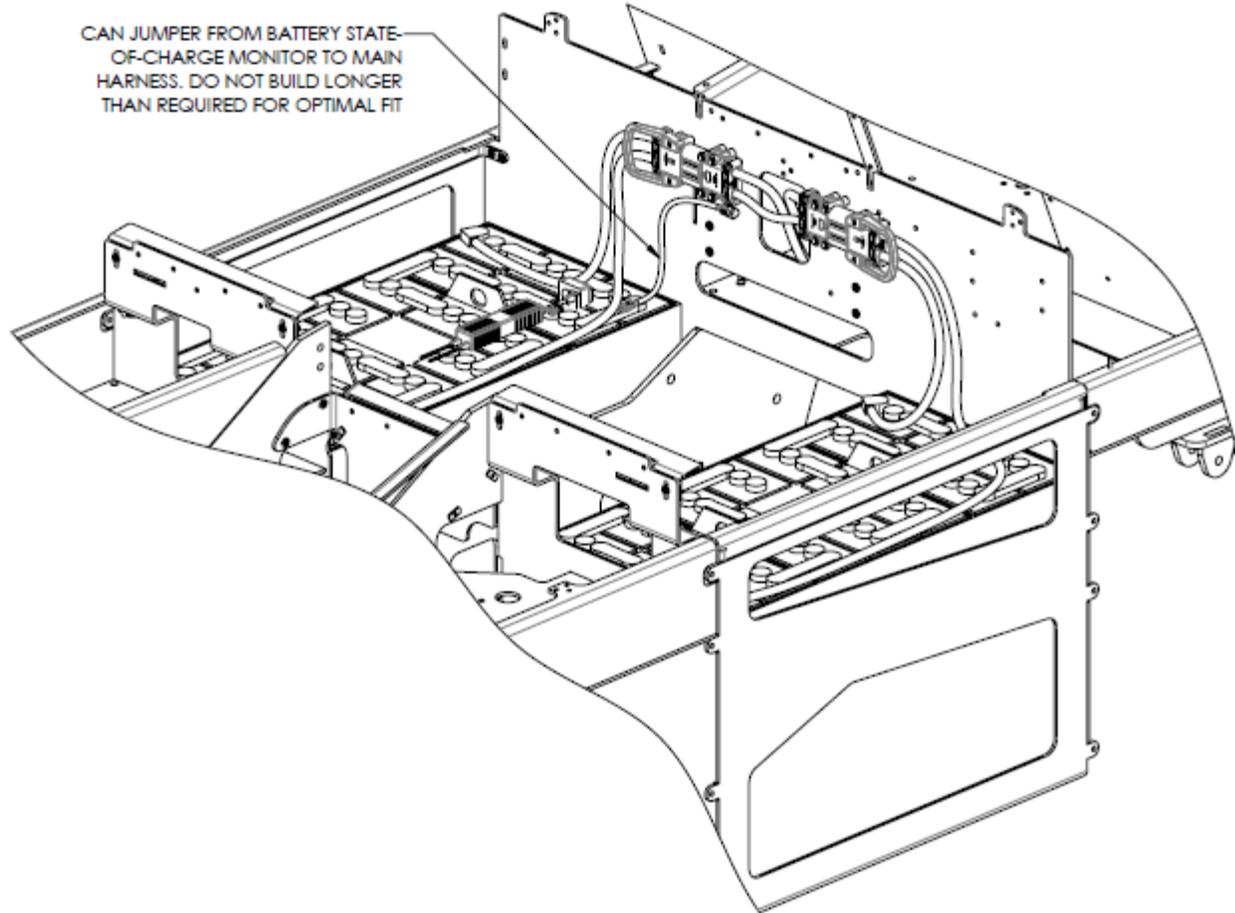




21.3 OPTION C - CUSTOMER FURNISHED LEAD ACID BATTERY (continued)

Parts List



When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	0462-201-20141	DEUTSCH TERMINAL	2
2	0462-209-16141	DEUTSCH SOCKET	2
3	114017	DEUTSCH EMPTY SOCKET PLUG	1
4	12050	SPLIT, POLYOOM 3/8"	30
5	A-ES12-0448	EPDM RUBBER PAD, ADHESIVE BACKED	512
6	DT06-3S	DEUTSCH CONNECTOR	1
7	DTM06-2S	DEUTSCH CONNECTOR	1
8	EC-3416	BATTERY CABLE	1
9	EC-3575-2	WIRE, TWISTED PAIR TXL 18AWG	30
10	G-1100-105006	BOLT, 1/4-20 X 3/4" LG HEX HD GR 5	1
11	G-1100-105026	BOLT, 1/4-20 X 2-3/4" LG HEX HD GR 5	8
12	G-1250-1050W	FLATWASHER, 1/4 WIDE	16
13	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	1
14	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	8
15	H-3521-09	CLAMP, CUSHIONED LOOP 7/8"	1
16	H-4566-04	SPACER, 1/4 ID X 5/8 OD X 1/2" LG STL	8
17	H-4916	SPACER, BATTERY	2
18	W3S	DEUTSCH LOCK	1
19	WM2S	DEUTSCH LOCK	1
20	Z-11486	ASSY, BATTERY MONITOR	1
21	Z-12255-00	BALLAST, UNDER-BATTERY (P)	2


21.4 OPTION G - LI 840 AH BATTERY

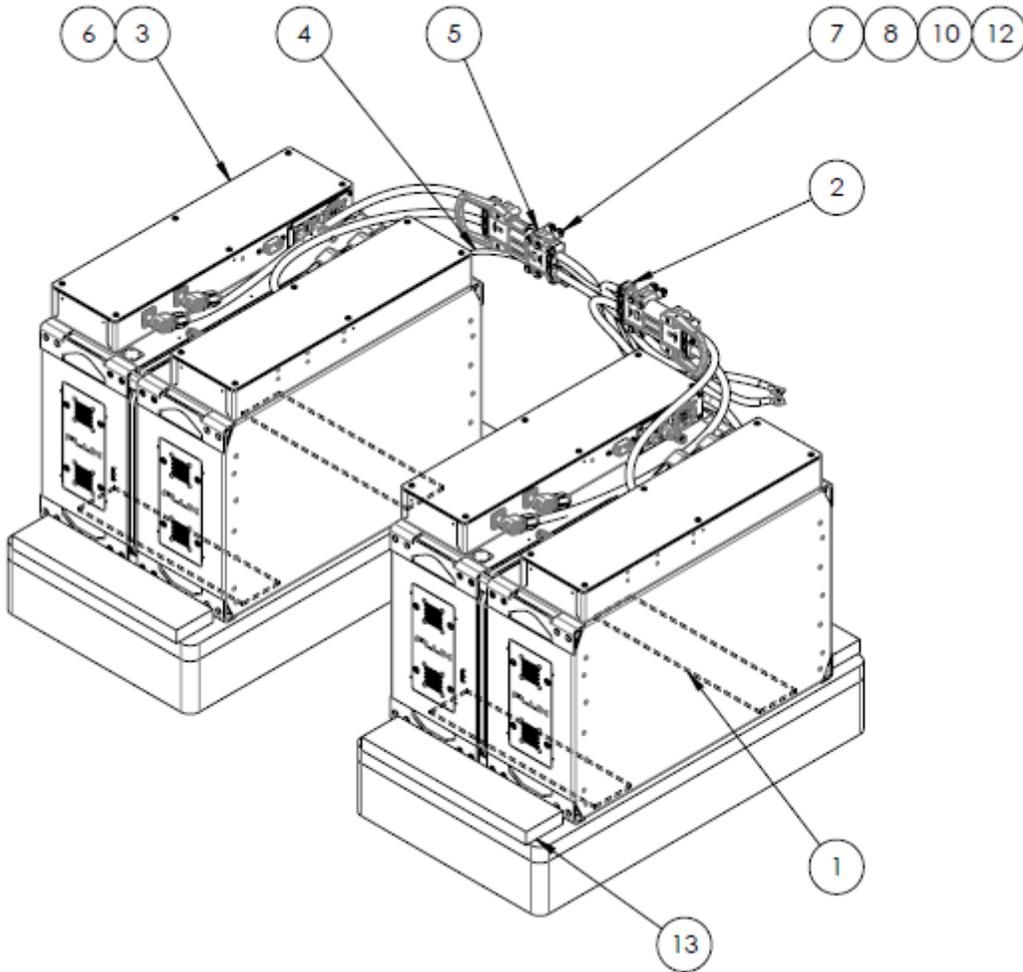

21.4 OPTION G - LI 840 AH BATTERY (continued)

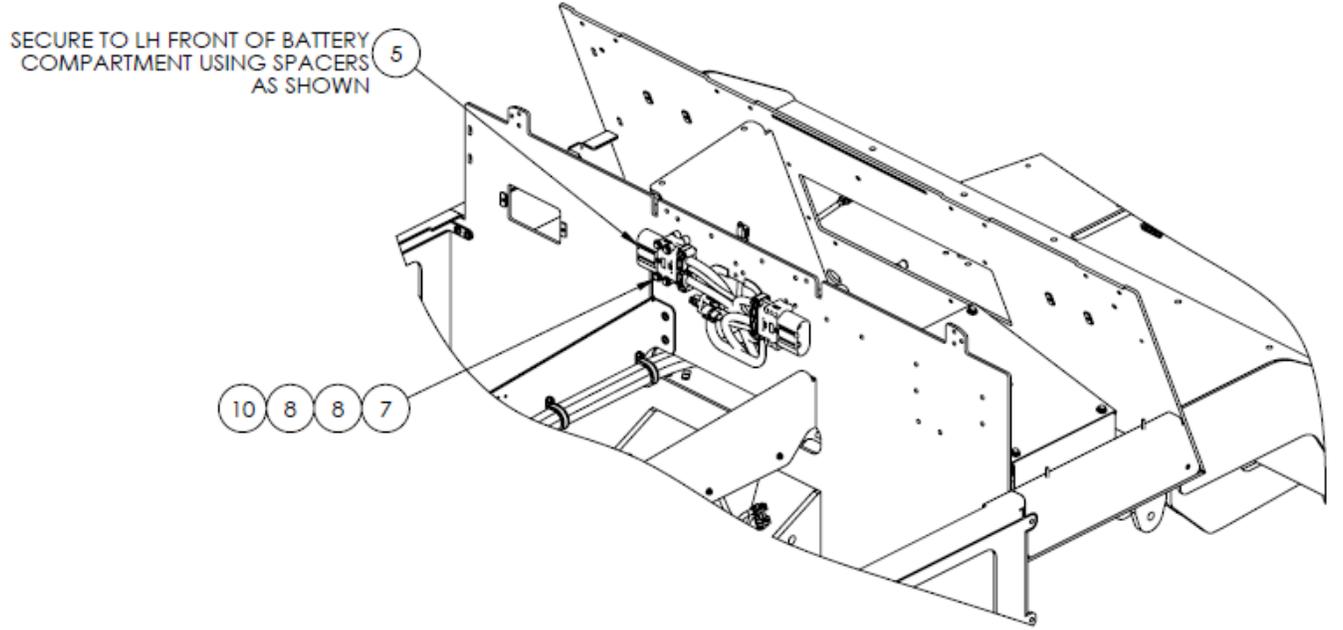
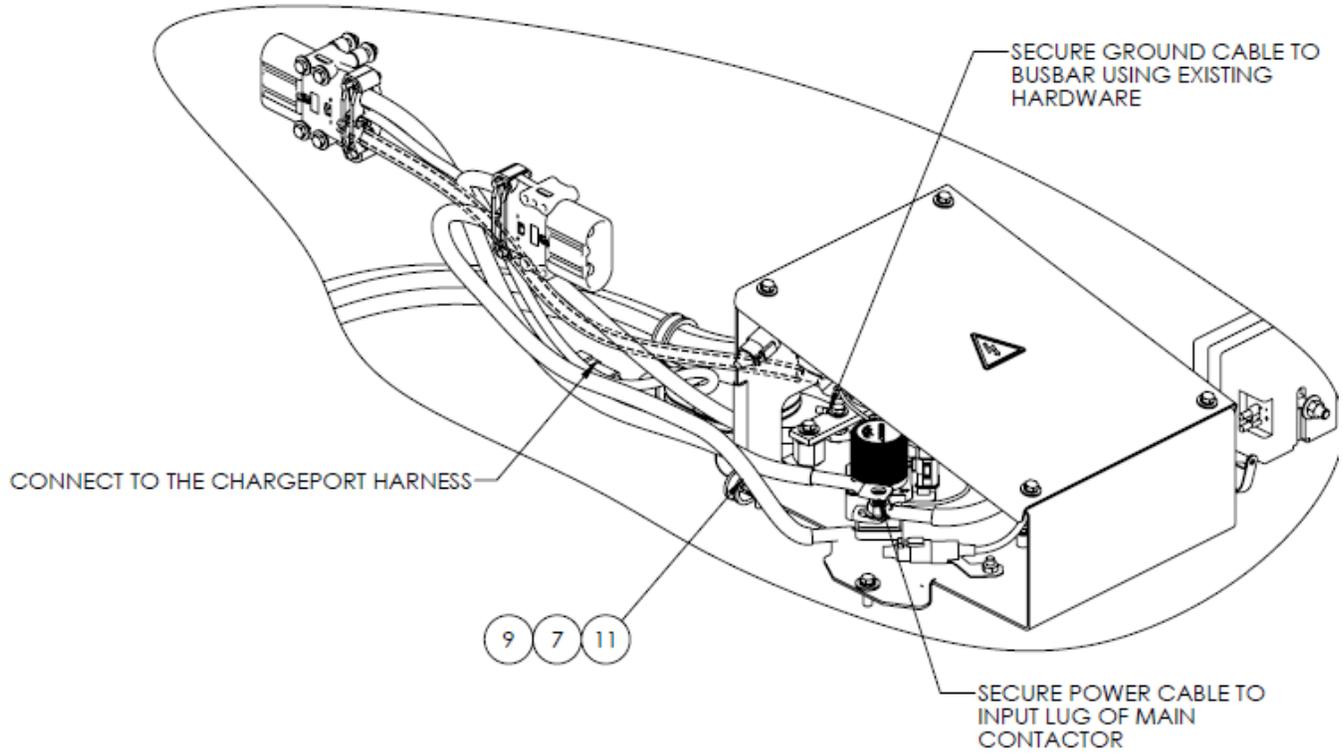


21.4 OPTION G - LI 840 AH BATTERY (continued)

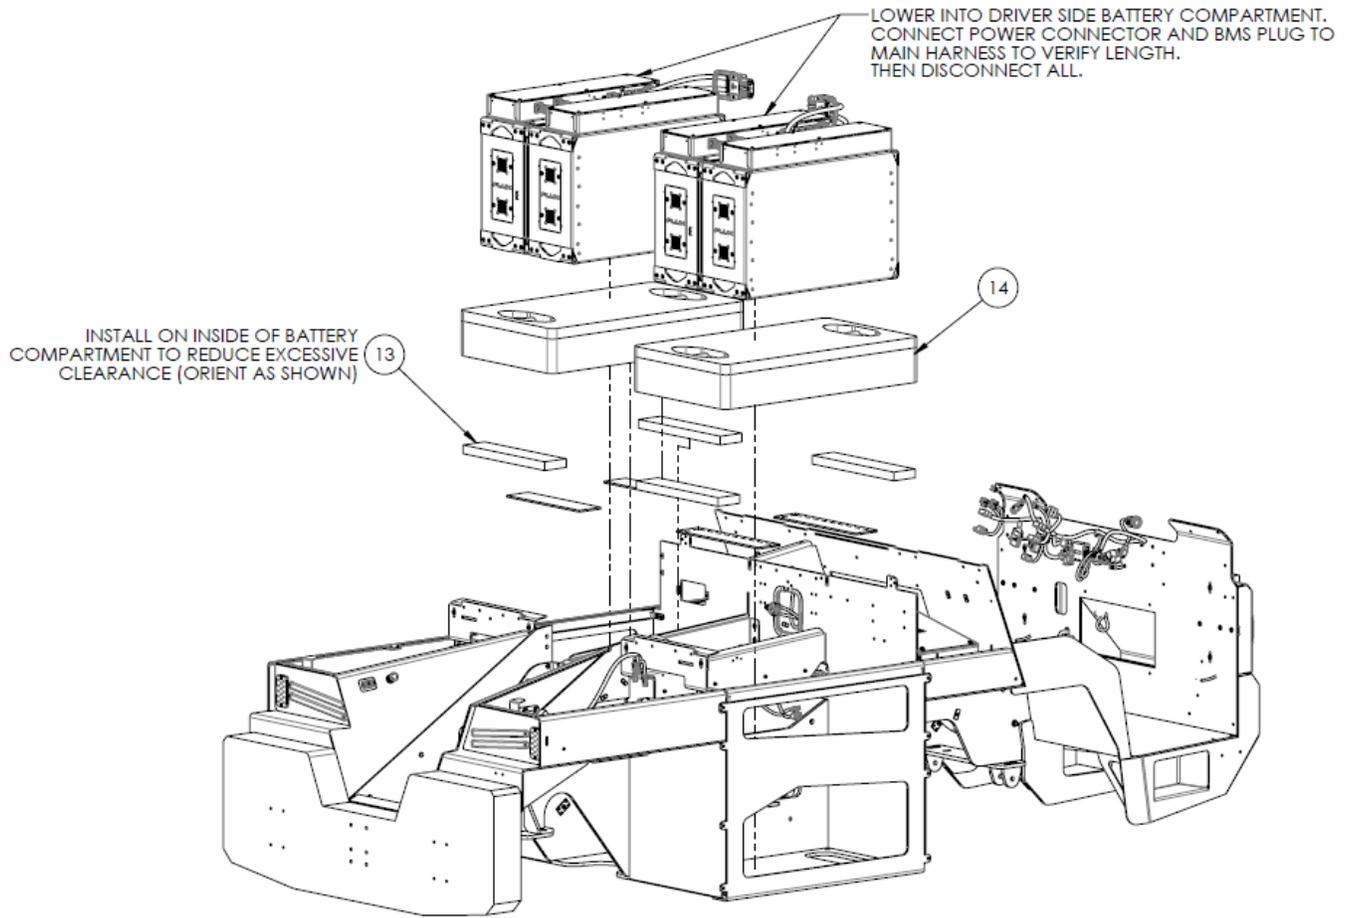

21.4 OPTION G - LI 840 AH BATTERY (continued)

CAN JUMPER FROM BATTERY OPTO ADAPTER
CONNECTOR TO MAIN HARNESS
REFER EC-3786 DRAWING FOR CAN HARNESS INSTALLATION

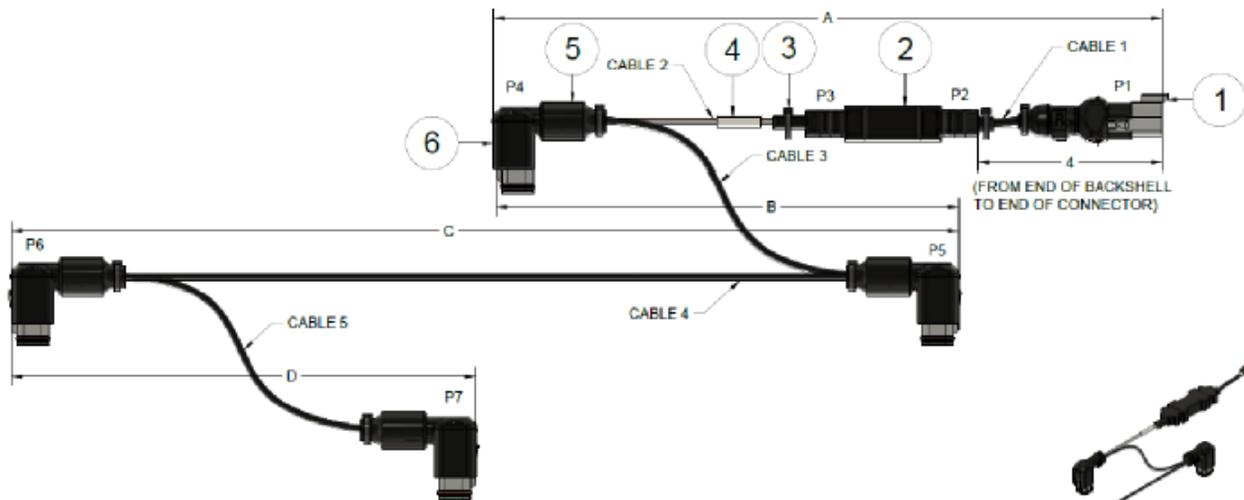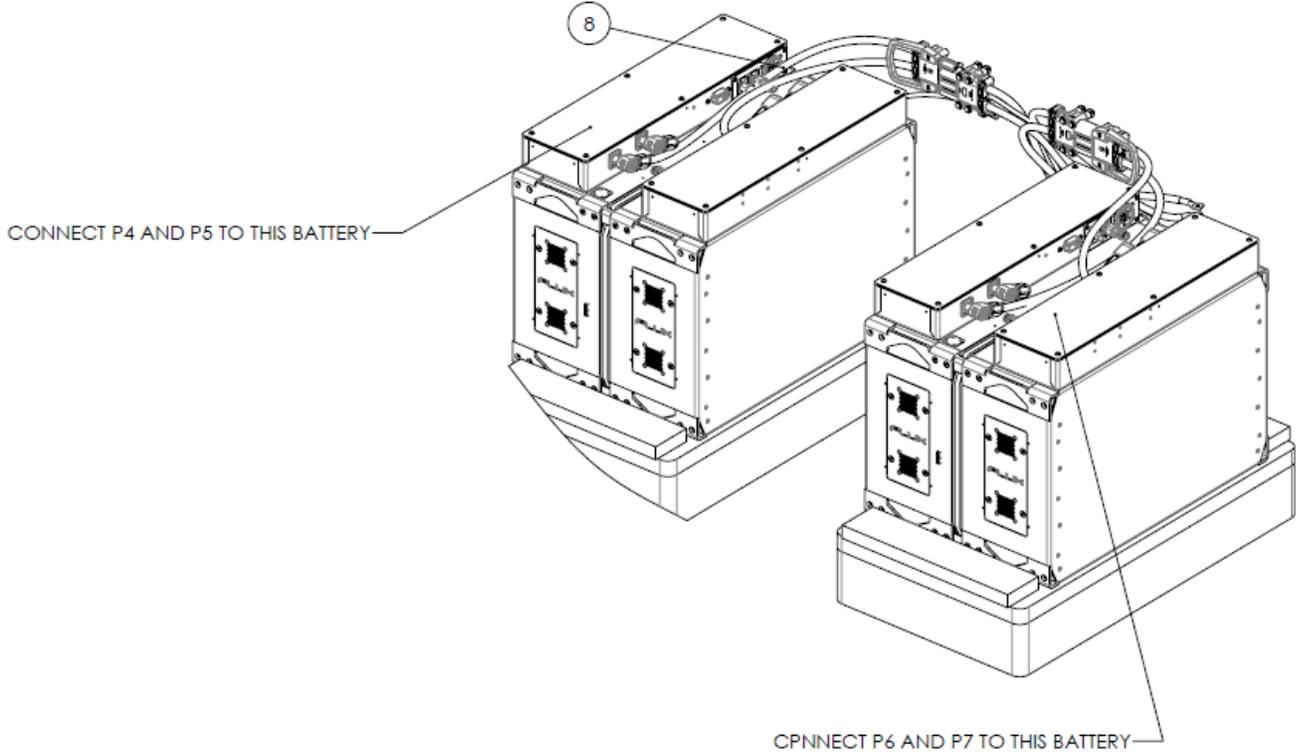

REFERENCE ONLY: SCHEMATIC FOR EC-3786






21.4 OPTION G - LI 840 AH BATTERY (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-ES12-0448	EPDM RUBBER PAD, ADHESIVE BACKED	288
2	EC-3405	BATTERY CABLE	1
3	EC-3555	BATTERY 420AH, LITHIUM	2
4	EC-3566	HARNESS, BATTERY CAN	1
5	EC-3780	BATTERY CABLE, SINGLE LITHIUM	1
6	EC-2786	CAN HARNESS, DUAL LITHIUM	1
7	G-1100-105026	BOLT, 1/4-20 X 2-3/4" LG HEX HD GR 5	9
8	G-1250-1050W	FLATWASHER, 1/4 WIDE	16
9	G-1251-1050R	LOCKWASHER, 1/4 REGULAR	1
10	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	8
11	H-3521-09	CLAMP, CUSHIONED LOOP 7/8"	1
12	H-4566-04	SPACER, 1/4 ID X 5/8 OD X 1/2" LG STL	8
13	H-5145	UHMW SPACER	4
14	Z-12259-00	BALLAST, UNDER-BATTERY (P)	2

22.0 **BACKUP ALARM FEATURE**
22.1 **OPTION A - BACKUP ALARM**

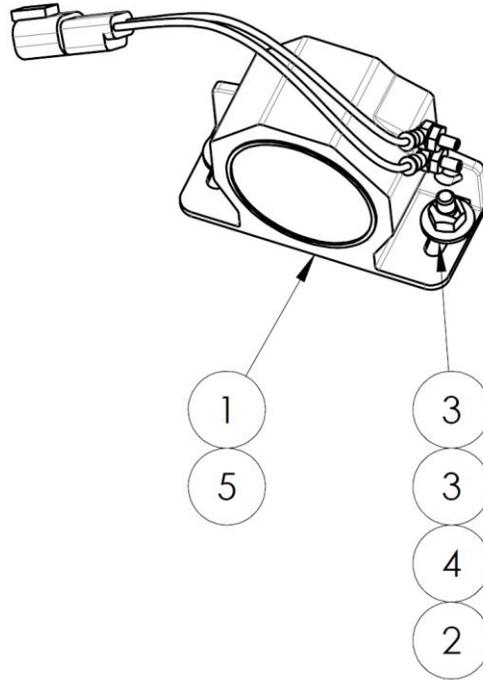


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	AE-OPT-0001	BACKUP ALARM	1
2	G-1100-105010	BOLT, 1/4-20 HEX HD GR 5	2
3	G-1250-1050W	FLATWASHER, 1/4 WIDE	4
4	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	2
5	Z-11174	BACKUP ALARM PIGTAIL	1

22.2 OPTION B - SMART BACKUP ALARM

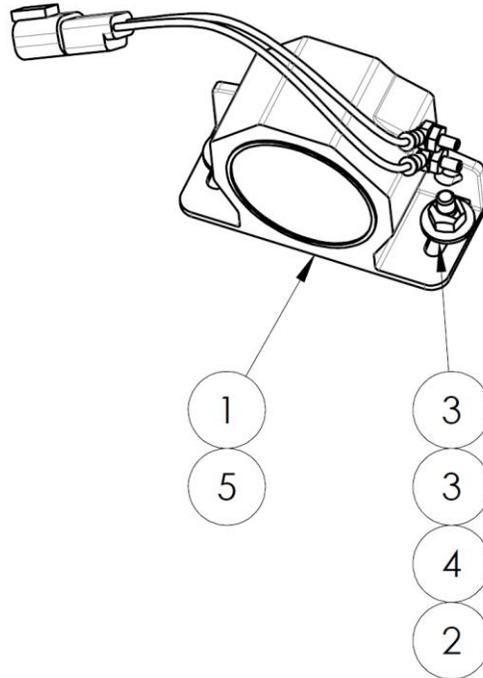


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1100-105010	BOLT, 1/4-20 HEX HD GR 5	2
2	G-1250-1050W	FLATWASHER, 1/4 WIDE	4
3	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	2
4	OPT-NVSP-029-A	SMART BACKUP ALARM (ALARM ONLY)	1
5	Z-11174	BACKUP ALARM PIGTAIL	1

22.3 OPTION C - WHITE NOISE BACKUP ALARM

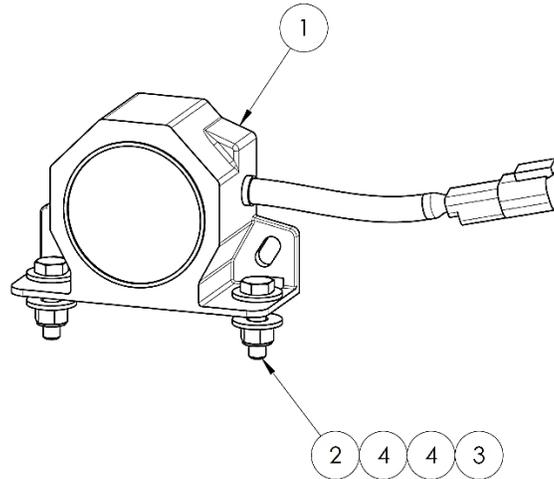


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	Z-12167	ASY, BACKUP ALARM	1
2	G-1100-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 5	2
3	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	2
4	G-1250-1050W	FLATWASHER, 1/4 WIDE	4


- 23.0 OPERATOR CAB FEATURE
- 23.1 OPTION O - OPERATOR CAB NO AC

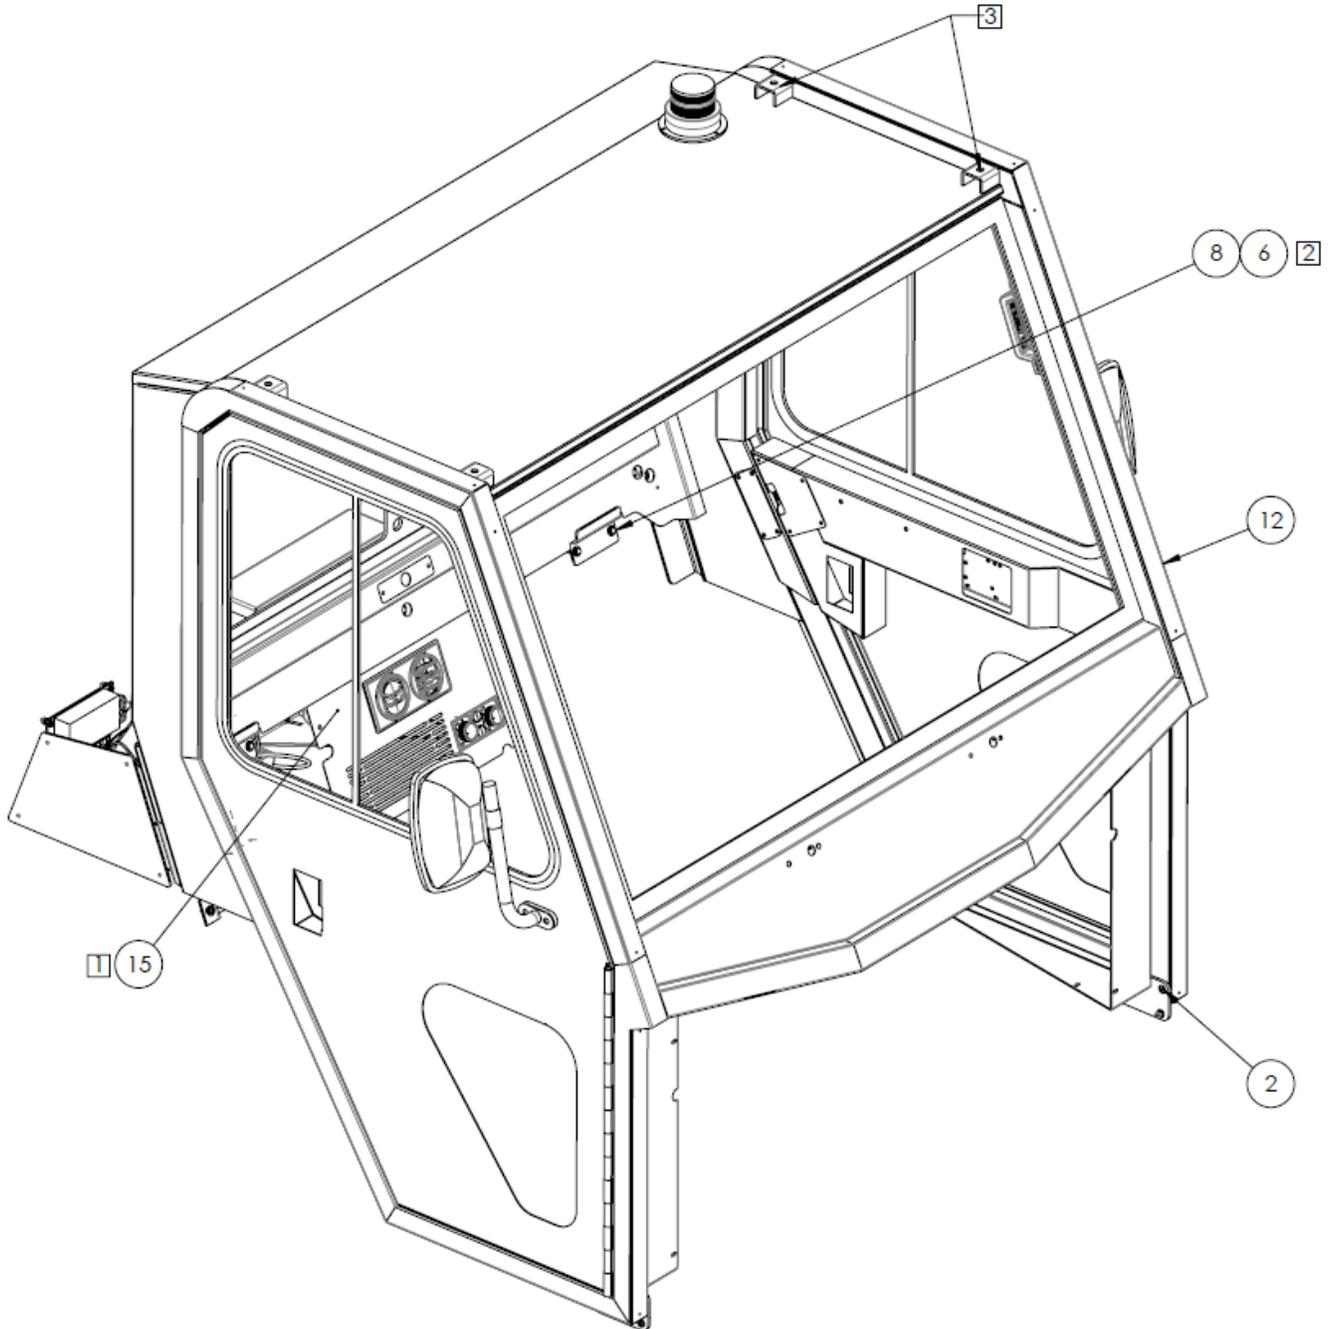


23.1 OPTION O - OPERATOR CAB NO AC (continued)

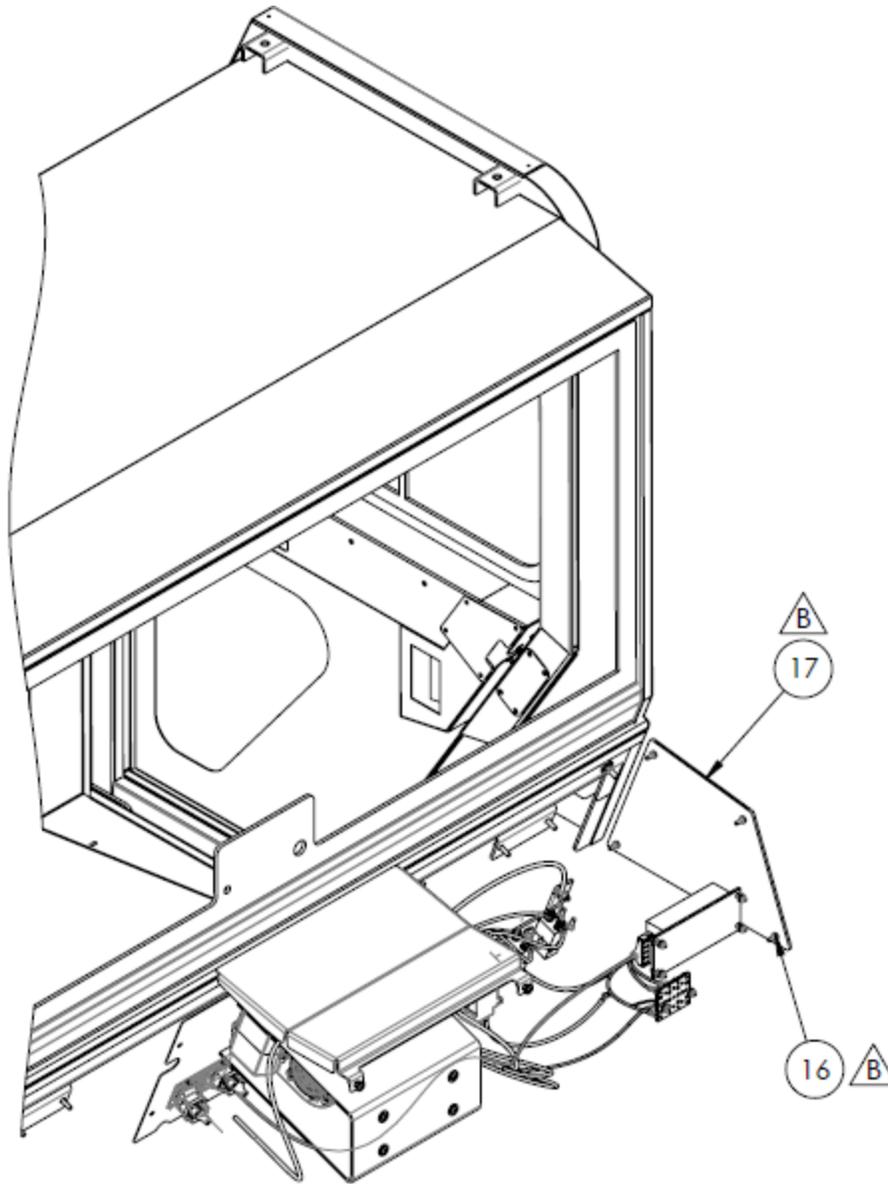

23.1 OPTION O - OPERATOR CAB NO AC (continued)

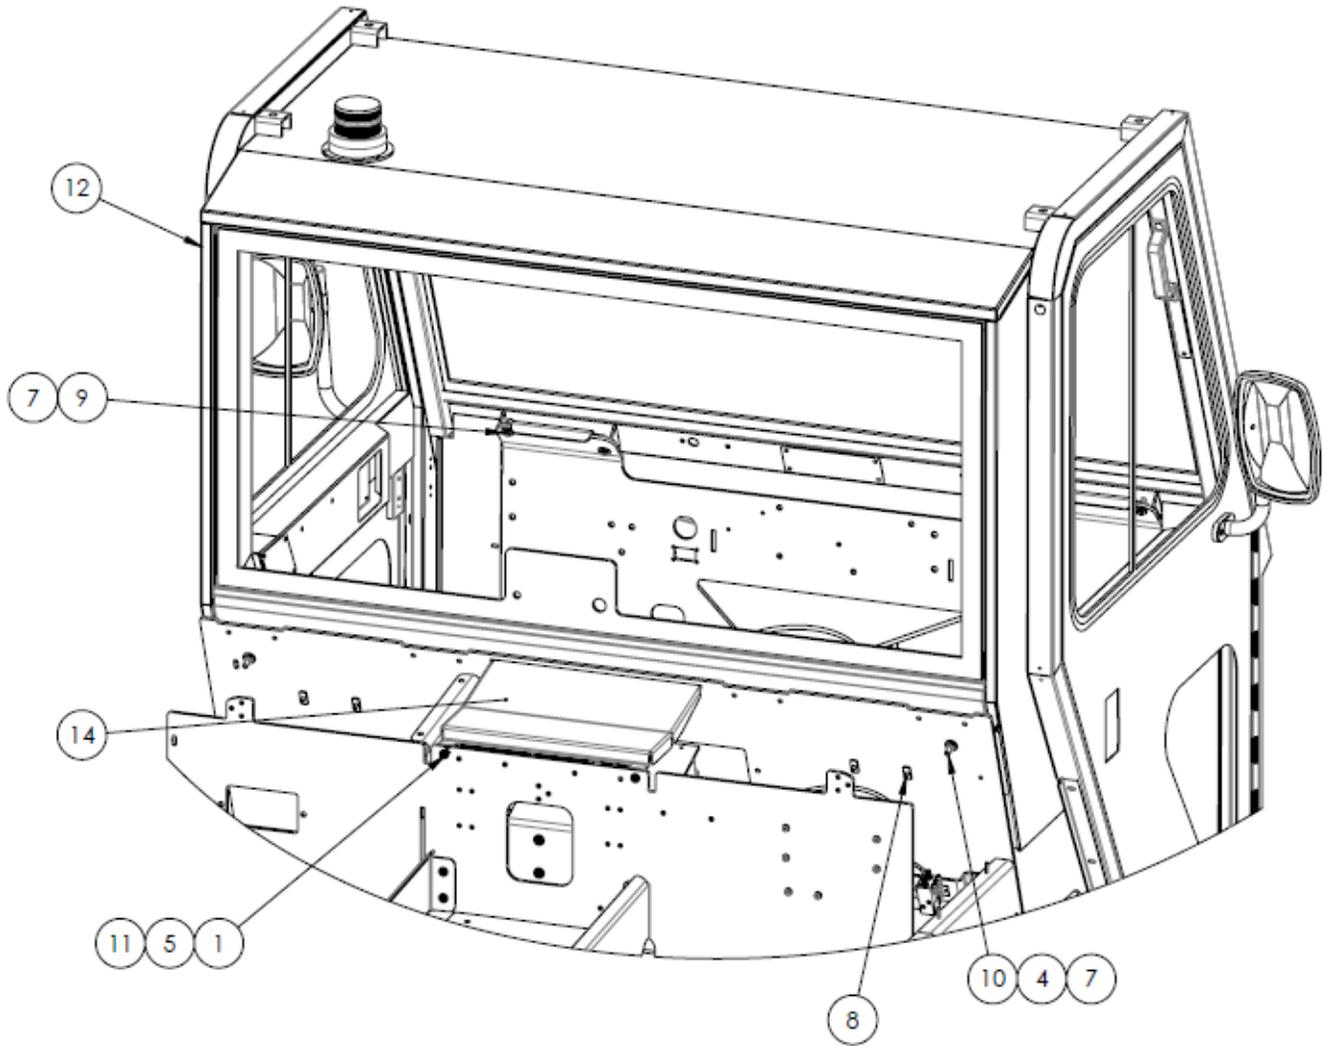

23.1 OPTION O - OPERATOR CAB NO AC (continued)

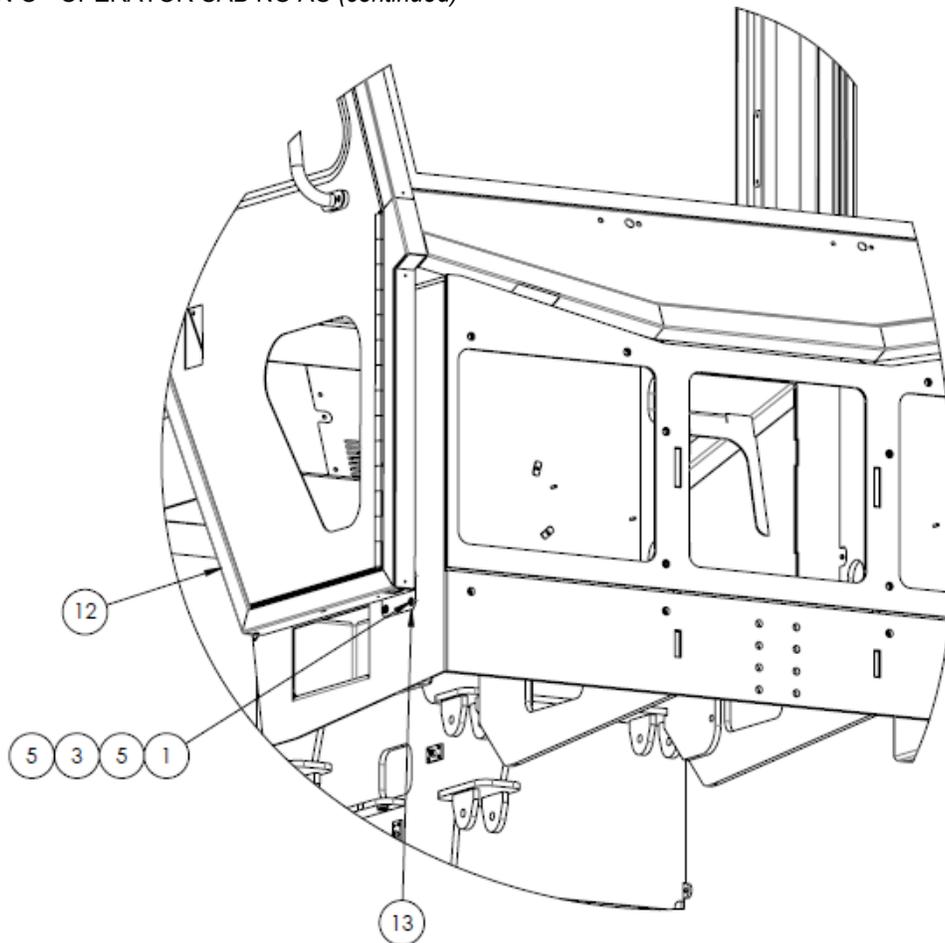


Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	9
2	G-1152-105210	SCREW, 1/4-20 X 1.0" LG SOCKET FLAT HD CAP	4
4	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
4	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	3
5	G-1250-1050N	FLATWASHER, 1/4 NARROW	13
6	G-1250-1050W	FLATWASHER, 1/4 WIDE	4
7	G-1250-1060W	FLATWASHER, 5/16 WIDE	10
8	G-1420-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 8	4
9	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	4
10	G-1420-106014	BOLT, 5/16-18 HEX HD GR 8	3
11	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	2
12	H-4942	CAB, ETT-8/12X	1
13	J-8626-00	BRACKET, CAB MOUNTING (WP)	2
14	S-4368-00	COVER CENTER, NO BEACON (WP)	1
15	Z-12247	ASSY, E-HEATER	1
16	G-1202-1035	STOPNUT, #10-32 ELASTIC	4
17	J-8041-00	ELECTRICAL FAUX DOOR (P)	1


23.1 OPTION O - OPERATOR CAB NO AC (continued)

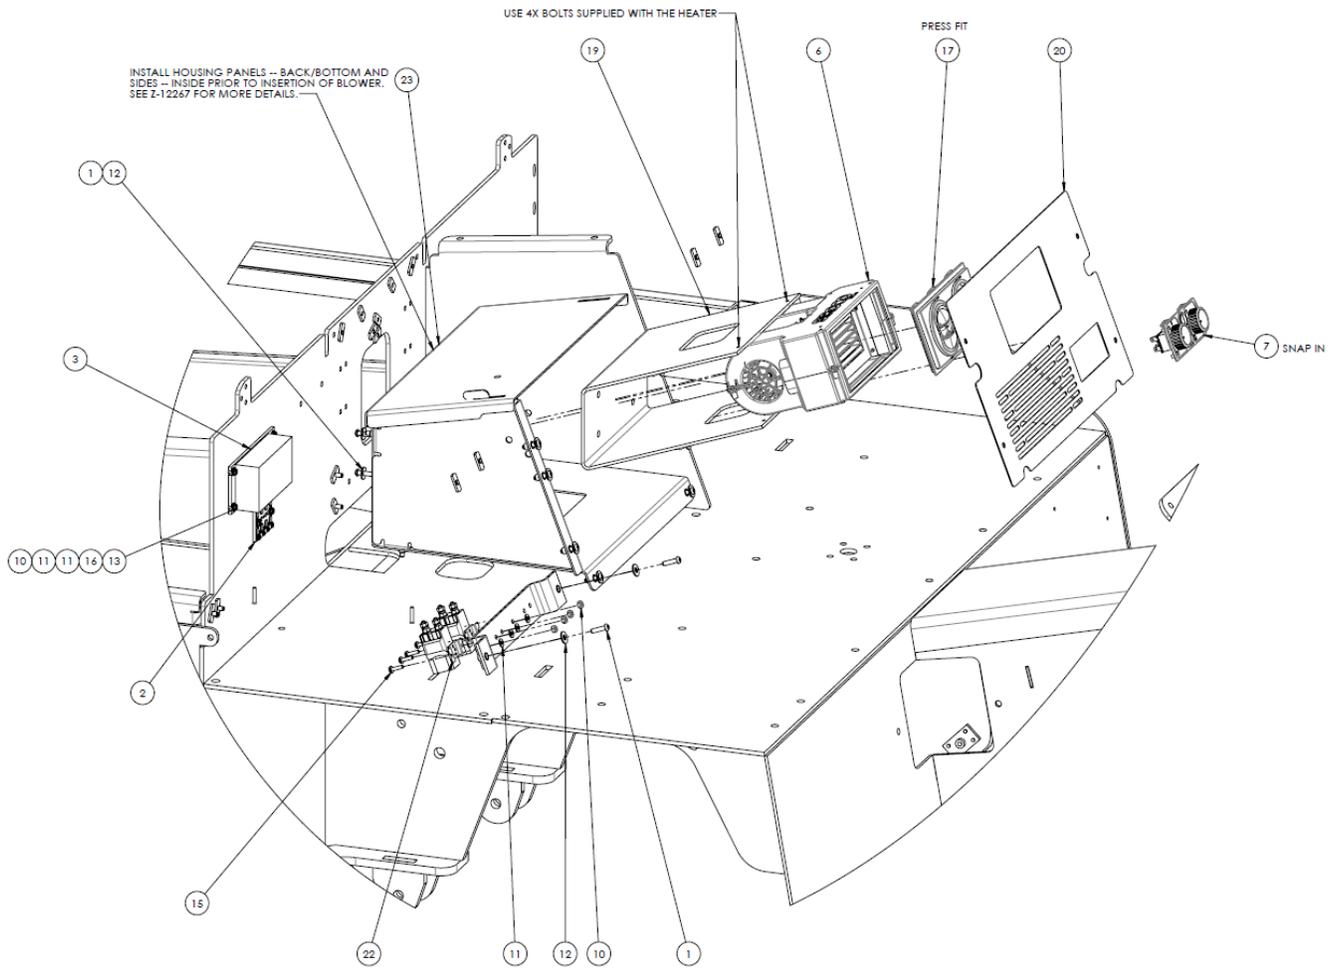


23.1 OPTION O - OPERATOR CAB NO AC (continued)

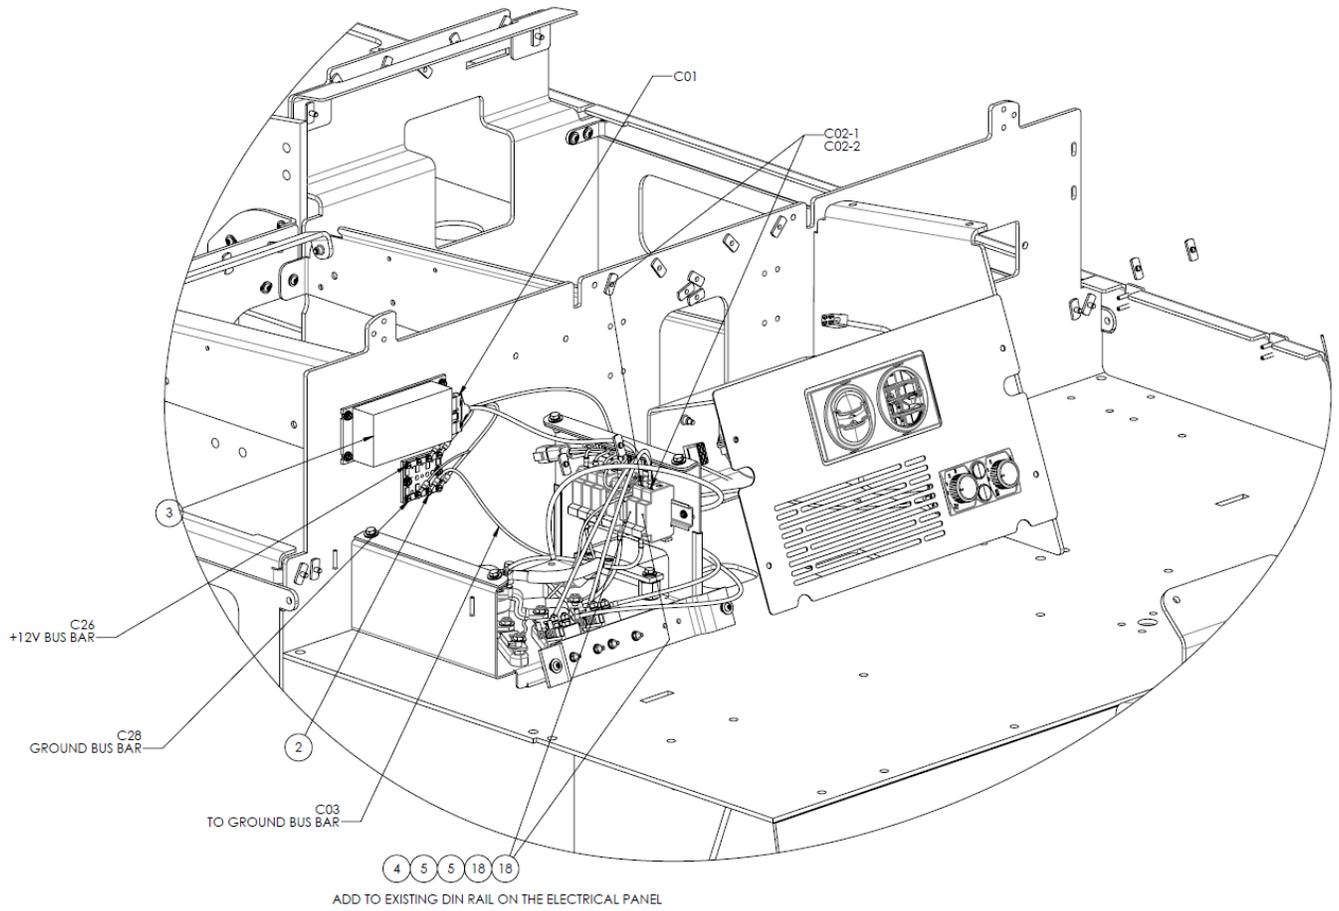

23.1 OPTION O - OPERATOR CAB NO AC (continued)

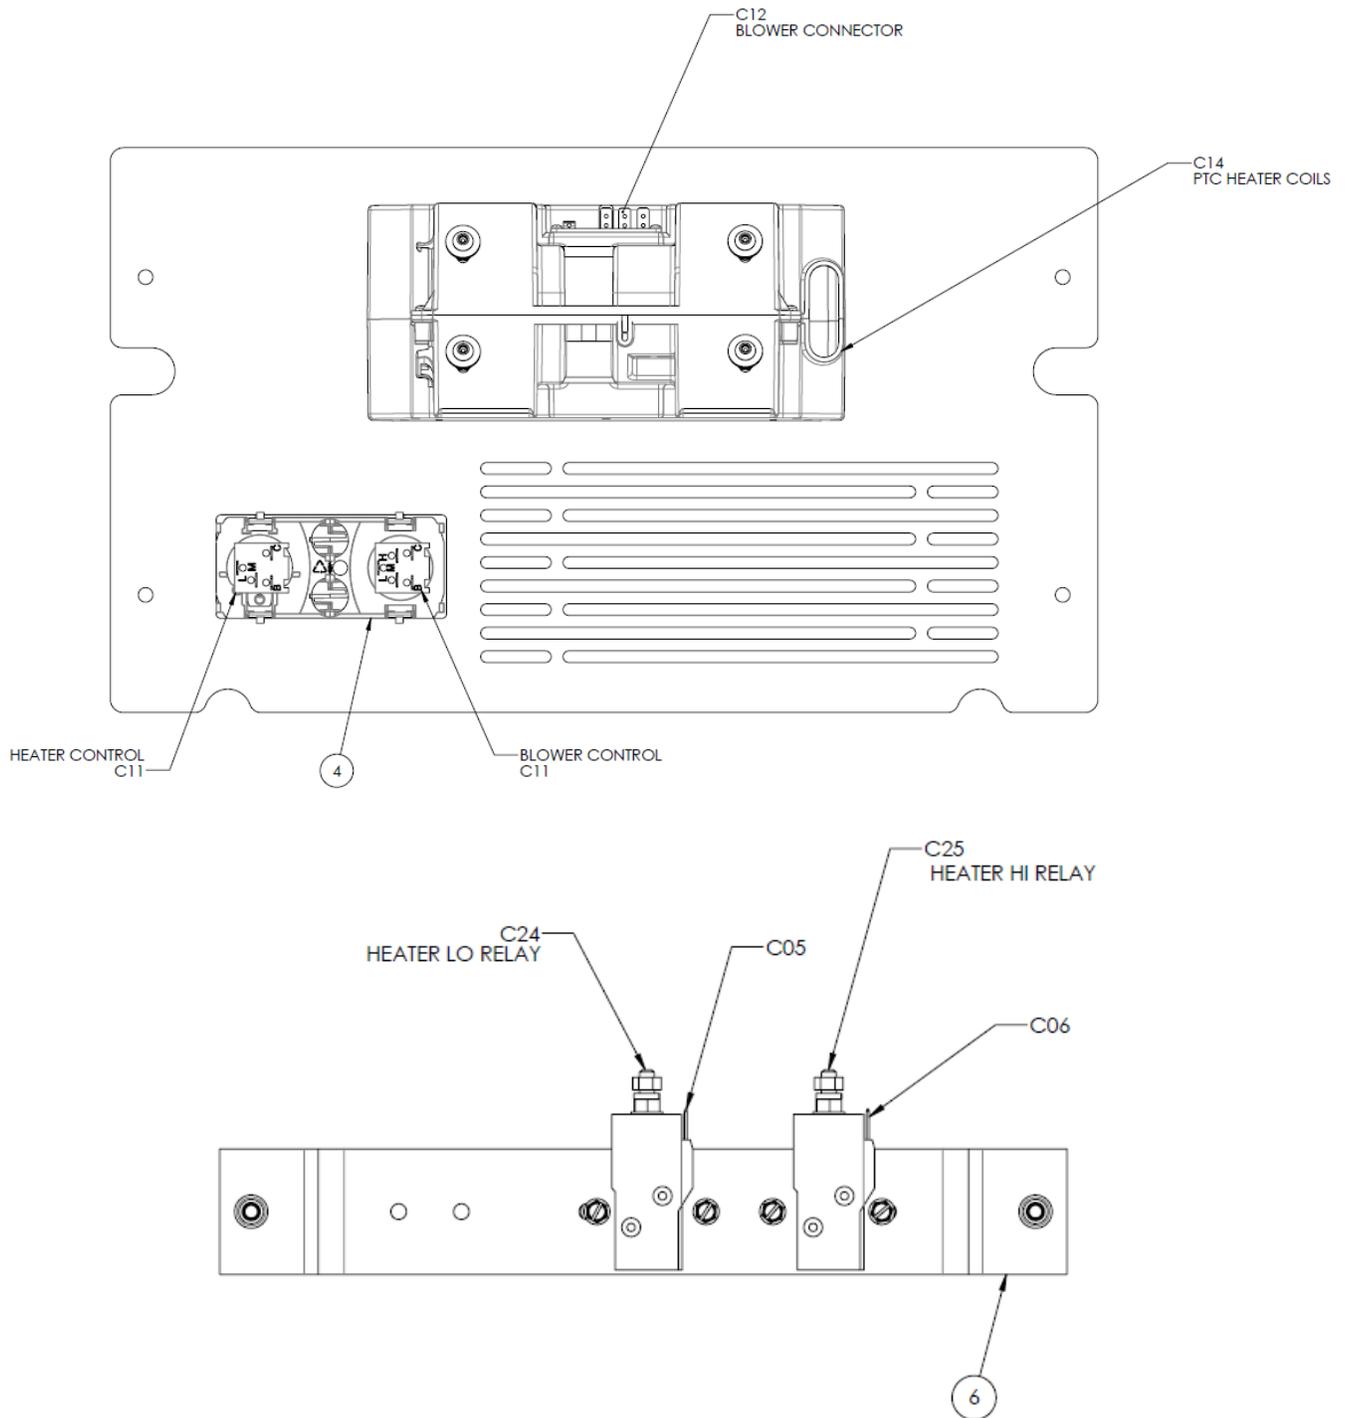

23.1 OPTION O - OPERATOR CAB NO AC (continued)

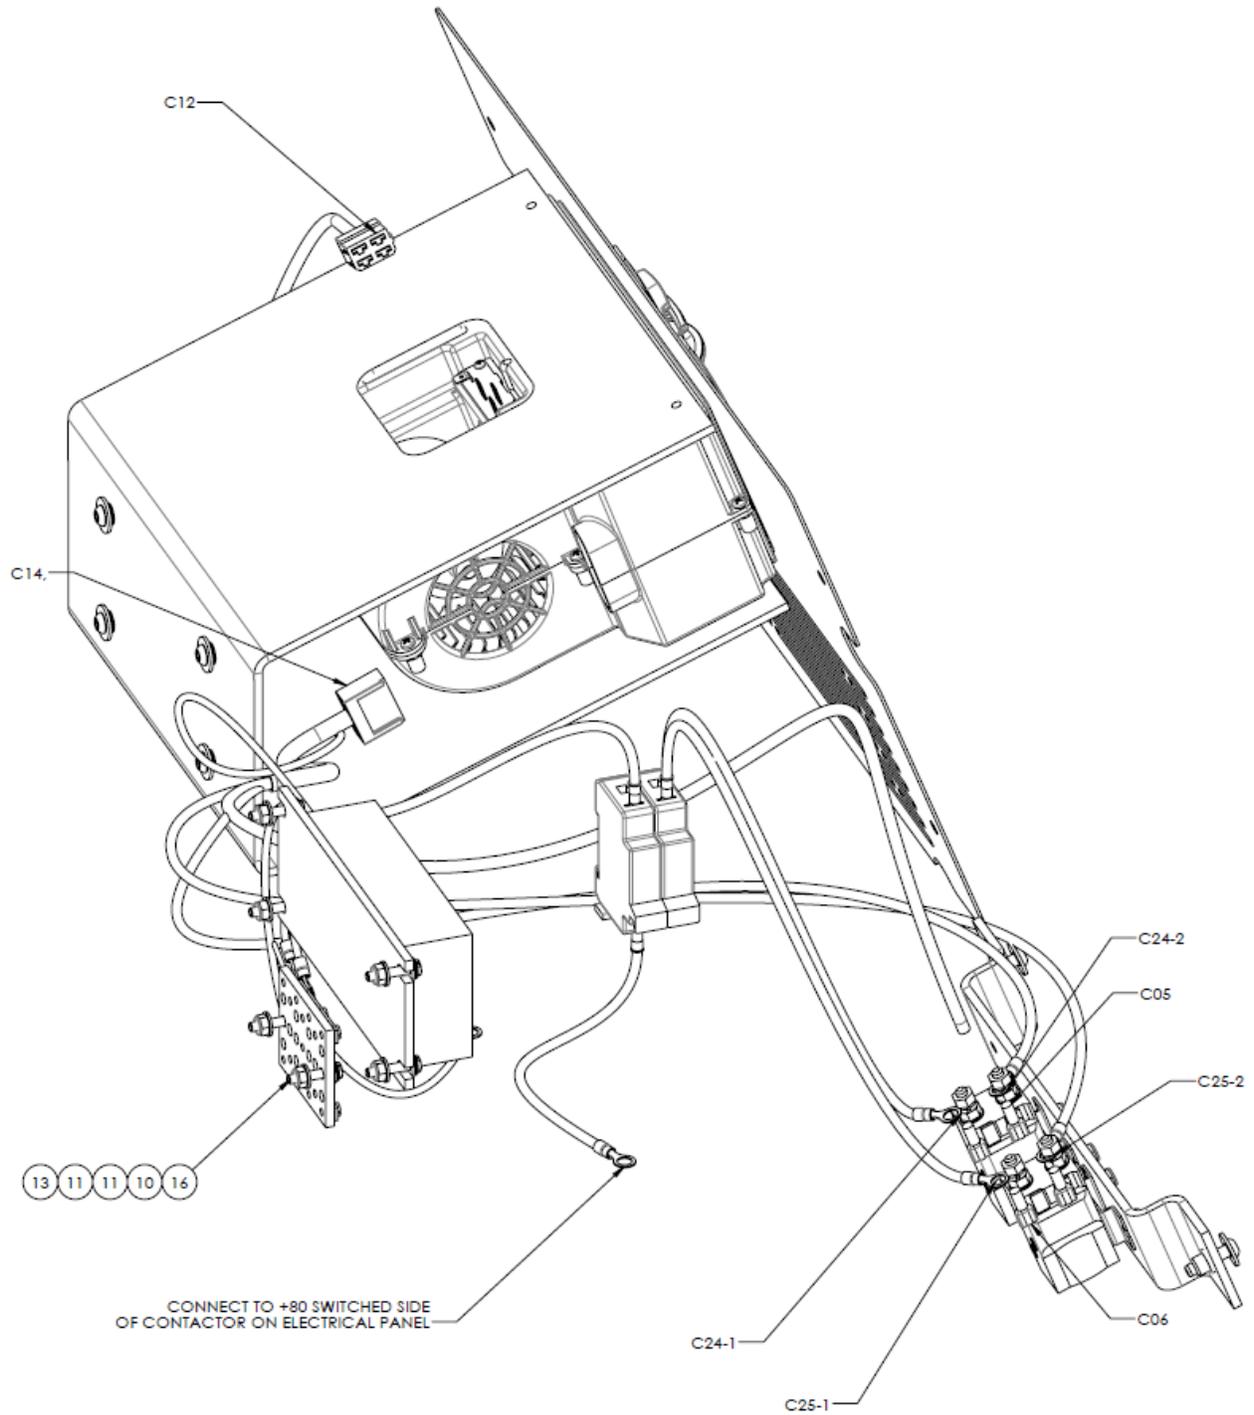




23.1 OPTION O - OPERATOR CAB NO AC (continued)

Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	6
2	A-TT4-00300	BUS BAR, FIBER BOARD	1
3	AE-OPT-0320-B	DC-DC CONVERTER, 300W	1
4	EC-3361-2	FUSE INPUT BUS, 2 POLE	1
5	EC-3429-30	10X38 FUSE, 500V, 30A, SLOW-BLOW	2
6	EC-3585	HEATER MODULE, 80V	1
7	EC-3586	CONTROL PANEL, HEATER	1
8	EC-3589	CONTACTOR 12V DC	2
9	EC-3592	HARNESS, HEATER	1
10	G-1202-1035	STOPNUT, #10-32 ELASTIC	10
11	G-1250-1030N	FLATWASHER, #10	16
12	G-1250-1050W	FLATWASHER, 1/4 WIDE	6
13	G-1251-1030R	LOCKWASHER, #10 REGULAR	6
14	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	6
15	G-1720-103506	SCR,#10-32X.75 MACH HEX WSH HD	4
16	G-1720-103510	SCR,#10-32X1.0 MACH HEX WSH HD	6
17	H-5194	FACADE, HEATER F	1
18	LAVT-05-006-CA	10X 38 DIN DIN RAIL MOUNTED FUSE HOLDER	2
19	S-4544	BRACKET, HEATER MOUNT	1
20	S-4545-00	DIFFUSER PLATE, HEATER BOX (P)	1
21	S-4546-00	BASE PLATE, CONTACTORS	1
22	S-4572	BRACKET, CONTACTOR	2
23	Z-12267	HOUSING PANELS, HVAC	1

23.1 OPTION O - OPERATOR CAB NO AC (continued)

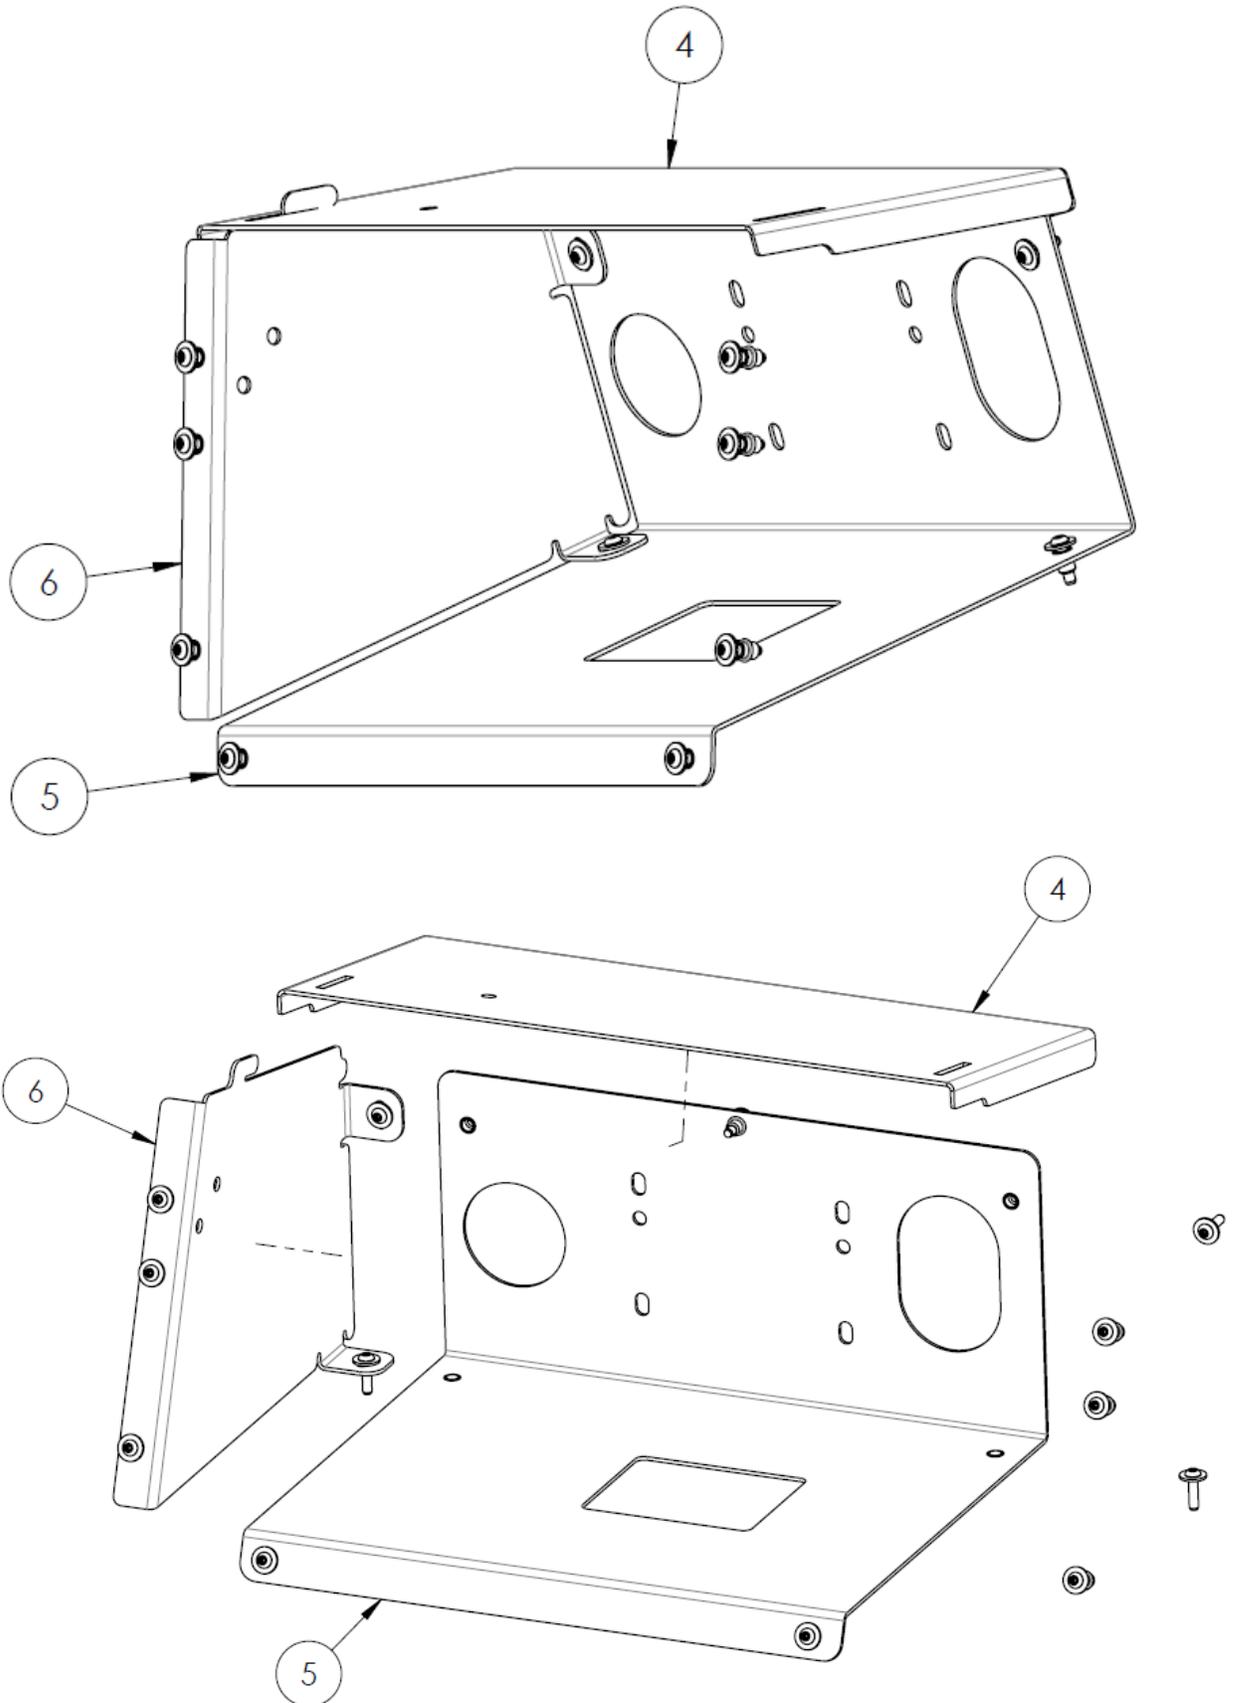


23.1 OPTION O - OPERATOR CAB NO AC (continued)

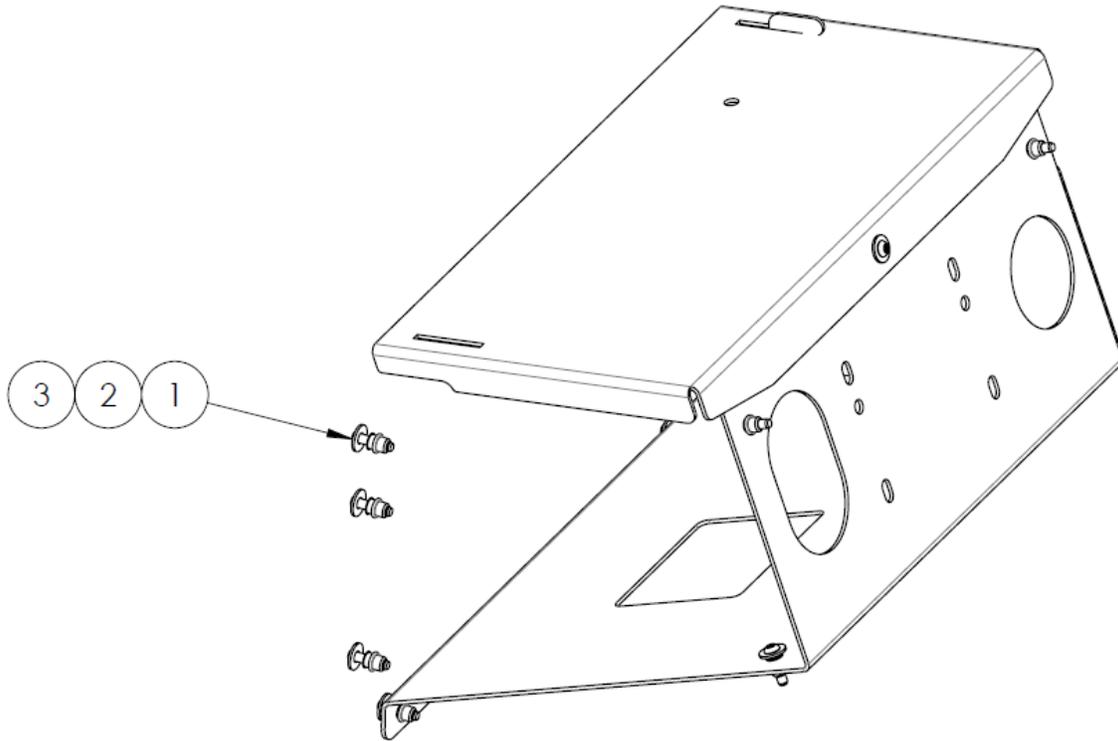


Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	13
2	G-1250-1050W	FLATWASHER, 1/4 WIDE	13
3	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	13
4	S-4549-00	TOP COVER, HEATER BOX (P)	1
5	S-4946-00	HEAT BOX, BACK/BOTTOM (P)	1
6	S-4948-00	HEAT BOX, RIGHT (P)	1


23.2 OPTION A - NO OPERATOR CAB

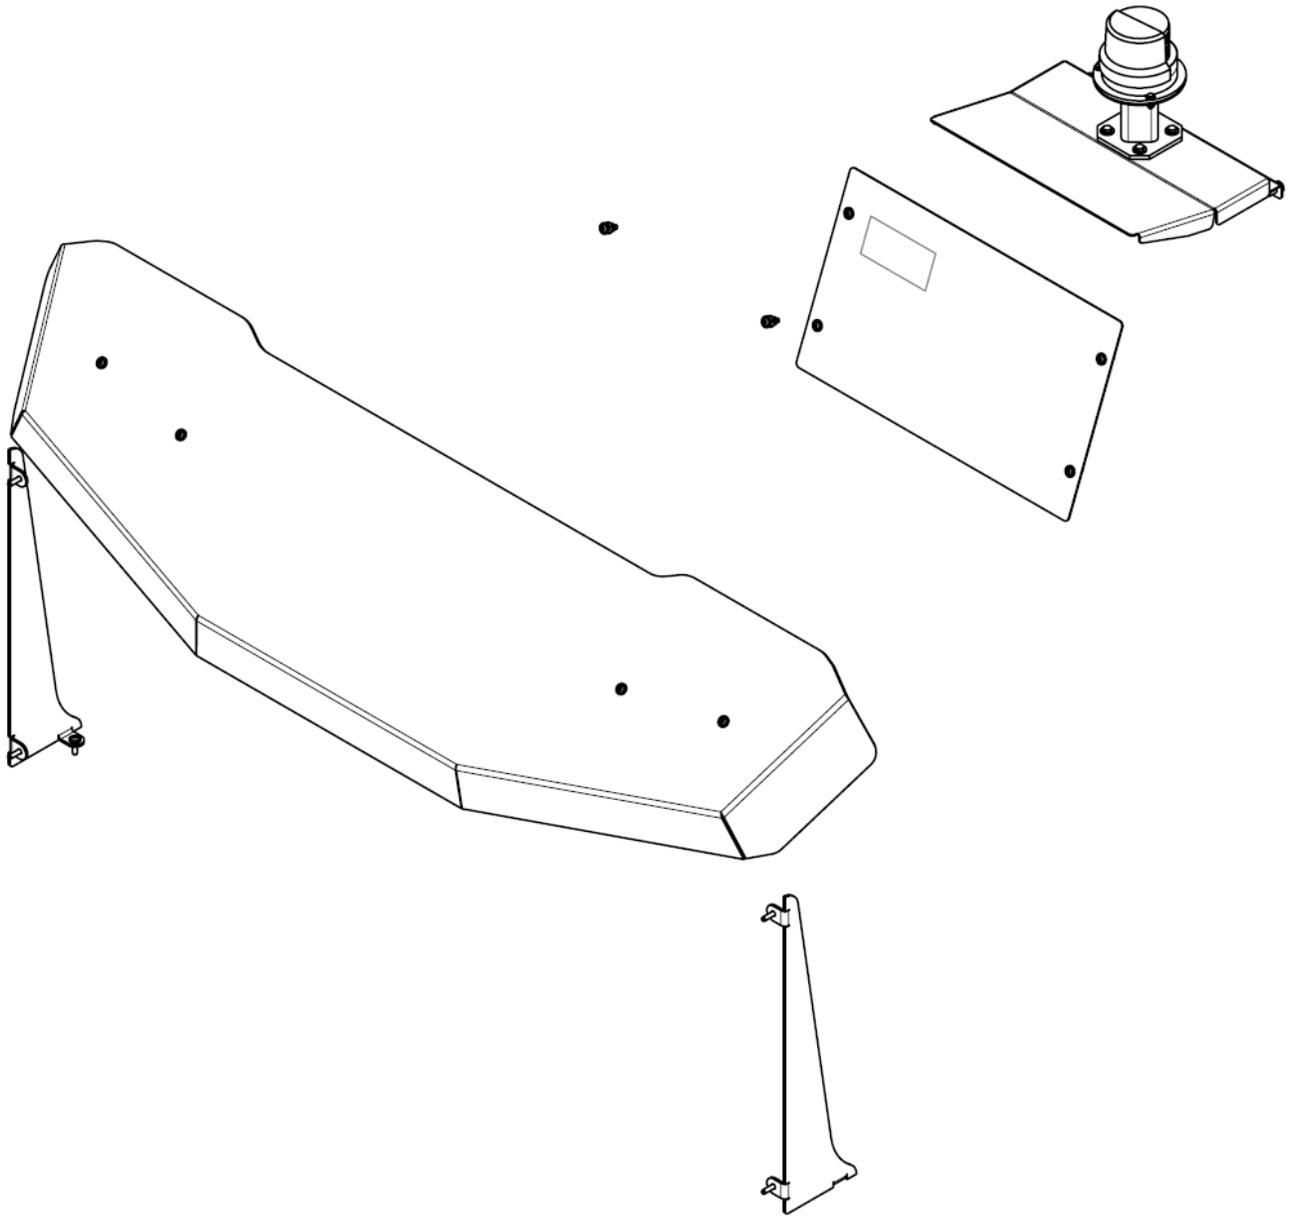

23.2 OPTION A - NO OPERATOR CAB (continued)

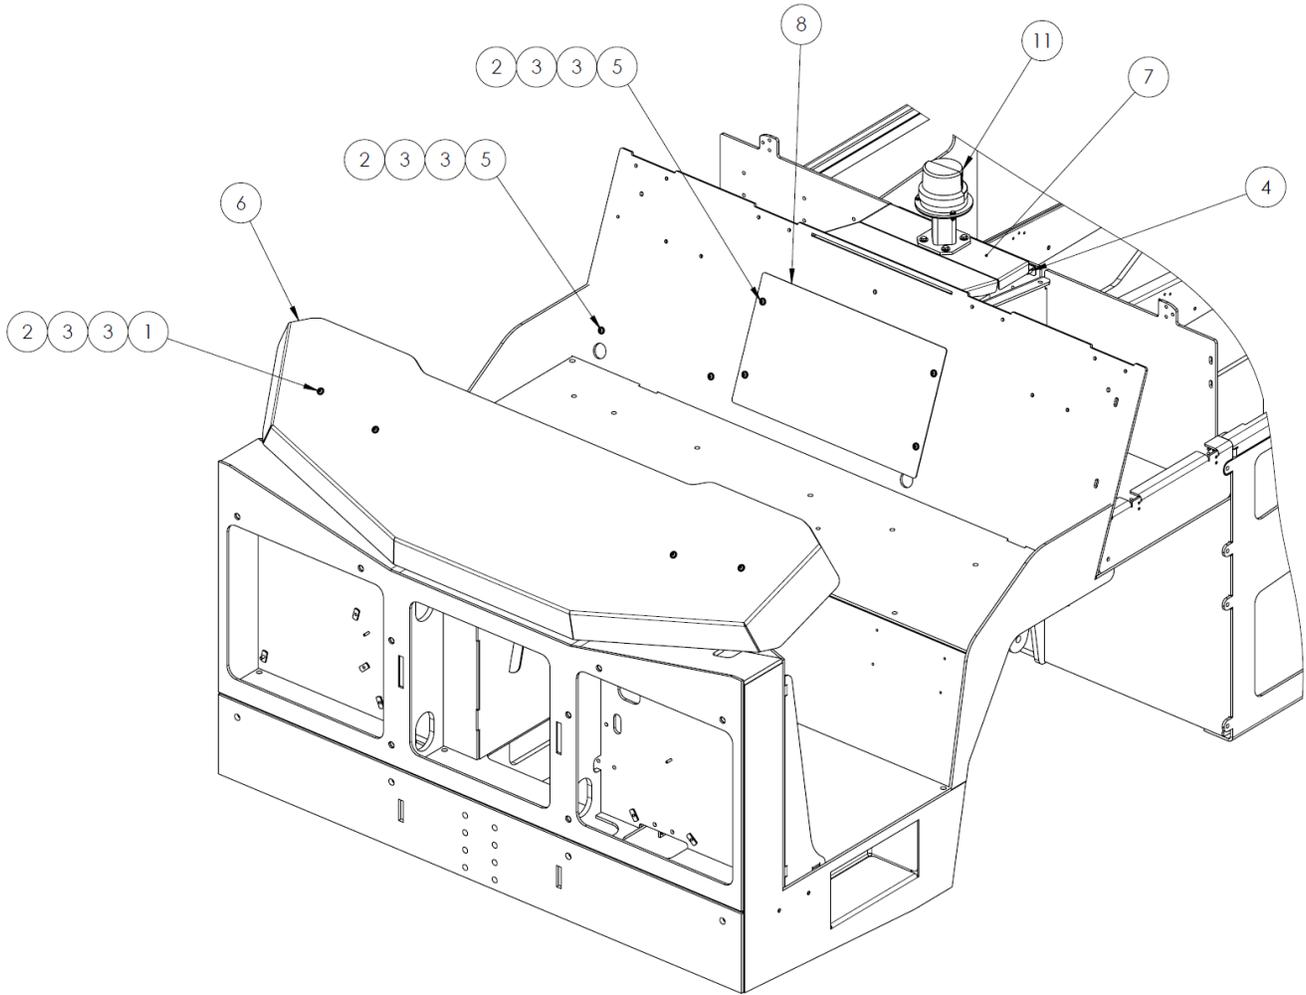

23.2 OPTION A - NO OPERATOR CAB (continued)


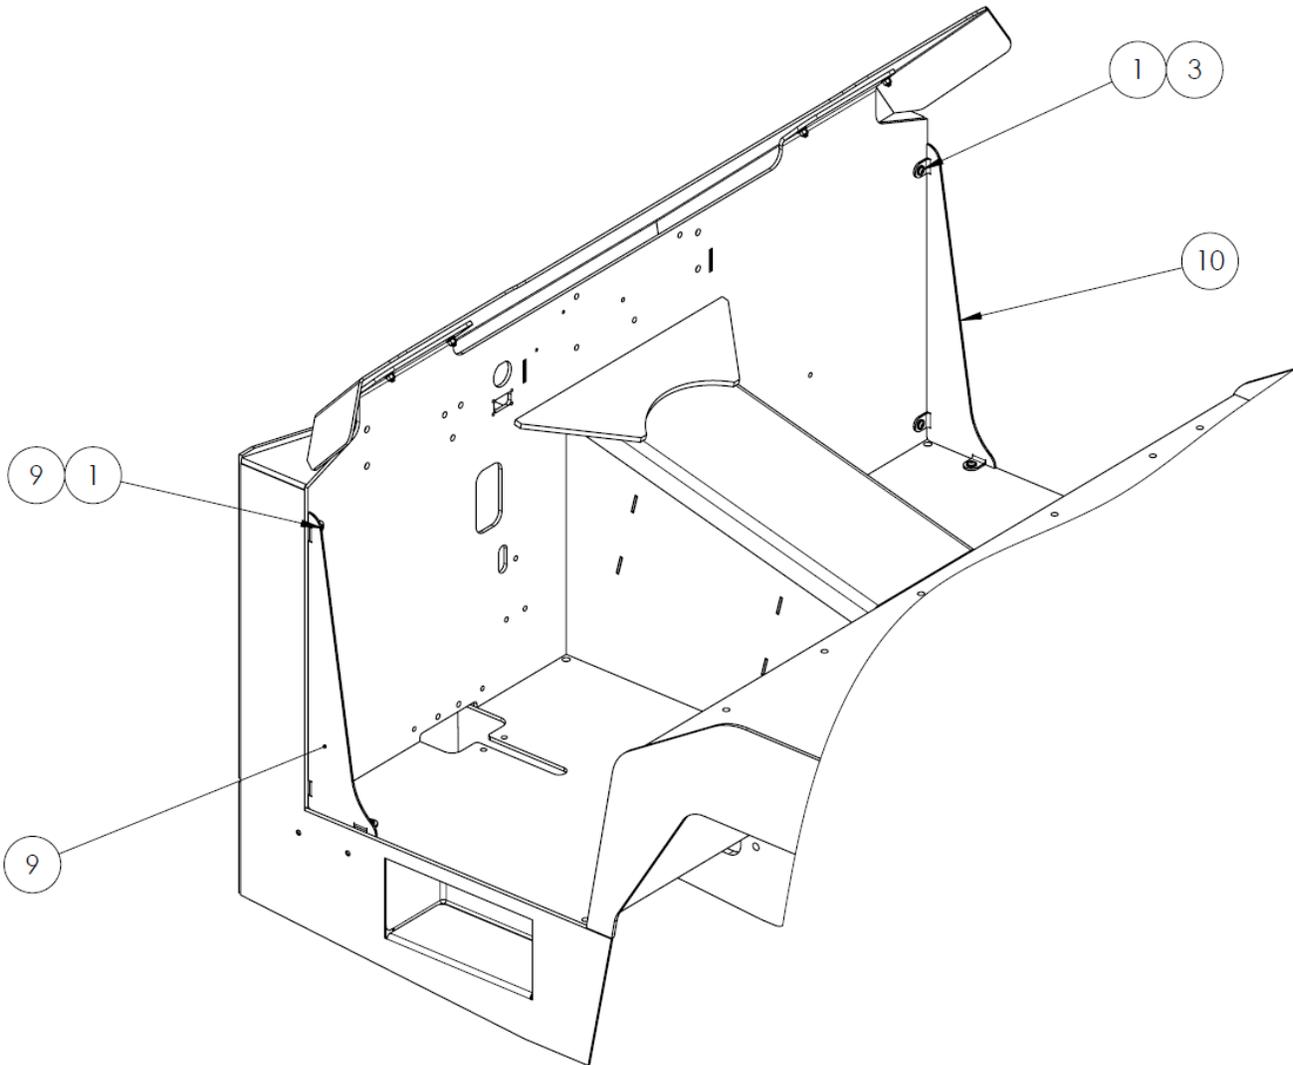


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	12
2	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	10
3	G-1250-1050N	FLATWASHER, 1/4 NARROW	28
4	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	2
5	G-1476-105010	SCREW, 1/4-20 X 1.0" LG. SST SOC BUTT. HD CAP	6
6	J-8627-00	WIND DEFLECTOR (P)	1
7	S-4369-00	COVER CENTER, BEACON (WP)	1
8	S-4561-00	COVER PLATE, HEATER BOX (P)	1
9	S-4562-00	TRIM PANEL, LH (WP)	1
10	S-4563-00	TRIM PANEL, RH (WP)	1
11	N/A	ASY, POST MOUNTED LED STROBE	1

23.2 OPTION A - NO OPERATOR CAB (continued)

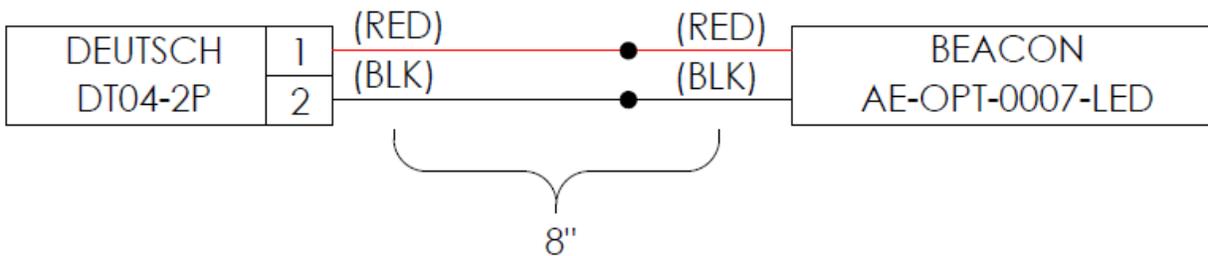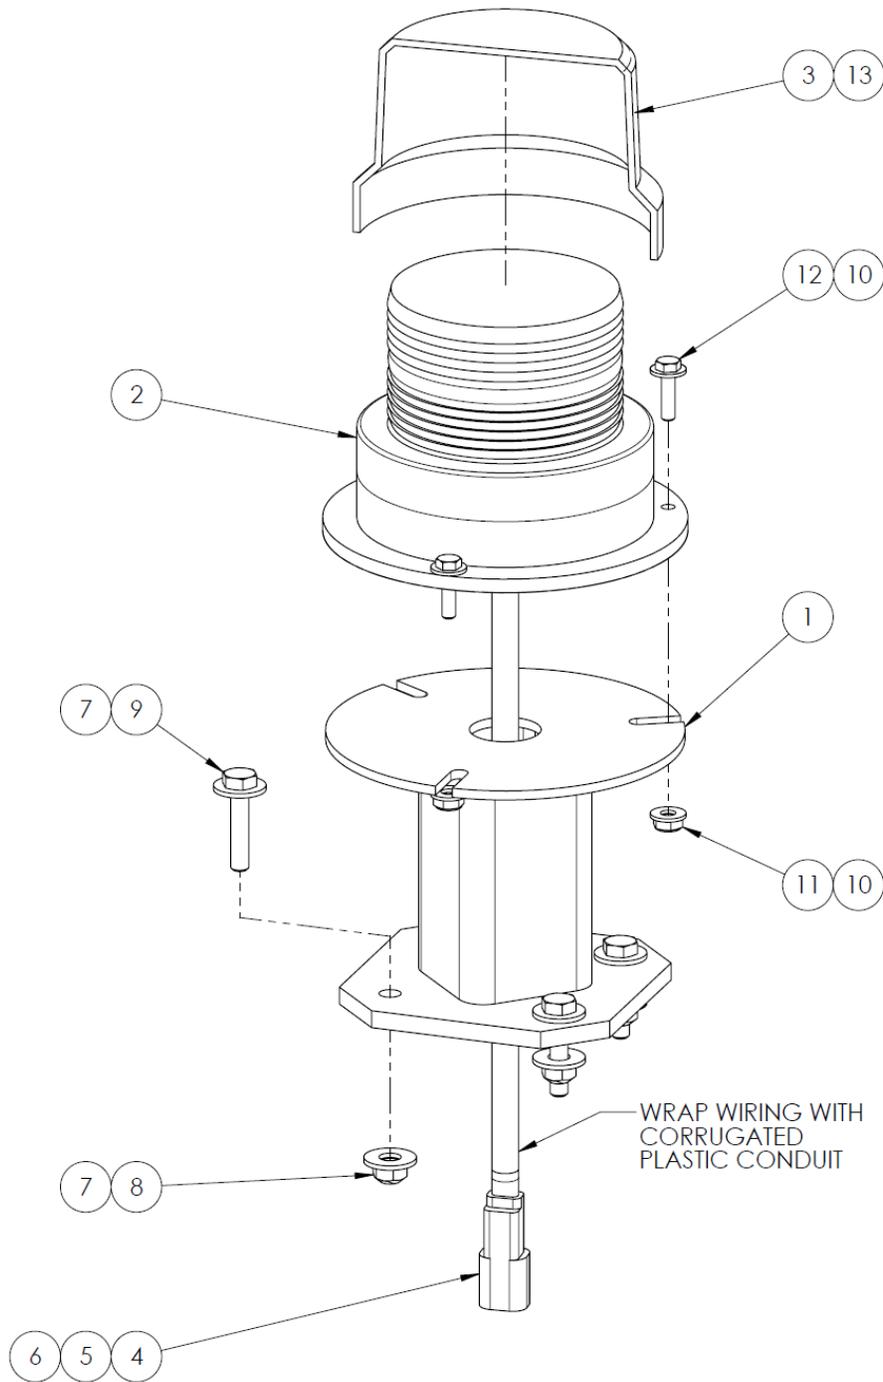



23.2 OPTION A - NO OPERATOR CAB (continued)


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.


Item	Part Number	Description	Qty
1	Z-10766-00	WLD, BEACON POST (WP)	1
2	AE-OPT-0007-LED	LED STROBE	1
3	JP-166	LENS HALF COVER	1
4	DT04-2P	DEUTSCH CONNECTOR	1
5	W2P	DEUTSCH LOCK	1
6	0460-215-16141	DEUTSCH TERMINAL	2
7	G-1250-1050W	FLATWASHER, 1/4 WIDE	8
8	G-1727-1050	NUT, 1/4-20 TOP LOCK ZINC	4
9	G-1100-105012	BOLT, 1/4-20 X 1-1/4" LG HEX HD GR 5	4
10	G-1250-1030N	FLATWASHER, #10 NARROW	6
11	G-1203-1035	JAMNUT, 10-32 ELASTIC	3
12	G-1150-103506	SCREW, #10-32 X 3/4" LG HEX HD MACHINE	3
13	H-5193-12-03.0	HOOK & LOOP, WITH ADHESIVE BACKING	1

23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING


SEE Z-12246 FOR HOLE DRILLING LOCATIONS (15)

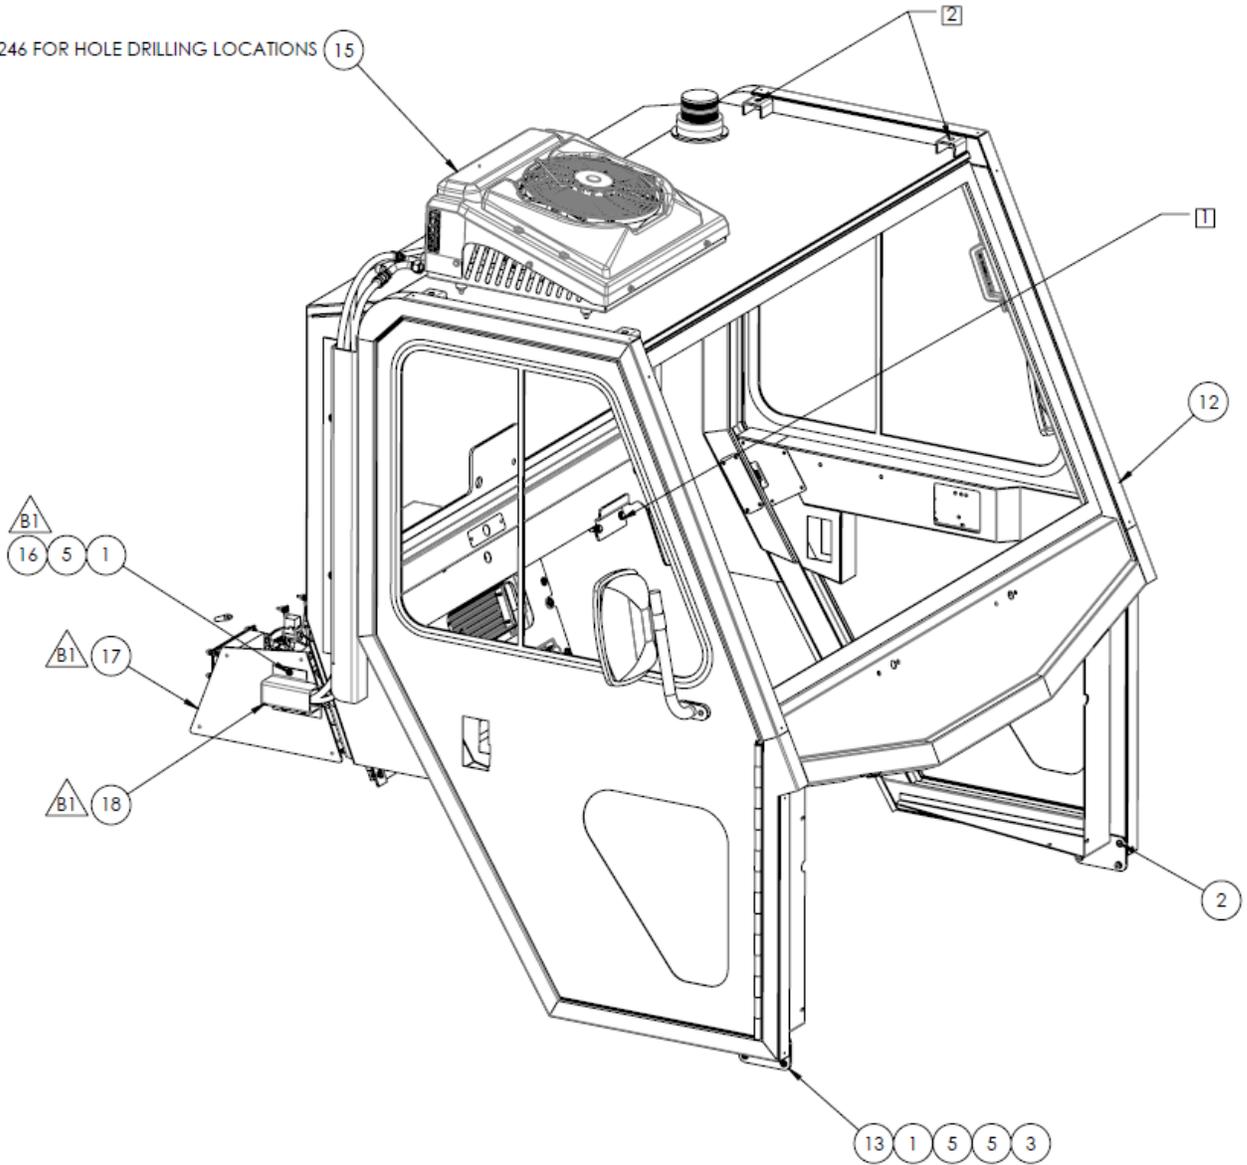


23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

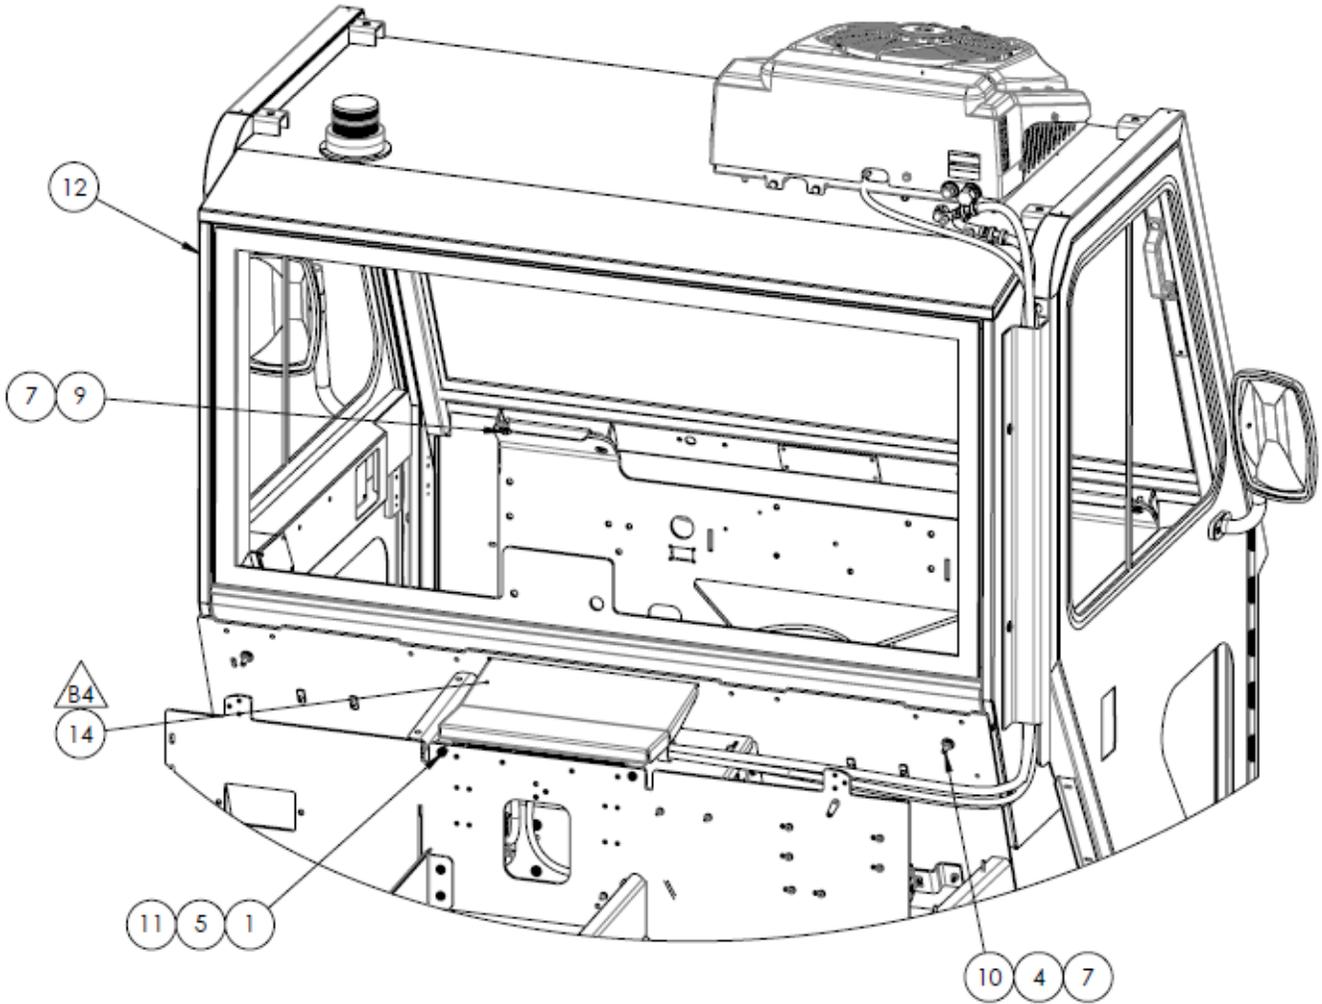

23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

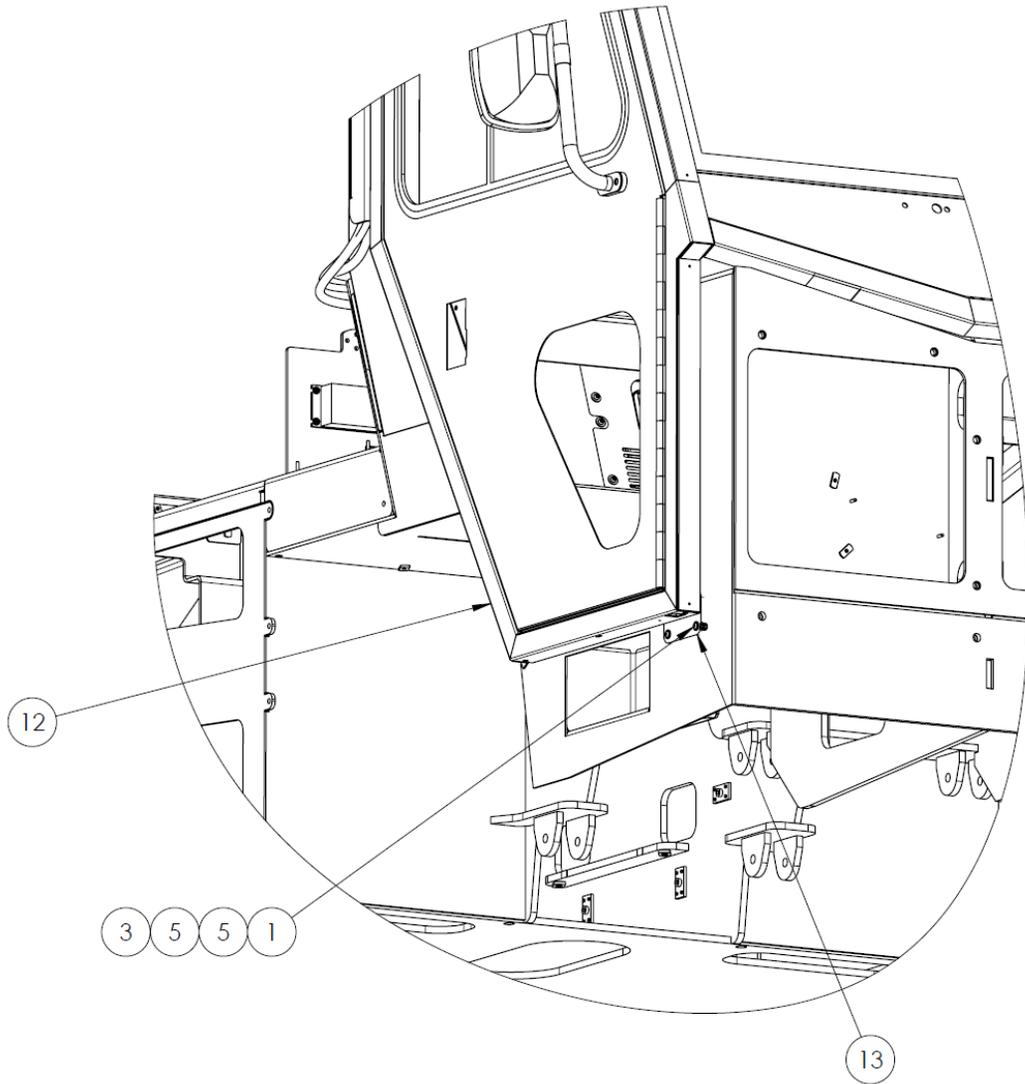

23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

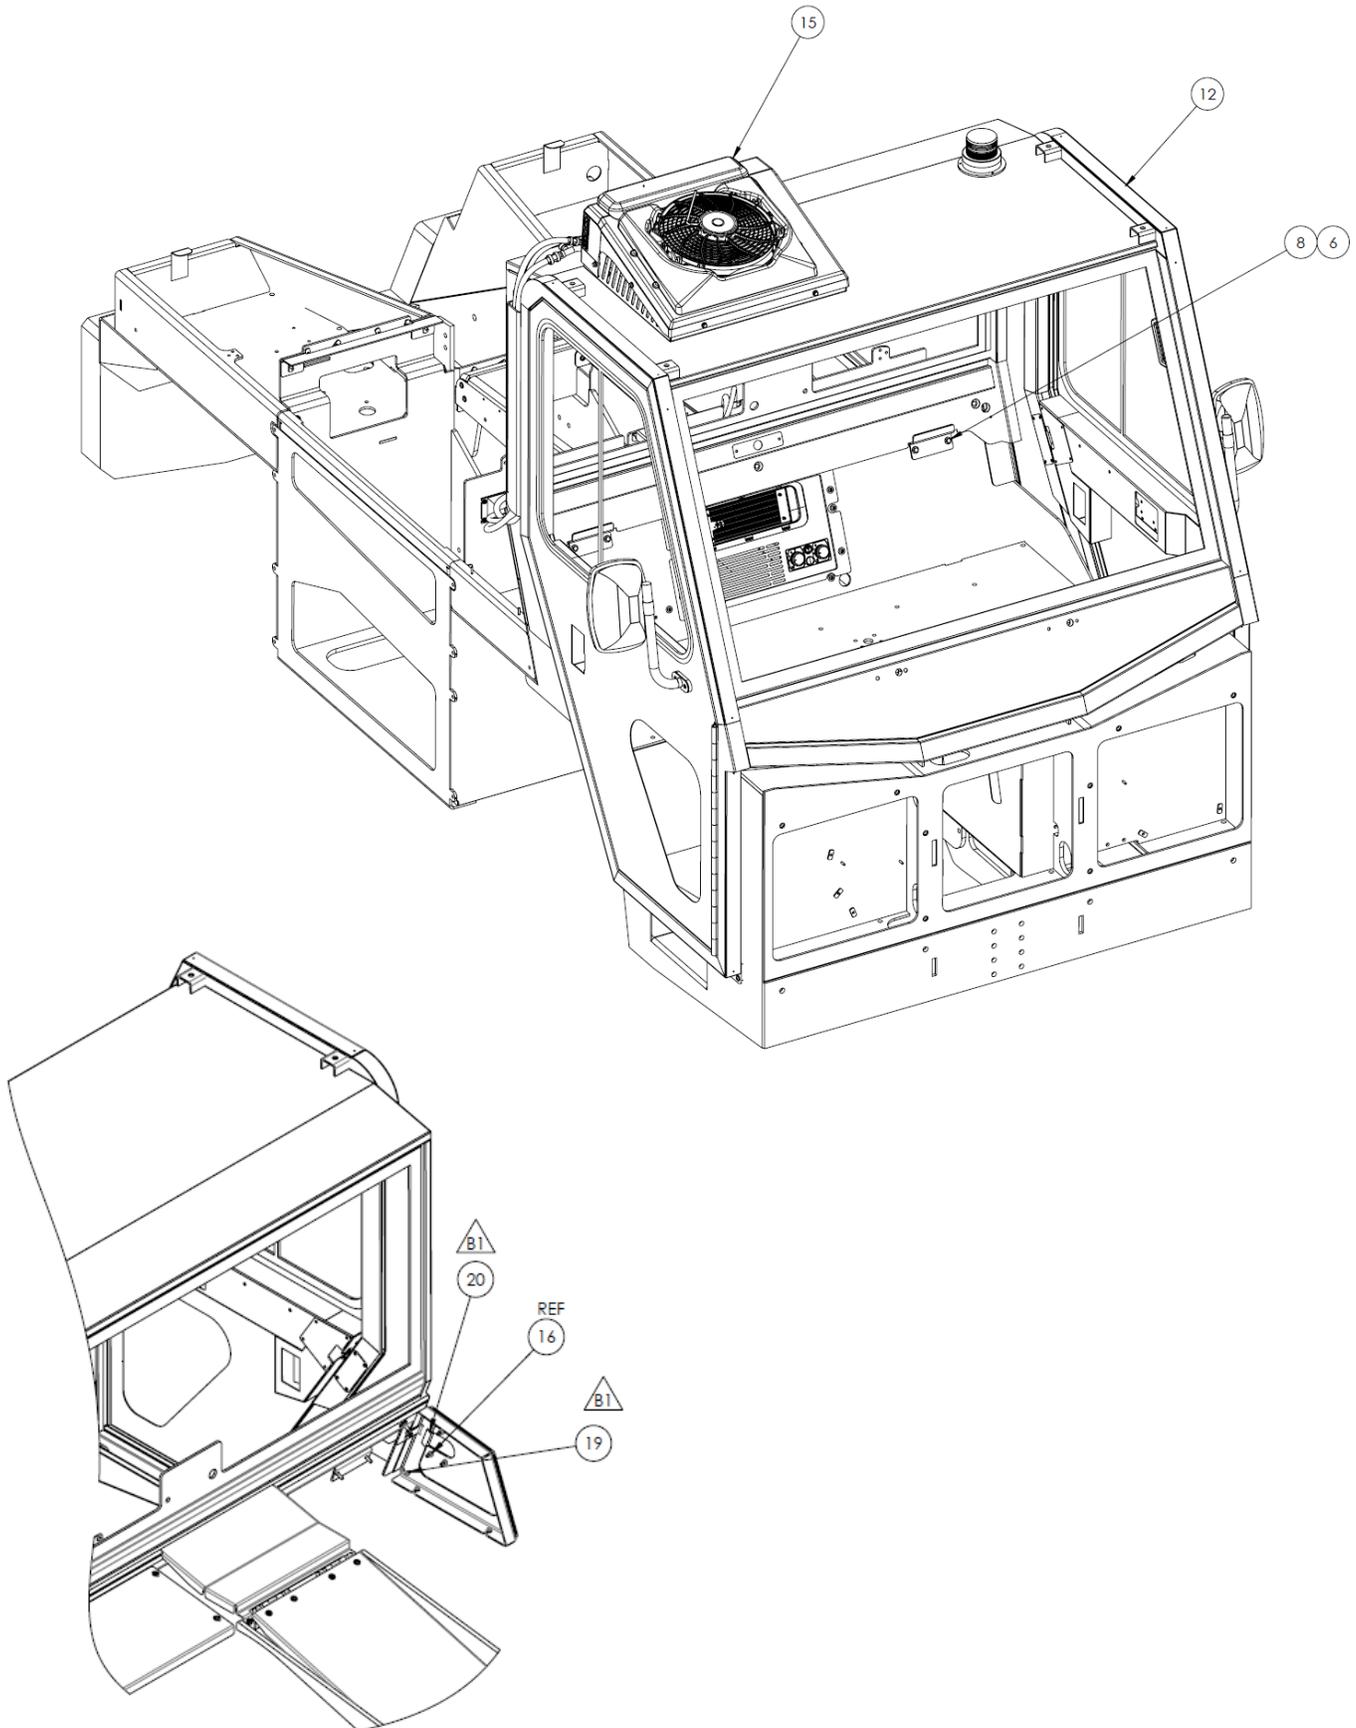




23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	9
2	G-1152-105210	SCREW, 1/4-20 X 1.0" LG SOCKET FLAT HD CAP	4
4	G-1202-1050	STOPNUT, 1/4-20 ELASTIC	4
4	G-1202-1060	STOPNUT, 5/16-18 ELASTIC	3
5	G-1250-1050N	FLATWASHER, 1/4 NARROW	13
6	G-1250-1050W	FLATWASHER, 1/4 WIDE	4
7	G-1250-1060W	FLATWASHER, 5/16 WIDE	10
8	G-1420-105010	BOLT, 1/4-20 X 1.0" LG HEX HD GR 8	4
9	G-1420-106010	BOLT, 5/16-18 X 1.0" LG. HEX HD GR 8	4
10	G-1420-106014	BOLT, 5/16-18 HEX HD GR 8	3
11	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	2
12	H-4942	CAB, ETT-8/12X	1
13	J-8626-00	BRACKET, CAB MOUNTING (WP)	2
14	S-4368-00	COVER CENTER, NO BEACON (WP)	1
15	Z-12246	ASSY, E-HVAC	1
16	G-1439-1050-S	NUTSERT, 1/4-20 OPEN END	3
17	J-8803-00	ELECTRICAL FAUX DOOR (P)	1
18	S-4619-00	COVER, ELECTRICAL FAUX DOOR (P)	1
19	G-1202-1035	STOPNUT, #10-32 ELASTIC	5
20	NVSP-24-042-CA	EDGE TRIM 1/8"	3


23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

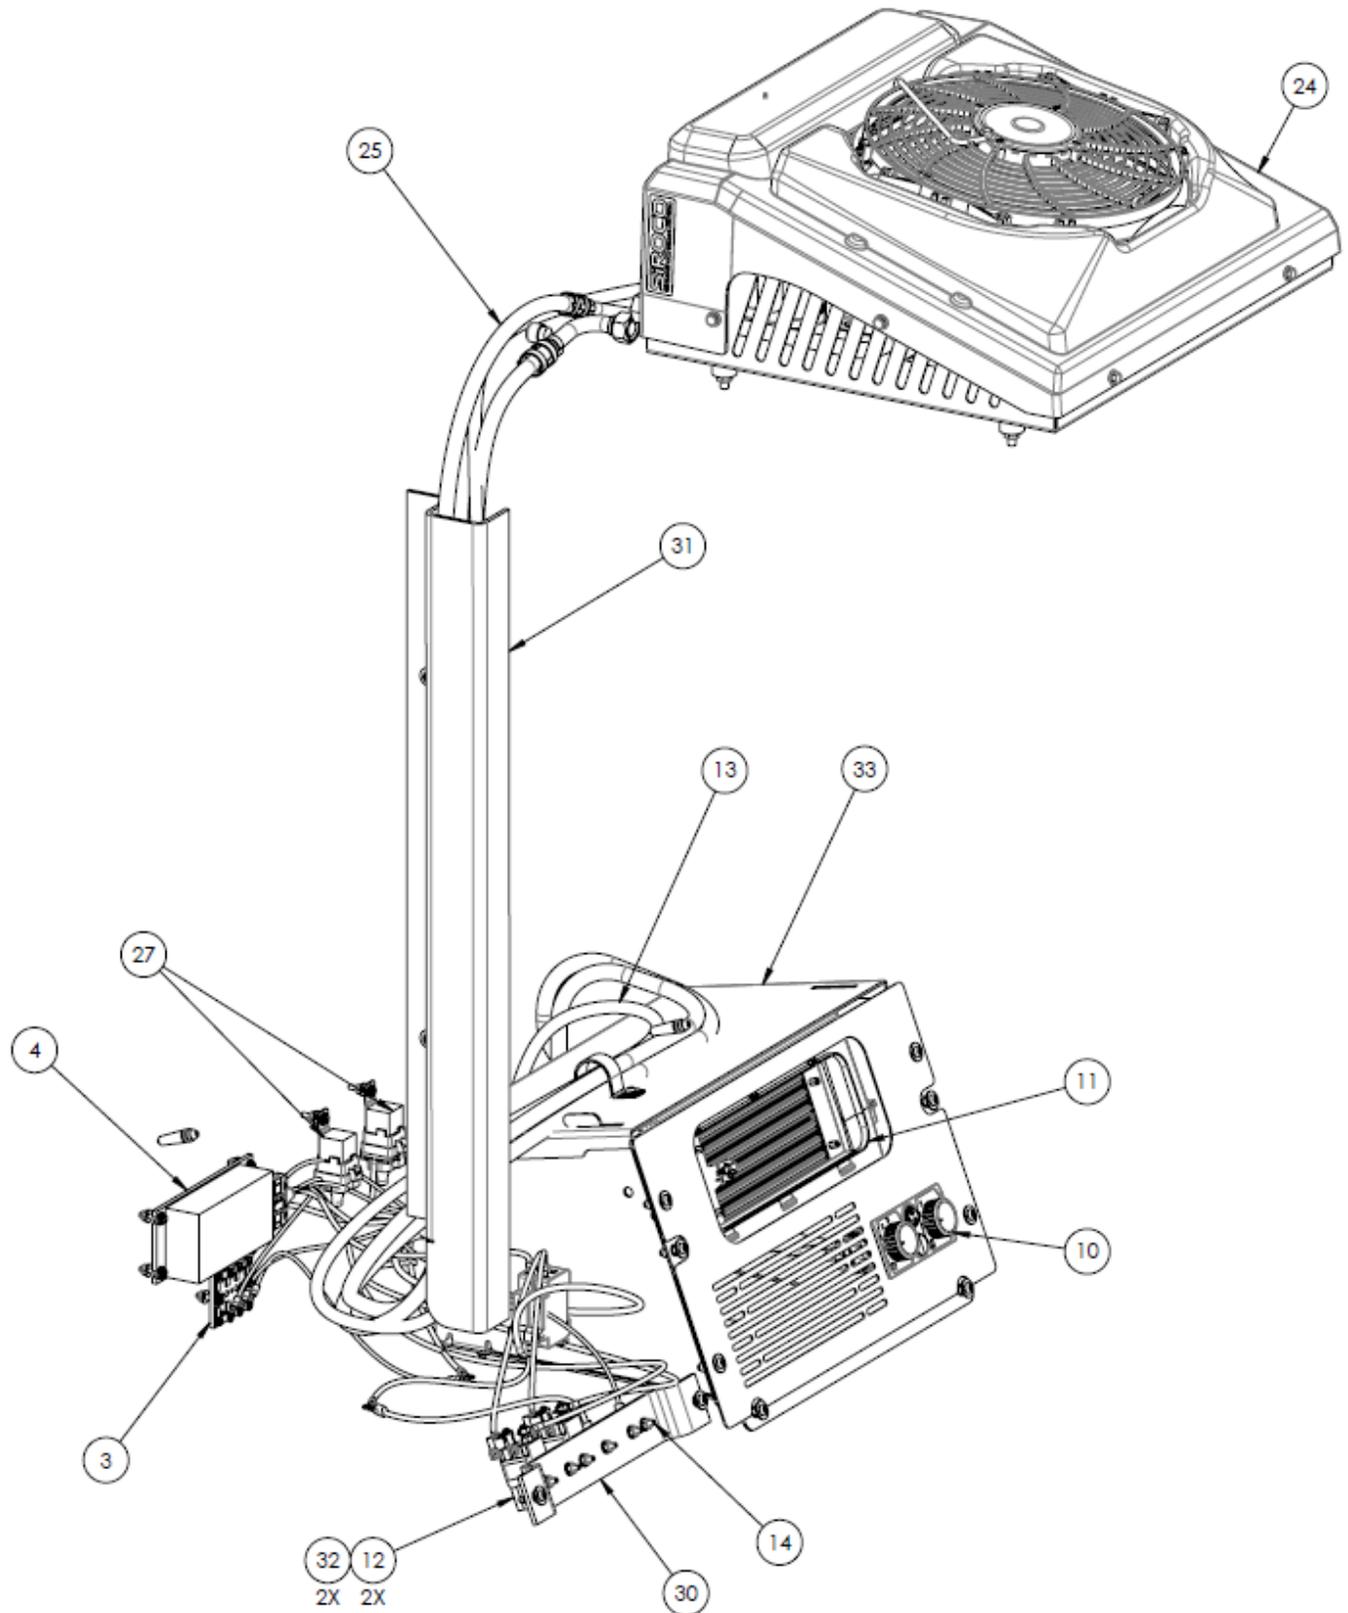


23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

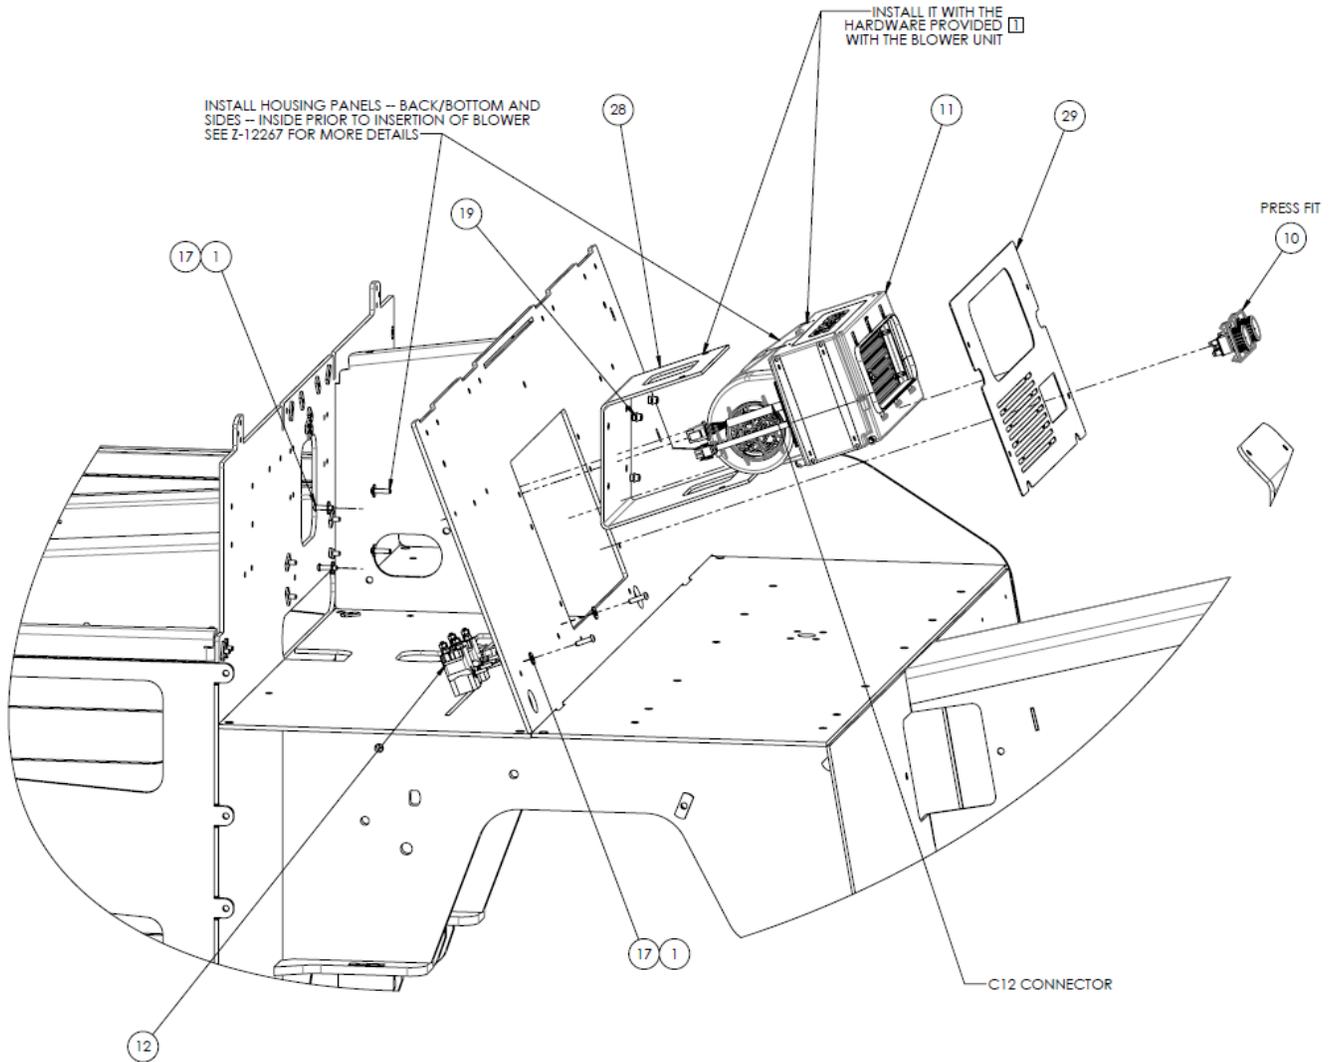


23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

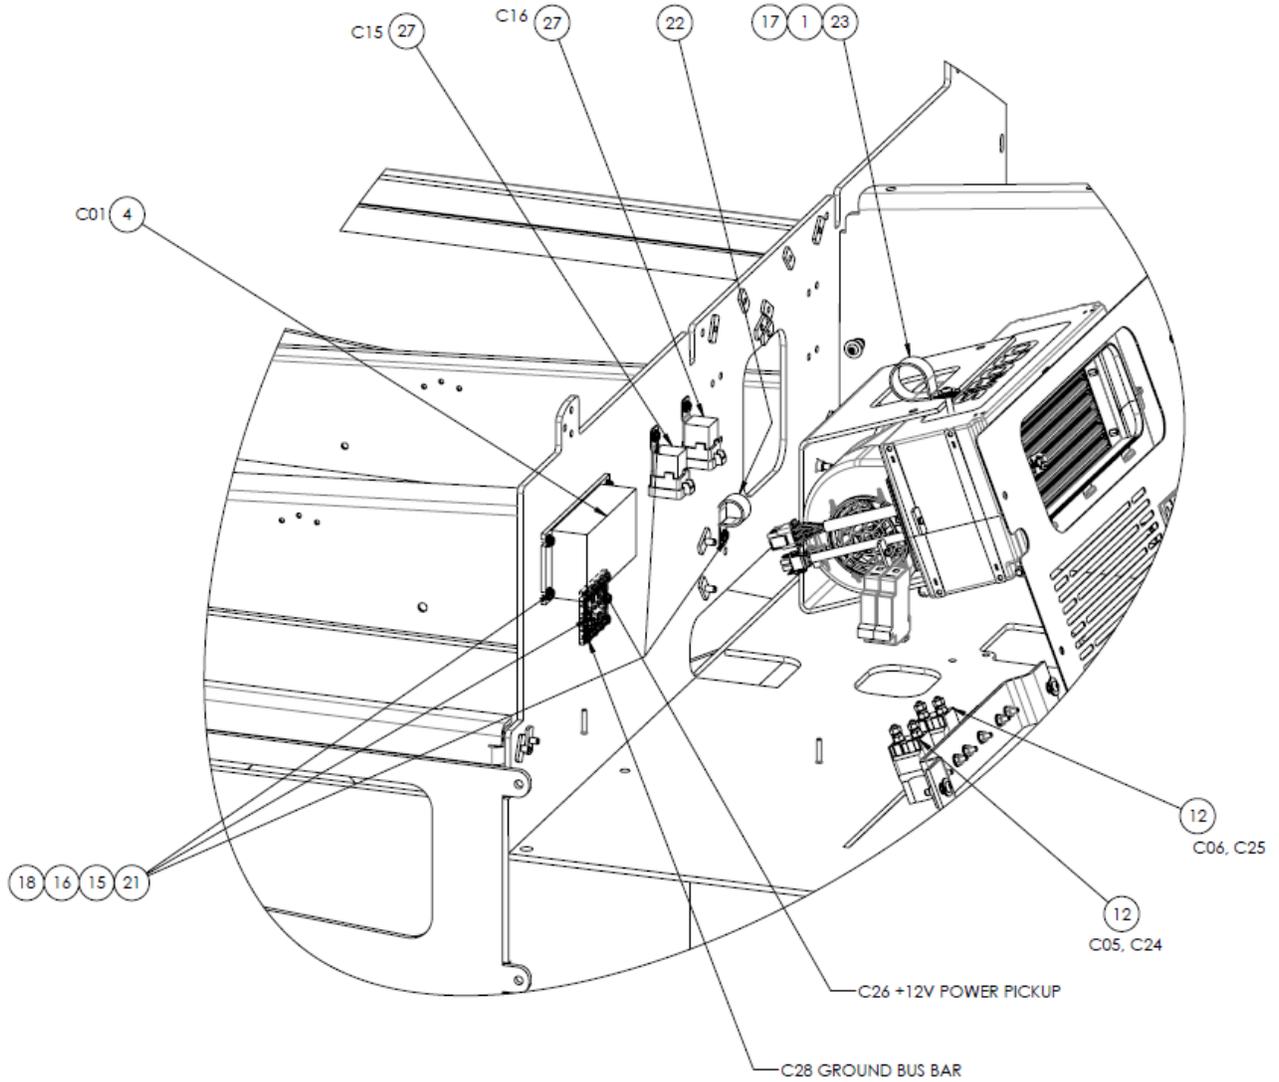


23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

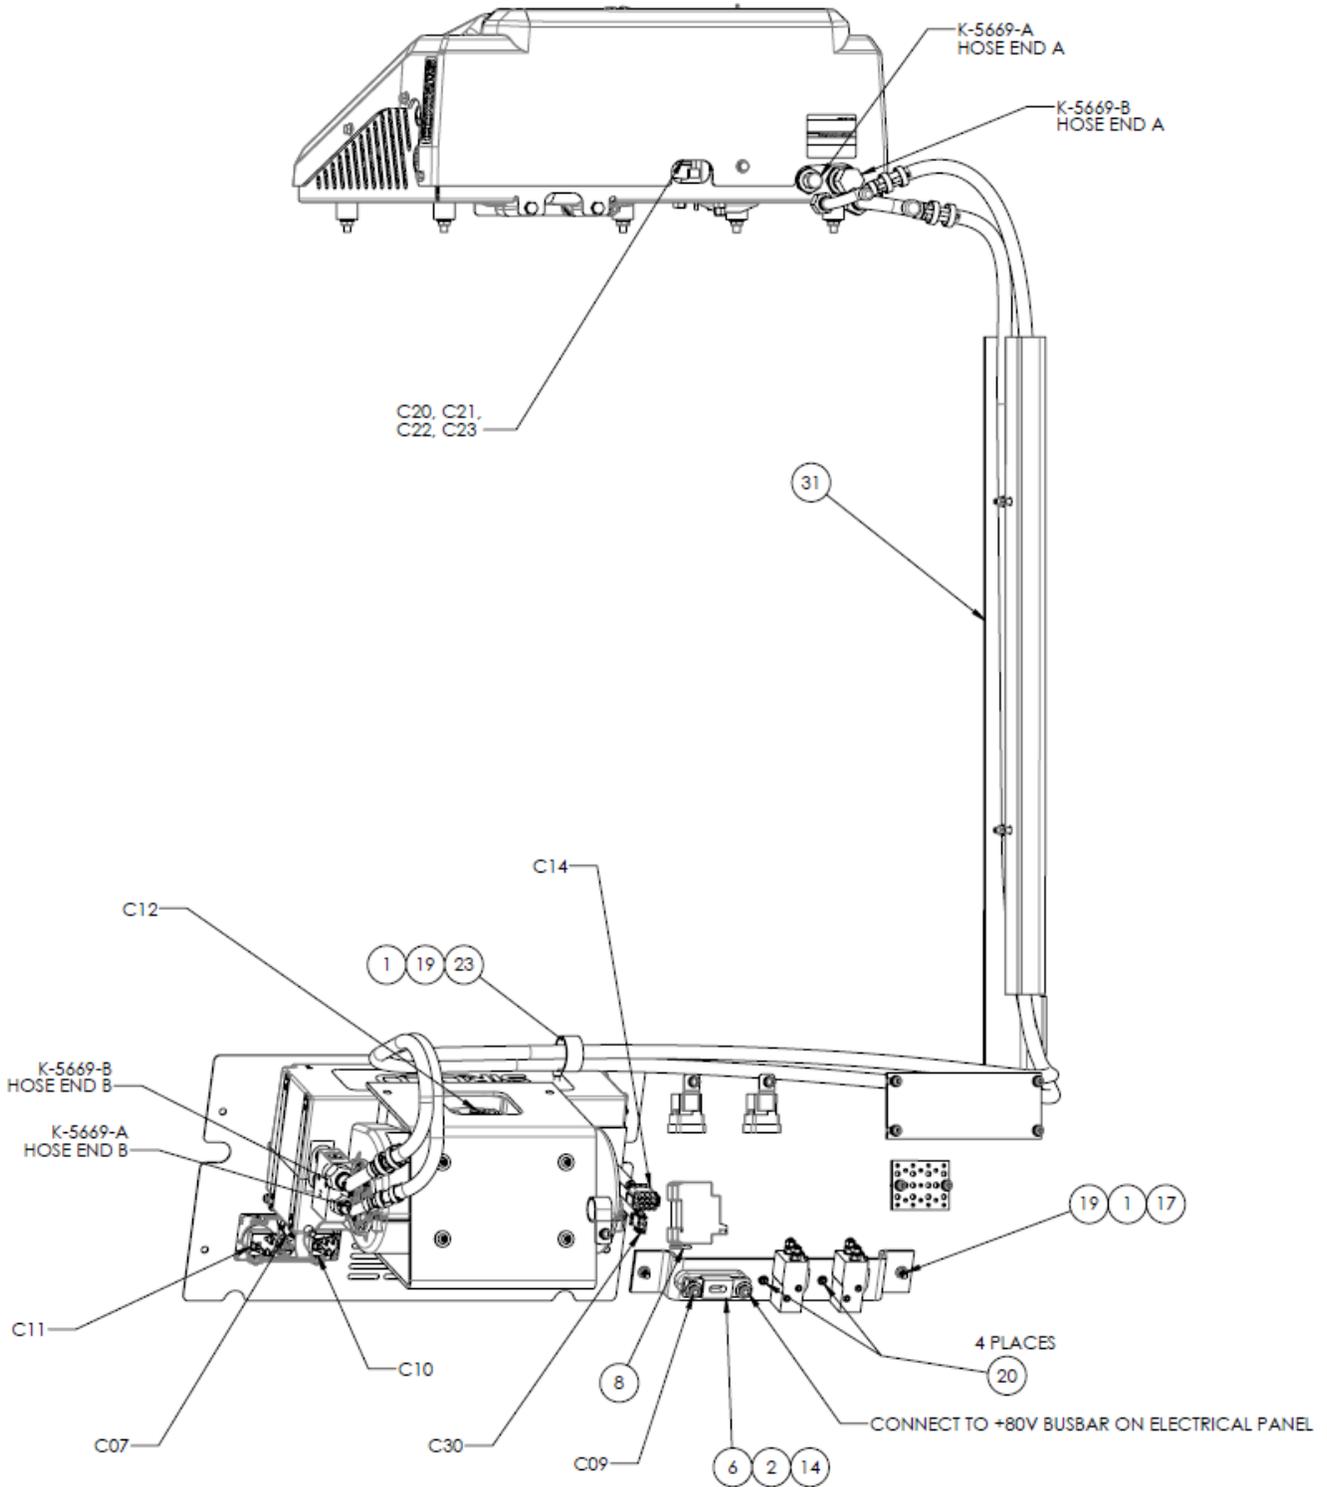

23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

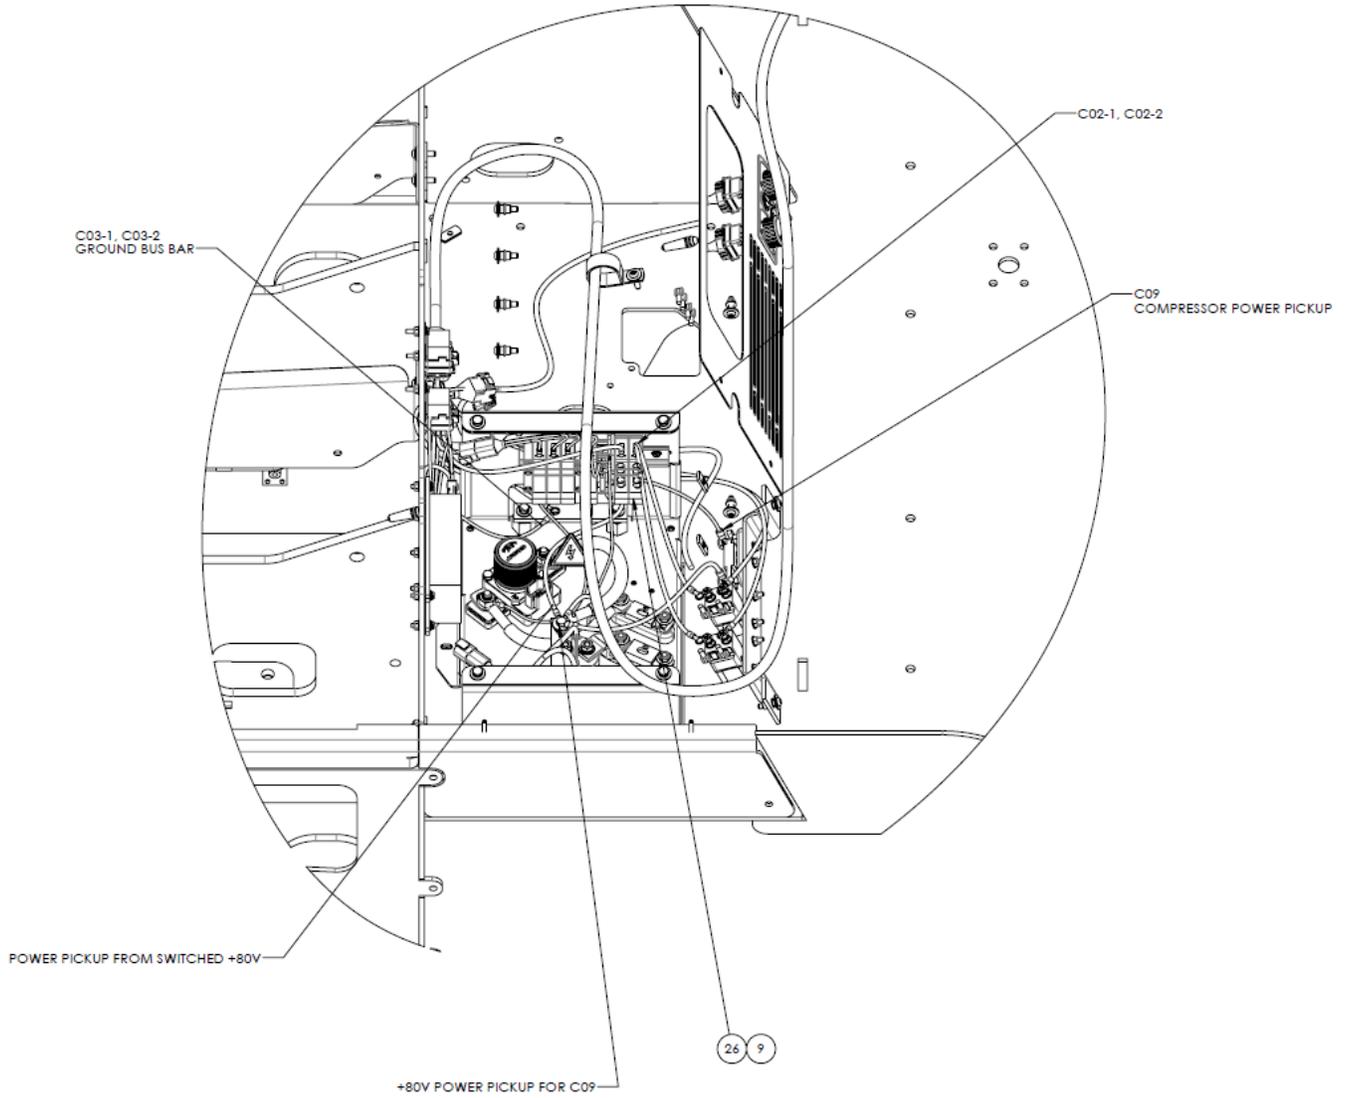

23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

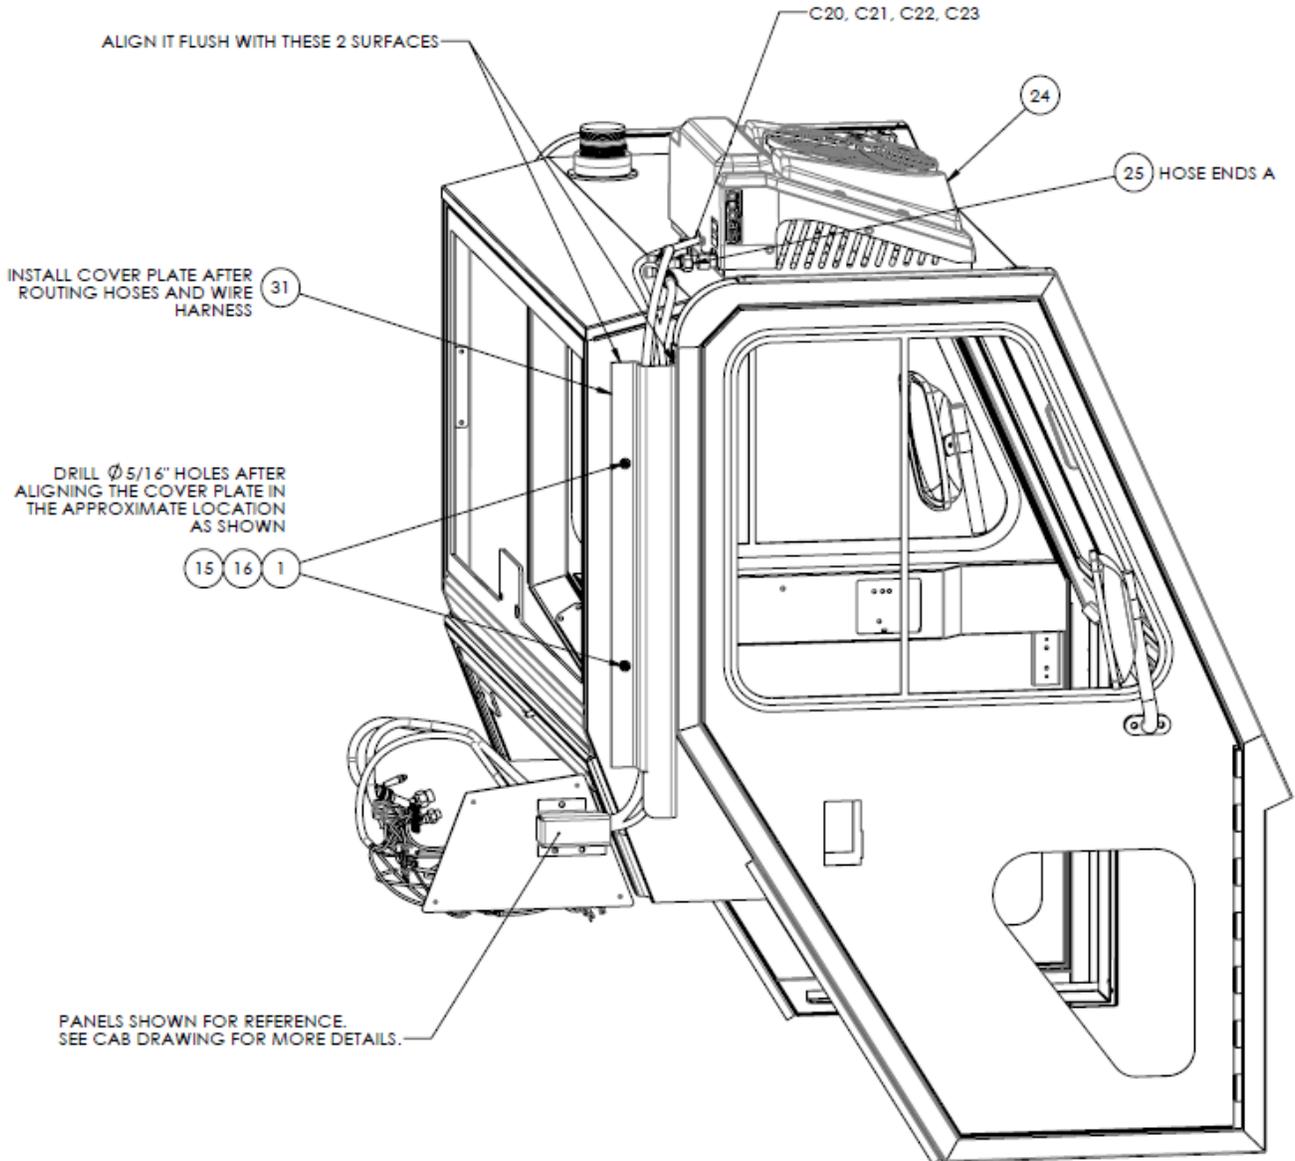




23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	326-009	BHCS, 1/4-20 x 1" LG	9
2	A-MTT5-0225	ANN FUSE HOLDER	1
3	A-TT4-00300	BUS BAR, FIBER BOARD	1
4	AE-OPT-0320-B	DC-DC CONVERTER, 300W	1
5	EC-1180-27	TERMINAL, RING RED 3/8	4
6	EC-1619-04	FUSE, LOW VOLTAGE LIMITER	1
7	EC-3299-8-RED	WIRE, TXL	20"
8	EC-3361-2	FUSE INPUT BUS, 2 POLE	1
9	EC-3429-30	10X38 FUSE, 500V, 30A, SLOW-BLOW	2
10	EC-3582	CONTROL PANEL, HVAC	1
11	EC-3583	E-HVAC, SANOVA F84	1
12	EC-3589	CONTACTOR 12V DC	2
13	EC-3591	HARNESS, HVAC	1
14	G-1152-103712	SCREW, #10-32 X 1-1/4" LG SOCKET FLAT HD CAP	2
15	G-1202-1035	STOPNUT, #10-32 ELASTIC	17
16	G-1250-1030N	FLATWASHER, #10	26
17	G-1250-1050W	FLATWASHER, 1/4 WIDE	9
18	G-1251-1030R	LOCKWASHER, #10 REGULAR	6
19	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	7
20	G-1720-103506	SCR,#10-32X.75 MACH HEX WSH HD	4
21	G-1720-103510	SCR,#10-32X1.0 MACH HEX WSH HD	9
22	G-1847-16	CUSH CLAMP, Ø1.00, Ø.406 MTG	1
23	G-1847-24	CUSH CLAMP, Ø1.50, Ø.406 MTG	1
24	H-5189	CONDENSER-COMPRESSOR, AC	1
25	K-5669	KIT, AC HOSES	1
26	LAVT-05-006-CA	10X 38 DIN DIN RAIL MOUNTED FUSE HOLDER	2
27	NVSP-31-002-CA	SEALED RELAY	2
28	S-4540-00	BRACKET, E-HVAC	1
29	S-4542-00	DIFFUSER PLATE, HEATER BOX (P)	1
30	S-4546-00	BASE PLATE, CONTACTORS	1
31	S-4560-00	COVER, AC HOSES	1
32	S-4572	BRACKET, CONTACTOR	2
33	Z-12267	HOUSING PANELS, HVAC	1

23.3 OPTION B - OPERATOR CAB WITH AIR CONDITIONING (continued)

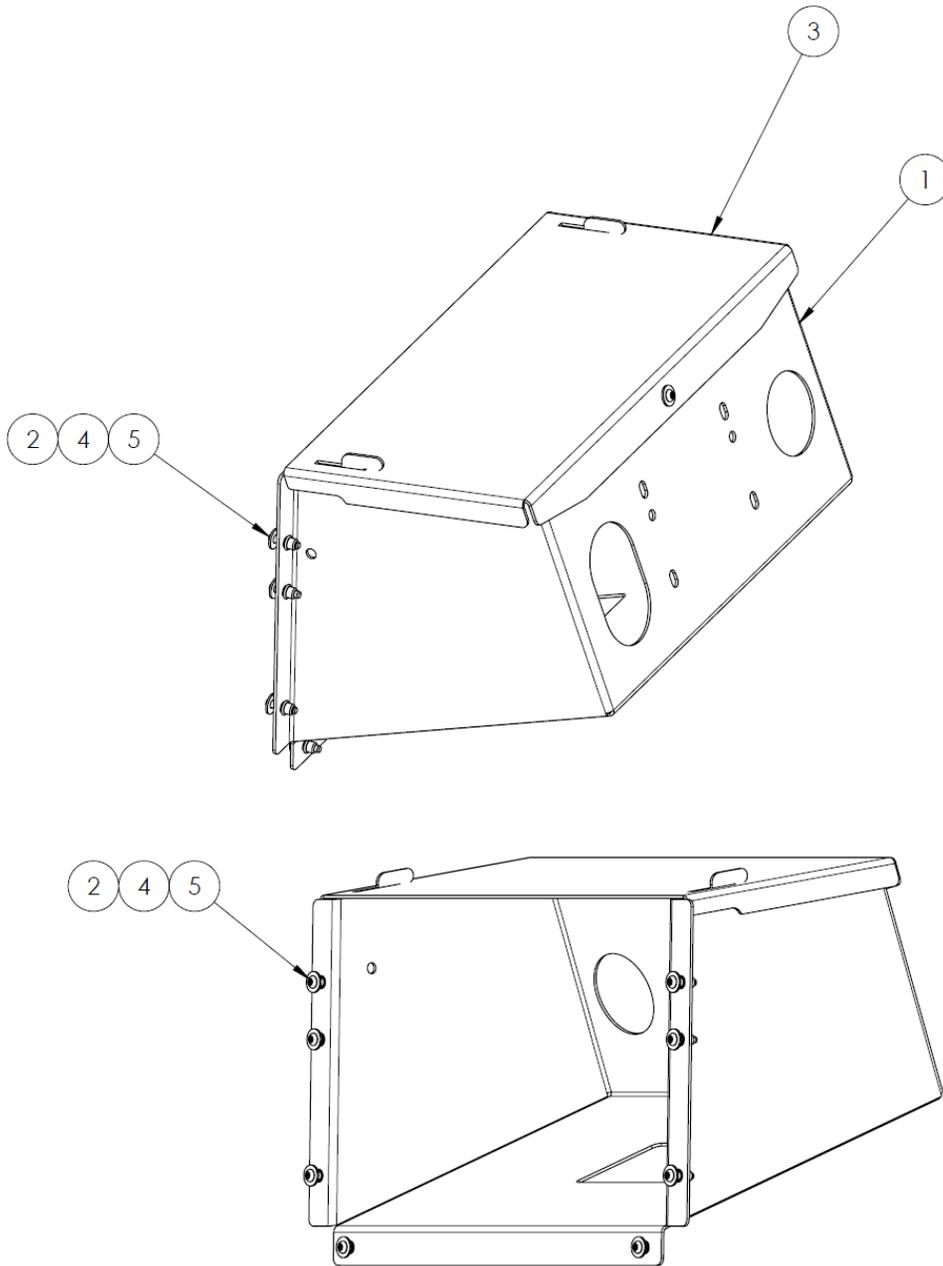

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	S-4541-00	HOUSING , E-HVAC	1
2	G-1439-1050-S	NUTSERT, THIN WALL 1/4-20	9
3	S-4549-00	TOP COVER, HEATER BOX (P)	1
4	G-1250-1050W	FLATWASHER, 1/4 WIDE	9
5	326-009	BHCS, 1/4-20 x 1" LG	9



23.4 ADDITIONAL CAB FEATURES


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Part Number	Description	Qty
4416850	FAN	2
4942DA100*	DOOR ASSEMBLY, LH*	1
4942DA200*	DOOR ASSEMBLY, RH*	1
56Z540	DOME LIGHT	4
A141	SWITCHES (FOR THE OVERHEAD CONSOLE)	2
A273-A	REAR WIPER ARM	5
A306	FRONT WIPER ARM	1
A307	FRONT WIPER BLADE	5
A310-1	DOOR STRAP	1
A412	LEFT DOOR ROTARY LATCH	1
A412-A	RIGHT DOOR ROTARY LATCH	1
A419	DOOR CATCH (STRIKER BOLT)	2
A458	LEFT DOOR OUTER HANDLE/RELEASE	1
A459	RIGHT DOOR OUTER HANDLE/RELEASE	1
A471	LEFT DOOR INNER HANDLE/RELEASE	1
A472	RIGHT DOOR INNER HANDLE/RELEASE	1
A473	REAR WIPER MOTOR	1
A474	REAR WIPER BLADE	5
IAE002	FRONT WIPER MOTOR KIT (INCLUDES MOTOR, PIVOT SHAFT, AND LINKAGE)	1
48026	SUN VISOR	1
A413	LINKAGE ASSY	1
A413-A	LINKAGE ASSY	1
A455	WINDSHIELD	1
A456	REAR WINDOW	1
A457	LOWER GLASS DOOR	1

*4942DA100 & 4942DA200 MUST BE ORDERED WITH PRODUCTION ORDERS

24.0 DECK FEATURE
24.1 DIAMOND TREAD PVC DECK

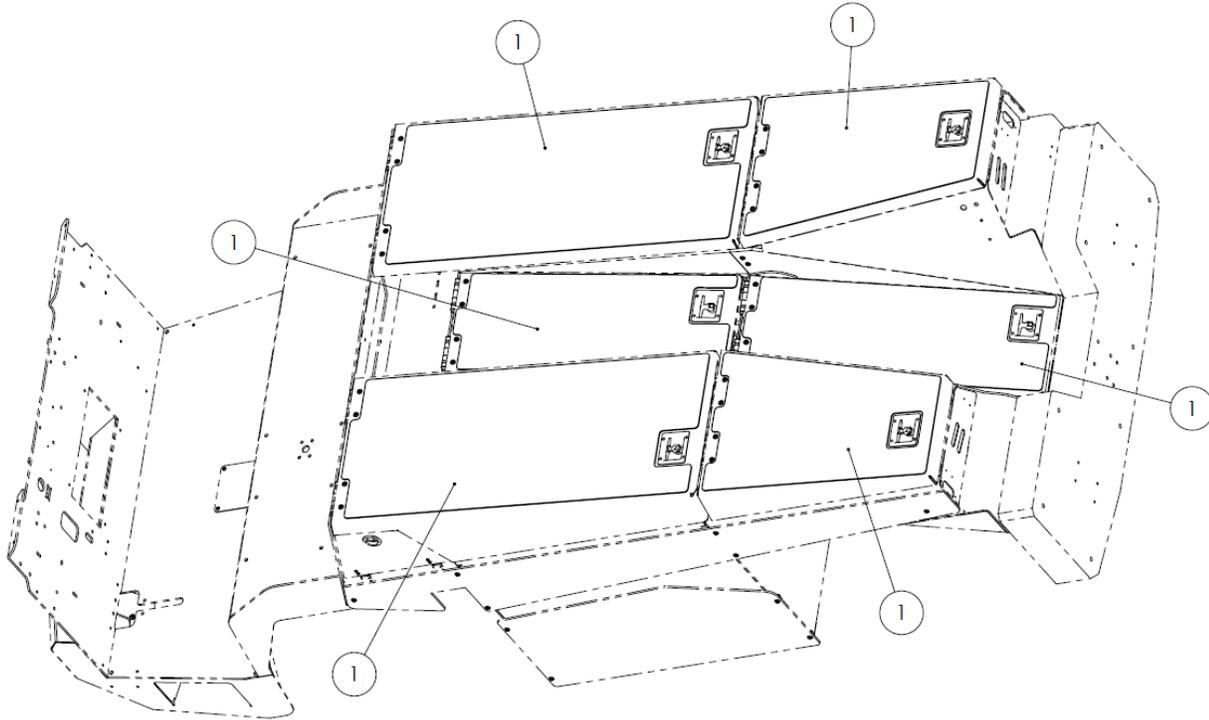


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	K-5593	KIT, DECKING, ETT8-NX	1

25.0 FIRE EXTINGUISHER, 5 LB ABC, FEATURE

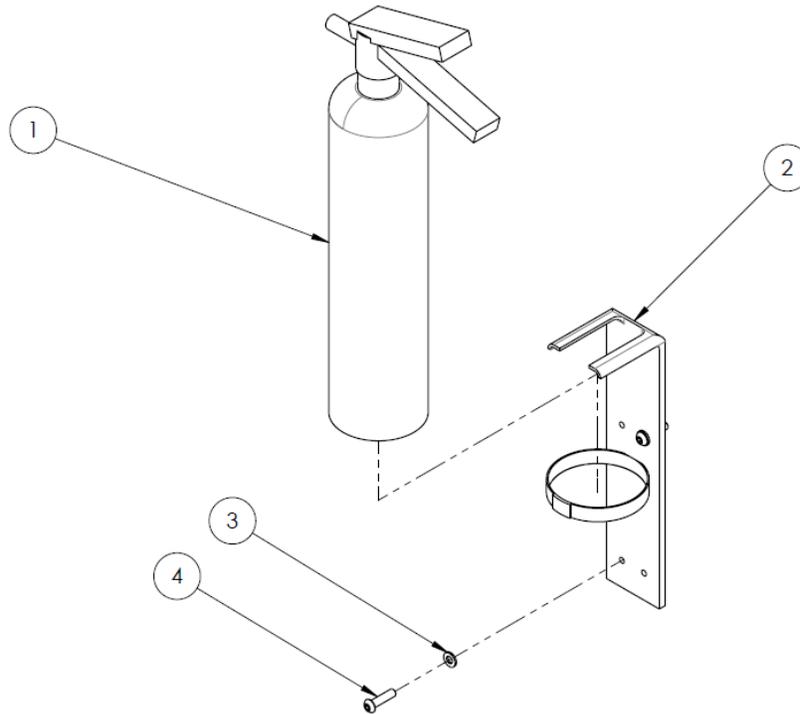


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	H-3075	FIRE, EXTINGUISHER	1
2	H-3076	BRACKET, EXTINGUISHER	1
3	G-1502-1050R	LOCKWASHER, 1/4 REGULAR S.S.	2
4	G-1476-105010	SCR, 1/4-20 SOC BUT HD CAP	2

- 26.0 SEAT FEATURE
- 26.1 OPTION A - NO SEAT SWITCH

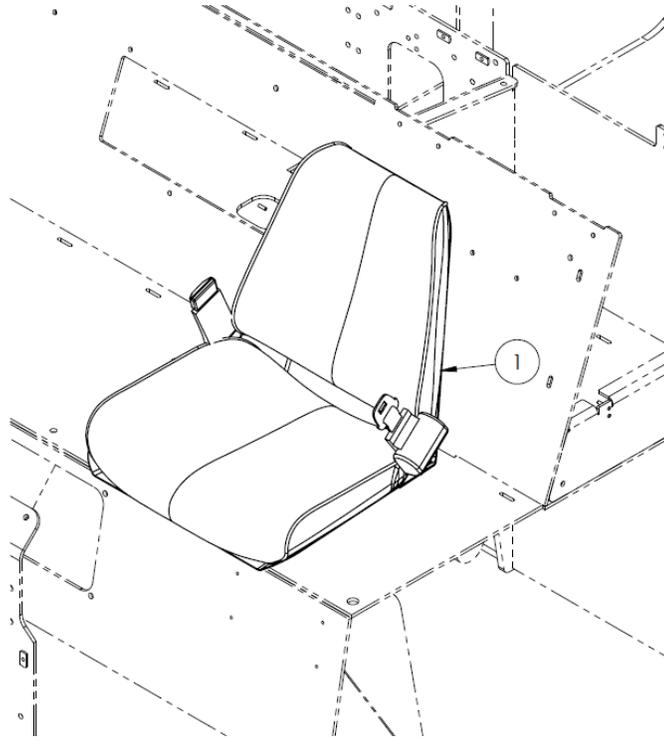


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	A-TT4-0048-1	BUCKET SEAT W BELT & HARDWARE	1

26.2 OPTION O – SEAT SWITCH


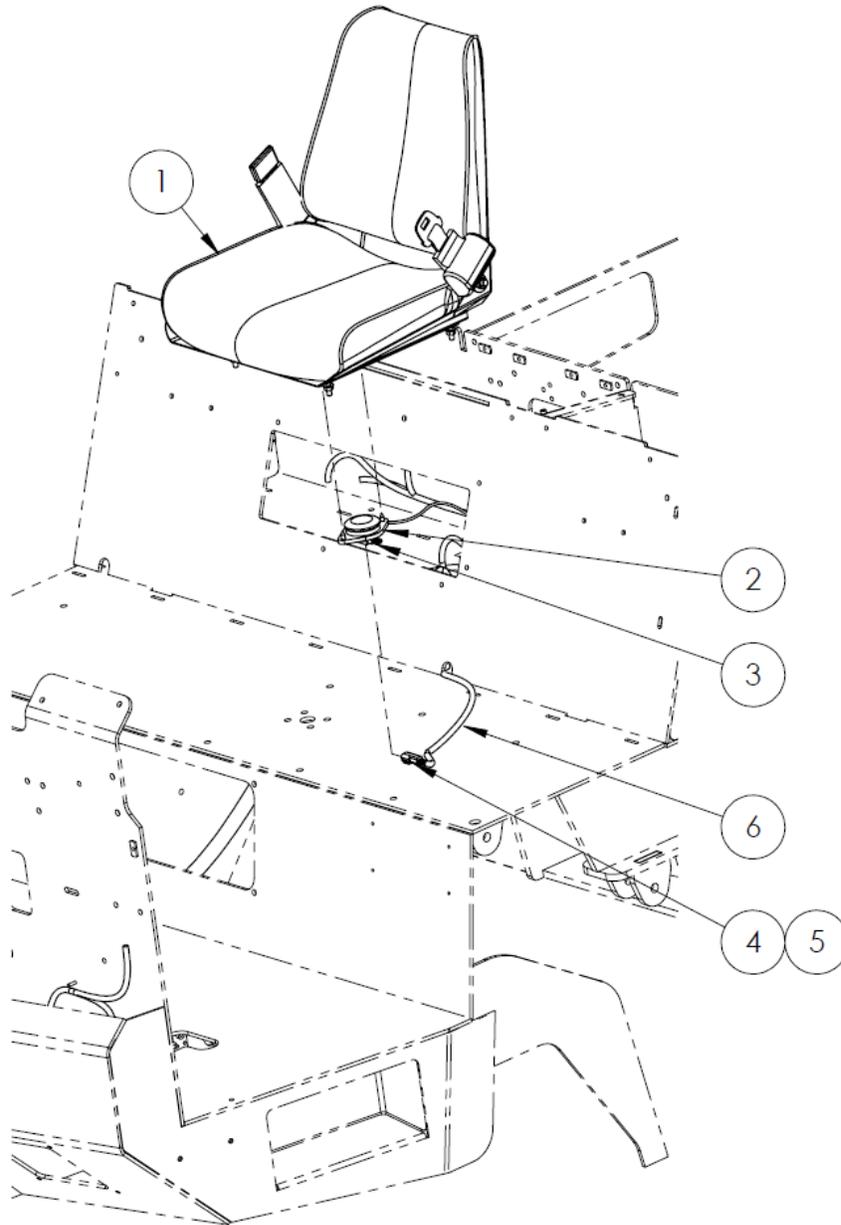


Parts List



When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	DT04-2P	DEUTSCH CONNECTOR	1
2	EC-1326-01	DISCONNECT, FEMALE RED 1/4 F/I	2
3	GR1020	KILL SWITCH FOR SINGLE SEAT	1
4	H-4912	OPERATOR SEAT (W/ SW MOUNT)	1
5	0460-215-16141	DEUTSCH TERMINAL	2



27.0 CAMERA FEATURE
27.1 BACKUP CAMERA

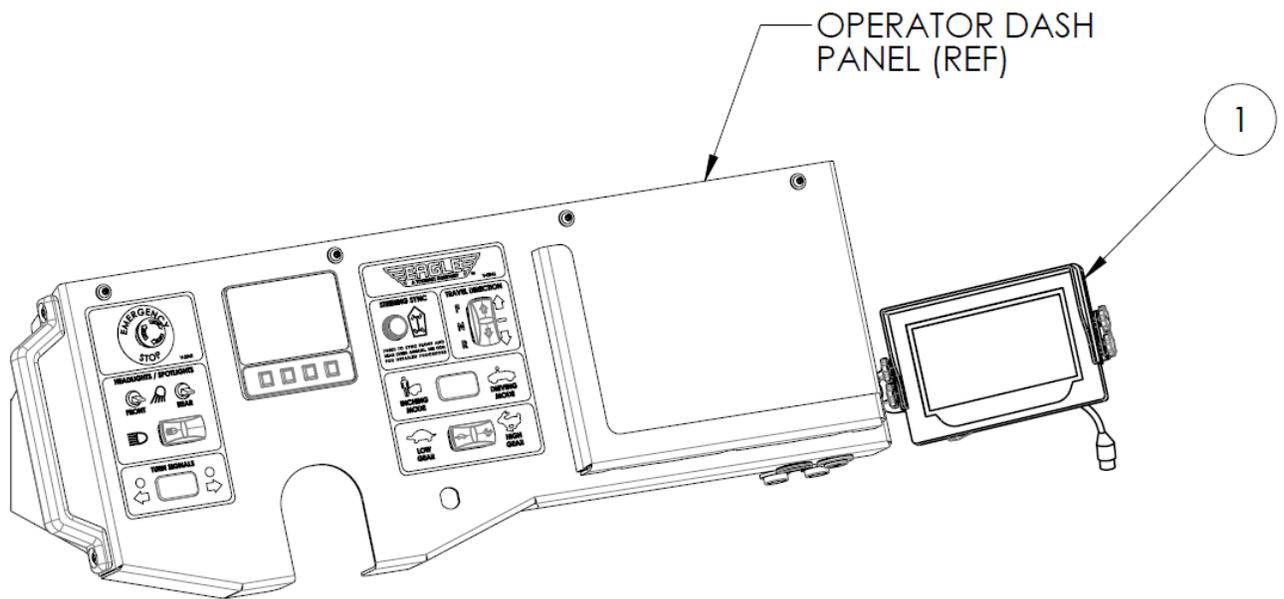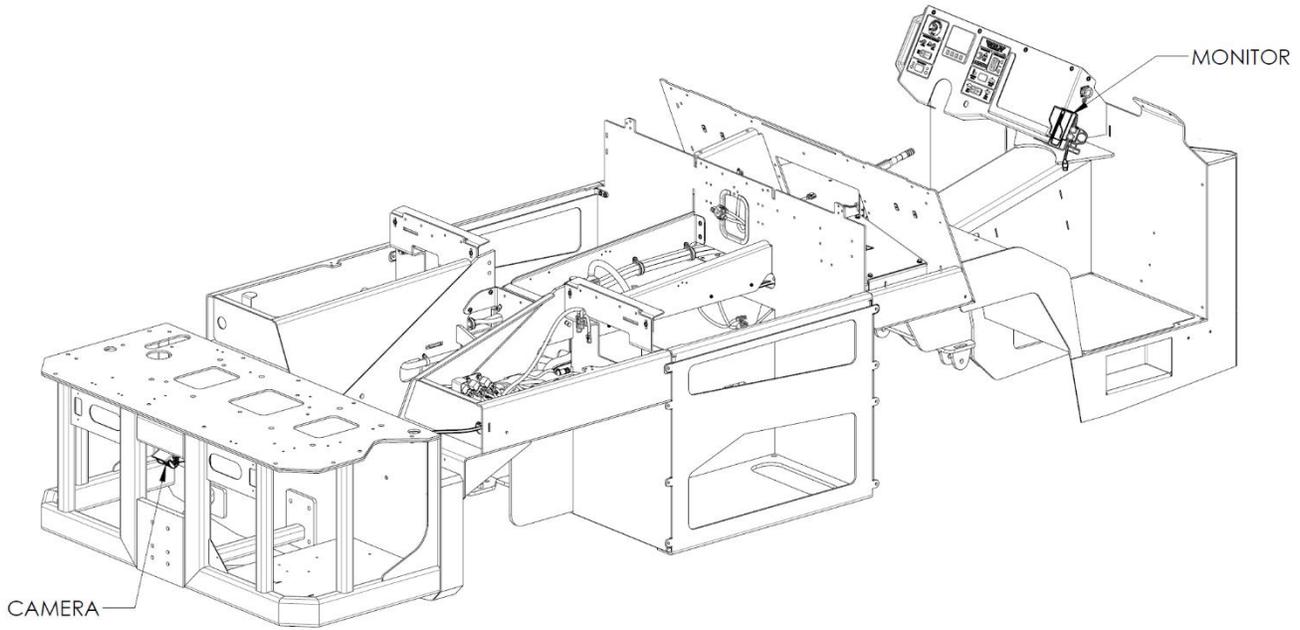

27.1 BACKUP CAMERA (continued)

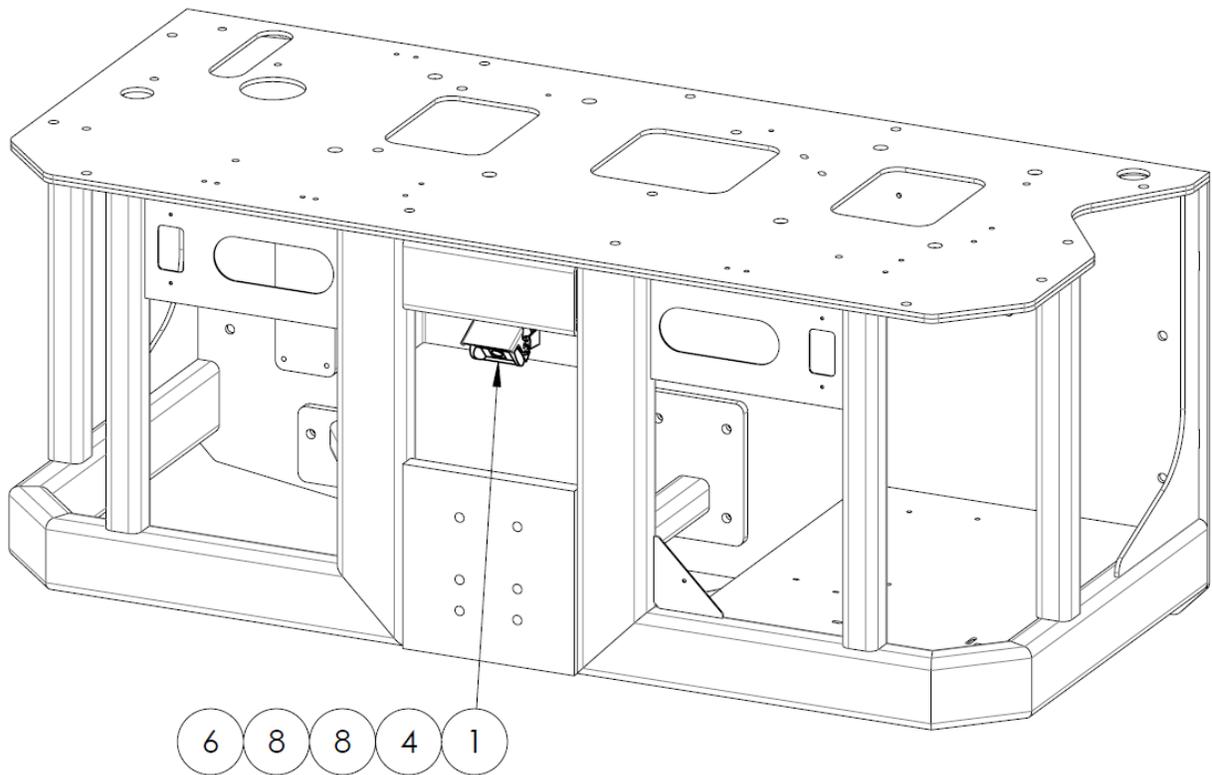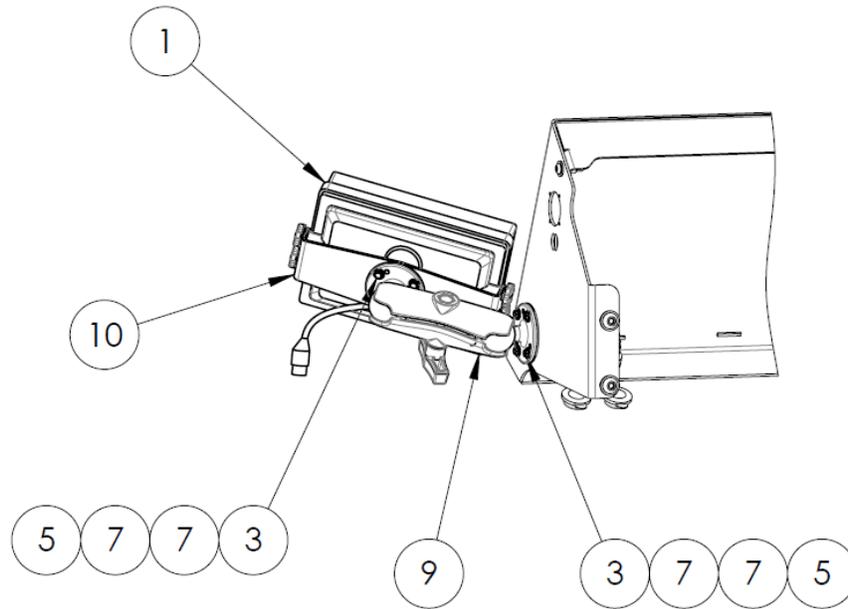

27.1 BACKUP CAMERA (continued)

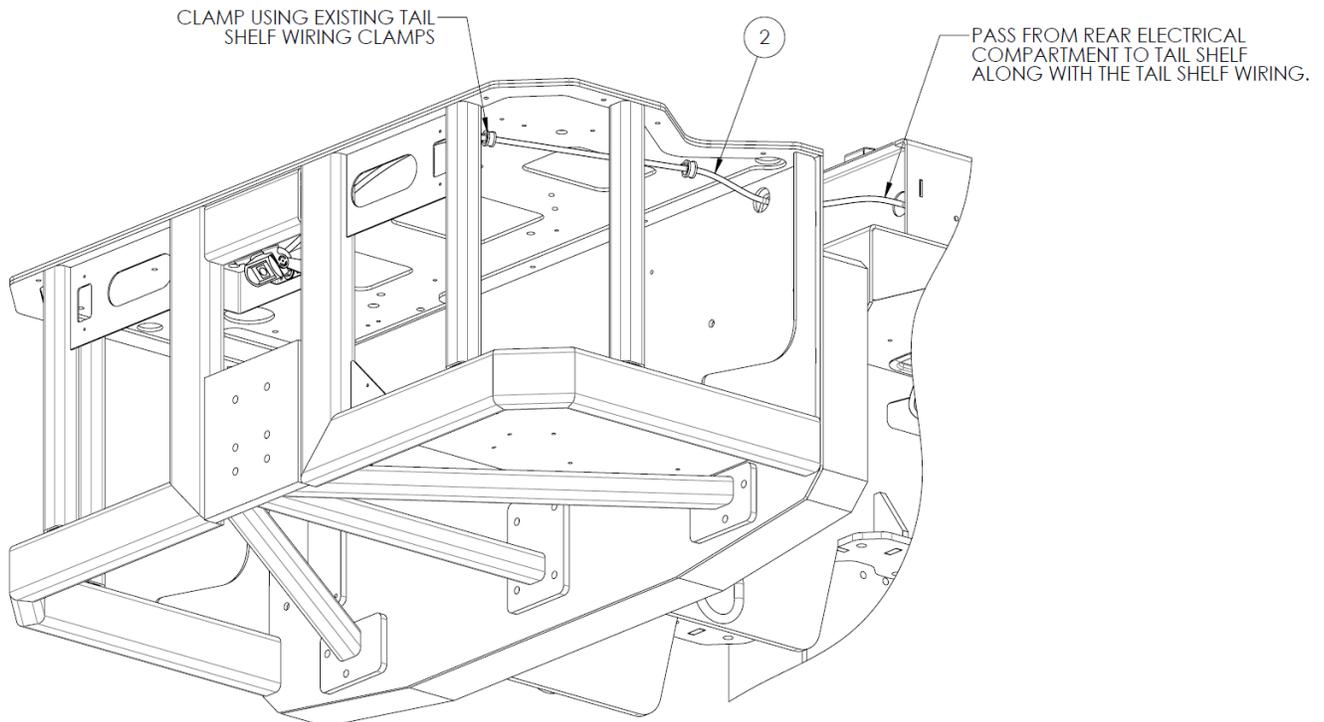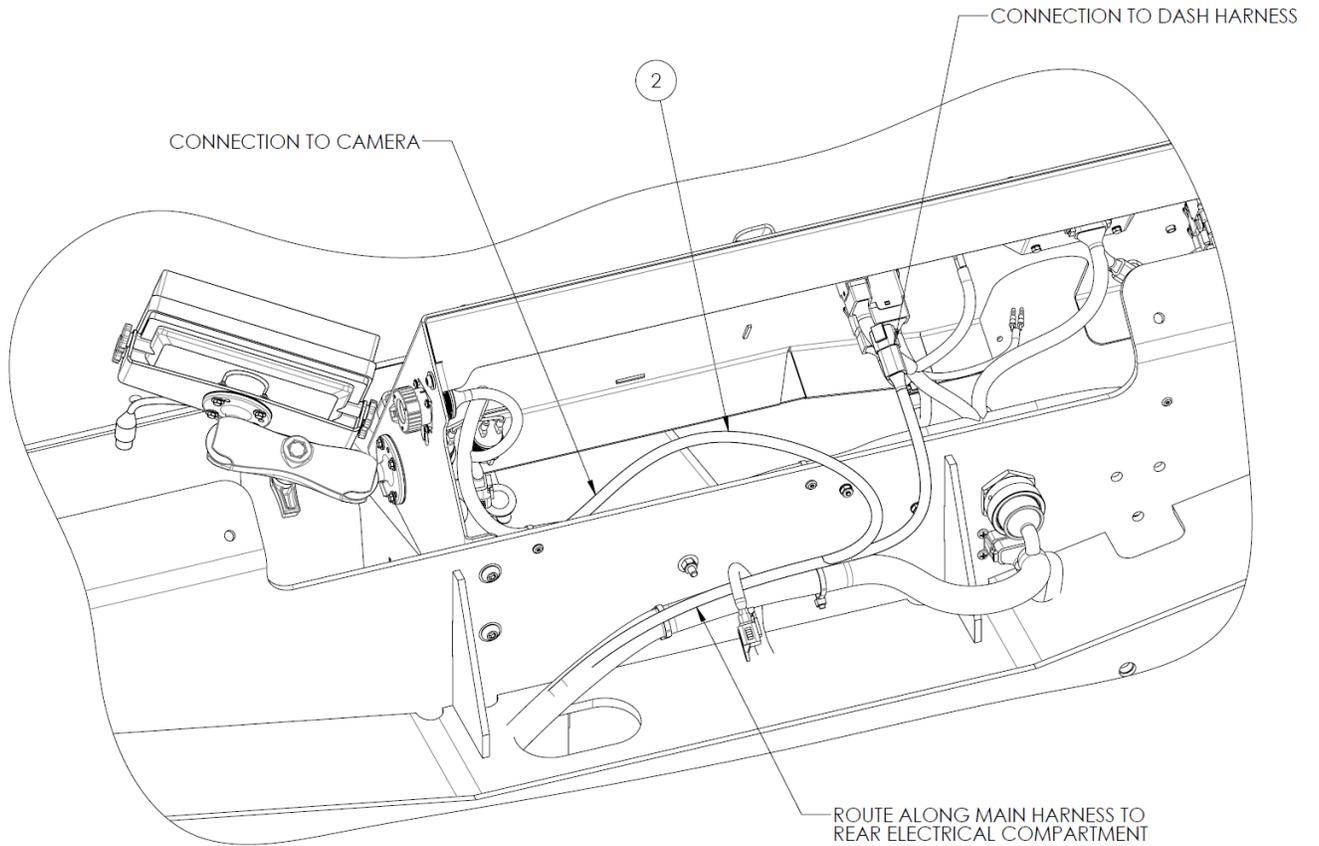




27.1 BACKUP CAMERA (continued)

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	EC-3409	BACKUP CAMERA KIT	1
2	EC-3457	WIRE HARNESS, ET8NX-CAMERA	1
3	G-1150-102012	SCREW, #8-32 X 3/4" LG HEX HD MACHINE	8
4	G-1154-107206	SCREW, 3/8-16 X 3/4" LG. SOCKET BUTT HD CAP	1
5	G-1202-1020	STOPNUT, #8-32 ELASTIC	8
6	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	1
7	G-1250-1020N	FLATWASHER, #8 NARROW	16
8	G-1250-1070W	FLATWASHER, 3/8 WIDE	2
9	H-5050	ARM, ARTICULATING	1
10	S-4372-00	DISPLAY MOUNT (WP)	1

28.0 FRONT HITCH FEATURE
28.1 OPTION A - E-HITCH OPTION A

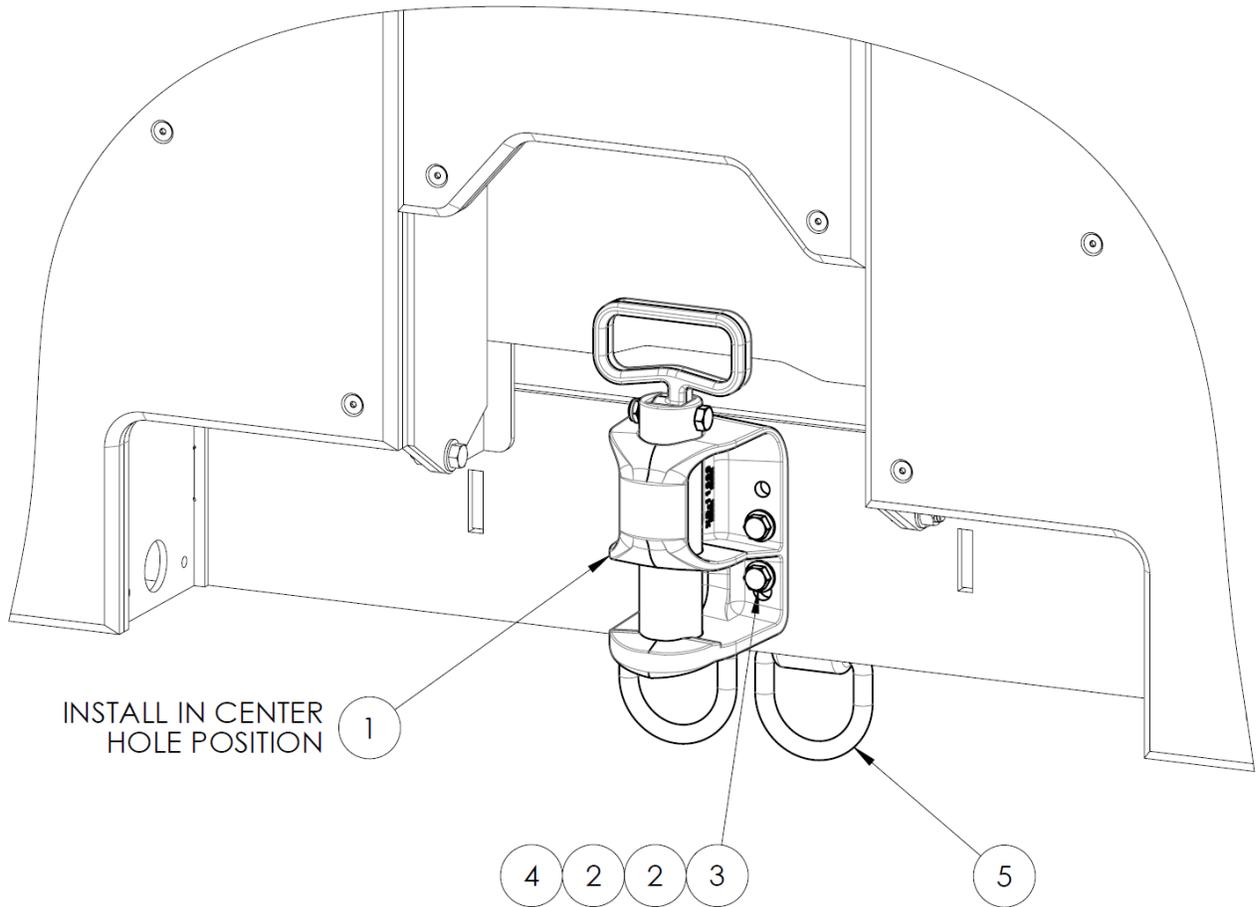


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	AE-OPT-0033-1	E-HITCH, SAF EH-3050	1
2	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
3	G-1420-109022	BOLT, 1/2-13 X 2-1/4 H.H. GR 8	4
4	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
5	Z-10536-00	WLD, TIE DOWN (P)	1

28.2 OPTION B - LOCKING E-HITCH

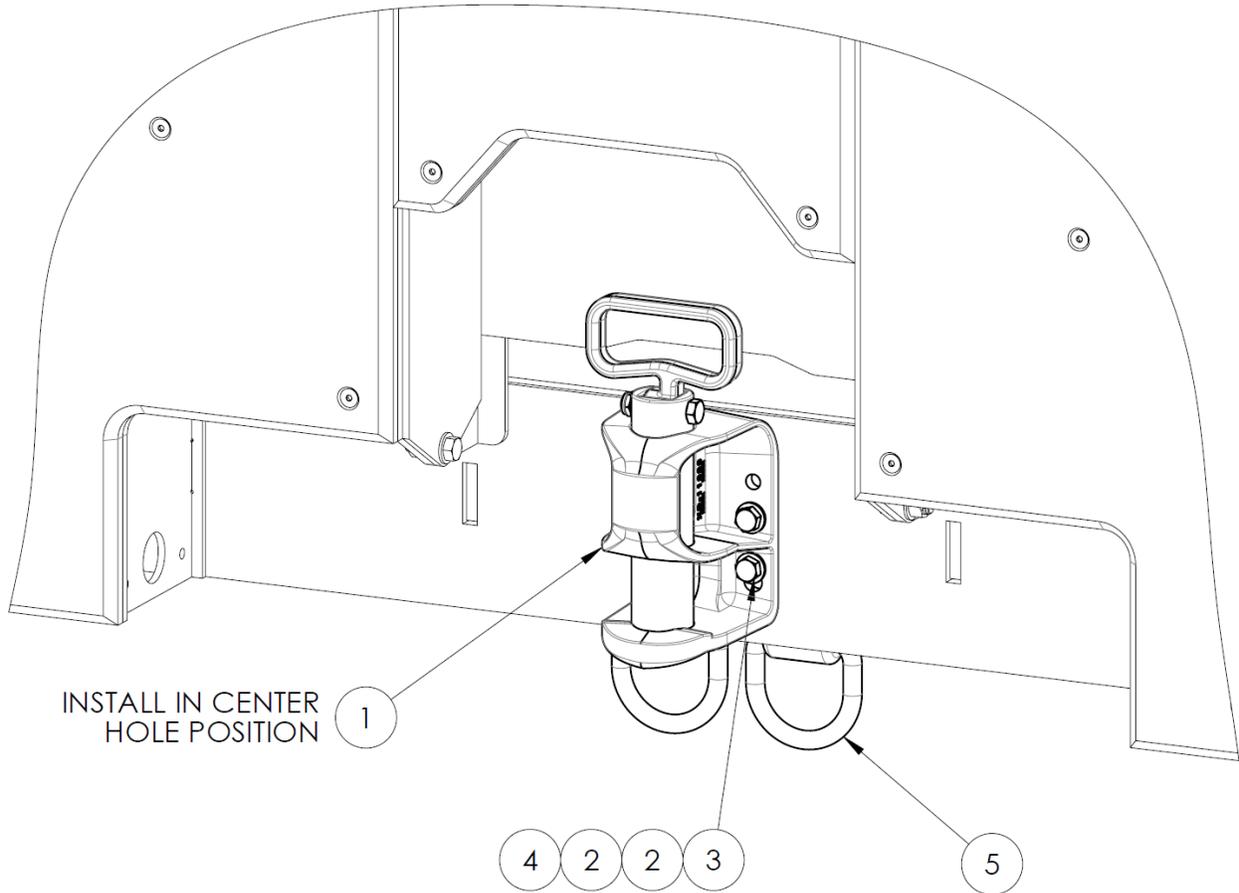


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	OPT-NVSP-034-A	E HITCH 2 1/8" PIN WITH AUTOLOCK	1
2	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
3	G-1420-109022	BOLT, 1/2-13 X 2-1/4 H.H. GR 8	4
4	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
5	Z-10536-00	WLD, TIE DOWN (P)	1

28.3 OPTION C - PINTLE HITCH

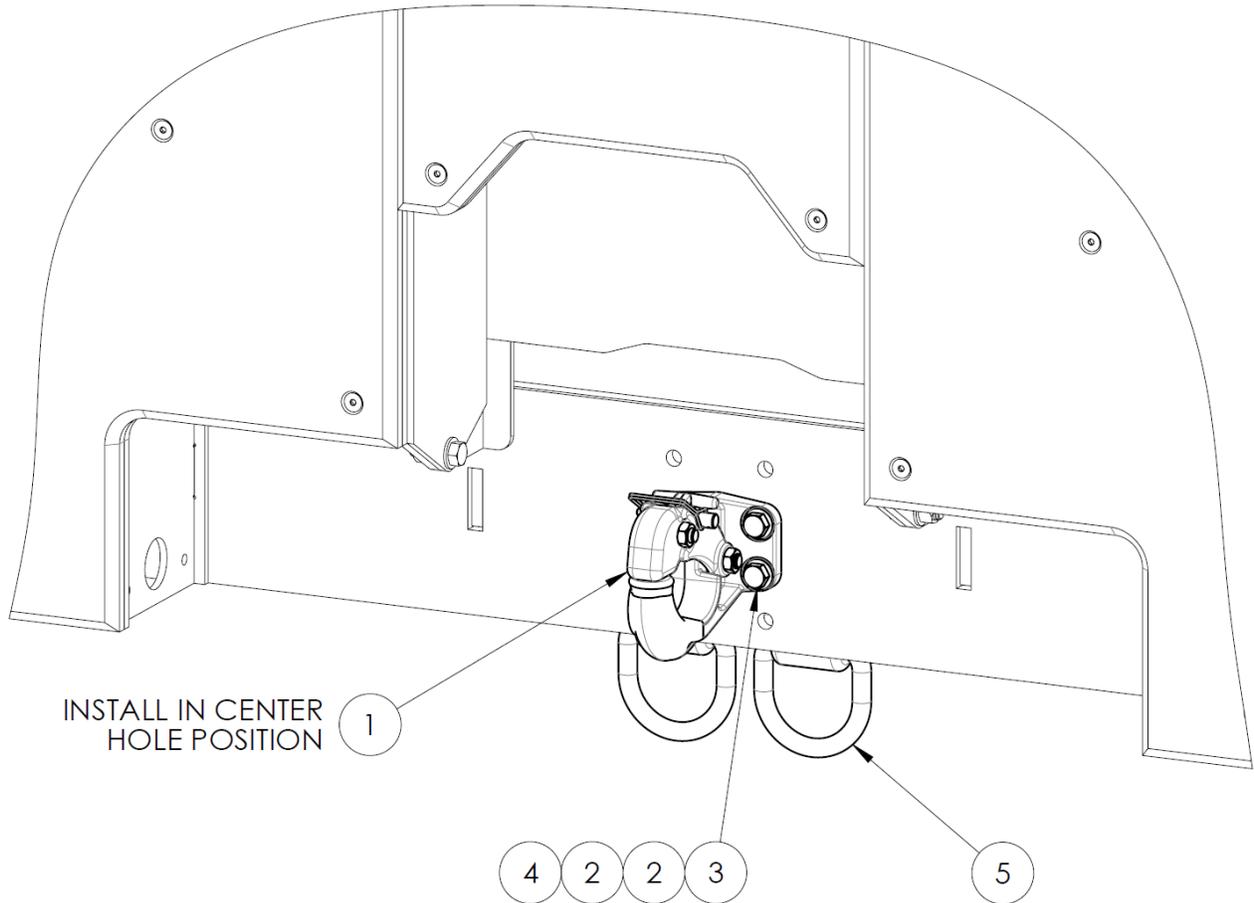


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	AE-OPT-0028	PINTLE HOOK	1
2	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
3	G-1420-109022	BOLT, 1/2-13 X 2-1/4 H.H. GR 8	4
4	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
5	Z-10536-00	WLD, TIE DOWN (P)	1

28.4 OPTION O - NO HITCH


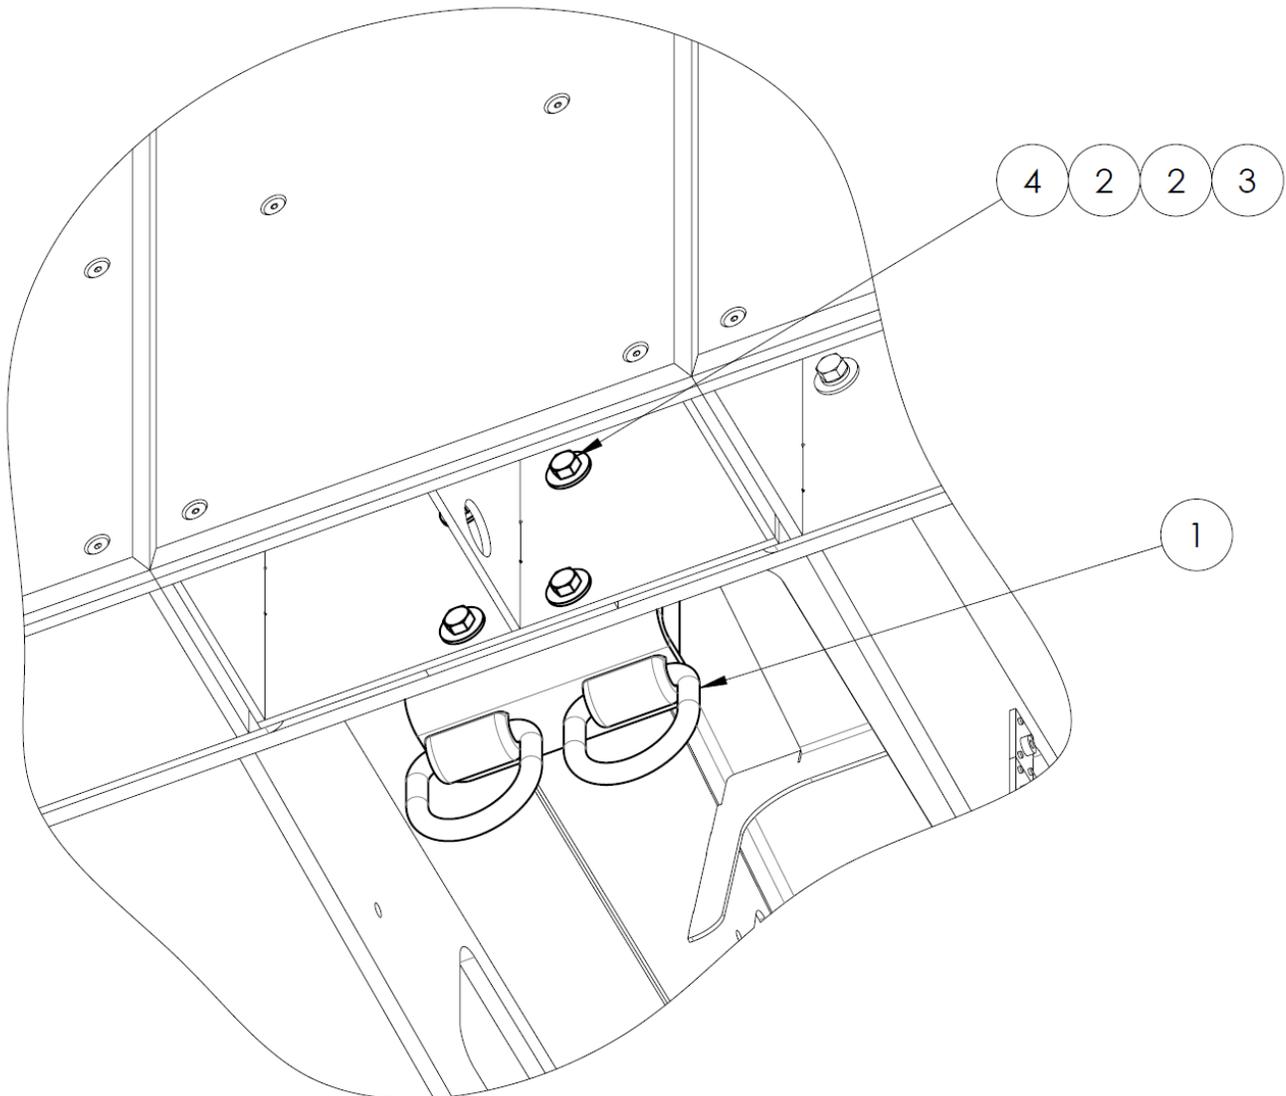


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	Z-10846-00	TIE-DOWN BRACKET, TRANSIT PRO (P)	1
2	G-1250-1090W	FLATWASHER, 1/2 WIDE	8
3	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
4	G-1420-109022	BOLT, 1/2-13 X 2-1/4 H.H. GR 8	4

29.0 FRONT PUSH BUMPER FEATURE
29.1 OPTION A - PUSH BUMPER WITH HITCH AND PLOW STANDARD

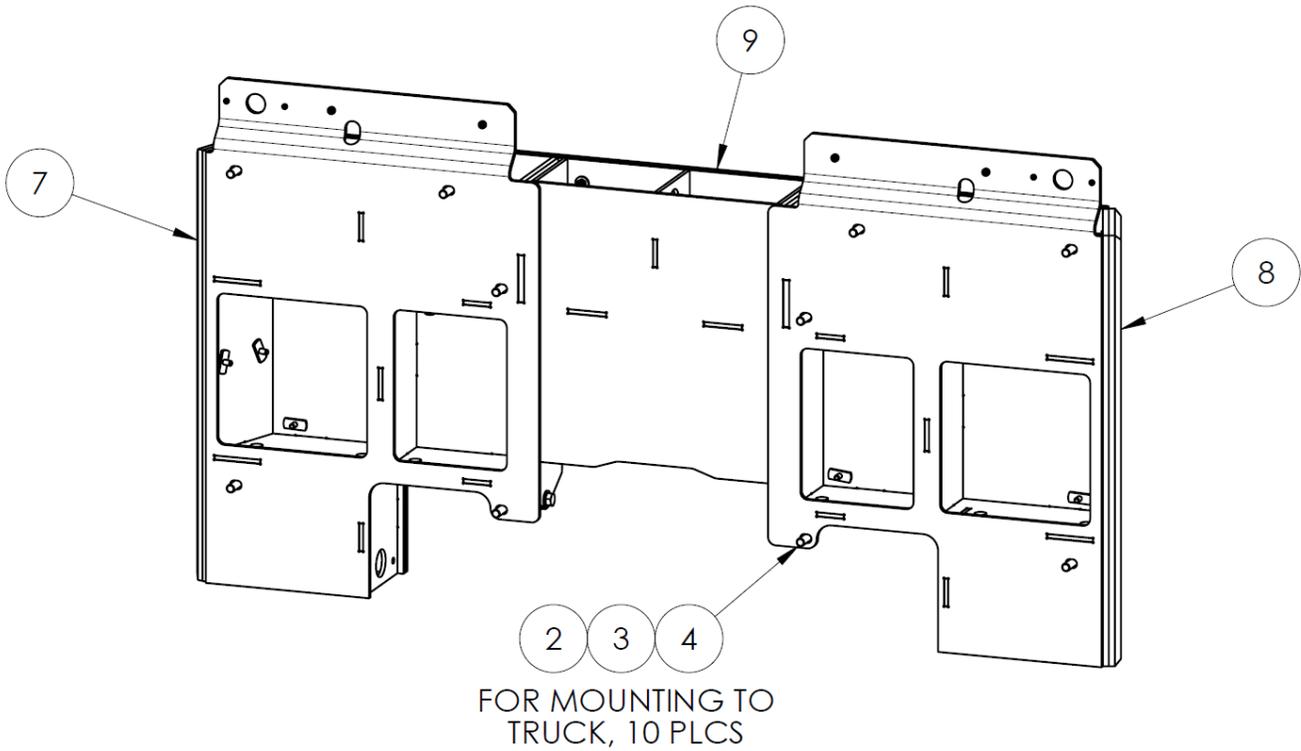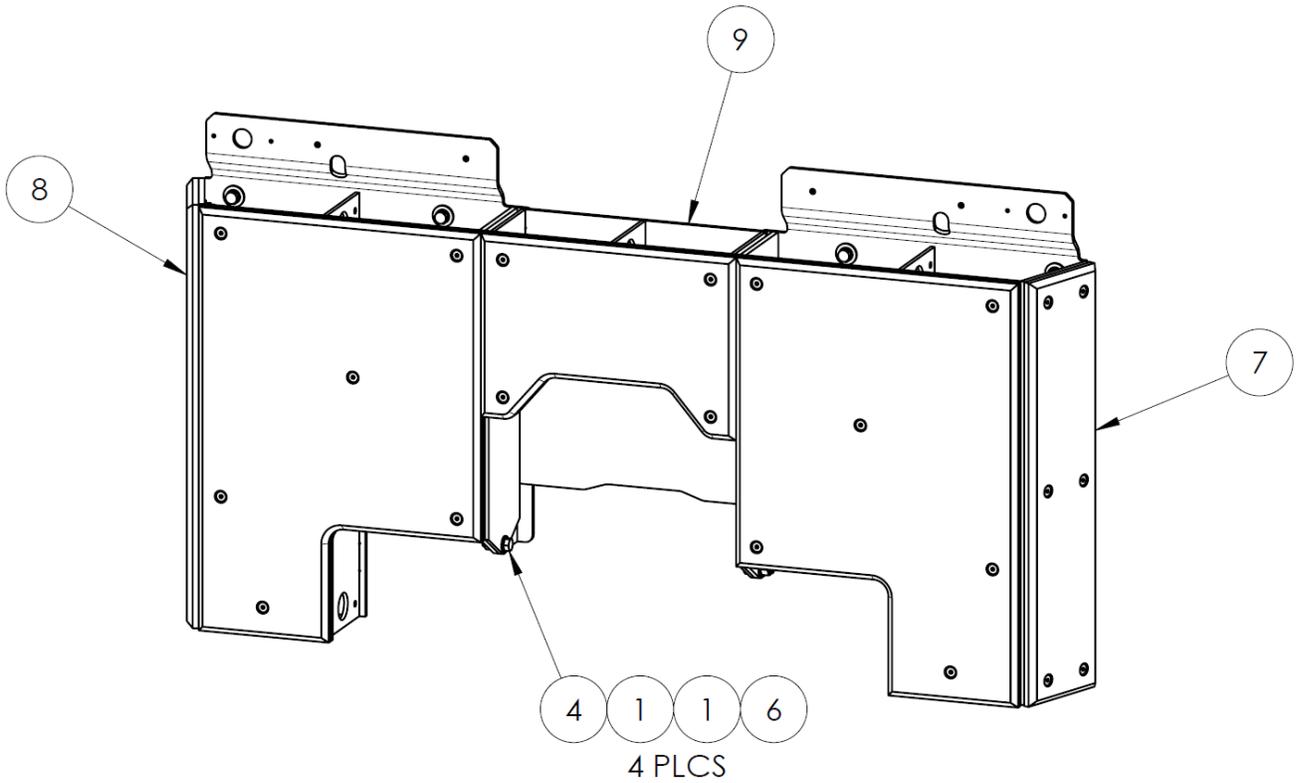



29.1 OPTION A - PUSH BUMPER WITH HITCH AND PLOW STANDARD (continued)


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
2	G-1250-1090W	FLATWASHER, 1/2 WIDE	10
3	G-1251-1090R	LOCKWASHER, 1/2 REGULAR	10
4	G-1420-109014	BOLT, 1/2-13 X 1-1/2" HEX HD GR 8	12
5	G-1420-109020	BOLT, 1/2-13 X 2.00" HEX HD GR 8	2
6	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
7	Z-12185*	ASY, PUSH BUMPER	1
8	Z-12189*	ASY, PUSH BUMPER	1
9	Z-12199*	ASY, PUSH BUMPER	1

*SEE SEPARATE PARTS BREAKDOWN

29.1.1 Push Bumper Assembly

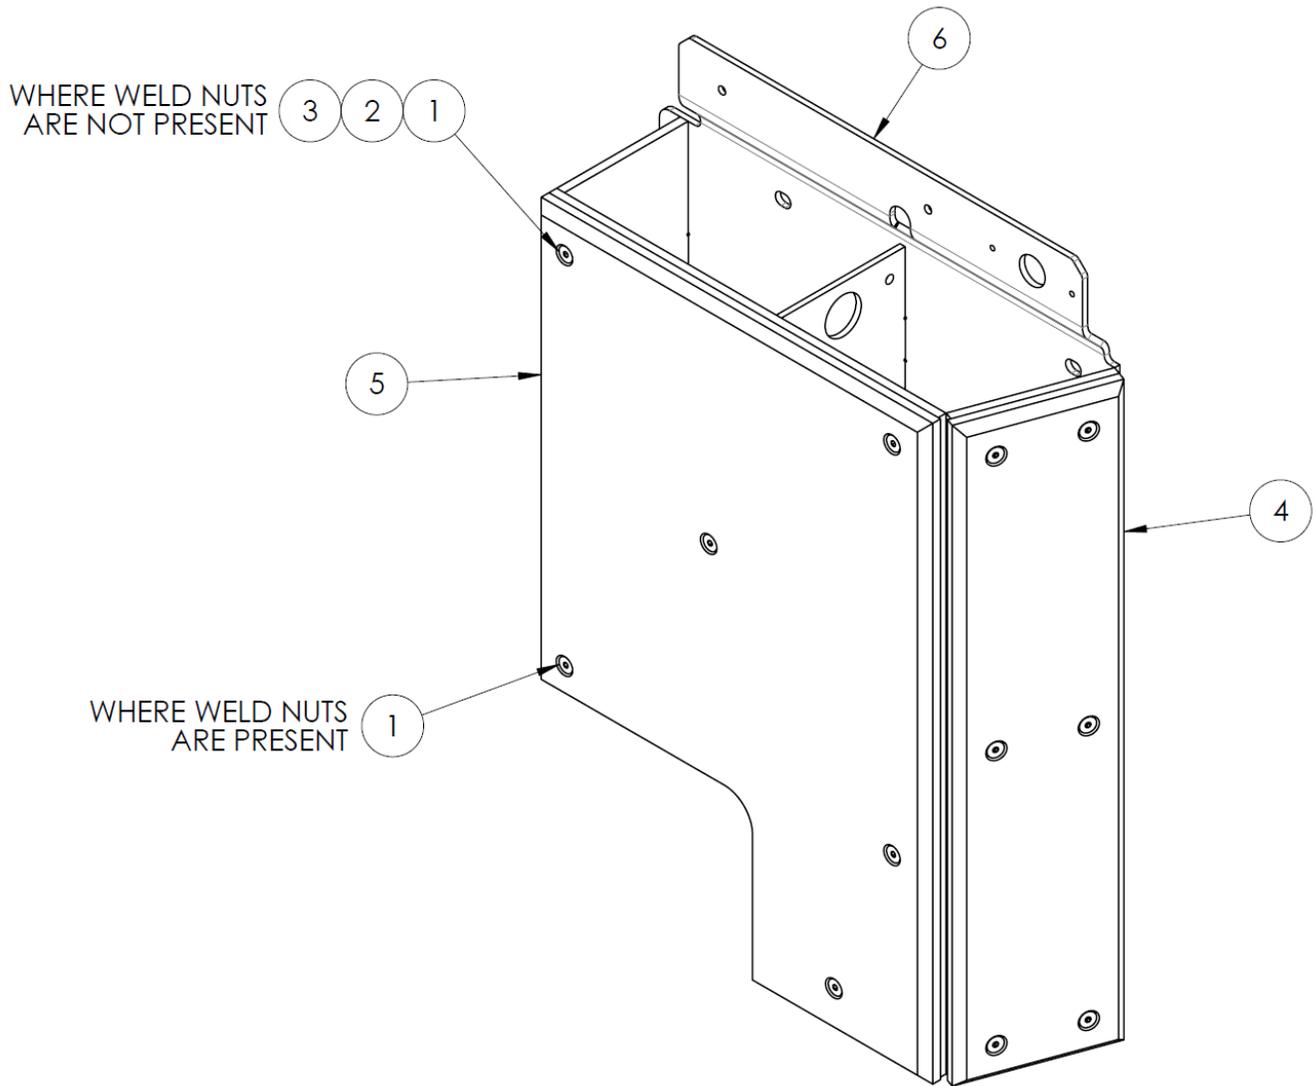


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12185	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	12
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	7
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	7
4	H-5131	UHMW BUMPER	1
5	H-5156	UHMW BUMPER	1
6	Z-12184-00	WLD, PUSH BUMPER (P)	1

29.1.2 Push Bumper Assembly

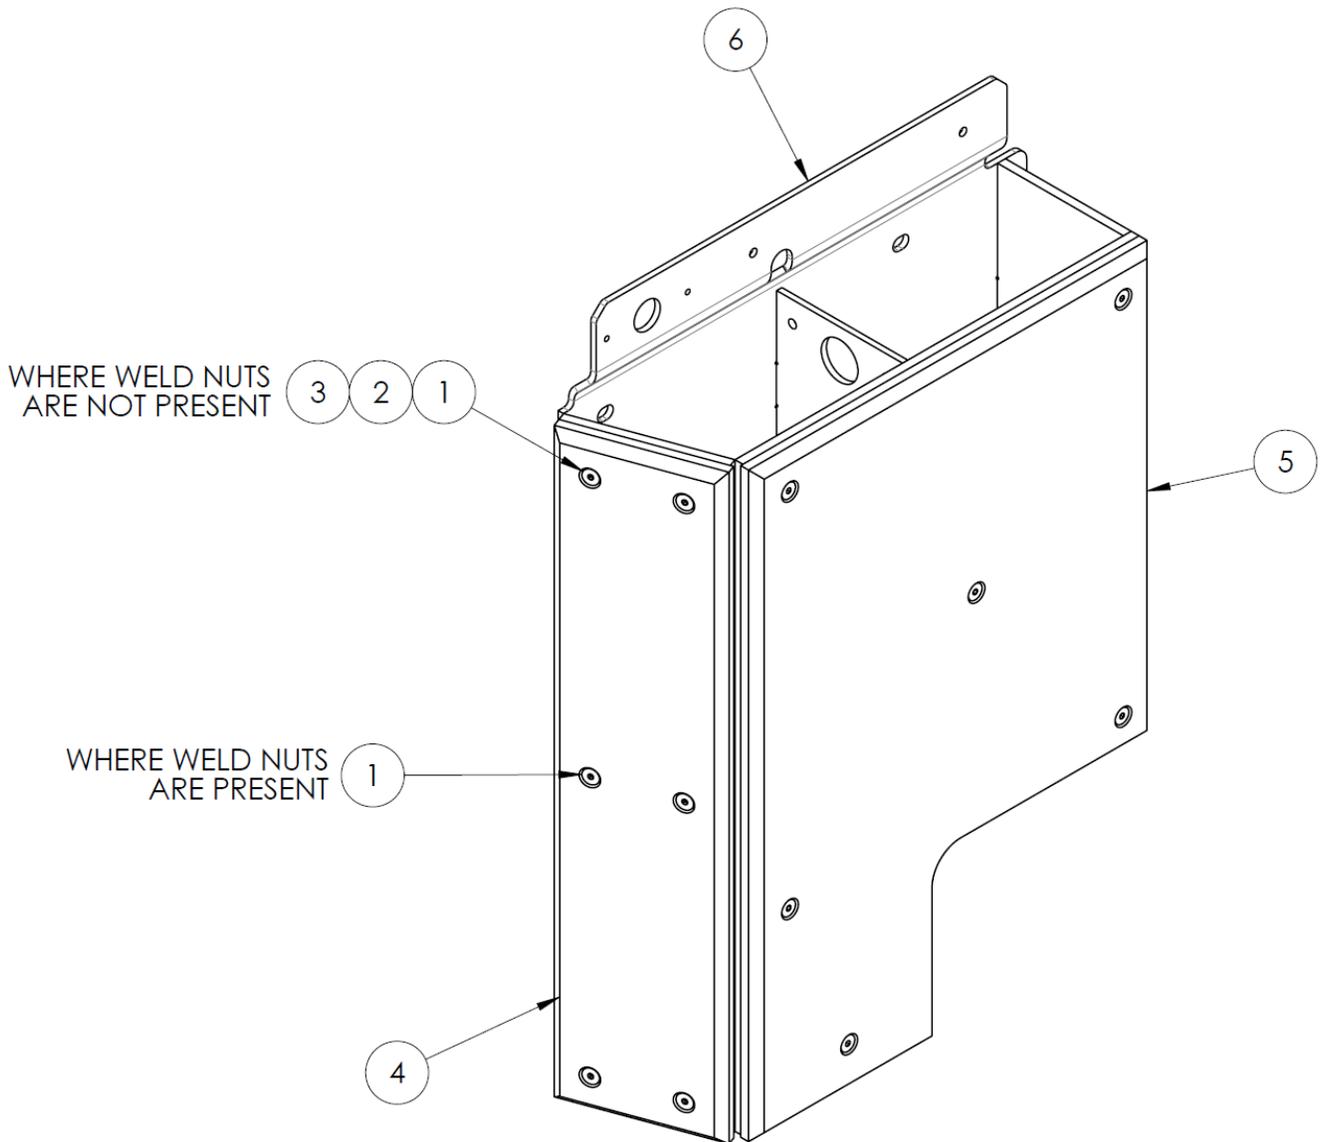


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12189	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	12
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	7
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	7
4	H-5131	UHMW BUMPER	1
5	H-5158	UHMW BUMPER	1
6	Z-12188-00	WLD, PUSH BUMPER (P)	1

29.1.3 Push Bumper Assembly

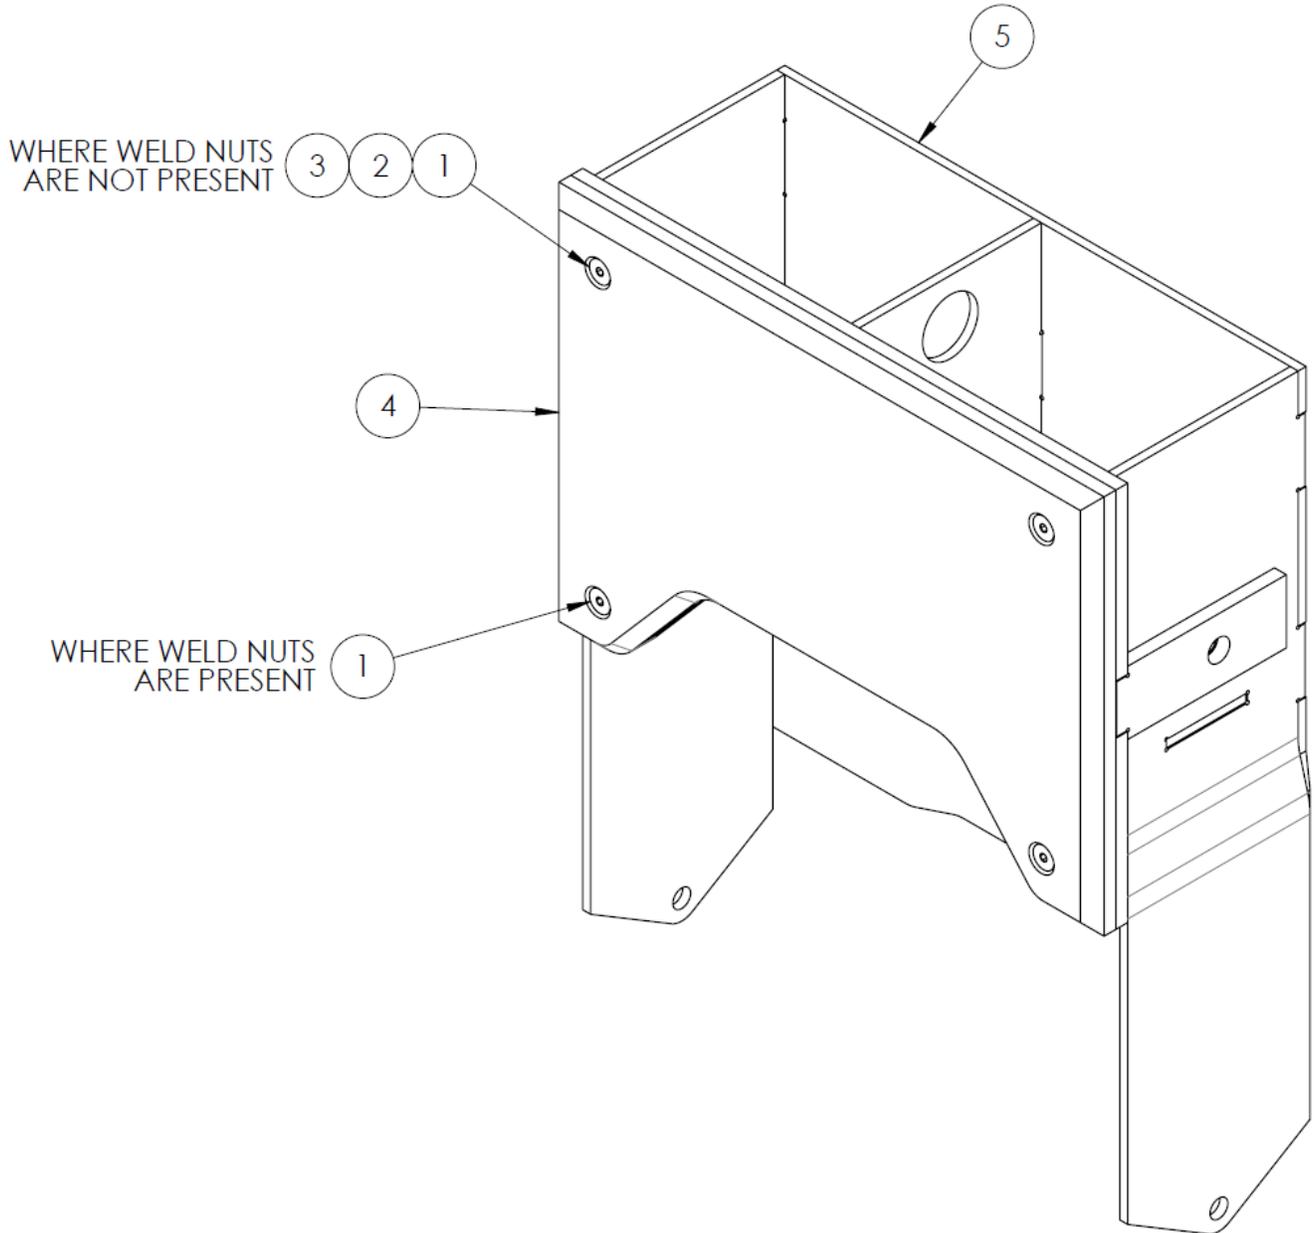


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12199	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	4
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	4
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	4
4	H-5164	UHMW BUMPER	1
5	Z-12198-00	WLD, PUSH BUMPER (P)	1

29.2 OPTION B - TALL PUSH BUMPER

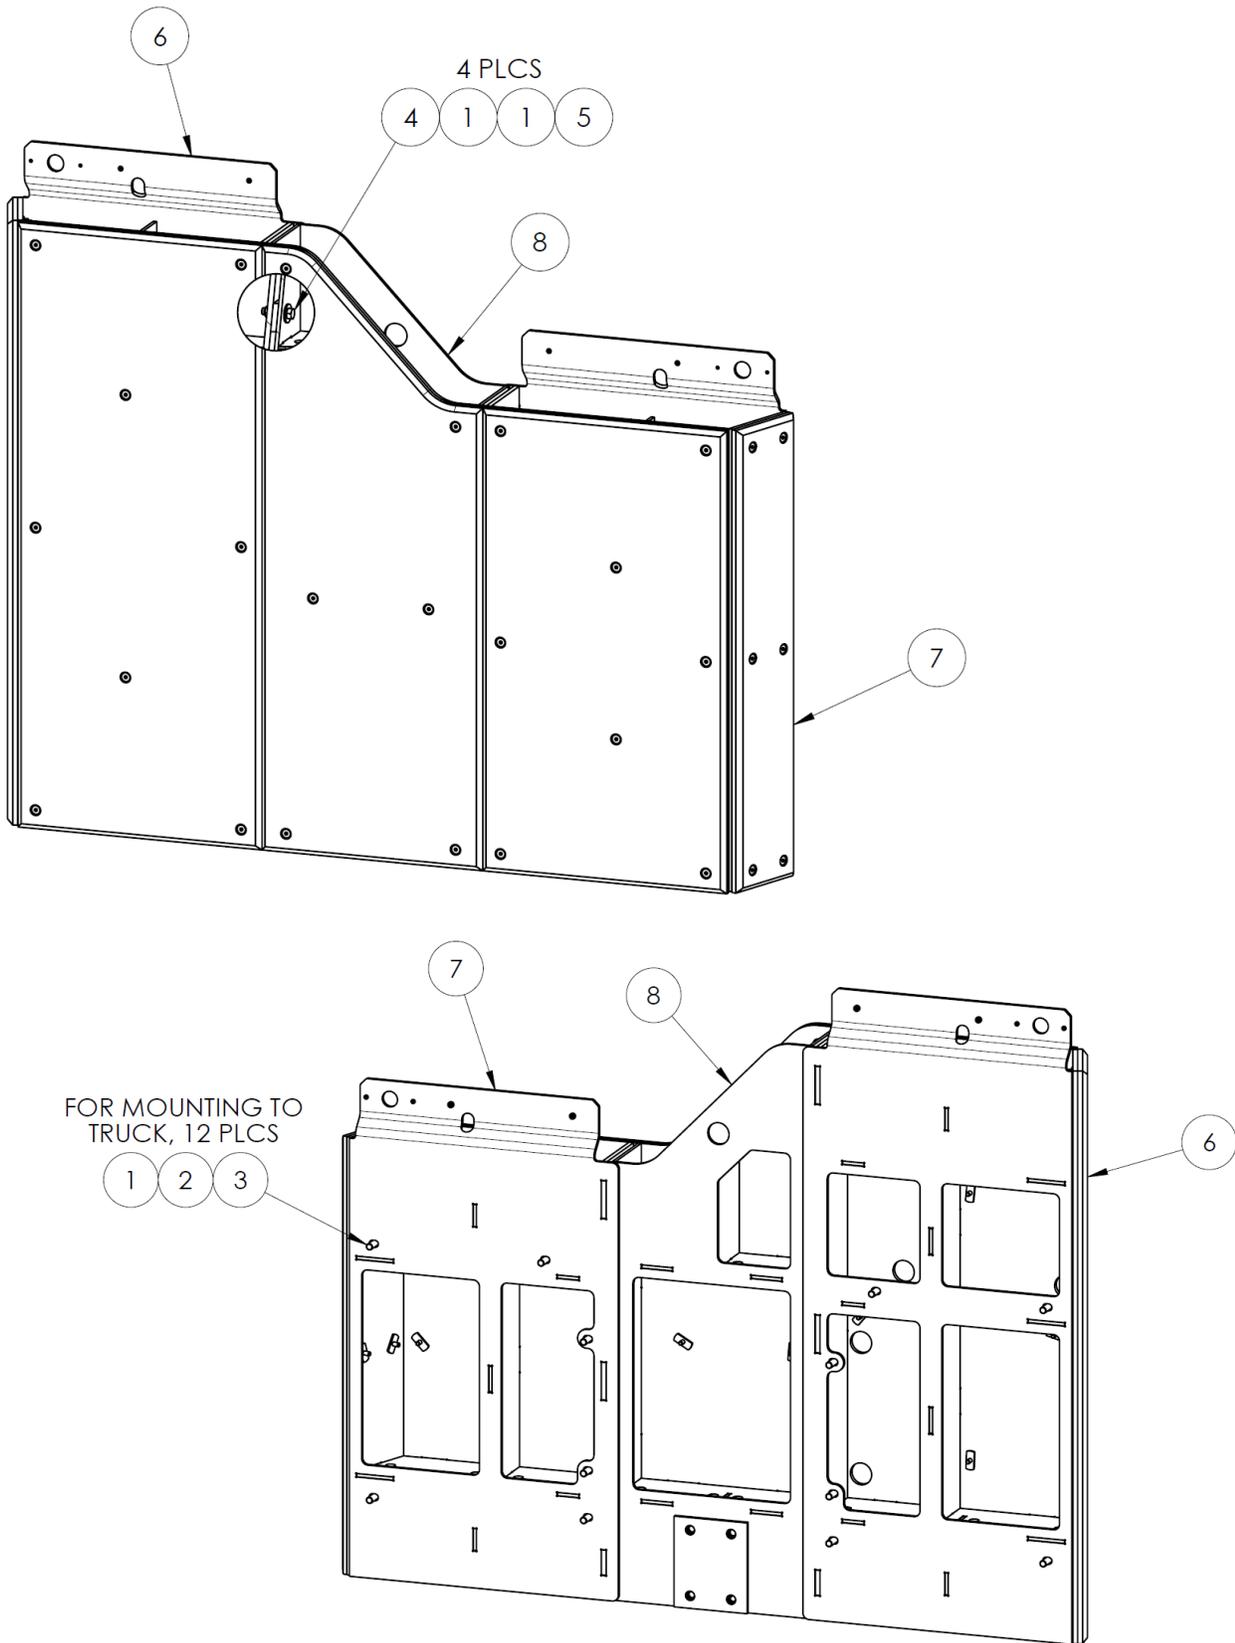



29.2 OPTION B - TALL PUSH BUMPER (continued)


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1250-1090W	FLATWASHER, 1/2 WIDE	20
2	G-1251-1090R	LOCKWASHER, 1/2 REGULAR	12
3	G-1420-109014	BOLT, 1/2-13 X 1-1/2" HEX HD GR 8	12
4	G-1420-109020	BOLT, 1/2-13 X 2.00" HEX HD GR 8	4
5	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
6	Z-12170*	ASY, PUSH BUMPER	1
7	Z-12172*	ASY, PUSH BUMPER	1
8	Z-12174*	ASY, PUSH BUMPER	1

*SEE SEPARATE PARTS BREAKDOWN

29.2.1 Push Bumper Assembly

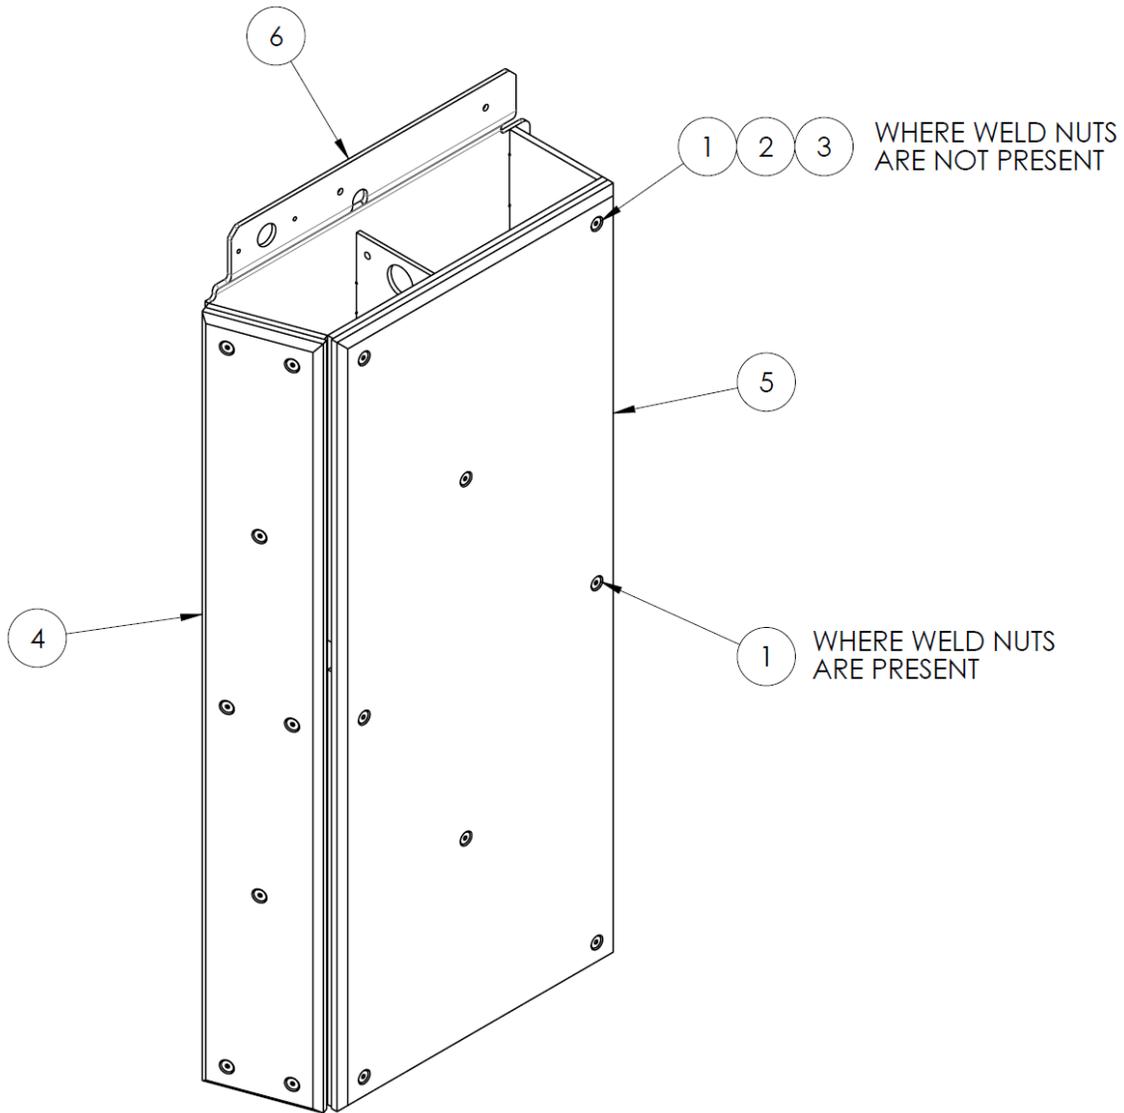


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12170	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	16
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	8
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	8
4	H-5150	UHMW BUMPER	1
5	H-5151	UHMW BUMPER	1
6	Z-12169-00	WLD, PUSH BUMPER (P)	1

29.2.2 Push Bumper Assembly

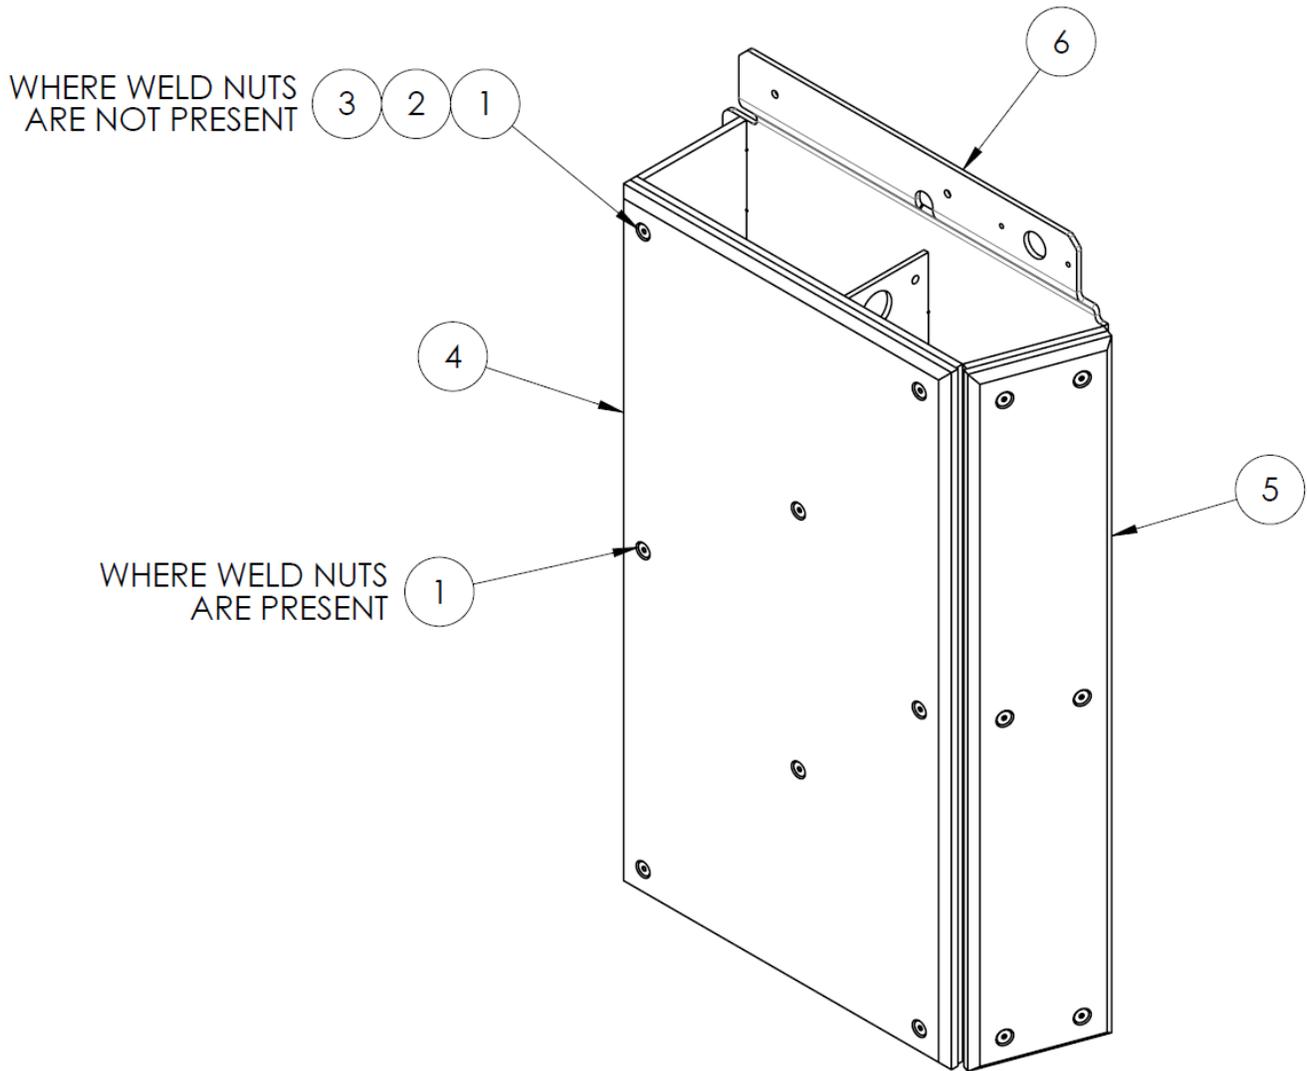


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12172	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	14
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	8
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	8
4	H-5153	UHMW BUMPER	1
5	H-5154	UHMW BUMPER	1
6	Z-12171-00	WLD, PUSH BUMPER (P)	1

29.2.3 Push Bumper Assembly

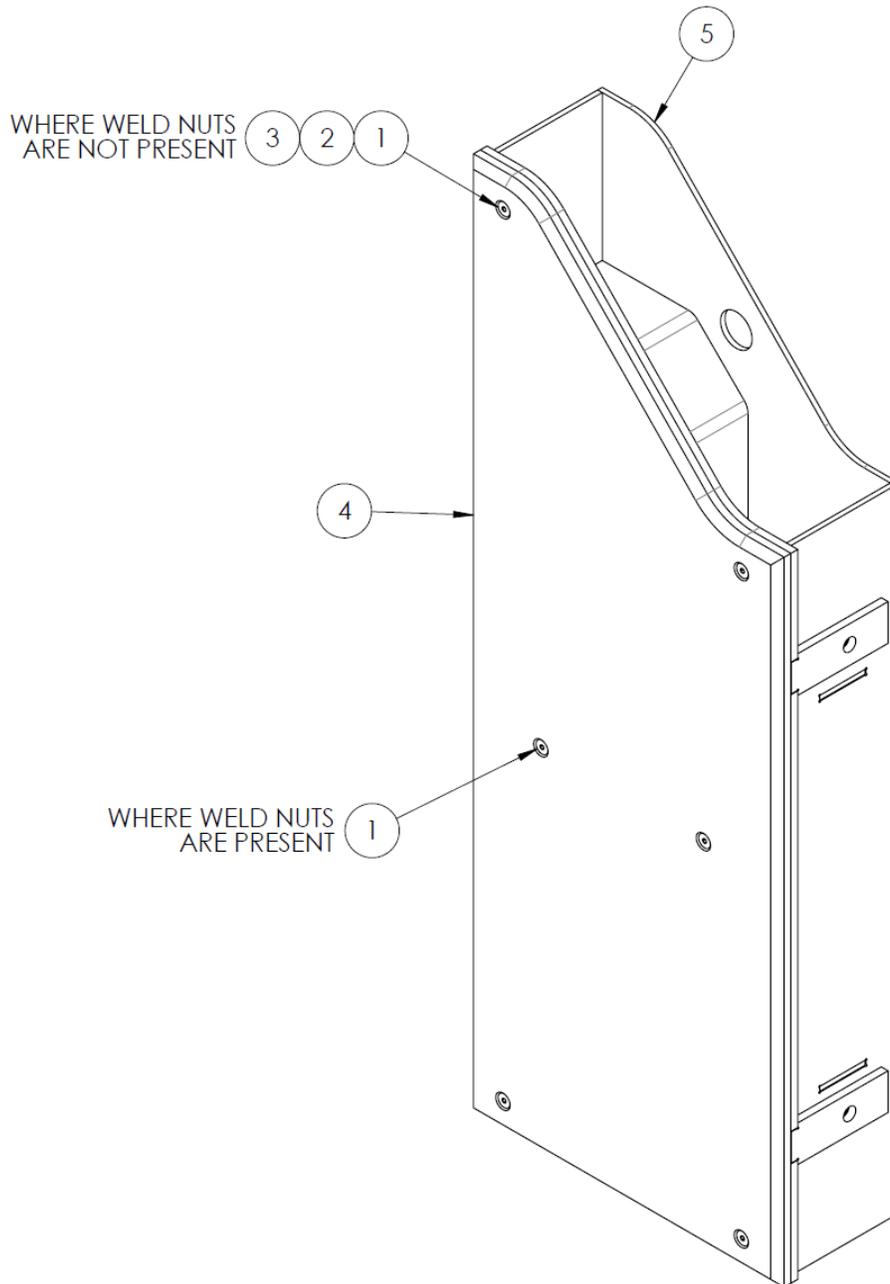

Parts List


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12174	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	6
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	4
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	4
4	H-5152	UHMW BUMPER	1
5	Z-12173-00	WLD, PUSH BUMPER (P)	1




This page left blank intentionally.

29.3 OPTION C - TALL PUSH BUMPER WITH HITCH AND PLOW

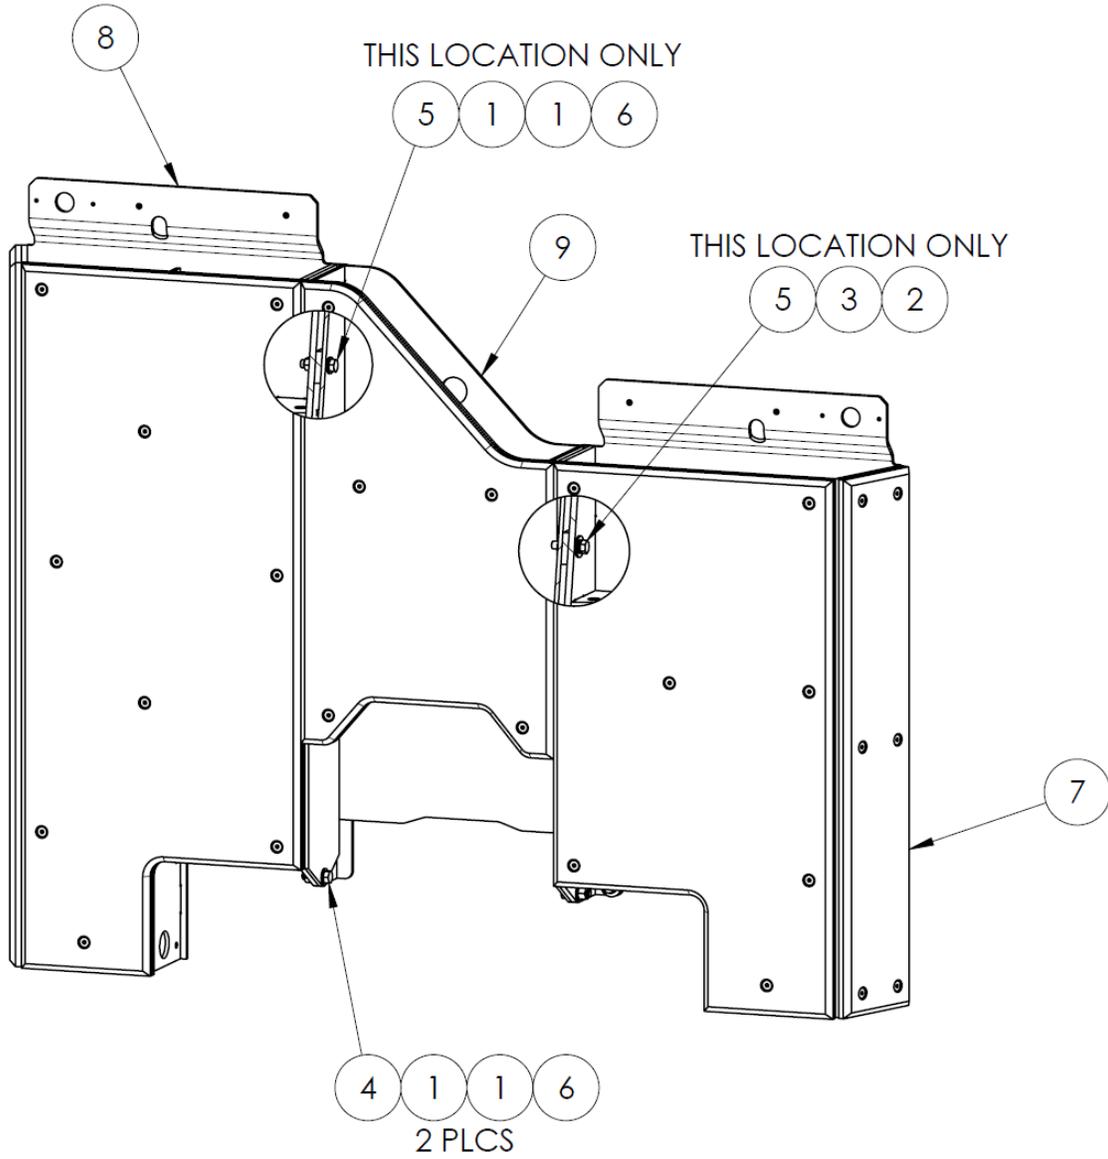

29.3 OPTION C - TALL PUSH BUMPER WITH HITCH AND PLOW (continued)

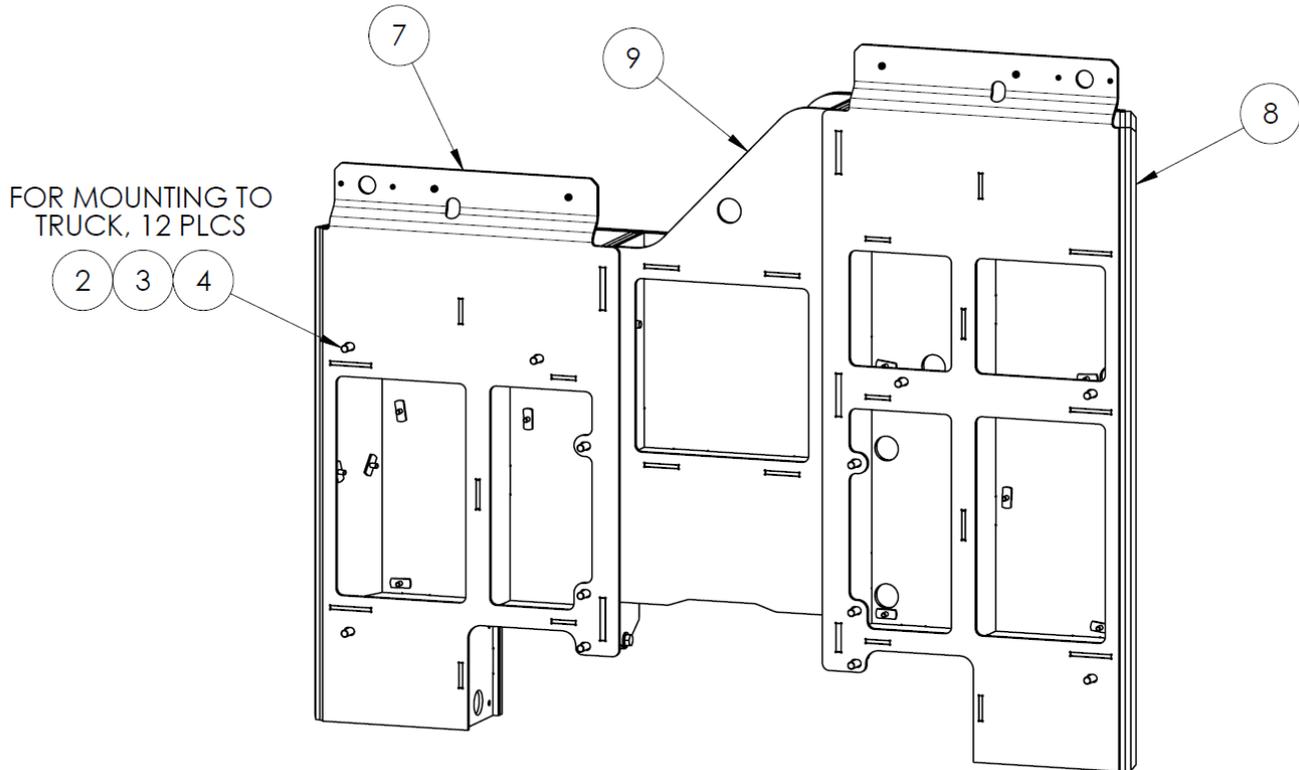


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1250-1090N	FLATWASHER, 1/2 NARROW	6
2	G-1250-1090W	FLATWASHER, 1/2 WIDE	13
3	G-1251-1090R	LOCKWASHER, 1/2 REGULAR	13
4	G-1420-109014	BOLT, 1/2-13 X 1-1/2" HEX HD GR 8	14
5	G-1420-109020	BOLT, 1/2-13 X 2.00" HEX HD GR 8	2
6	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	3
7	Z-12192*	ASY, PUSH BUMPER	1
8	Z-12194*	ASY, PUSH BUMPER	1
9	Z-12201*	ASY, PUSH BUMPER	1

*SEE SEPARATE PARTS BREAKDOWN

29.3.1 Push Bumper Assembly

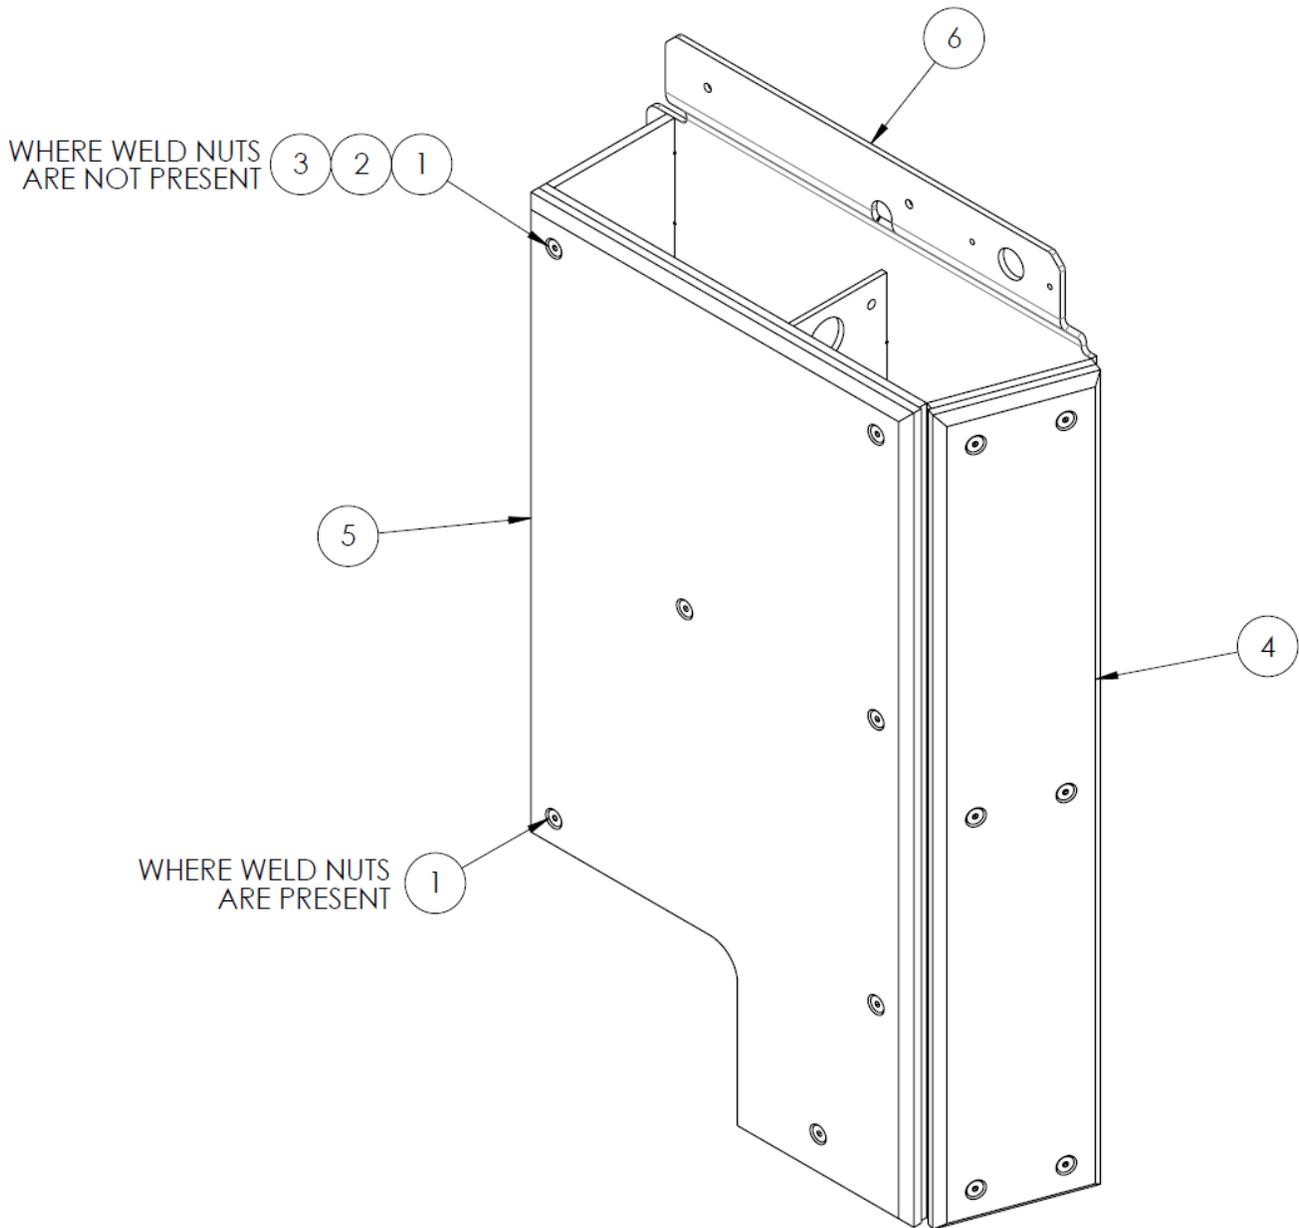


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12192	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	13
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	7
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	7
4	H-5154	UHMW BUMPER	1
5	H-5161	UHMW BUMPER	1
6	Z-12191-00	WLD, PUSH BUMPER (P)	1

29.3.2 Push Bumper Assembly

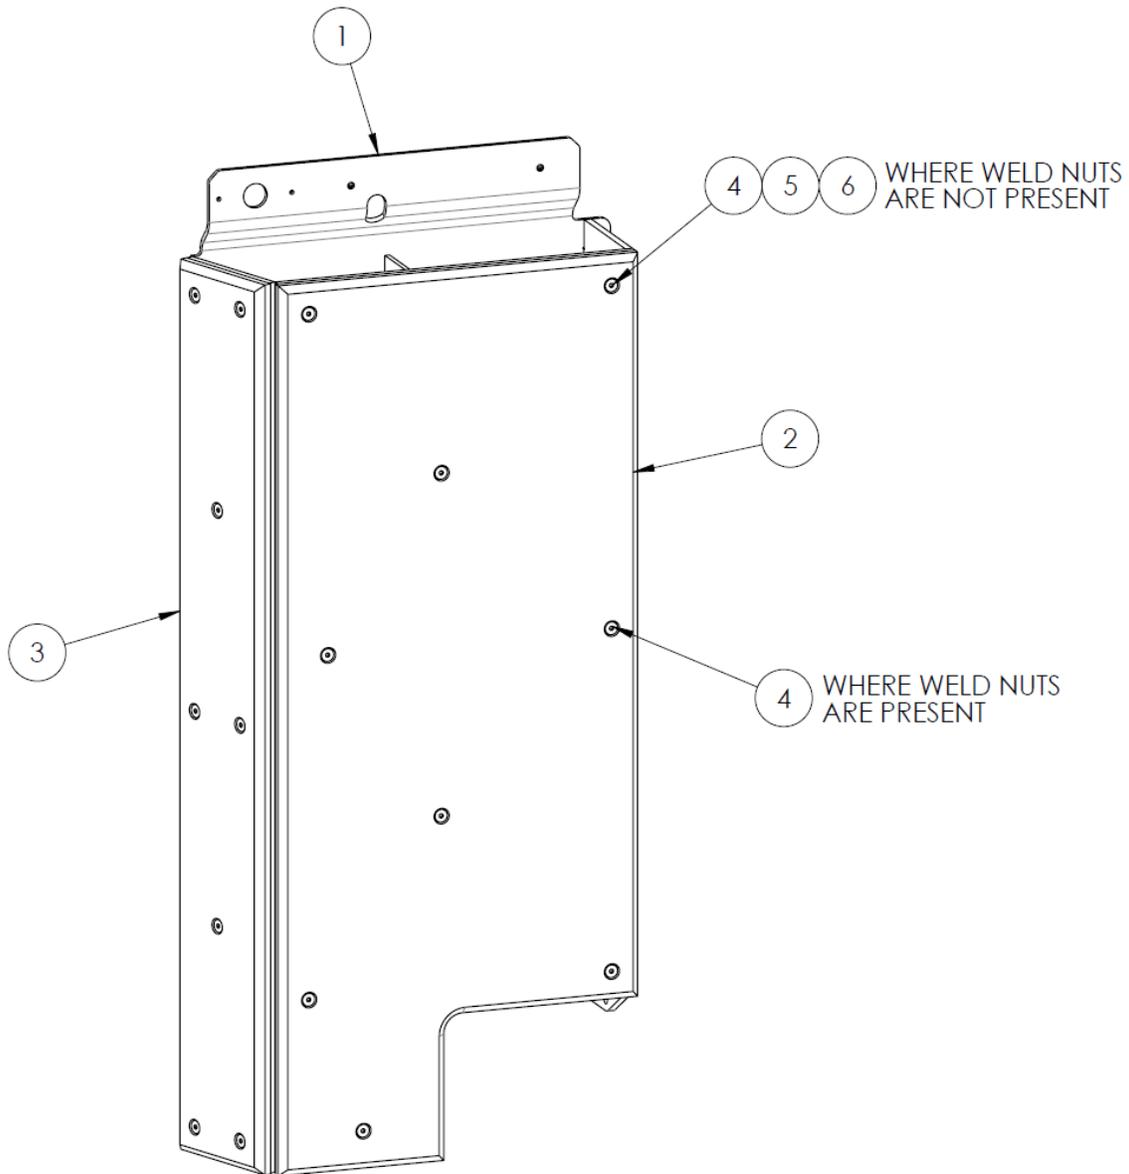


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12194	ASY, PUSH BUMPER , consists of:	
1	Z-12193-00	WLD, PUSH BUMPER (P)	1
2	H-5163	UHMW BUMPER	1
3	H-5150	UHMW BUMPER	1
4	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	17
5	G-1250-1060W	FLATWASHER, 5/16 WIDE	7
6	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	7

29.3.3 Push Bumper Assembly

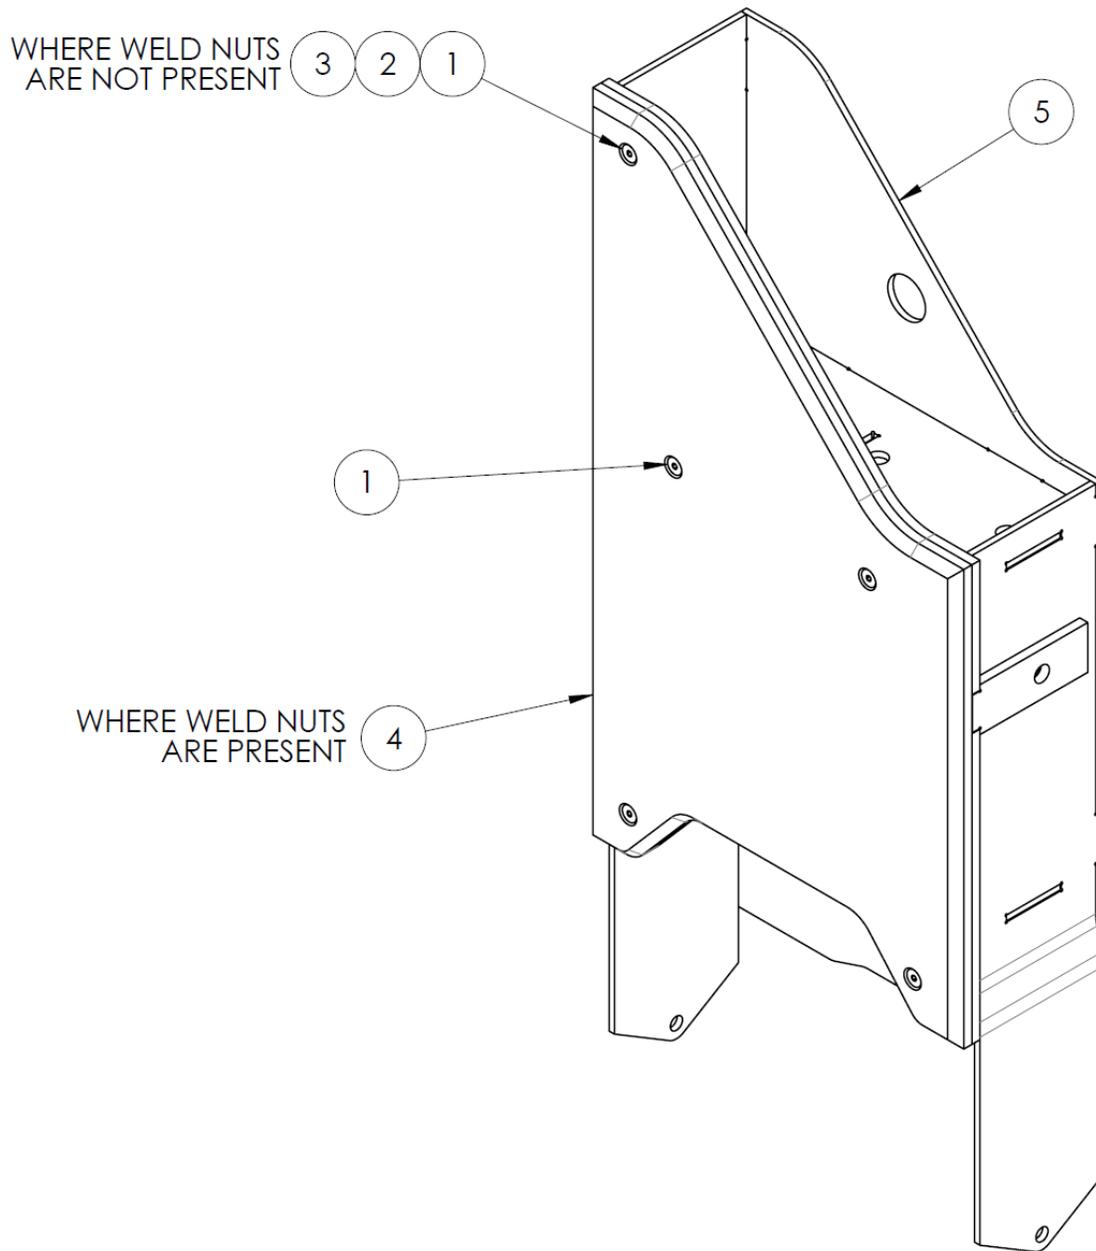

Parts List



When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12201	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	5
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	3
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	3
4	H-5165	UHMW BUMPER	1
5	Z-12200-00	WLD, PUSH BUMPER (P)	1



This page left blank intentionally.

29.4 OPTION O - PUSH BUMPER

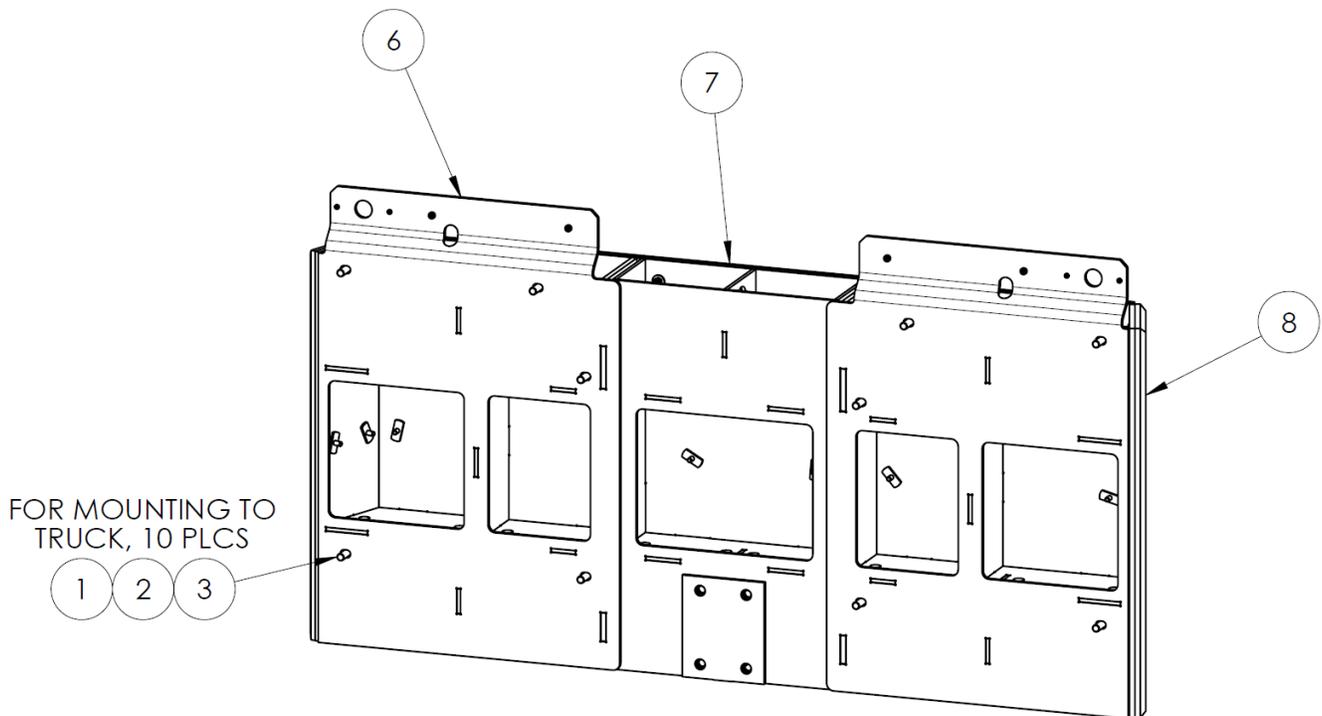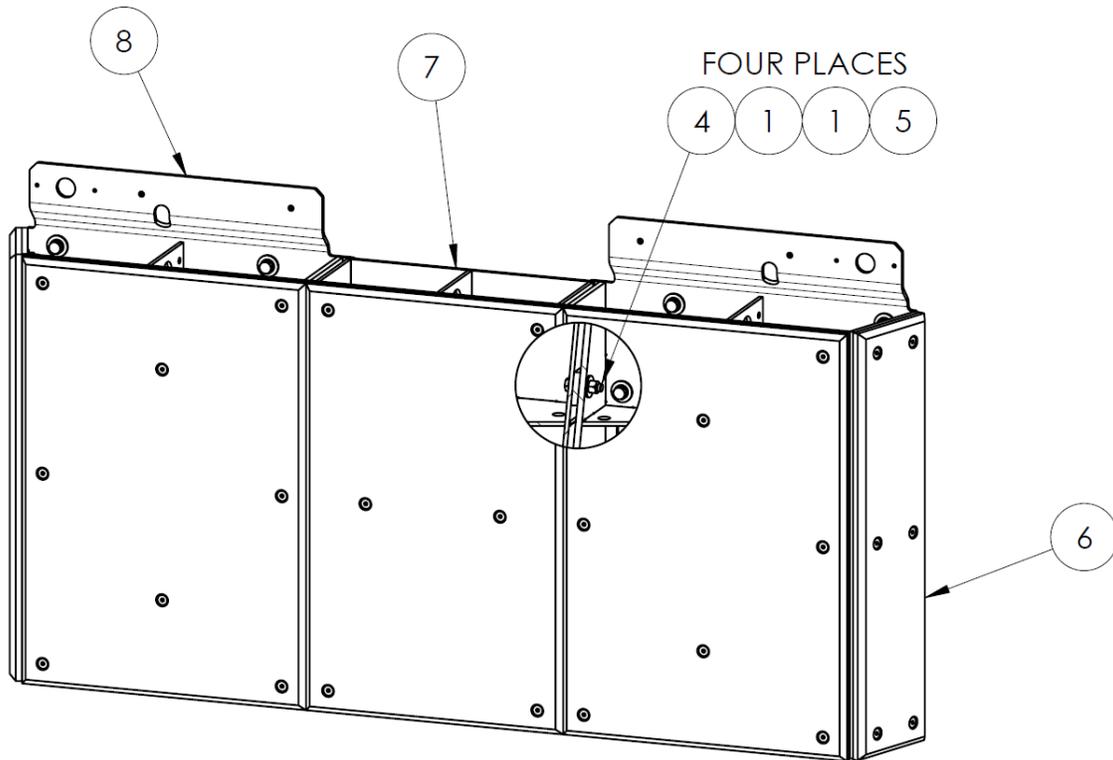



29.4 OPTION O - PUSH BUMPER (continued)


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1250-1090W	FLATWASHER, 1/2 WIDE	18
2	G-1251-1090R	LOCKWASHER, 1/2 REGULAR	10
3	G-1420-109014	BOLT, 1/2-13 X 1-1/2" HEX HD GR 8	10
4	G-1420-109020	BOLT, 1/2-13 X 2.00" HEX HD GR 8	4
5	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
6	Z-12118*	ASY, PUSH BUMPER	1
7	Z-12120*	ASY, PUSH BUMPER	1
8	Z-12122*	ASY, PUSH BUMPER	1

*SEE SEPARATE PARTS BREAKDOWN

29.4.1 Push Bumper Assembly

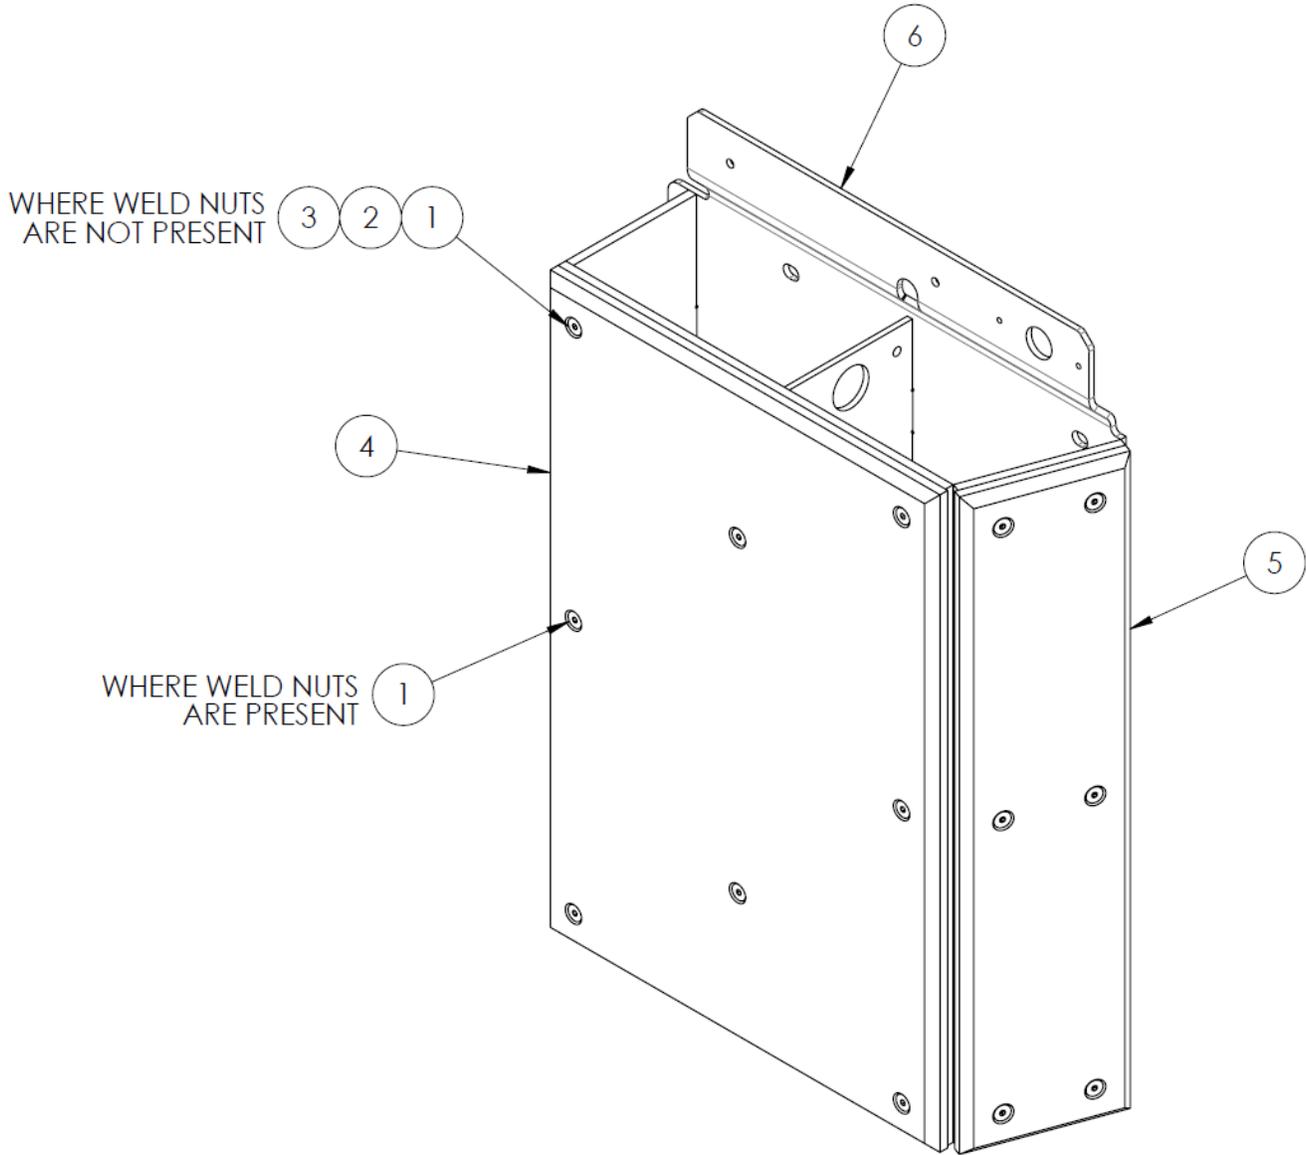


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12118	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	14
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	10
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	10
4	H-5130	UHMW BUMPER	1
5	H-5131	UHMW BUMPER	1
6	Z-12117-00	WLD, PUSH BUMPER (P)	1

29.4.2 Push Bumper Assembly

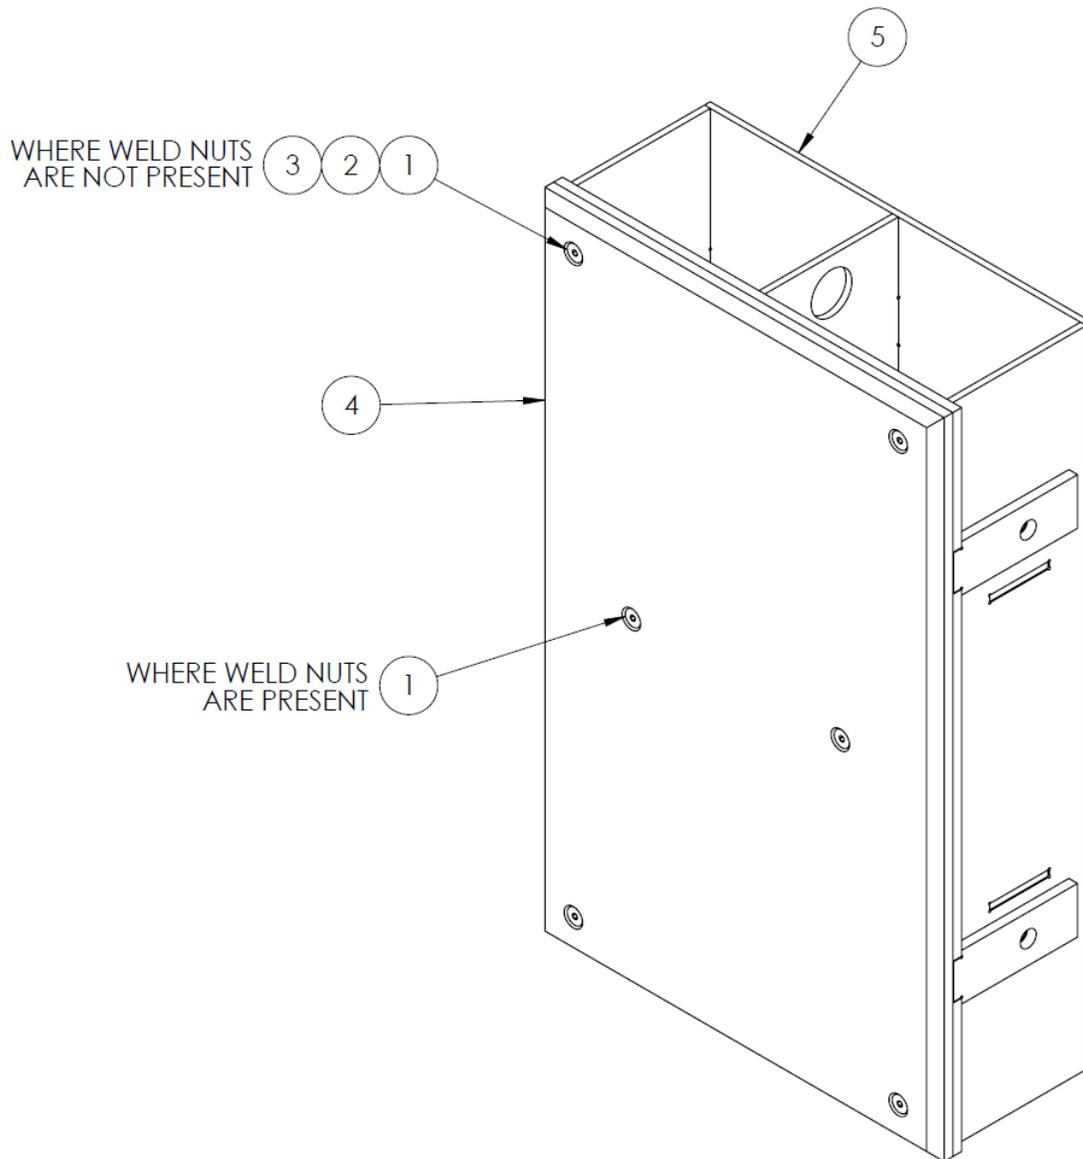


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12120	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	6
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	4
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	4
4	H-5129	UHMW BUMPER	1
5	Z-12119-00	WLD, PUSH BUMPER (P)	1

29.4.3 Push Bumper Assembly

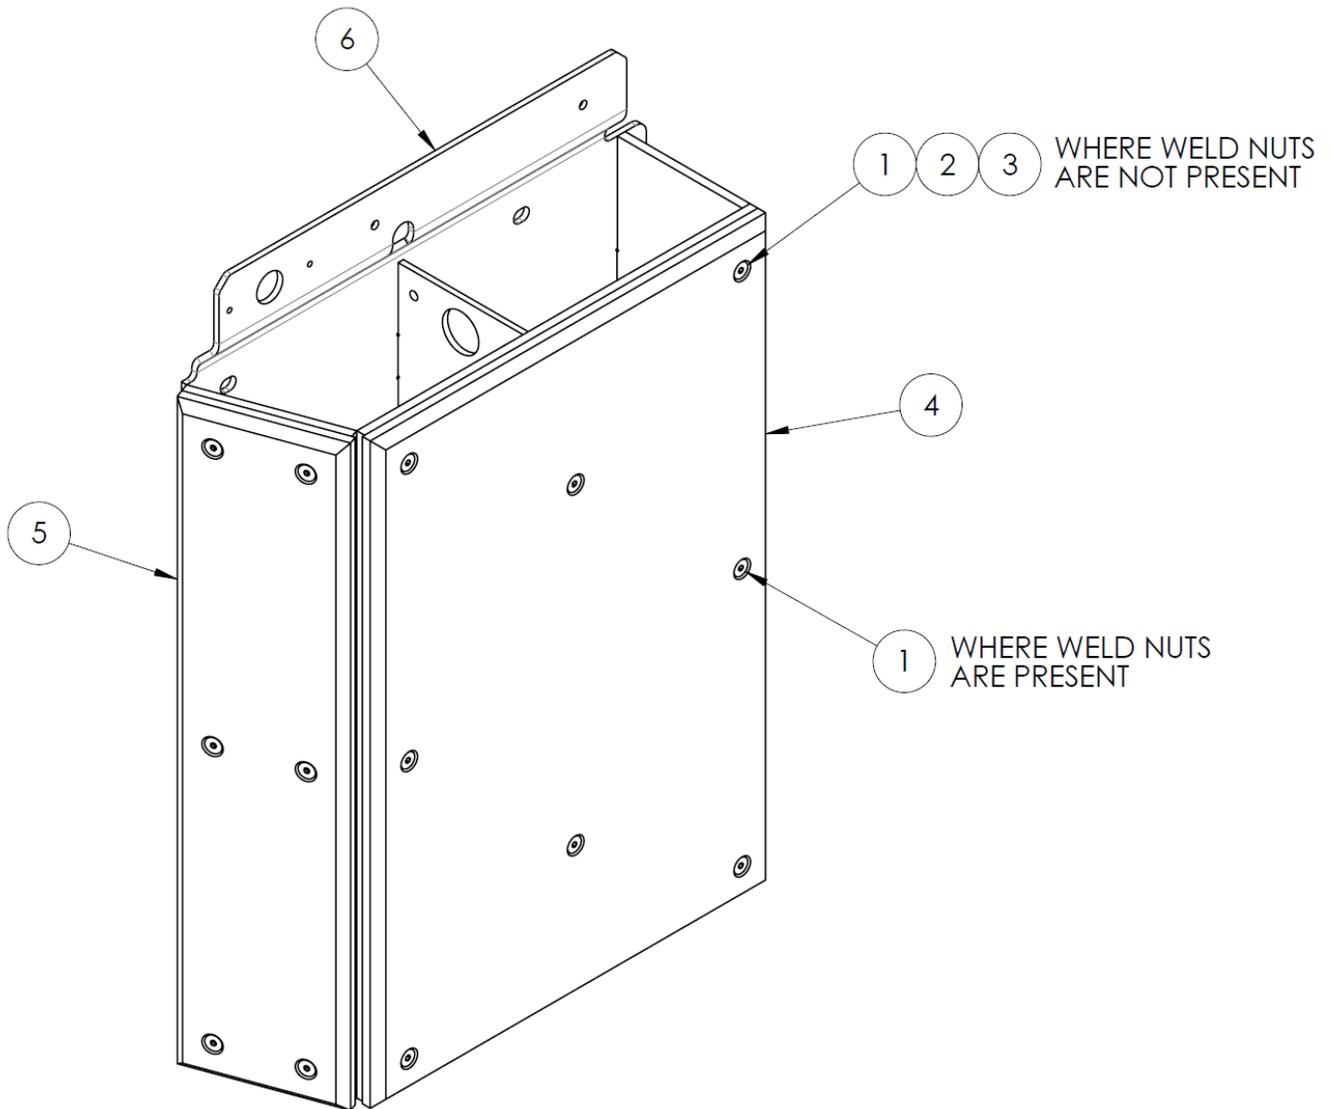


Parts List



When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
	Z-12122	ASY, PUSH BUMPER , consists of:	
1	G-1152-106216	82 DEG FHC, 5/16-18 X 1.75	14
2	G-1250-1060W	FLATWASHER, 5/16 WIDE	10
3	G-1727-1060	NUT, 5/16-18 TOP LOCK ZINC	10
4	H-5130	UHMW BUMPER	1
5	H-5131	UHMW BUMPER	1
6	Z-12121-00	WLD, PUSH BUMPER (P)	1


30.0 LIGHTS FEATURE
30.1 OPTION A - ON CAB WORKLIGHTS & TURN SIGNAL

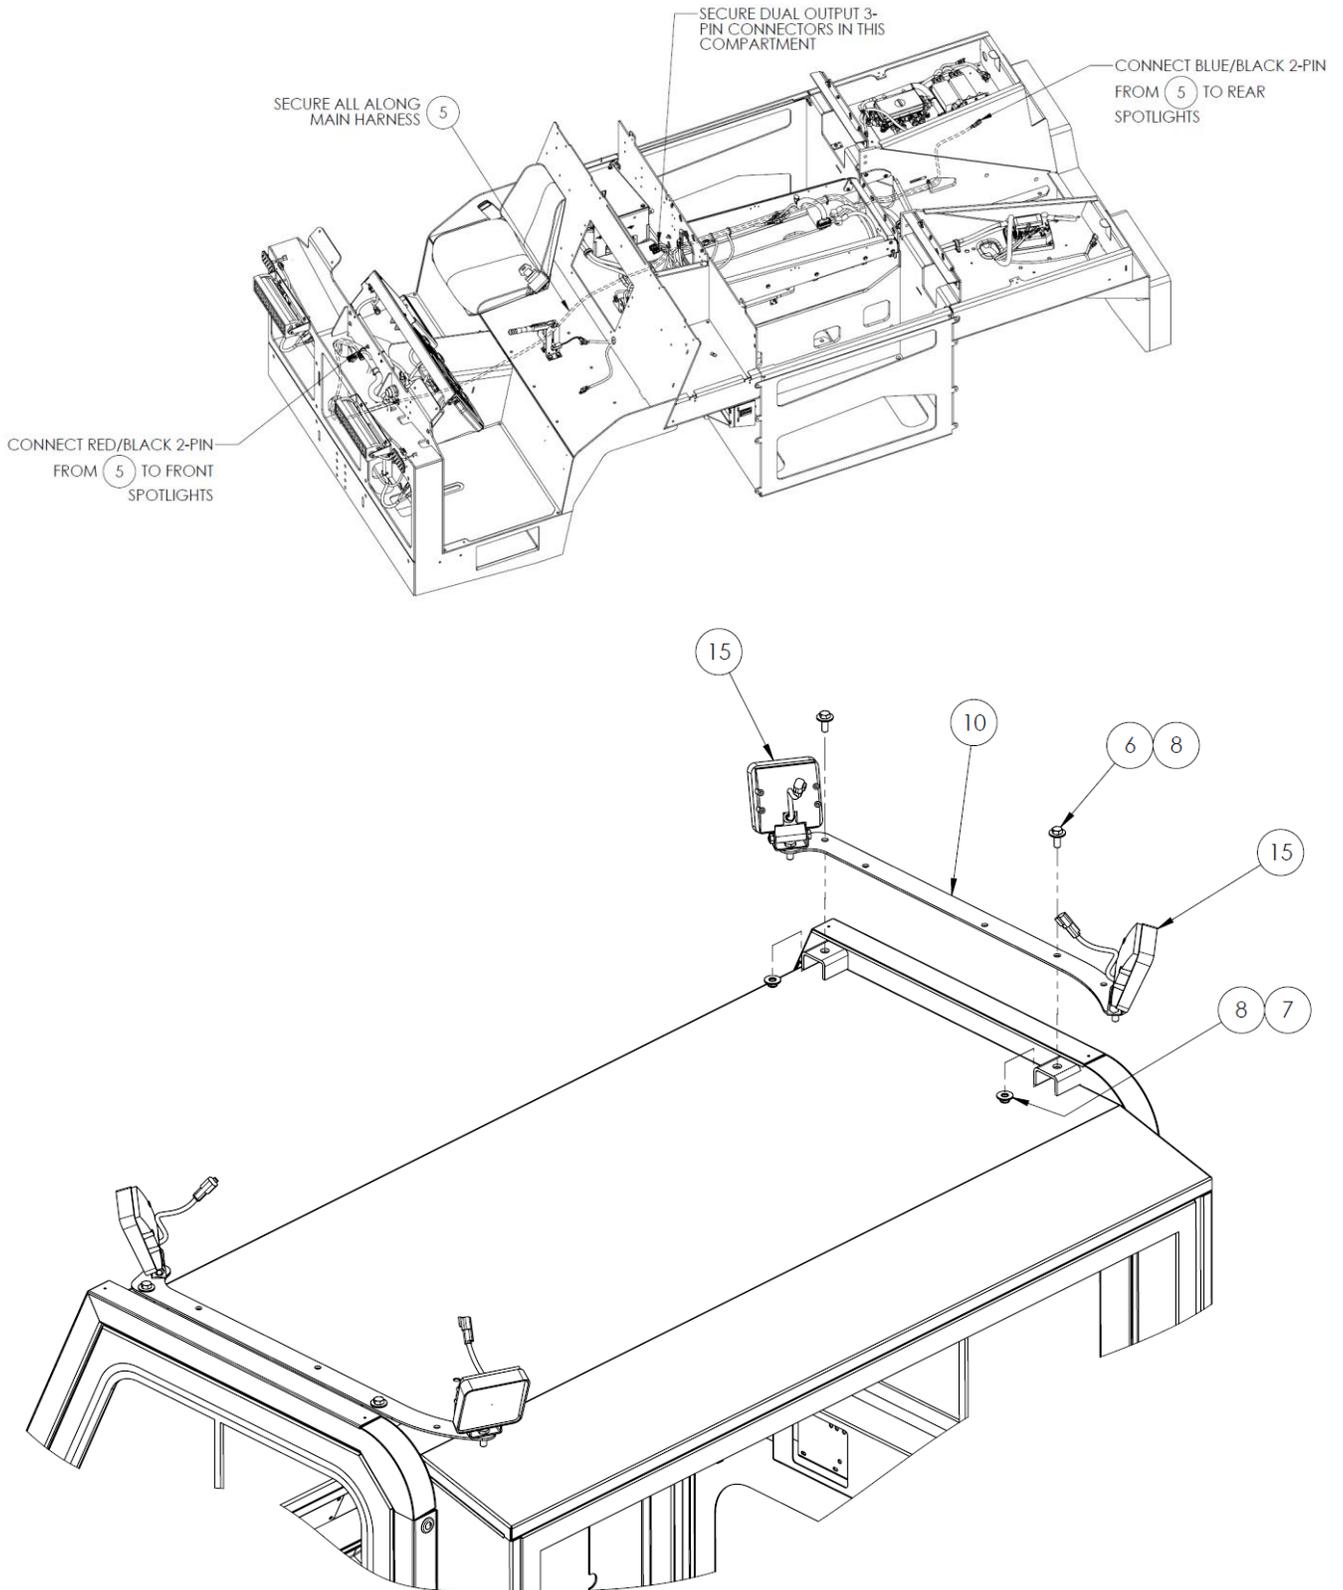

30.1 OPTION A - ON CAB WORKLIGHTS & TURN SIGNAL (continued)

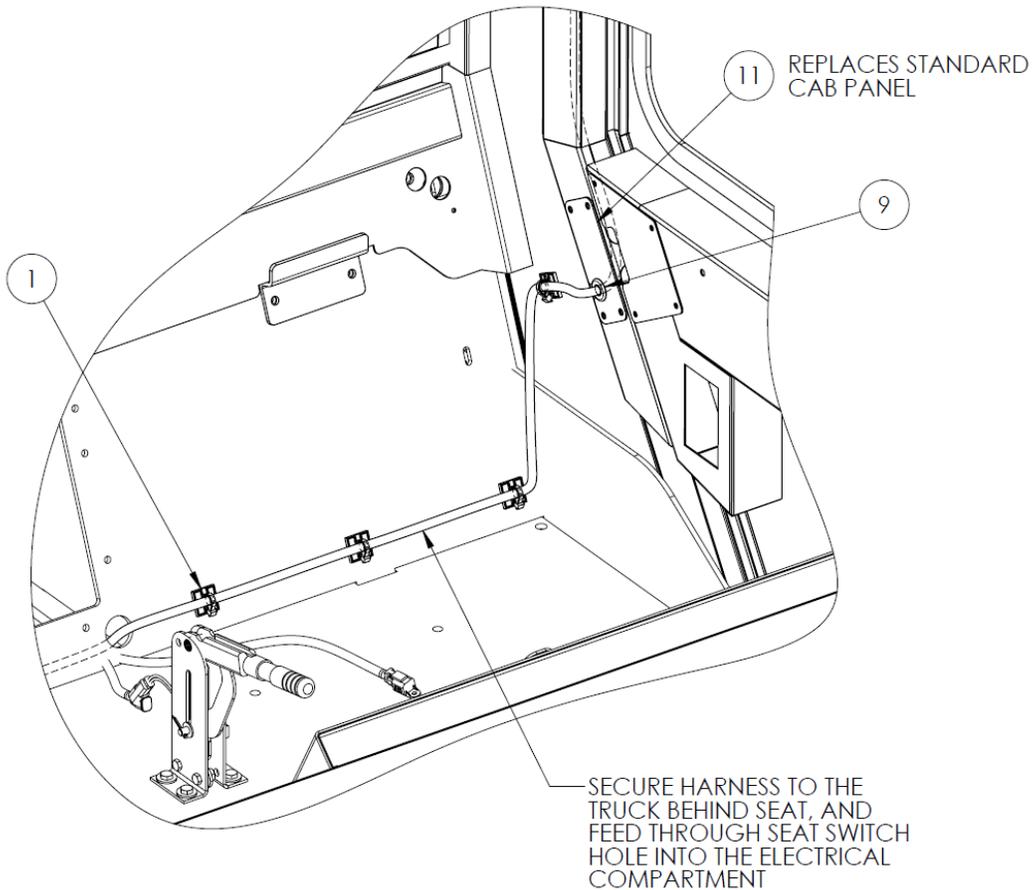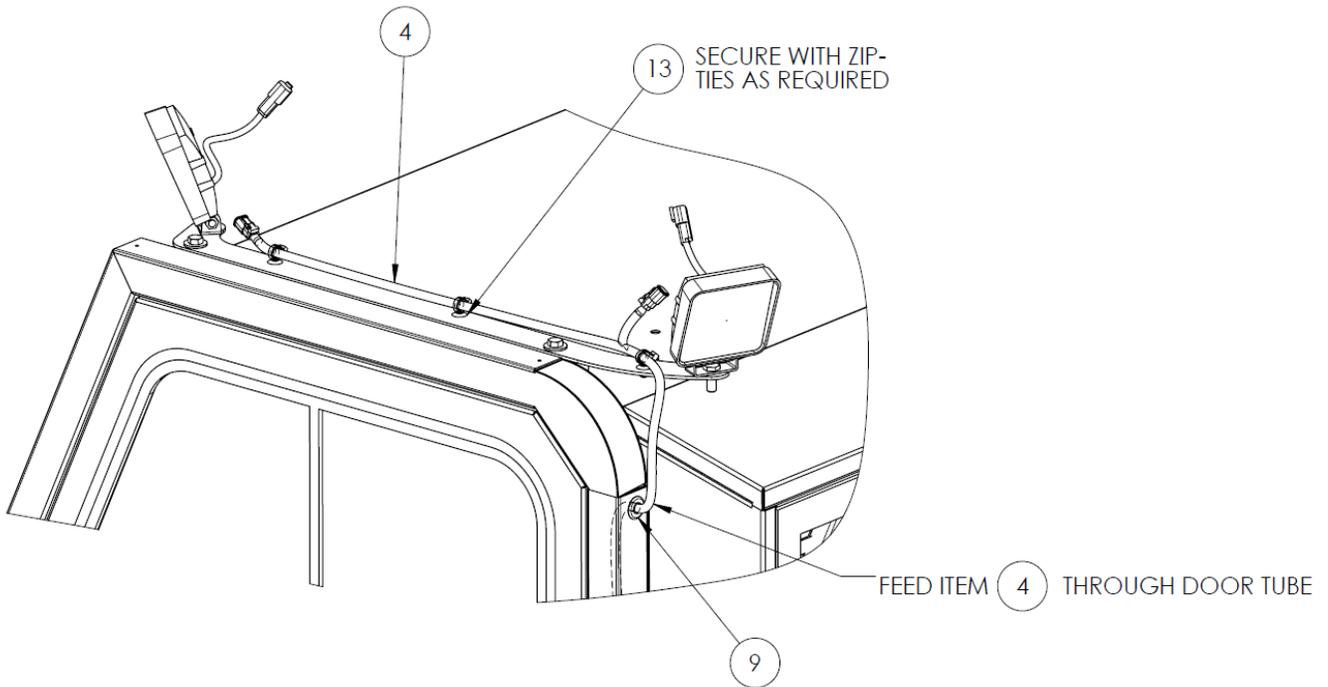

30.1 OPTION A - ON CAB WORKLIGHTS & TURN SIGNAL (continued)

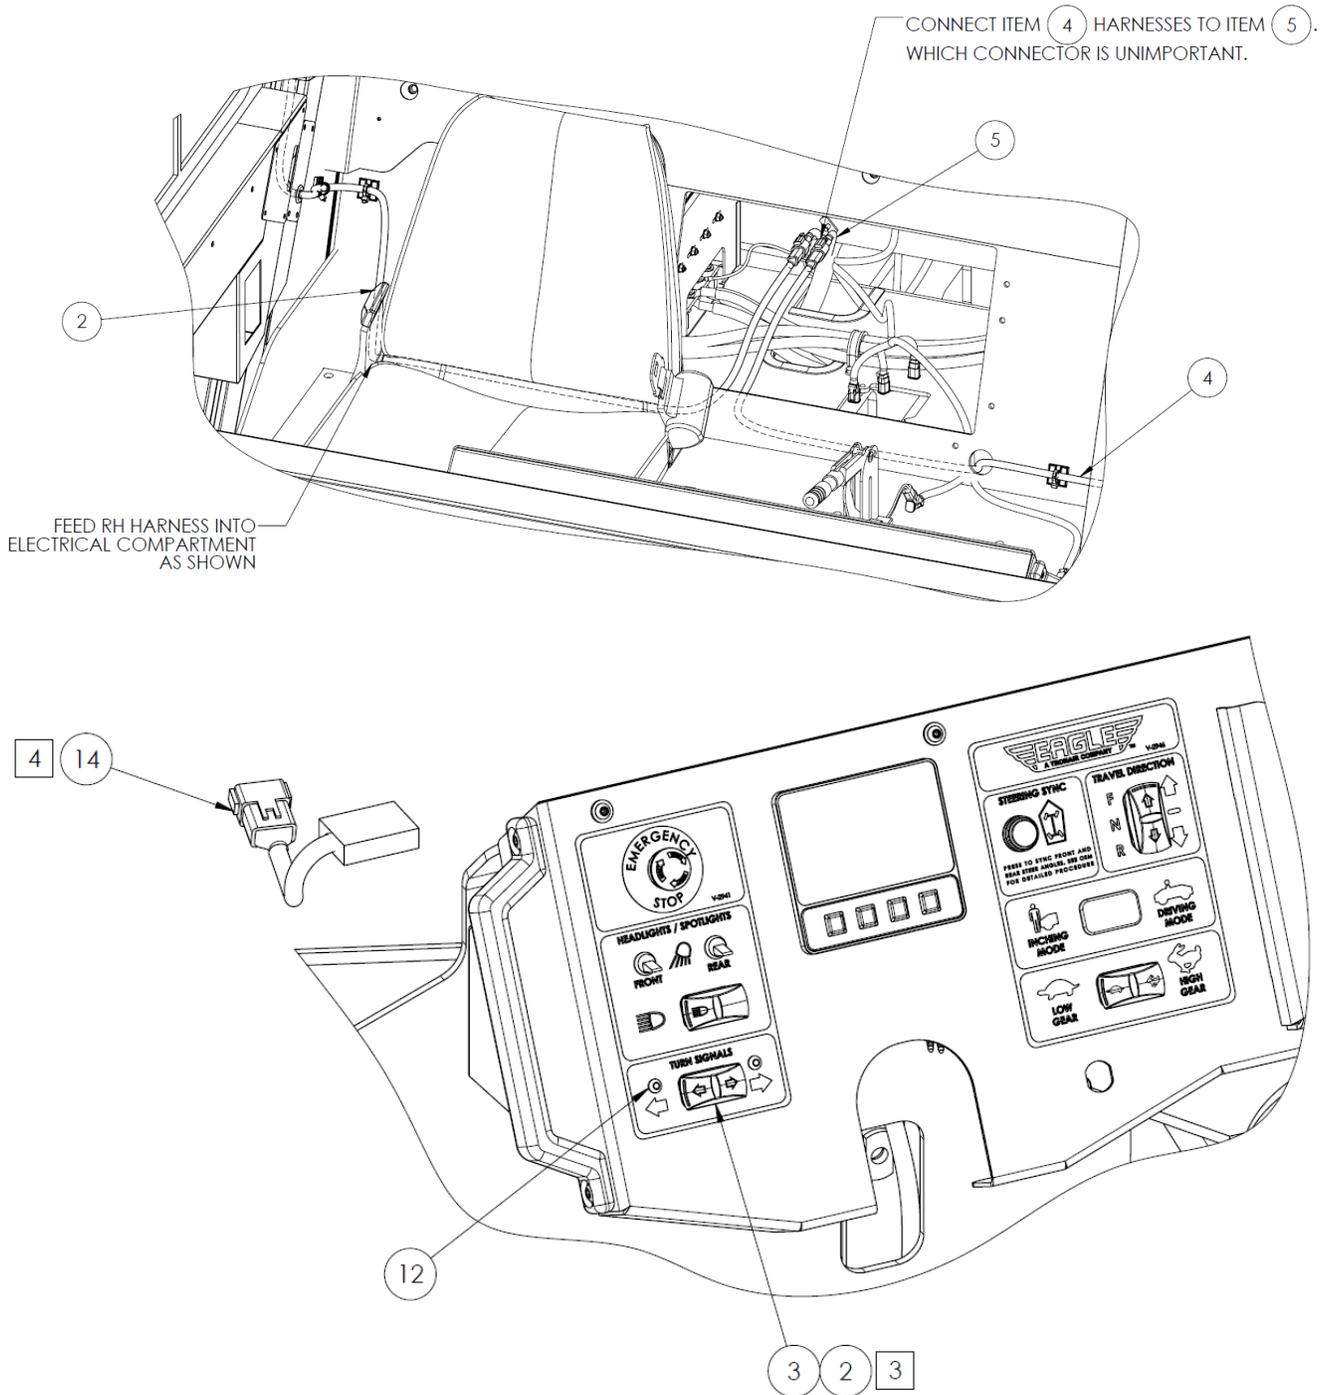



30.1 OPTION A - ON CAB WORKLIGHTS & TURN SIGNAL *(continued)*

OPERATION INSTRUCTIONS:

MODE 1: Press turn signal button for 1 second, turn signal light will flash for 7 seconds, then self-cancel. This mode is usually used when changing lanes.

MODE 2: Press turn signal button for 2 seconds, turn signal light will flash for 20 seconds, then self-cancel. This mode is usually used when slowing down to go around a corner.

MODE 3: Press turn signal button for 4 seconds, turn signal light will flash for 75 seconds, then self-cancel. This mode is usually used when stopping at a signal light and turn will be made after stopping.

NOTE: All three modes above can be cancelled by pressing the same turn signal button a second time.


NOTE: Brake application (including regen) will prevent cancellation until released.

Parts List



When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	13092	CABLE TIE MOUNT	6
2	EC-3359	TURN SIG WIRING W PILOTS	1
3	EC-3450-02	TURN SIGNAL SWITCH	1
4	EC-3590	HARNESS, ROOF SPOTLIGHTS	2
5	EC-3593	HARNESS, SPOT EXTENSION	1
6	G-1100-107010	BOLT, 3/8-16 X 1.0" HEX HD GR 5	4
7	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	4
8	G-1250-1070W	FLATWASHER, 3/8 WIDE	8
9	H-1901-20	GROMMET, 1/2 INCH	4
10	J-8662-00	BRACKET, SPOTLIGHTS (P)	2
11	J-8663-00	ACCESS COVER (WP)	2
12	NVSP-14-035-CA	LED PANEL INDICATOR AMBER	2
13	NVSP-24-022-CA	CABLE TIE ANCHOR STD (Ø.375 X .27 THK)	6
14	Z-10836	ASY, TURN SIG MODULE WITH CONN	1
15	Z-9825	ASY, HEADLIGHT W/CONNECTOR	4


30.2 OPTION O - ON CAB WORKLIGHTS

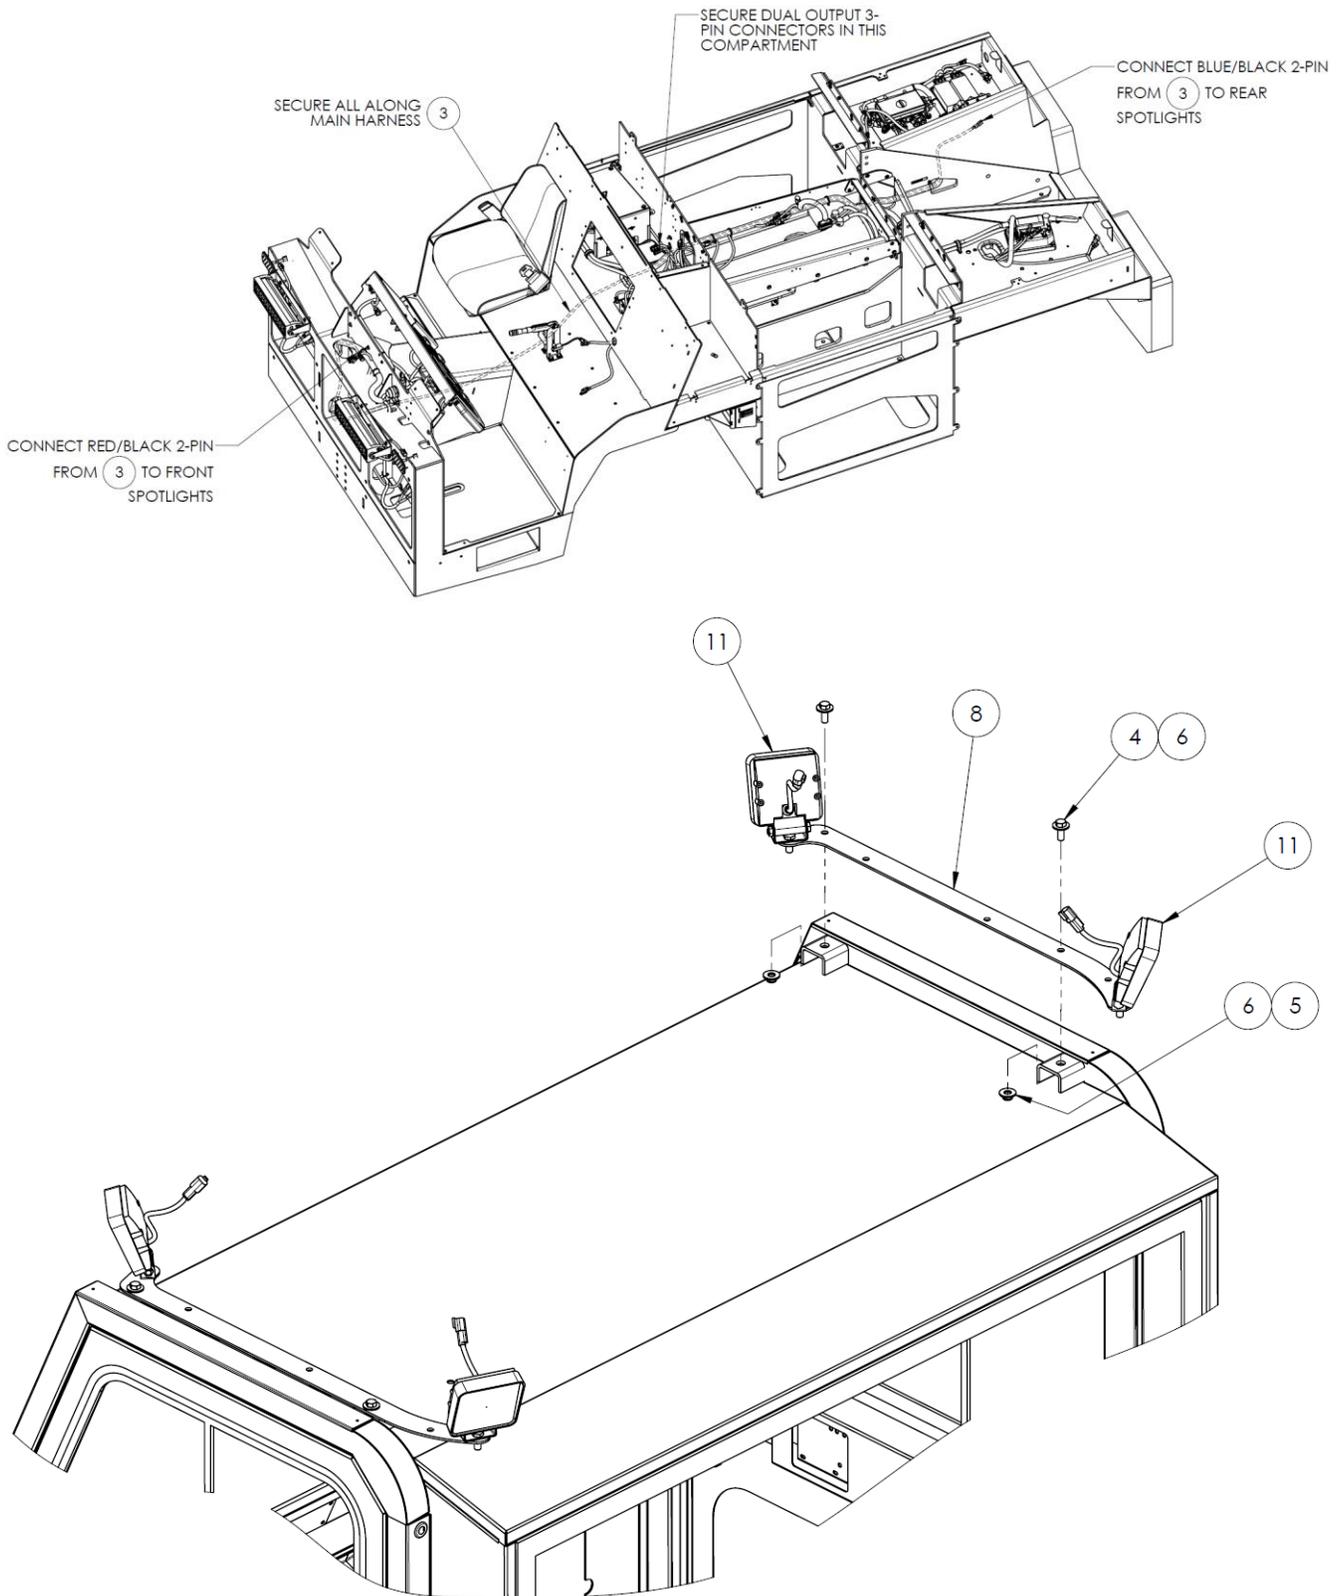

30.2 OPTION O - ON CAB WORKLIGHTS (continued)

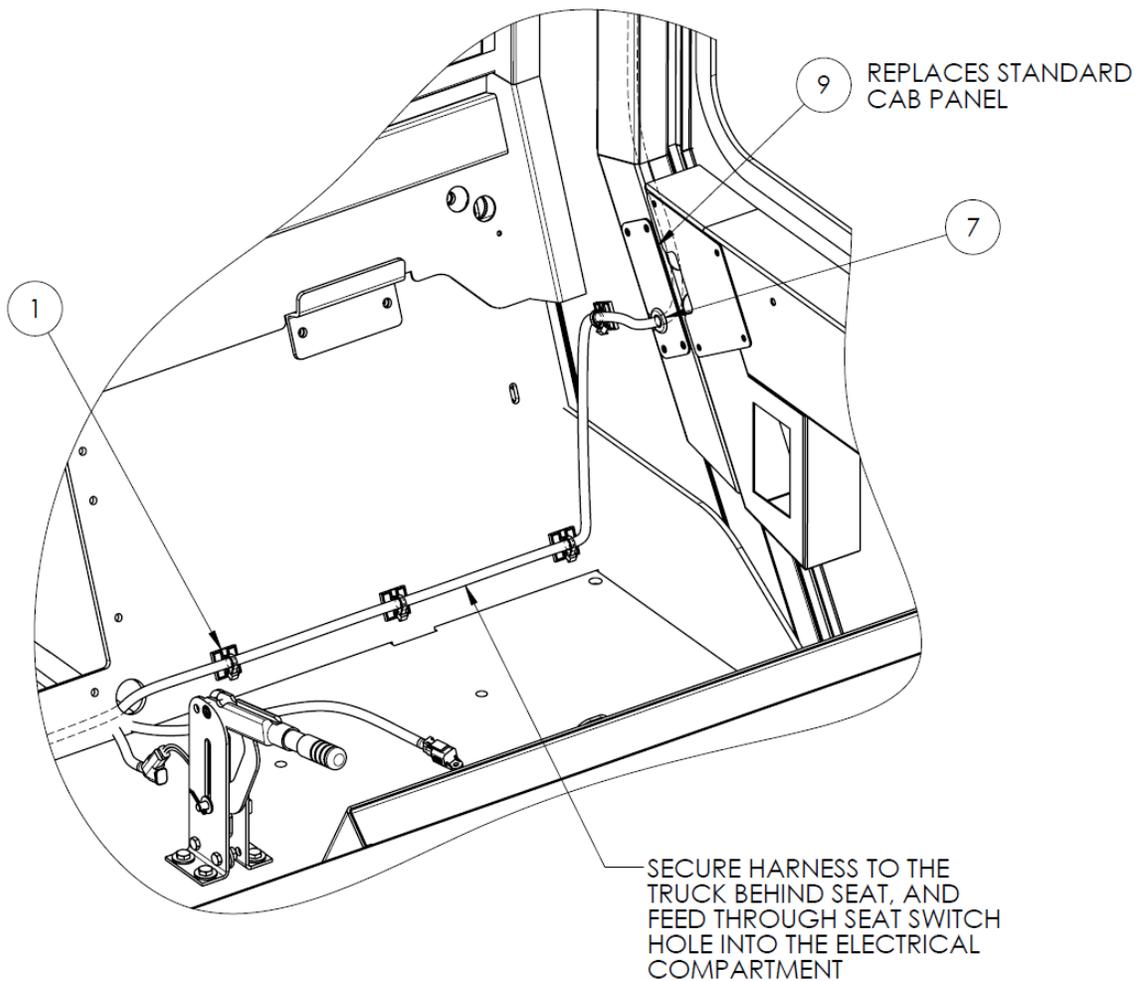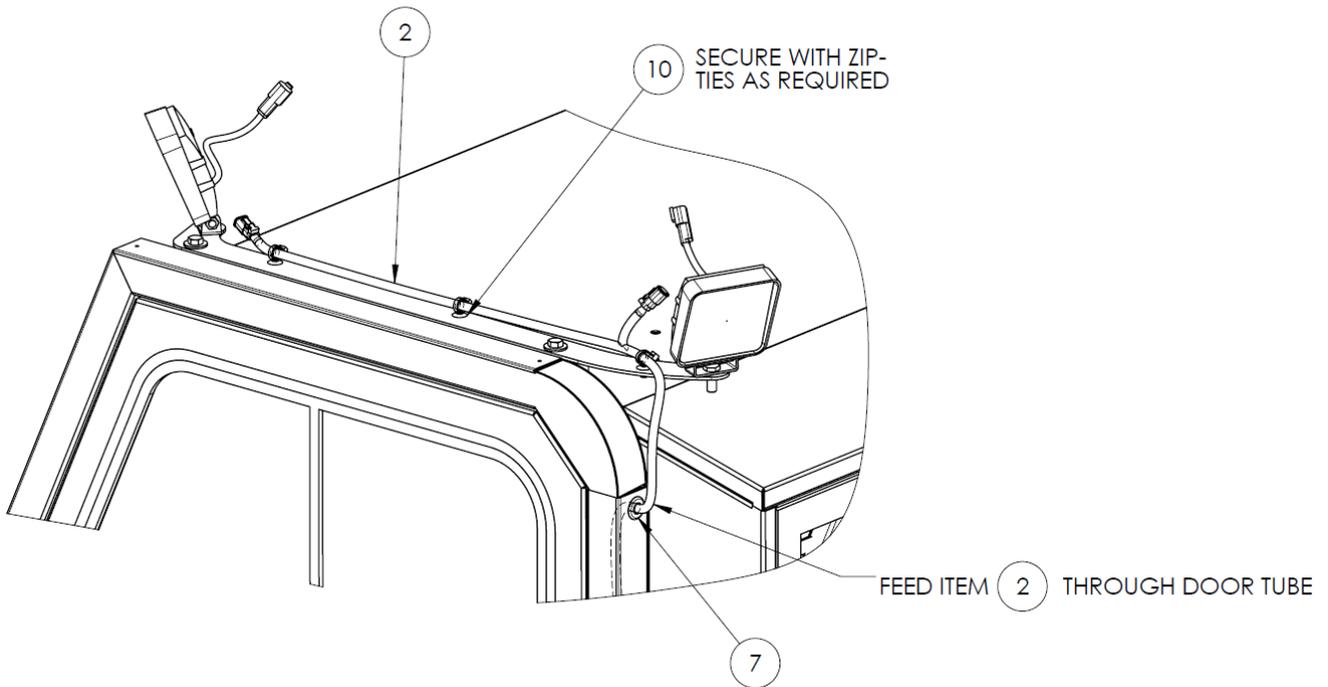

30.2 OPTION O - ON CAB WORKLIGHTS (continued)

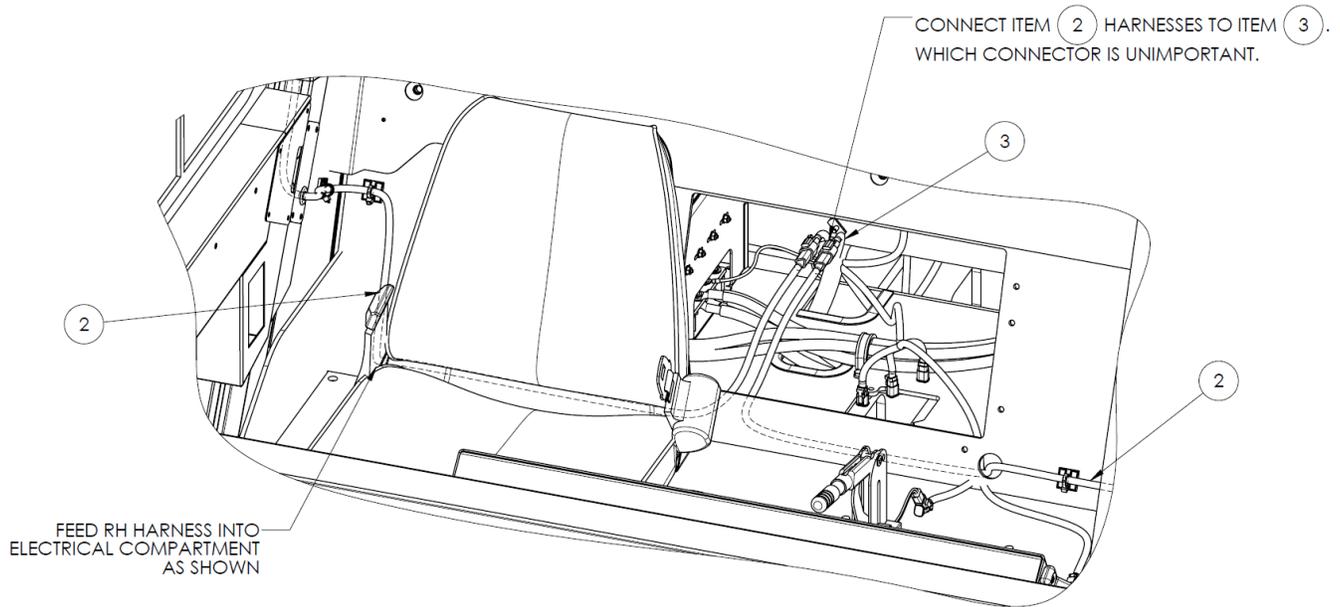


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	13092	CABLE TIE MOUNT	6
2	EC-3590	HARNESS, ROOF SPOTLIGHTS	2
3	EC-3593	HARNESS, SPOT EXTENSION	1
4	G-1100-107010	BOLT, 3/8-16 X 1.0" HEX HD GR 5	4
5	G-1202-1070	STOPNUT, 3/8-16 ELASTIC	4
6	G-1250-1070W	FLATWASHER, 3/8 WIDE	8
7	H-1901-20	GROMMET, 1/2 INCH	4
8	J-8662-00	BRACKET, SPOTLIGHTS (P)	2
9	J-8663-00	ACCESS COVER (WP)	2
10	NVSP-24-022-CA	CABLE TIE ANCHOR STD (Ø.375 X .27 THK)	6
11	Z-9825	ASY, HEADLIGHT W/CONNECTOR	4

31.0 REAR HITCH FEATURE
31.1 OPTION A – E-HITCH

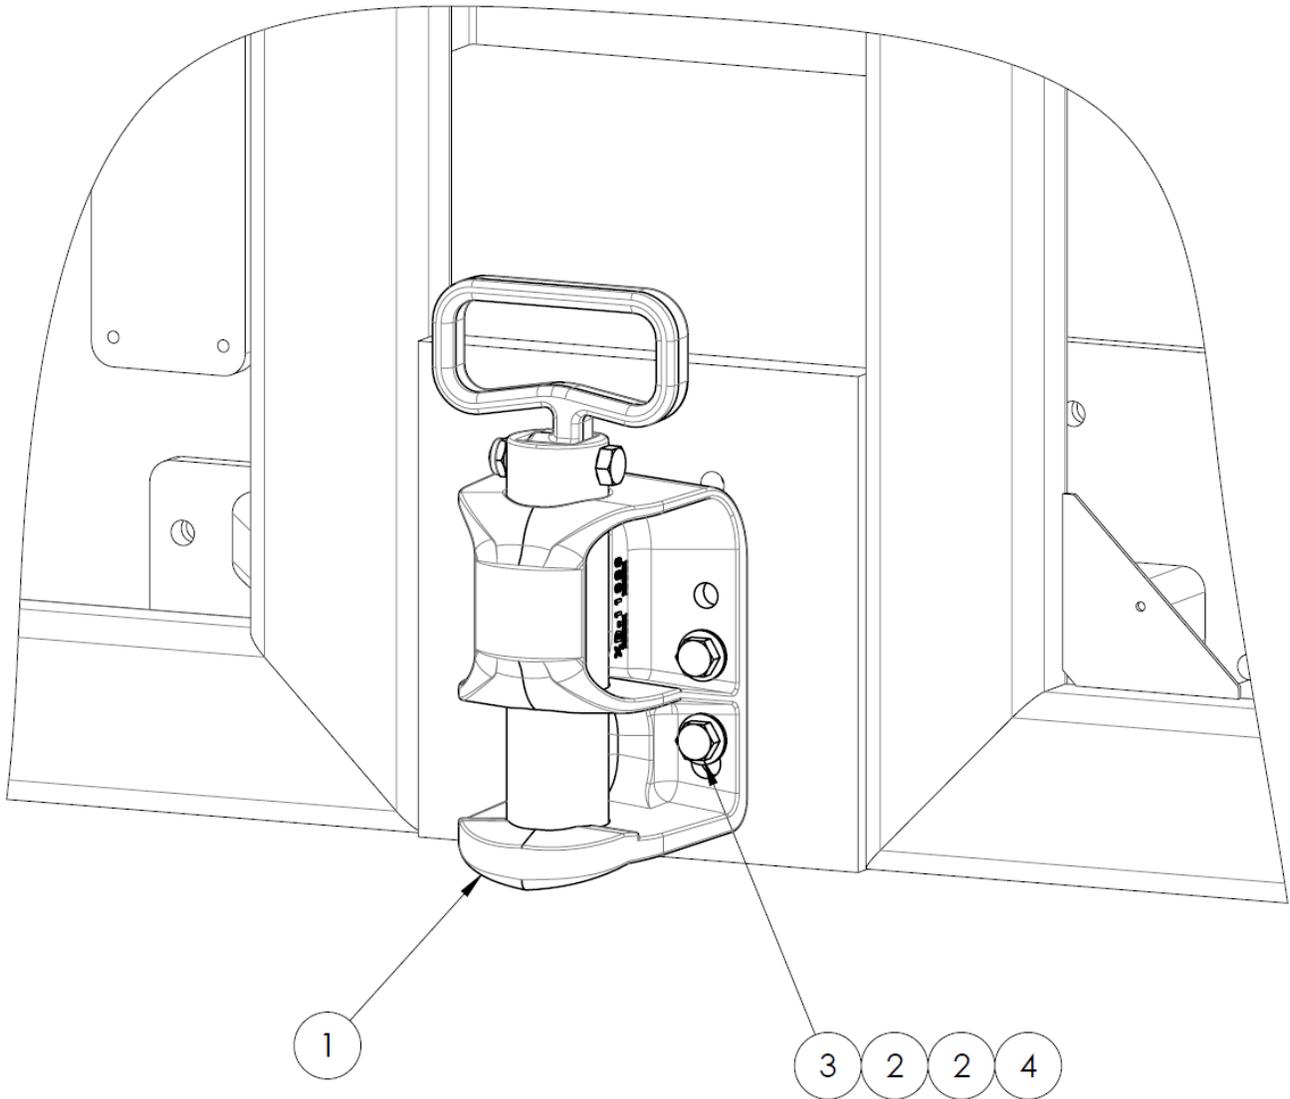


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	AE-OPT-0033-1	E-HITCH, SAF EH-3050	1
2	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
3	G-1420-109024	BOLT, 1/2-13 X 2-1/2" HEX HD GR 8	4
4	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4

31.2 OPTION B – E-HITCH WITH AUTOLOCK

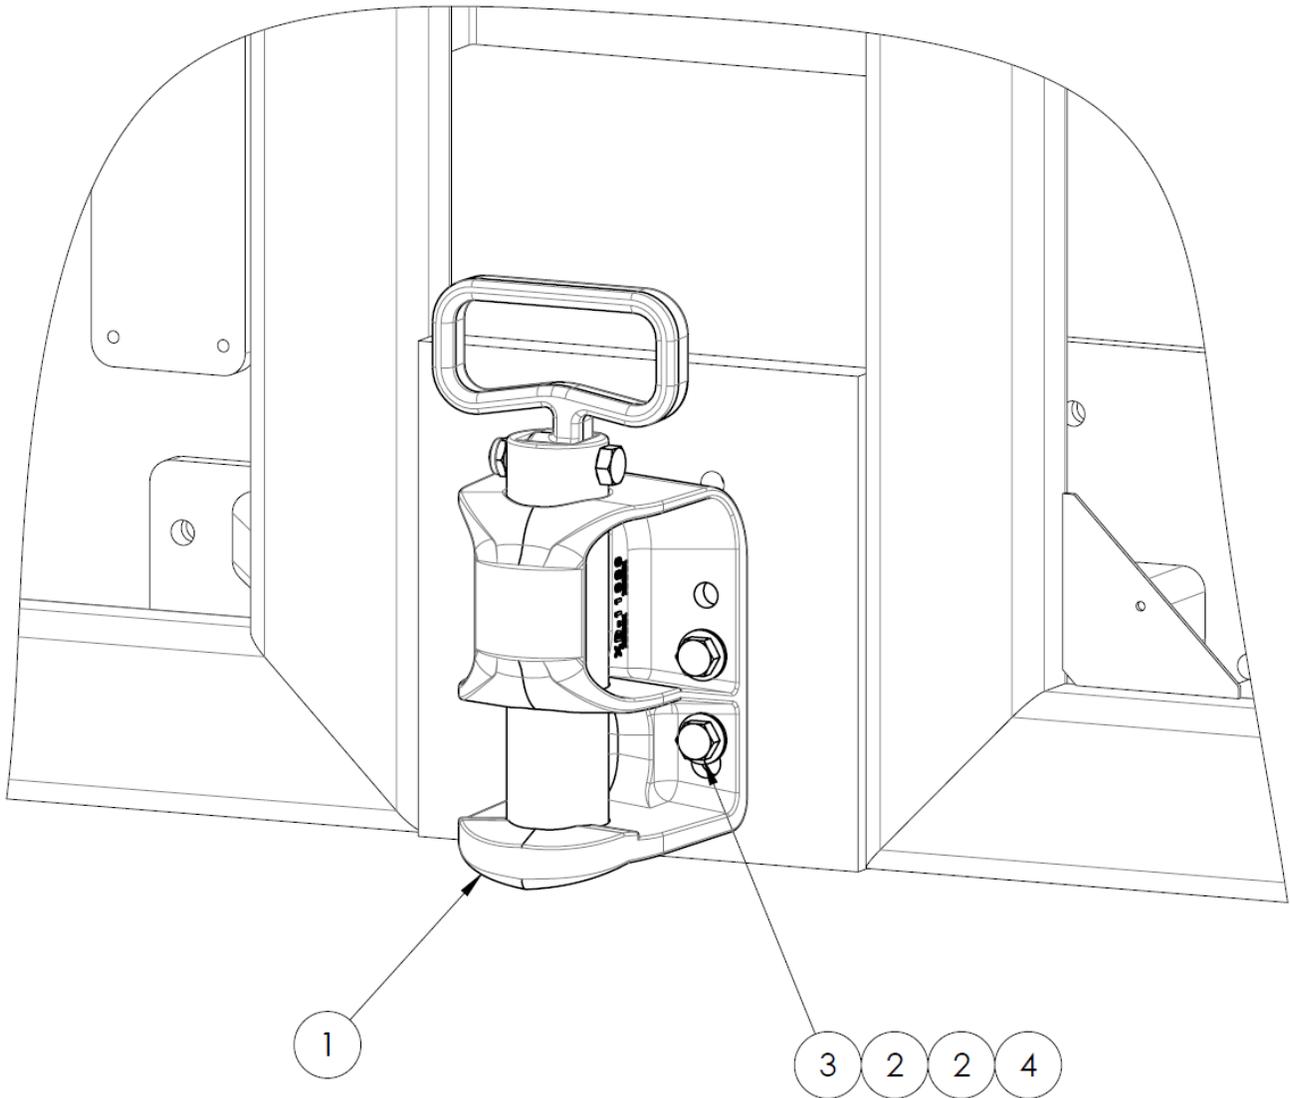


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	OPT-NVSP-034-A	E HITCH 2 1/8" PIN WITH AUTOLOCK	1
2	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
3	G-1420-109024	BOLT, 1/2-13 X 2-1/2" HEX HD GR 8	4
4	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4

31.3 OPTION C – STANDARD PINTLE HOOK

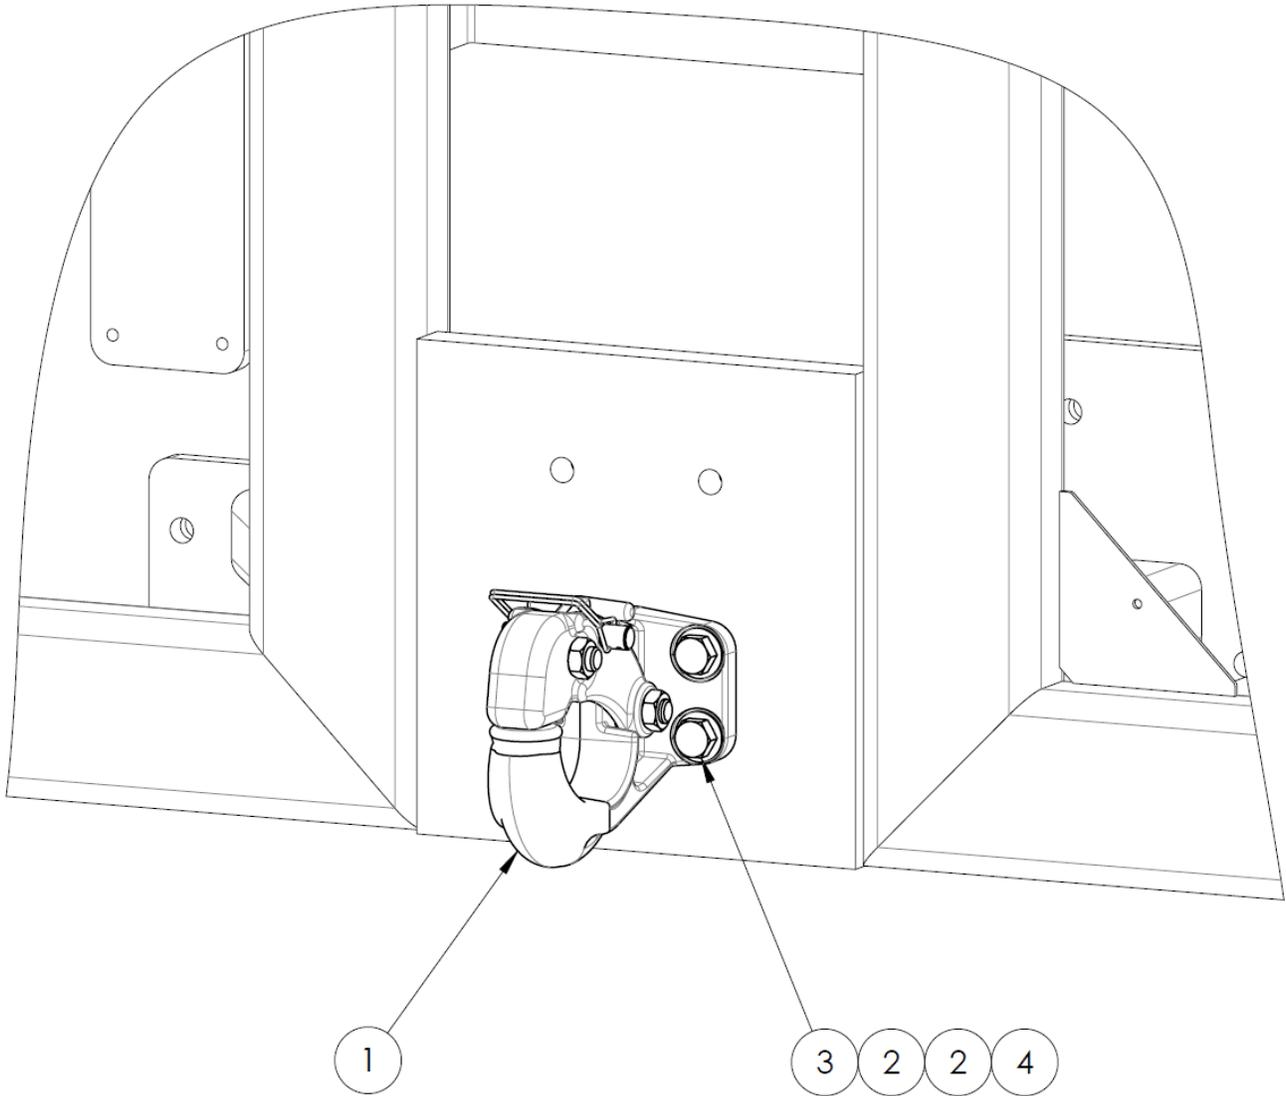


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	AE-OPT-0028	PINTLE HOOK	1
2	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
3	G-1420-109024	BOLT, 1/2-13 X 2-1/2" HEX HD GR 8	4
4	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4

31.4 OPTION D – SINGLE LEVEL HITCH

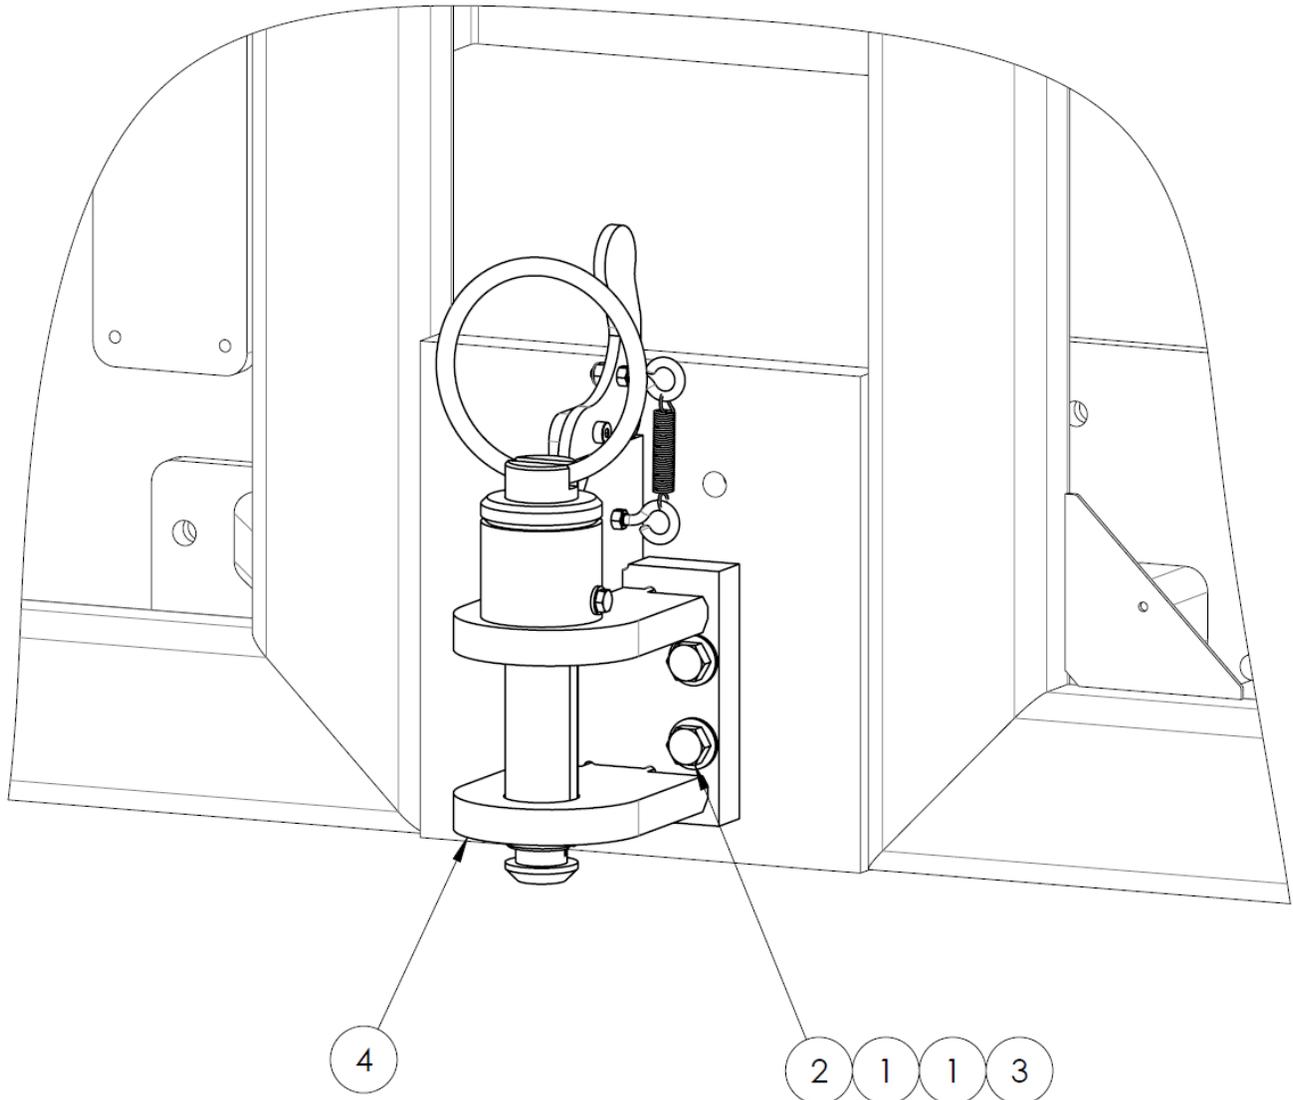

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	G-1250-1090N	FLATWASHER, 1/2 NARROW	8
2	G-1420-109030	BOLT, 1/2-13 X 3 H.H. GR 8	4
3	G-1727-1090	NUT, 1/2-13 TOP LOCK ZINC	4
4	Z-10185	ASSEMBLY, SINGLE HITCH	1



32.0 PROVISION OF SPARES

32.1 SOURCE OF SPARE PARTS

Spare parts may be obtained from the manufacturer:

Tronair / Eagle Tugs.

1 Air Cargo Pkwy East
Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301

Fax: (419) 867-0634

E-mail: sales@tronair.com

Website: www.tronair.com



For Spare Parts, Operations & Service Manuals or Service Needs:

Scan the QR code or visit tronair.com/pages/tronair-information-center

32.2 ORDERING SPARE/SERVICE PARTS

Tronair inventories many of the spare/service parts found in its eTT series tow tractors, and most of these parts can be shipped the day after the order is received. Non-stock parts orders will be shipped as soon as the parts are available.

32.3 RECOMMENDED SPARE PARTS LIST

Description	Part Number	Suggested Replacement Interval
Hydraulic Filter	A-ES12-0485	Annually
Key Switch Contactor	EC-3006	As Required
Drive Contactor	Z-11102	As Required
ANL Fuse – 500A (Traction)	EC-1619-19	As Required
ANL Fuse – 150A (Pump/Charge)	EC-1619-09	As Required
Key Switch Relay	NVSP-31-002-CA	As Required
Mini Fuse, 2A (Power Dist. Box)	MIN-2	As Required
Mini Fuse, 5A (Power Dist. Box)	MIN-5	As Required
Mini Fuse, 7.5A (Power Dist. Box)	MIN-7.5	As Required
Mini Fuse, 10A (Power Dist. Box)	MIN-10	As Required
Mini Fuse, 15A (Power Dist. Box)	MIN-15	As Required
Cube Relay (Power Dist. Box)	XL00-81-001-CA	As Required
10X38 FUSE, 250V, 1A	BLN-1	As Required
10X38 FUSE, 250V, 1A	BLN-10	As Required
Headlight	EC-3400	As Required
Front Turn Indicator	Z-9826	As Required
Reverse Lamp	Z-11367	As Required
Amber Marker Lamp	Z-9826	As Required
Work light	Z-11367	As Required
Stop/Tail/Turn Lamp	Z-11366	As Required
12V DC-DC Converter	AE-OPT-0320-B	As Required
Hydraulic Block Coil Kit	ET00-59-001-CA	As Required
Drive Cooling Fan	Z-11062	As Required
Parking Brake Proximity Switch	Z-9940	As Required
Hydraulic Pressure Switch	EC-3493-PGM-1	As Required
Tire, 7.00 R12 TL	Z-11335	As Required
Traction Motor Encoder	ET00-54-001-CA	As Required



33.0 IN SERVICE SUPPORT

Contact Tronair Tugs for technical services and information. See Section 1.3 – Manufacturer.

33.1 TECHNICAL ASSISTANCE

When addressing a repair procedure or operational problem, please remember that Tronair technical support is only a phone call away. Tronair technicians are available to assist you in vehicle diagnostics and recommended repair procedures. We encourage you to use this service to reduce machine down-time and to gain a better understanding of proper repair procedures.

34.0 GUARANTEES/LIMITATION OF LIABILITY - EAGLE WARRANTY

Coverage Overview

The Eagle Warranty covers all new Eagle vehicles. Eagle, a Tronair company, warrants that these vehicles will be free from defects in material and workmanship for the period described based on the warranty period of the vehicles listed below. The warranty period begins on the date of shipment to the original purchaser. Coverage extends for the time period or operating hours specified for each vehicle series below, whichever limit is reached first. This warranty is non-transferable and applies only to the original purchaser of the vehicle.

Coverage by Vehicle Series

The Eagle Warranty provides 3-year or 3,000-hour coverage, whichever occurs first, for TT-series, TTR-series, eTT-series, eJP-series, XM-series, XL-series, and USATS vehicles when used in aviation applications. For non-aviation/industrial applications, the Eagle Warranty provides 1-year or 2,000-hour coverage, whichever occurs first, regardless of vehicle series. This includes MTT-series, STT-series, RTT-series, Bobtails, Transit Pro, and any aviation-series vehicle used in non-aviation/industrial applications. Bobtails are covered under Ford Motor Company's standard warranty (three-year/36,000-mile bumper-to-bumper and five-year/60,000-mile powertrain). Eagle provides supplementary 1-year/2,000-hour warranty coverage for Eagle-specific components not covered by Ford's warranty.

Exclusions

This warranty does not apply to any Eagle vehicle or component part(s) that have damage caused by: misuse of the vehicle, accidents, collision or objects striking the vehicle, vandalism, fire, explosion or water damage, using contaminated or improper fuel/fluids, customer-applied chemicals to painted surfaces, improper handling or application, or maintenance neglect including lack of lubricants or fluids. This warranty does not extend to Eagle vehicles and/or parts which have been repaired or altered outside of Eagle's plant or the facility of an Authorized Service Representative without the permission of Eagle.

Any modification to the electrical system must receive prior written approval from Eagle. Unauthorized electrical modifications will void warranty coverage for electrical components only.

This warranty does not apply to routine maintenance or wearable parts of the Eagle vehicle such as: tires, brake pads or shoes, ball joints, kingpins, u-joints, wheel bearings, filters, seals, spark plugs, hoses, belts, light bulbs, batteries (diesel and gas vehicles), fuses, or similar items.

Batteries, battery chargers, snowplows, and Transit Pro options are warranted directly to the user by their respective manufacturers and not by Eagle or an Authorized Service Representative.

This warranty does not cover or provide credit for the following: vehicle rental or other substitute equipment; lodging; loss of time, income, sales or profits; loss of the use of vehicle; telephone calls or communication expense; lift truck; storage fees; injury or death to persons or damage or destruction of property; or consequential, incidental or punitive damages.

Warranty Claim Procedure

When a warranty situation arises, it is essential that the customer contact Tronair Product Support at productsupport@tronair.com or +1 (419) 861-2560. The customer will need to provide Eagle with the vehicle serial number and operating hours. A representative will analyze the problem and determine the next steps. In many cases, technical support personnel will be able to analyze the problem and recommend a solution that will solve the problem and reduce downtime. If further service is required, a customer service representative will work with customer personnel to arrange a service provider and/or will send parts to your facility for the repair as quickly as possible. The determination of a warrantable claim will be at the sole discretion of Tronair.



34.0 GUARANTEES/LIMITATION OF LIABILITY - EAGLE WARRANTY *(continued)*

Notice and Remedies

Notice of any claimed defect must be given to Eagle within the warranty period and within a reasonable time after such defect is discovered, not to exceed thirty (30) days. Liability under this warranty is limited to either replacing or repairing, at Eagle's election, any part or parts deemed defective after examination by Eagle or an Authorized Service Representative. Eagle reserves the right to use remanufactured parts as replacements in warranty claims.

Third-Party Inspection and Return Requirements

At Eagle's election, any part replaced under warranty as defective can be sent out for third-party inspection. If the part is not found to be defective, or abuse was the cause of the failure, all associated costs related to the warranty claim may be charged to the customer. All parts returned to Eagle by a customer must be received without further damage. If returned items are not properly packaged for return shipping to Eagle or an Authorized Service Representative via prepaid transportation, the customer will be charged for the full value of the item that was damaged upon return. This warranty does not extend beyond its original term for any Eagle vehicle or part replaced or repaired under warranty. Any and all disputes or disagreements will be negotiated in good faith by both parties.

Labor Allowance

A labor allowance may be issued upon request at Tronair's discretion. Allowable labor hours and per-hour labor rate will be determined by Eagle according to reasonable automotive standards.

Limitation of Warranties

Except as set forth above, all warranties, conditions, representations, indemnities and guarantees, express or implied, whether arising by statute, custom of trade, or under oral or written statements made by or on behalf of Eagle in negotiations with customer, distributor, dealer, or any representative, are hereby waived and excluded, and no liability shall attach to Eagle, either in contract or in tort, or strict liability in tort, for any damage to property, loss of profits, damages, costs, charges, liability or expenses, whether direct or indirect, consequential or otherwise, which arise out of or in connection with the sale or use of any Eagle vehicle or the supply of services.

Definitions

Authorized Service Representative: Service providers approved by Eagle to perform warranty repairs. Contact Tronair Product Support for a list of Authorized Service Representatives in your area.

Eagle reserves the right to modify this warranty without prior notice.


35.0 APPENDICES

- APPENDIX I Dash Panel Harness (INS-2771)
- APPENDIX II Main Vehicle Harness (INS-2774)
- APPENDIX III Hydraulic Schematic (INS-2777)



APPENDIX I


Dash Panel Harness (INS-2771)

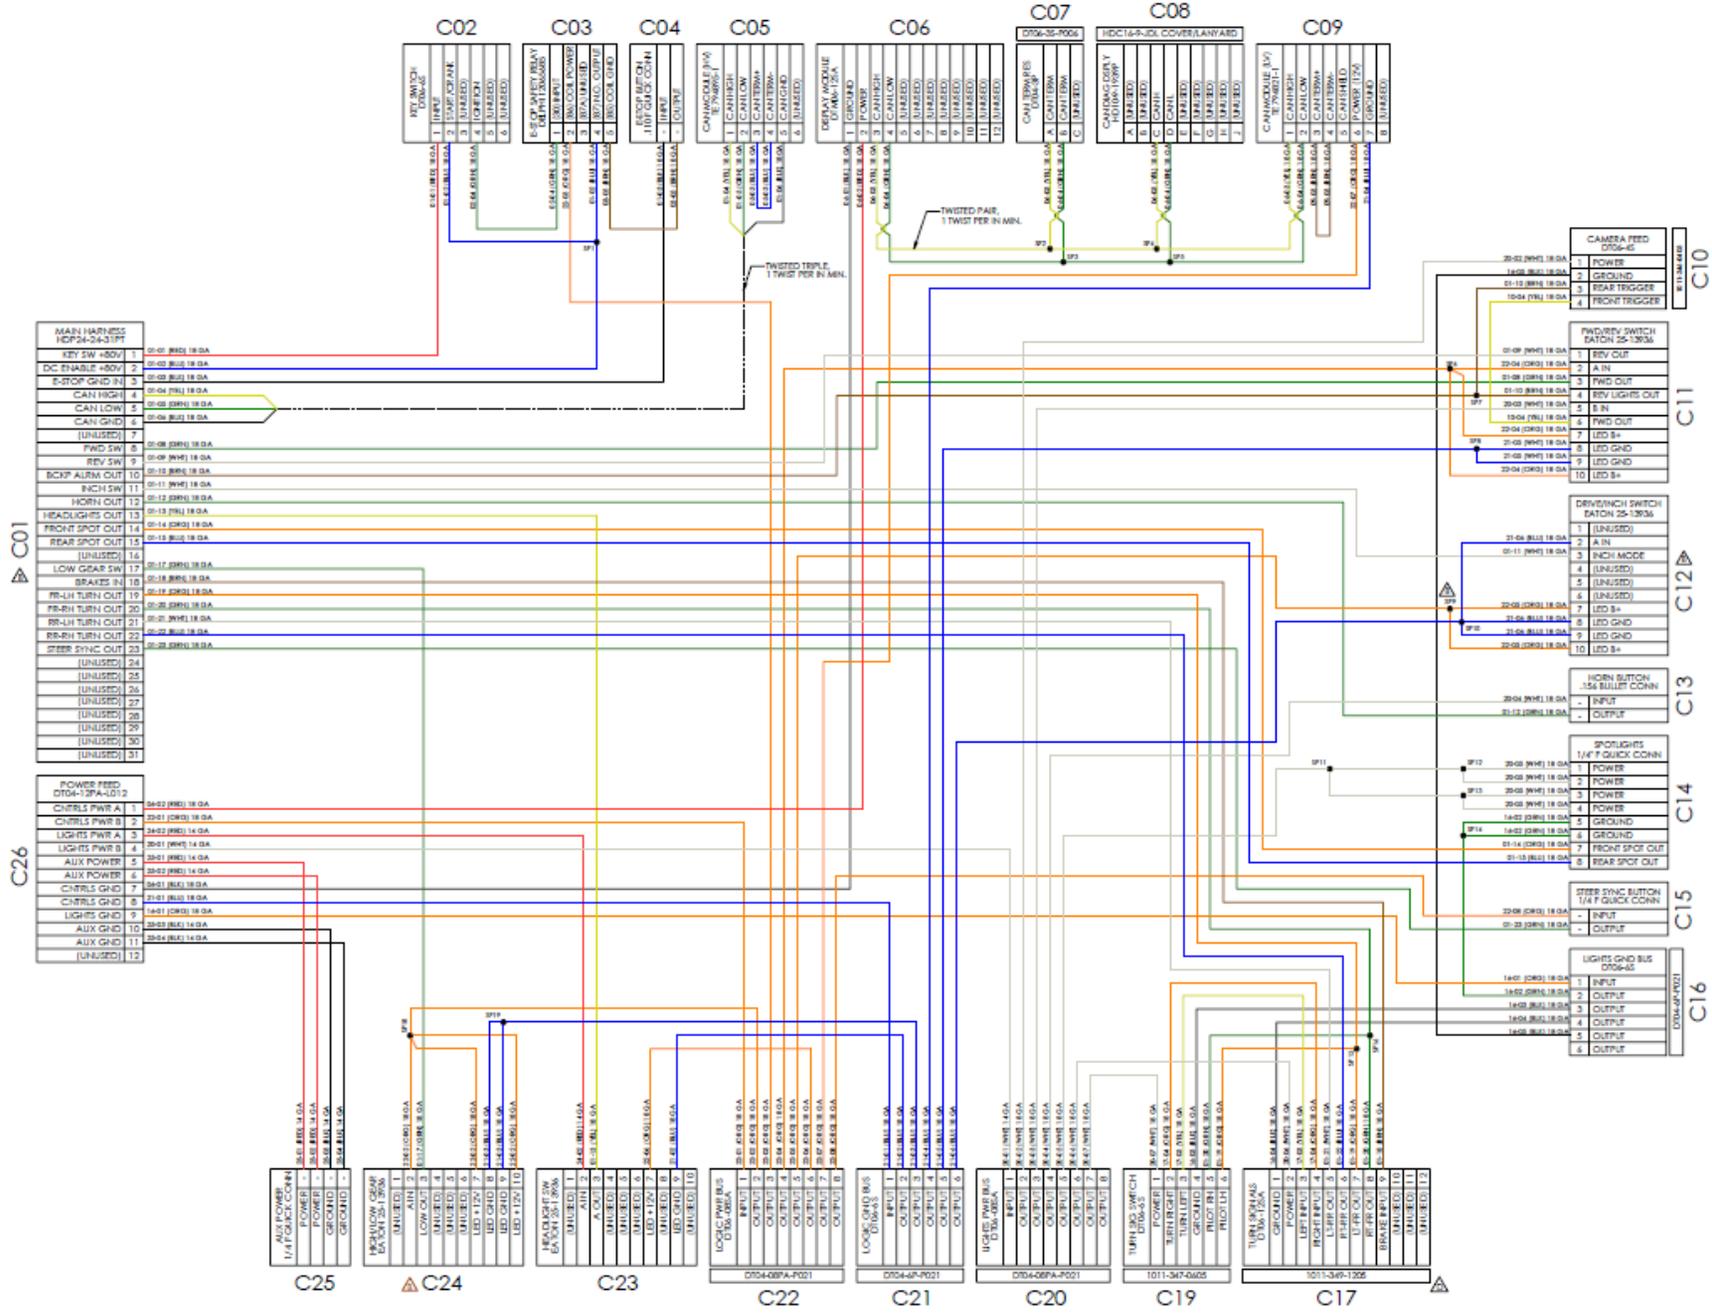



APPENDIX II

Main Vehicle Harness (INS-2774)

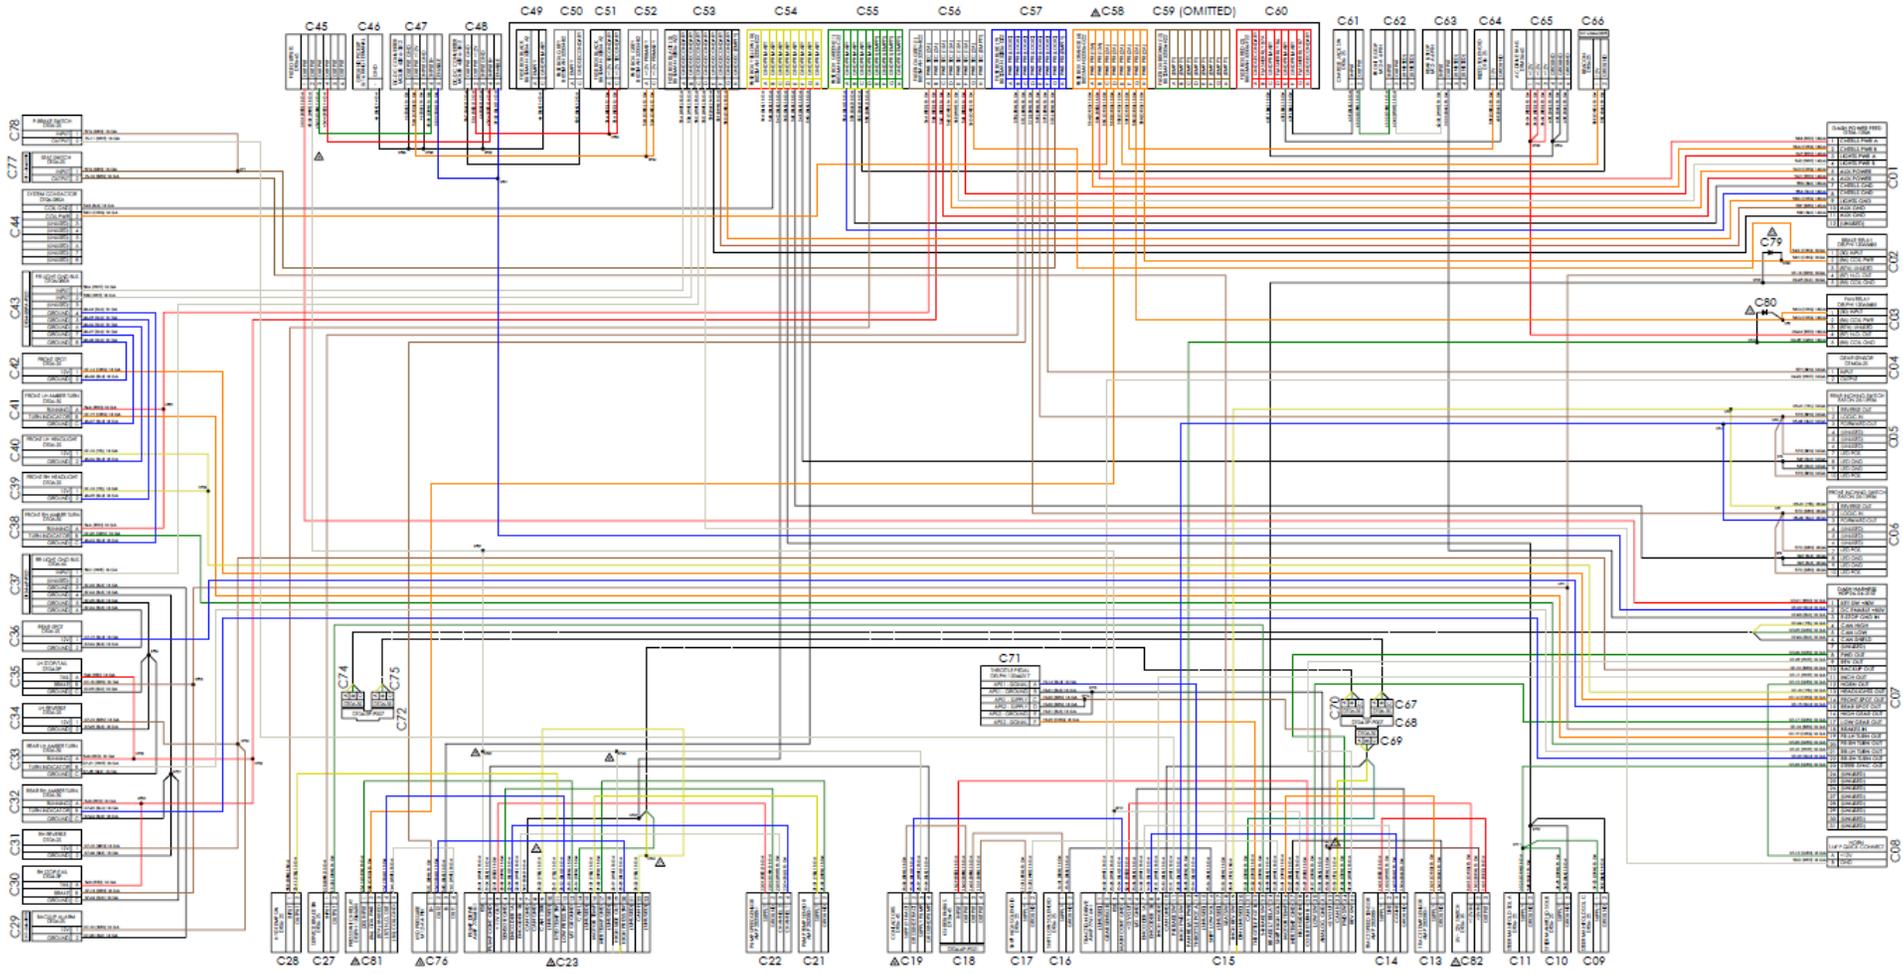



APPENDIX III

Hydraulic Schematic (INS-2777)

