

Model: 03A5845C0000
Tailstand with Alarm



03/2011 – Rev. 01

REVISION
01

DATE
03/2011

TEXT AFFECTED
Original Release

TABLE OF CONTENTS

	<u>PAGE</u>
1.0 PRODUCT INFORMATION	1
1.1 USAGE	1
2.0 SAFETY INFORMATION	1
2.1 ALARM AND WARNING SYSTEMS	1
2.2 WARNING AND DANGER SIGNS	1
2.3 COMPONENT SAFETY FEATURES	1
2.4 FUNCTIONAL SAFETY FEATURES	1
2.5 FEATURES FOR OPERATOR SAFETY	1
2.6 ENVIRONMENTAL SAFETY FEATURES	1
2.7 PROTECTION SYSTEMS	1
2.8 CLOSED CIRCUITS	1
2.9 INTERLOCKING	1
2.10 NECESSARY PERSONAL PROTECTIVE EQUIPMENT	1
2.11 SAFETY GUIDELINES	2
2.12 CONDITIONS FOR SAFE USE	2
2.13 OPERATOR QUALIFICATIONS	2
2.14 ADDITIONAL SAFETY MEASURES	2
3.0 PACKAGING AND STORAGE	2
3.1 PACKAGING REQUIREMENTS	2
3.2 HANDLING	2
3.3 STRAPPING	2
3.4 PACKAGING PROTECTION	2
3.5 LABELING OF PACKAGING	2
3.6 STORAGE COMPATIBILITY	2
3.7 STORAGE ENVIRONMENT	2
3.8 STORAGE SPACE AND HANDLING FACILITIES:	3
4.0 TRANSPORTATION	3
5.0 ASSEMBLY	3
5.1 GENERAL INSTRUCTIONS	3
5.2 PRE-USE CHECKS	3
5.3 PERSONNEL REQUIREMENTS	3
5.4 ASSEMBLY STEPS	3
5.5 INSPECTION AND TEST PROCEDURES	3
6.0 INSTALLATION	3
7.0 OPERATION	4
7.1 OPERATING PARAMETERS	4
7.2 NUMERICAL VALUES	4
7.3 OPERATOR CONTROLS	4
7.4 OPERATING INSTRUCTIONS	4
7.4.1 Rules For Operating	4
7.4.2 Operation	4
7.4.3 Alarm Test	4
7.4.4 Battery Test	4
7.4.5 Low Battery Warning	5
7.4.6 Alarm Load Test	5
7.4.7 Tailstand Instructions	5
7.4.8 Forward Orientation	6
8.0 TRAINING	6
9.0 MAINTENANCE	6
9.1 GENERAL	6
9.2 MAINTENANCE SCHEDULE	6
9.3 CLEANING ALARM	6
10.0 TROUBLESHOOTING	7
10.1 ALARM WILL NOT SOUND	7
10.2 ALARM "CHIRPS"	7
10.3 ALARM PRODUCES AN ERRATIC OR LOW SOUND	7
11.0 PROVISION OF SPARES	7
11.1 SOURCE OF SPARE PARTS	7
11.2 RECOMMENDED SPARE PARTS LISTS	7
12.0 IN-SERVICE SUPPORT	7
13.0 GUARANTEES/LIMITATION OF LIABILITY	8
14.0 APPENDICES	8

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

Name Of Equipment: Tailstand, Alarm Option

Model Number: 03A5845C0000 See Nameplate for Serial Number

Manufactured By: **TRONAIR**, Inc. 1740 Eber Rd., Holland, OH 43528-9794 USA

1.1 USAGE

The device is intended to stabilize an aircraft by its fuselage during maintenance, whose maximum load does not exceed the rated capacity of the tailstand.

2.0 SAFETY INFORMATION

2.1 ALARM AND WARNING SYSTEMS

The tailstand has an alarm system that alerts the operator that a force of 100 to 150 pounds (45.36 to 68.04 kg) is being applied to the top of the cradle. The unit attached to the tailstand sounds a loud 85 db pulsating alarm until the force is reduced.

2.2 WARNING AND DANGER SIGNS

None

2.3 COMPONENT SAFETY FEATURES

Extension Pin provides a visual check that the pin is fully inserted

2.4 FUNCTIONAL SAFETY FEATURES

None

2.5 FEATURES FOR OPERATOR SAFETY

None

2.6 ENVIRONMENTAL SAFETY FEATURES

Tailstand is non-polluting.

2.7 PROTECTION SYSTEMS

None

2.8 CLOSED CIRCUITS

Reference **Figure 1**


2.9 INTERLOCKING

None.

2.10 NECESSARY PERSONAL PROTECTIVE EQUIPMENT

CAUTION!

Always wear safety glasses.

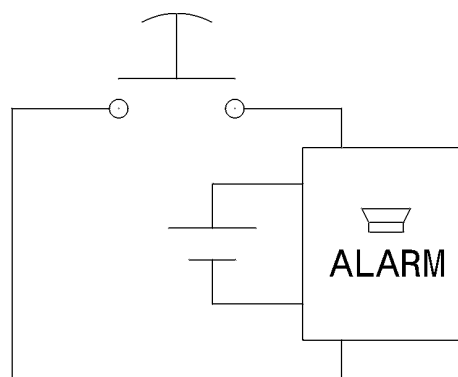

2.0 SAFETY INFORMATION *(continued)***2.11 SAFETY GUIDELINES****CAUTION!**

1. **DO NOT** place hands on top of tailstand near base tube receiver while lowering tailstand extension. Pinch point exists between top of tube and bracket on extension.
2. **DO NOT** place feet under tailstand near base tube receiver while lowering tailstand extension. Pinch point exists between ground and extension tube.
3. **ALWAYS** install tailstand **AFTER** aircraft has been jacked to working position.
4. Never put hands between aircraft and tailstand cradle.
5. **ALWAYS** be sure tailstand extension pin is fully locked and inserted through the tube.
6. **NEVER** load tailstand by lowering jacks. **ALWAYS** lower and remove tailstand **BEFORE** lowering aircraft.
7. **DO NOT** place hands near the die springs on the load alarm while the stabilization stand is in use. Pinch point exists on the die springs and between the top plate and the base of the load alarm.
8. **DO NOT** allow prolonged exposure to the sounding alarm. The alarm sound may cause permanent hearing loss.
9. **DO NOT** place objects in the path of the alarm's horn opening that may limit the audible range and reduce the effectiveness of the alarm.
10. **DO NOT** turn setscrew located under the plunger switch. The distance between the setscrew and plunger is pre-set by the factory.

2.12 CONDITIONS FOR SAFE USE

- Use in a clean dry environment, on a hard level surface.
- Operate between +4° C and 38° C/+40° F and 100° F.

2.13 OPERATOR QUALIFICATIONS

This tailstand is intended to be used by a skilled and trained aircraft technician. The operator must be familiar with the jacking procedures for the aircraft to be raised, and the operation of the tailstand.

Installation/Maintenance/Dismantling Qualifications: This tailstand is to be installed, maintained, and dismantled by qualified technicians familiar with aircraft maintenance systems.

2.14 ADDITIONAL SAFETY MEASURES

This tailstand must be used in accordance with this Technical manual, and in accordance with the aircraft manufacturer's jacking and stabilizing procedures.

3.0 PACKAGING AND STORAGE**3.1 PACKAGING REQUIREMENTS**

Tailstand is to be packaged as required to prevent damage to legs or cradle equipment during shipment.

3.2 HANDLING

Tailstand can be rolled by hand on its casters.

3.3 STRAPPING

Tailstand can be strapped down by suitable means to prevent unwanted movement during shipment.

3.4 PACKAGING PROTECTION

No special packaging material for cushioning or suspension is required.

3.5 LABELING OF PACKAGING

Packaging should be labeled **DO NOT DROP**.

3.6 STORAGE COMPATIBILITY

No special considerations.

3.7 STORAGE ENVIRONMENT

- Store tailstand between +4° C and +38° C/+40° F and 100° F.
- Always store tailstand with extension all the way down.
- Tailstand must be stored in a clean and dry environment.

3.0 Packaging and storage continued on following page.

3.0 PACKAGING AND STORAGE *(continued)*

3.8 STORAGE SPACE AND HANDLING FACILITIES:

- Weight: 150 lbs (68 kg)
- Minimum Closed Height: 60 5/8 in (153.9 cm)
- Maximum Height Allowable: 87 5/8 in (222.6 cm)

4.0 TRANSPORTATION

Lifting can be accomplished by crane and strap through top of tripod, or by fork truck under lower tripod support. Approximate weight = 150 lbs (68 kg).

5.0 ASSEMBLY

5.1 GENERAL INSTRUCTIONS

1. This product should be assembled and/or repaired using good workmanship practices and proper tools. Bolts and elastic stopnuts should be tightened to a torque not to exceed industry standards for Grade 5 bolts.
2. All replacement parts must be the same as or better than the original parts supplied.
3. No modifications are allowed as they may adversely affect the tailstand's safety performance.

5.2 PRE-USE CHECKS

1. Refer to the Illustrated Parts List to identify and ensure that all parts are present.
2. Generally check over unit and ensure the tightness of all nuts and bolts.

5.3 PERSONNEL REQUIREMENTS

This tailstand is to be assembled by qualified technicians familiar with aircraft maintenance systems.

5.4 ASSEMBLY STEPS

1. Slide alarm from holder and install a 9 volt battery in the alarm by removing two screws located in the back of the alarm. **Reference Figure 2.**

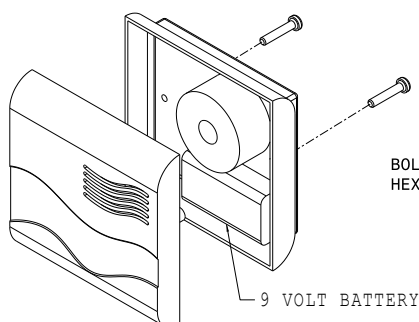


FIGURE 2

2. Fasten cradle assembly to extension tube with one (1) ½ - 20 x 2 ¼ inch hex head bolt, two (2) ½ inch flatwashers, and ½ - 20 elastic stopnut. **Reference Figure 3.**

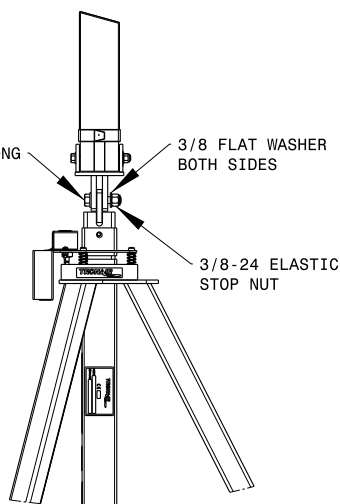


FIGURE 3

5.5 INSPECTION AND TEST PROCEDURES

1. It is recommended every 90 days to visually inspect all welds, cradle, extension pin, and extension pin holes in the base and extension tubing for defects. If defects are found, remove tailstand from active service until repairs are made.
2. Test alarm by slowly applying a force evenly distributed across the top of the cradle. The cradle head will lower and engage a limit switch. A loud pulsating alarm will then sound when the force reaches between 100 to 150 lbs (45.36 to 68.04 kg). If alarm does not sound, refer to the Troubleshooting section. **Reference Figure 4.**

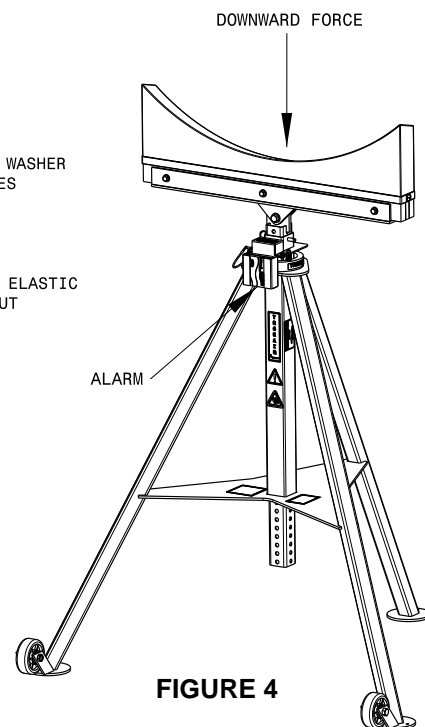


FIGURE 4

6.0 INSTALLATION

None.

7.0 OPERATION

7.1 OPERATING PARAMETERS

1. The user shall work in accordance with the Operator and/or Technical Manuals.
2. The employer of the operator shall provide all necessary training.
3. Operate between +4° C and 38° C/+40° F and 100° F.

7.2 NUMERICAL VALUES

- Minimum Closed Height: 60 5/8 in (153.9 cm)
- Maximum Height Allowable: 87 5/8 in (222.6 cm)
- Weight: 150 lbs (68 kg)
- Alarm (Battery Powered): 9 vdc
- Alarm Horn: 85 db

7.3 OPERATOR CONTROLS

None.

7.4 OPERATING INSTRUCTIONS

The user should be familiar with the following statements prior to using the tailstand:



CAUTION!

1. **DO NOT** place hands on top of tailstand near base tube receiver while lowering tailstand extension. Pinch point exists between top of tube and bracket on extension.
2. **DO NOT** place feet under tailstand near base tube receiver while lowering tailstand extension. Pinch point exists between ground and extension tube.
3. **ALWAYS** install tailstand **AFTER** aircraft has been jacked to working position.
4. **Never** put hands between aircraft and tailstand cradle.
5. **ALWAYS** be sure tailstand extension pin is fully locked and inserted through the tube.
6. **NEVER** load tailstand by lowering jacks. **ALWAYS** lower and remove tailstand **BEFORE** lowering aircraft.
7. **DO NOT** place hands near the die springs on the load alarm while the stabilization stand is in use. Pinch point exists on the die springs and between the top plate and the base of the load alarm.
8. **DO NOT** allow prolonged exposure to the sounding alarm. The alarm sound may cause permanent hearing loss.
9. **DO NOT** place objects in the path of the alarm's horn opening that may limit the audible range and reduce the effectiveness of the alarm.
10. **DO NOT** turn setscrew located under the plunger switch. The distance between the setscrew and plunger is pre-set by the factory.

7.4.1 Rules For Operating

- a. The user shall work in accordance with the Operation & Service Manual.
- b. The employer of the operator shall provide all necessary training.
- c. Operate between +4° C and 38° C/+40° F and 100° F.

7.4.2 Operation


When a force of 100 to 150 pounds (45.36 to 68.04 kg) is applied to the top of the cradle, the cradle head will lower and depress the plunger switch. This will activate the alarm which sounds a loud 85 db pulsating alarm until the force is reduced.

7.4.3 Alarm Test

Depress plunger switch and hold for a minimum of two (2) seconds. This will sound the alarm if the electronic circuitry, horn and battery are operating correctly. Refer to Trouble Shooting section of this manual if test fails.

7.4.4 Battery Test

Depress test button and hold for a minimum of two (2) seconds. This will sound the alarm if the battery is installed correctly.

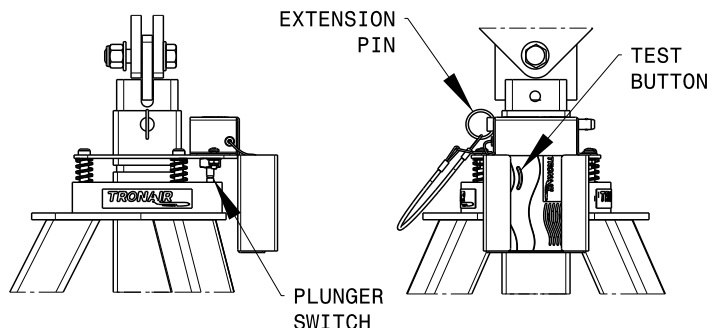

CAUTION!

Depressing the Test Button on the alarm does not provide a check for the entire electronic circuit!

7.4 Operating instructions continued on following page.

7.4 OPERATING INSTRUCTIONS *(continued)*

7.4.5 Low Battery Warning

The alarm will “chirp” every 20 to 30 seconds to indicate the battery is low and needs changing.

7.4.6 Alarm Load Test

Place a force between 100 to 150 lbs (45.36 to 68.04 kg) to the top of the cradle. This will activate the alarm. Refer to Trouble Shooting section of this manual if test fails.

7.4.7 Tailstand Instructions

To Raise Aircraft:

- Jack aircraft to desired height
- Place tailstand on a hard, level surface
- Position tailstand at aircraft manufacturer’s recommended location
- Raise tailstand cradle as close to aircraft as possible
- Install tailstand extension pin through outer extension tube




WARNING!


The locking pin **MUST** be placed fully through the extension tube.

The locking pin washer and ball lock **MUST** be placed outside the extension tube.


- Do not place extra locking pins in any other hole on the extension tube.
- Under no conditions should the locking pin’s ball lock be inside the extension tube.
- Never use a locking pin that has been damaged.
- Never use an extension tube that has been damaged or deformed.
- Failure to comply could result in premature failure below certified weight and could cause serious injury including death.

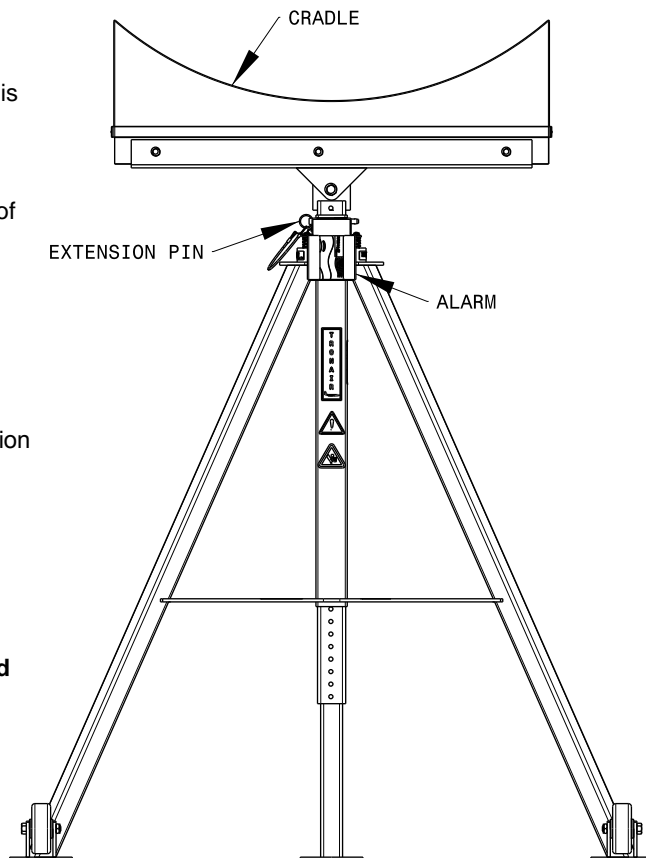

CORRECT PIN PLACEMENT

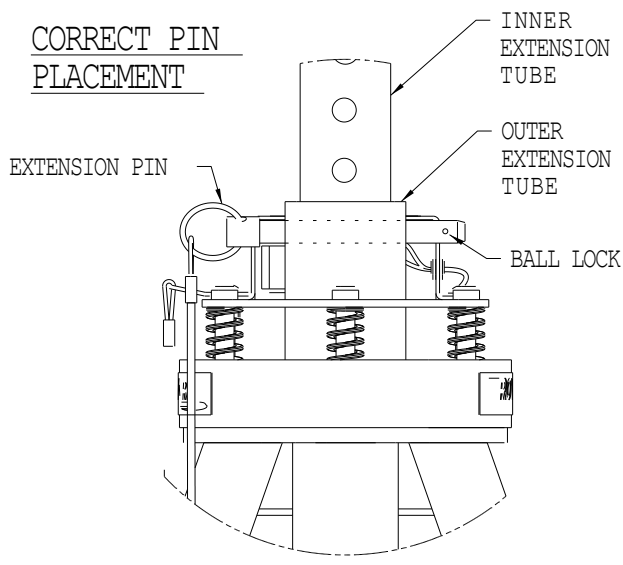

INCORRECT PIN PLACEMENT

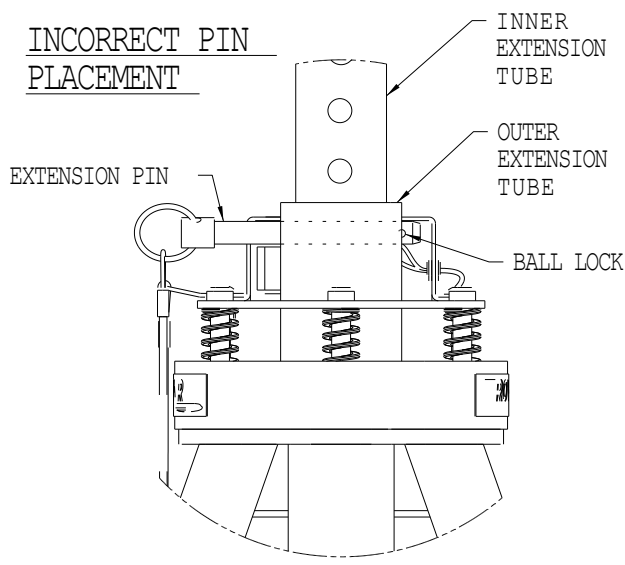

- Make necessary adjustments to reduce force on tailstand when the alarm sounds.

7.4.7 Tailstand Instructions (*continued*)

To Lower Aircraft:

- Clear all personnel from inside and under aircraft.
- Make necessary adjustments to reduce force on tailstand when the alarm sounds.
- Remove ball lock cradle pin and lower extension.
- Relocate tailstand away from aircraft and secure.
- Lower aircraft to the ground.



CAUTION!

- DO NOT** place hands on top of tailstand near base tube receiver while lowering tailstand extension. Pinch point exists between top of tube and bracket on extension.
- DO NOT** place feet under tailstand near base tube receiver while lowering tailstand extension. Pinch point exists between ground and extension tube.
- ALWAYS** wear safety glasses.

7.4.8 Forward Orientation

To maintain proper positioning during use the stand must be assembled with "forward" orientation. **Reference Figure 6.**

8.0 TRAINING

Training of operating personnel is the responsibility of the employer. This tailstand must be used in accordance with aircraft manufacturer's instructions.

9.0 MAINTENANCE

9.1 GENERAL

- All maintenance and/or repair work should be done using good workmanship practices and proper tools.
- Tailstand shall be maintained and repaired in accordance with the manufacturers instructions. Such maintenance and repair shall be carried out by qualified persons.
- No modifications shall be carried out as they may adversely affect the compliance of the tailstand with draft standard 2006/42/EC.

9.2 MAINTENANCE SCHEDULE

Cleaning: Annually or as Needed

NOTE: Wipe with soft cloth only, do not pressure wash or spray water directly at cradle.

9.3 CLEANING ALARM

Remove alarm from mounting bracket. The openings around the alarm perimeter may be cleared of debris by using compressed air or a vacuum cleaner hose to blow/suction openings. The outside surface of the alarm unit may be wiped with a damp cloth.

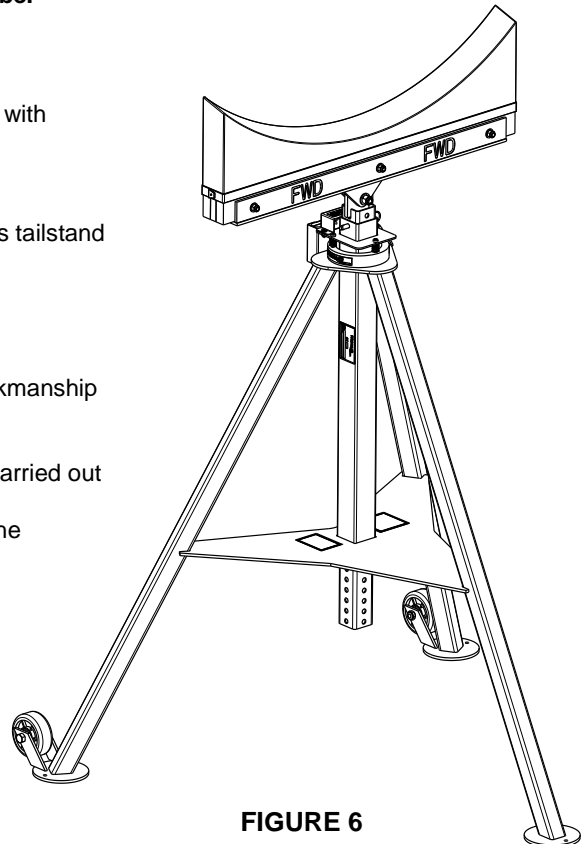


FIGURE 6

10.0 TROUBLESHOOTING**10.1 ALARM WILL NOT SOUND**

PROBABLE CAUSE	ACTION
Load was on the cradle for a short period of time	Limit switch has to be engaged for a minimum of two (2) seconds
Defective alarm	Replace alarm
Battery power depleted	Replace battery
Defective limit switch	Replace limit switch
Broken wire connection	Check wire connection between limit switch and alarm
Cradle head did not lower far enough to contact limit switch	Test per Section 5.5.2

10.2 ALARM "CHIRPS"

PROBABLE CAUSE	ACTION
Indicates low battery	Replace battery (Alarm will "chirp" every 20 to 30 seconds for a minimum of 7 days until battery is changed)

10.3 ALARM PRODUCES AN ERRATIC OR LOW SOUND

PROBABLE CAUSE	ACTION
Defective alarm	Replace alarm

11.0 PROVISION OF SPARES**11.1 SOURCE OF SPARE PARTS**

Spare parts may be obtained from the manufacturer:

TRONAIR, Inc.

1 Air Cargo Pkwy East

Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301

Fax: (419) 867-0634

E-mail: sales@tronair.com

Website: www.tronair.com

11.2 RECOMMENDED SPARE PARTS LISTS

Reference the following page(s) for Replacement Parts and Kits available.

12.0 IN-SERVICE SUPPORT

Contact Tronair for technical services and information.

13.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.


The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. **Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.**

14.0 APPENDICES

APPENDIX I Declaration of Conformity

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

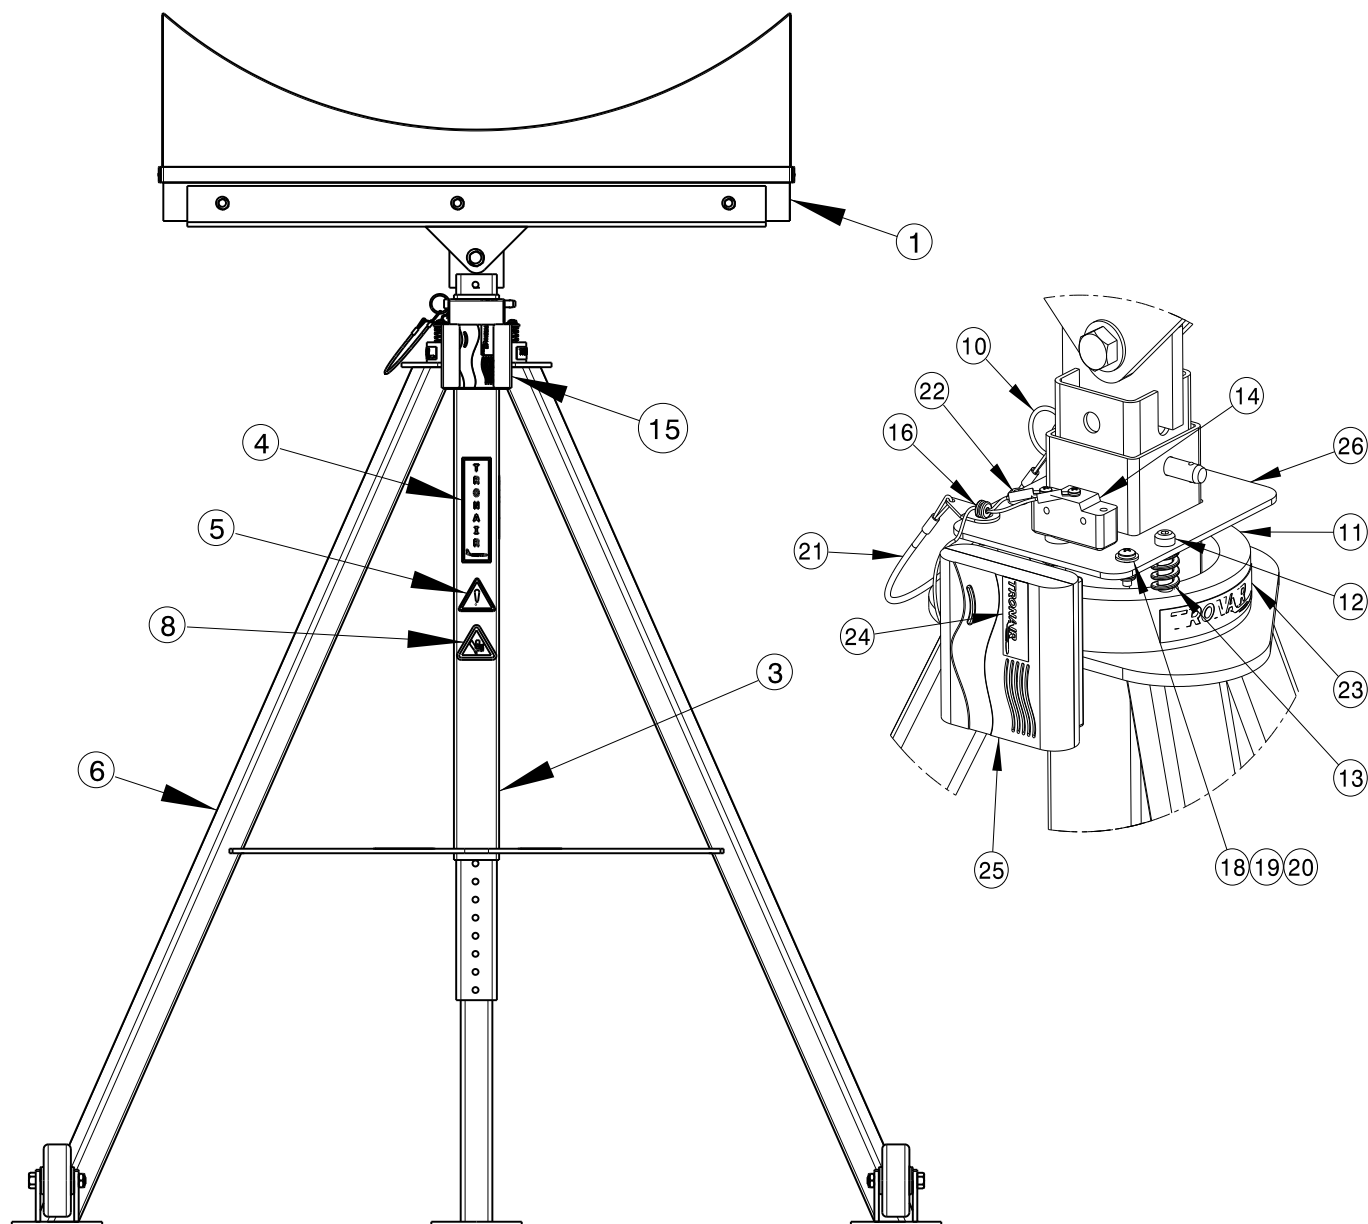


Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Item	Part Number	Description	Qty
1	Z-7531	Assembly, Cradle	1
3	V-1779	Label, Serial Number	1
4	V-1198	Label, Tronair	1
5	V-1805	Label, ISO General Danger	1
6	Z-7532	Weldment, Tailstand	1
8	V-1999	Label, ISO Hand Crush Force From Above	1
10	G-1493	Pin 3/8 x 3 LG	1
11	TR-1883	Base	1
12	G-1155-105210	Screw, 5/16 x 1 SOC HD Shoulder	3
13	H-2762	Spring, Light Duty Die	3
14	EC-1796	Switch, Limit	1
15	S-1923-01	Cover, Limit	1
16	H-1901-01	Grommet	1
18	G-1250-1030N	Flatwasher, #10 Narrow	3
19	G-1159-103505	Screw, Round HD Cross REC #10 – 32 x 5/8 LG	2
20	G-1202-1035	ESN #10 – 32	2
21	H-1026*07.0	Assembly, Lanyard	1
22	EC-1180-04	Terminal, Ring Tongue	2
23	V-1197-01	Label, Tronair	2
24	V-2065	Label, Tronair	1
25	H-2763	Alarm	1
26	Z-5962-01	Weldment, Outer Tube	1
N/S	EC-1854	Battery, 9 volt	1
N/S	G-1163-10	Screw, Hex SOC Cup Pint Set ¼ - 20	1

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

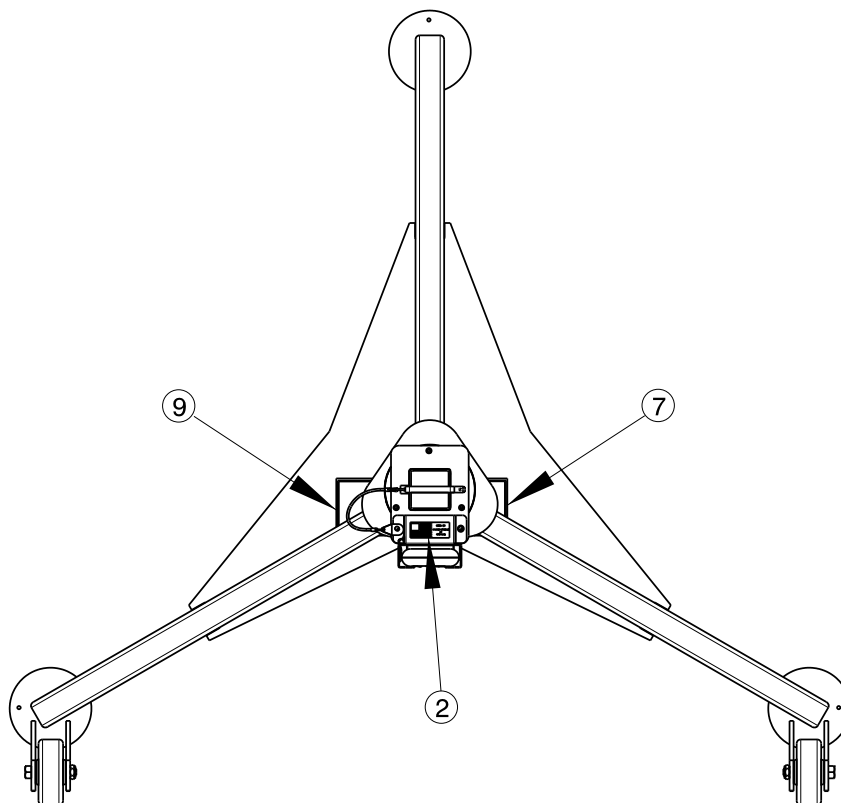

Item	Part Number	Description	Qty
2	V-1001	Label, Made in USA	1
7	V-1996	Label, Tailstand Caution	1
9	V-1997	Label, Tailstand Instructions	1



APPENDIX II

Declaration of Conformity



DECLARATION of CONFORMITY

The design, development and manufacture is in accordance with European Community guidelines

Tailstand with Alarm
03A5845C0000

Relevant provisions complied with by the machinery:
2006/42/EC

Relevant standards complied with by the machinery:
EN ISO 12100-1

Identification of person empowered to sign on behalf of the Manufacturer:

A handwritten signature in cursive script that reads "Patrick Finch". The signature is written in dark ink and is positioned above a horizontal line.

Quality Assurance Representative