



**Model: 12314S**  
**Three Stage Fixed Height**  
**Hydro – Mechanical**  
**Aviation Tripod jack**

**NSN 1730-00-554-5436**

**S/N 2372 and up**

10/2018 – Rev. 01



REVISION  
01

DATE  
10/2018

TEXT AFFECTED  
Original release



**TABLE OF CONTENTS**

**PAGE**

|             |   |           |
|-------------|---|-----------|
| <b>1.0</b>  | <b>PRODUCT INFORMATION .....</b>                | <b>4</b>  |
| 1.1         | DESCRIPTION.....                                | 4         |
| 1.2         | MODEL & SERIAL NUMBER.....                      | 4         |
| 1.3         | MANUFACTURER .....                              | 4         |
| 1.4         | SPECIFICATIONS .....                            | 4         |
| <b>2.0</b>  | <b>SAFETY INFORMATION.....</b>                  | <b>4</b>  |
| 2.1         | USAGE AND SAFETY INFORMATION.....               | 4         |
| <b>3.0</b>  | <b>PREPARATION PRIOR TO FIRST USE .....</b>     | <b>5</b>  |
| <b>4.0</b>  | <b>TRAINING .....</b>                           | <b>5</b>  |
| 4.1         | TRAINING REQUIREMENTS .....                     | 5         |
| 4.2         | TRAINING PROGRAM .....                          | 5         |
| 4.3         | OPERATOR TRAINING.....                          | 5         |
| <b>5.0</b>  | <b>OPERATION.....</b>                           | <b>6</b>  |
| 5.1         | PRE OPERATION INSPECTION.....                   | 6         |
| 5.2         | OPERATING PROCEDURES.....                       | 6         |
| <b>6.0</b>  | <b>TROUBLE SHOOTING .....</b>                   | <b>7</b>  |
| <b>7.0</b>  | <b>MAINTENANCE.....</b>                         | <b>8</b>  |
| 7.1         | SERVICING .....                                 | 8         |
| 7.2         | DISASSEMBLY INSPECTION.....                     | 8         |
| 7.3         | REPAIR AND REPLACEMENT .....                    | 8         |
| 7.4         | OVERHAUL INSTRUCTIONS.....                      | 8         |
| 7.5         | TESTING: .....                                  | 10        |
| 7.6         | SPECIAL TOOLS:.....                             | 10        |
| <b>8.0</b>  | <b>PROVISION OF SPARES.....</b>                 | <b>11</b> |
| 8.1         | SOURCE OF SPARE PARTS.....                      | 11        |
| 8.2         | RECOMMENDED SPARE PARTS LISTS .....             | 11        |
| <b>9.0</b>  | <b>IN SERVICE SUPPORT.....</b>                  | <b>12</b> |
| <b>10.0</b> | <b>GUARANTEES/LIMITATION OF LIABILITY .....</b> | <b>12</b> |
| <b>11.0</b> | <b>APPENDICES .....</b>                         | <b>12</b> |



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.



**CAUTION!**

**Aircraft manufacturer's specifications and instructions must be followed. In the event of contradiction between aircraft manufacturer's specifications and Malabar's, aircraft manufacturer's will prevail.**

**1.0 PRODUCT INFORMATION**

**1.1 DESCRIPTION**

The Malabar Fixed Height Tripod Jack Model 12314S is a 12 ton capacity three stage hydraulic jack designed primarily for use in aircraft maintenance. It consists of a tripod structure, hydraulic cylinder/reservoir assembly, hand pump, swivel casters and the following optional equipment:

- Air pump

The jack base and leg pads are raised off the ground by spring loaded casters. The casters will retract and the jack base and leg pads will rest on the ground when a load is applied to the jack.

**1.2 MODEL & SERIAL NUMBER**

Reference nameplate on unit

**1.3 MANUFACTURER**

**Malabar International**  
1 Air Cargo Pkwy East  
Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301  
E-mail: sales@malabar.com  
Website: www.malabar.com

**1.4 SPECIFICATIONS**

|                                |                            |
|--------------------------------|----------------------------|
| Rated Capacity                 | 12 tons (10.9 m. tons)     |
| Side Load                      | 15% of vertical load       |
| Roll Under Height              | 15.3 in (389 mm)           |
| Low Height                     | 14.3 in (363 mm)           |
| Hydraulic Lift                 | 23 in (584 mm)             |
| Extension Screw                | 6 in (152 mm)              |
| Total Extended Height          | 43.3 in (1100 mm)          |
| Oil Pressure at Rated Capacity | 3370 psig (237 kg/sq cm)   |
| Safety Pop-off Valve set at    | 13.2 ton (12 m. tons)      |
| Proof Load                     | 18 ton (16.3 m. tons)      |
| Reservoir Capacity             | 1.3 gal (4.9 l)            |
| Hydraulic Fluid                | MIL-PRF-5606 or equivalent |
| Approximate Jack Net Weight    | 175 lbs (79 kg)            |

**2.0 SAFETY INFORMATION**

**2.1 USAGE AND SAFETY INFORMATION**

To insure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



**WARNING!**

Warning is used to indicate the presence of a hazard that can cause **severe personal injury, death, and/or substantial property damage** if the Warning Notice is ignored.



**CAUTION!**

Caution is used to indicate the presence of a hazard, which will or can cause **minor personal injury or property damage** if the Caution Notice is ignored.



### 3.0 PREPARATION PRIOR TO FIRST USE

Before placing jack in operation, perform the following procedure:

1. Remove the filler plug from the top of tripod head to fill reservoir with approved hydraulic fluid.
2. Fill jack reservoir to bottom of tripod head with MIL-H-5606 hydraulic fluid or approved equivalent (reservoir capacity is approximately 1.3 gallons/4.9 liters). Jack plungers must be fully retracted before filling reservoir. Replace filler plug.



#### CAUTION!

**Do NOT overfill reservoir past bottom of tripod head or oil will overflow out vent hole located between tripod head ears directly opposite oil filler plug.**

3. Open release valve and operate hand pump a few strokes to bleed all air trapped under hand pump.
4. Close release valve and operate hand pump to raise plungers approximately 1 inch.
5. Open release valve to retract plungers fully to bleed all air trapped under jack plungers. Close release valve.

### 4.0 TRAINING

#### 4.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the unit.

#### 4.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the unit in and around the intended aircraft at the intended aircraft servicing location.

#### 4.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the unit.

**NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.**



## 5.0 OPERATION

### 5.1 PRE OPERATION INSPECTION

Each time the jack is to be used, inspect the following:

1. Check the tripod structure for rigidity. Make sure all bolts are tightened.
2. Check hydraulic line connections (if so equipped) for leaks. Tighten as required.
3. Check for hydraulic fluid leaks around the base, reservoir, tripod head, air pump (if so equipped) and hand pump.
4. Check hand pump for proper operation.
5. Check swivel casters for proper operation.
6. Check reservoir fluid level with jack plunger fully retracted.

### 5.2 OPERATING PROCEDURES

1. Position the jack under the jacking pad of the aircraft.
2. Raise the extension screw by turning counterclockwise until the ship adapter contacts the jacking pad or as far as the screw will travel (6 inches maximum).
3. Verify the jack is level. The jack plungers should be plumb during lifting.

#### CAUTION!



**On jacks equipped with air pump, air relief valve must be installed at all times. If air relief valve is removed, it is possible to over pressurize the pneumatic system which could cause equipment failure and possible bodily injury.**

4. On jacks equipped with air pump, connect air supply (90-125 psig) to the 1/4 NPT air inlet at the air valve (a minimum of 18 scfm is required). Air relief valve must be properly installed. Do not attempt to remove air relief valve.

#### CAUTION



**Locknuts must be installed, operable and fully engaged at all times. Always maintain less than 2 inches between the locknuts and the tripod head or plungers in all phases of load raising or lowering.**

5. To raise the load:
  - a. With the slotted end of the hand pump handle, close the release valve located at the cylinder/reservoir base.
  - b. Operate the air valve or hand pump until the ship adapter contacts the jacking pad. Insure the ship adapter and the jacking pad are correctly mated. The load may now be raised by operating the air valve or hand pump.
  - c. Do not lift a load greater than the rated capacity of 12 tons.
  - d. Do not attempt to raise the plungers beyond the rated hydraulic lift (23 inches maximum).
  - e. Avoid lifting with excessive side load on the jack.
  - f. Spin the locknuts down to the tripod head and plungers as plungers are extending.
  - g. Keep the release valve closed at all times.
6. To lower the load:
  - a. Operate the air valve or hand pump to relieve pressure on the locknuts.
  - b. Spin the locknuts out of the way.
  - c. With the slotted end of the hand pump handle, slowly open the release valve located at the cylinder base to lower the load. The speed of lowering is controlled by the amount the release valve is opened.
  - d. Close release valve after the plungers are fully retracted.
  - e. Lower the extension screw by turning clockwise.
  - f. Cover the jack when not in use to prevent entrance of contaminants and water into the cylinder.



## 6.0 TROUBLE SHOOTING

| TROUBLE                                  | PROBABLE CAUSE   | REMEDY  |
|--|--|---|
| Jack will not raise                      | Release valve open<br>(Oil passing back into reservoir)      | Close valve firmly  |
|  | Intake valve open.<br>(Oil passing back into reservoir)      | Pump rapidly to flush dirt off  |
|  | Discharge valve open<br>(Oil passing back into pump chamber) | Pump rapidly to flush dirt off  |
|  | Sticking intake valve  | Remove pump from jack base. Unscrew valve block. Clean or replace valve   |
|  | Clogged screen   | Remove and clean  |
|  | Lack of oil. Air under plunger                               | Refill. Check for leaks. Bleed air out by opening release valve. Pump rapidly a few times and close release valve |
| Jack will not raise to full height       | Lack of oil  | Refill, check for leaks   |
|  | Sticking intake valve  | Remove pump from jack base. Unscrew valve block. Clean or replace ball valves. Re-tighten or repair               |
| Jack will not raise capacity load        | High pressure leaks<br>(At pump or release valve)            | Reseat valve  |
|  | Leaky release valve  | Reseat valve and clean valve block  |
| Jack raises and falls during each stroke | Leaky discharge valve  | Tighten or replace ball valve or packing  |
| Jack will not hold up load               | Leaky release valve  | Reseat valve  |
|  | Defective "O" ring and back up ring                          | Remove plunger and replace "O" ring and back up ring  |
| Jack will not lower the load             | Damaged release valve  | Remove and replace parts as needed  |
|  | Bent plunger   | Replace   |
| Jack will not close completely           | Air under plunger  | Bleed air out. Open release valve and pump rapidly several times. Close valve                                     |
| Handle stroke only partly effective      | Air in pump chamber  | Open release valve and pump rapidly several times. Close valve  |
|  | Sticking intake valve  | Remove pump and clean valve block   |
|  | Clogged screen   | Remove and clean  |
| Handle raises without effort             | Leaky intake valve   | Remove pump and clean valve block   |
| Handle snaps back                        | Sticking intake valve  | Open release valve. Pump rapidly several times. Close valve   |
|  | Clogged screen   | Remove and clean  |



## **7.0 MAINTENANCE**

### **7.1 SERVICING**

Servicing the jack consists primarily of the following:

1. When in use, the reservoir should be kept at the proper level with hydraulic fluid MIL-PRF-5606 or approved equivalent. Always check fluid level with jack plungers fully retracted.
2. Grease the swivel casters.
3. Lubricate hand pump pivot pins.
4. If the jack has been put into storage or has not been used, the plunger must be fully extended and retracted every 90 days to exercise the seals. A portion of the lift should be operated by the air pump (if so equipped) and a portion by the hand pump.

### **7.2 DISASSEMBLY INSPECTION**

When necessary to disassemble the jack, drain all hydraulic fluid from reservoir and carefully inspect the following:

1. Inspect interior walls of jack cylinder, outer plunger, center plunger and hand pump cylinder for smoothness and freedom from rust, nicks, scratches and excessive wear.
2. Check plungers, extension screw, cylinder, tripod head, etc., for corrosion, wear and condition of threads.
3. Verify that the extension screw has a positive stop to prevent it from being extended beyond its safe thread engagement.
4. Inspect packings, seals, gaskets and wipers in the cylinder assembly and hand pump for cuts, scratches, deterioration and distortion.
5. Inspect upper and lower bearings for excessive scoring and/or wear.
6. Check oil screen located in the cylinder/reservoir base for cleanliness.
7. Inspect valves and valve seats in the hand pump and cylinder/reservoir base for scratches, dents and proper seating of the balls.
8. Inspect all pivot pins for wear, cracks, pits or evidence of damage or pending damage.
9. Check tripod structure for damages.
10. Inspect all areas for excessive dirt, oil, dust and chips.

### **7.3 REPAIR AND REPLACEMENT**

No definite time schedule can be established for the overhaul of the jack for replacement of the various moving parts. The number of times the jack is raised and lowered and the amount of load raised at each operation materially affect the life of the working parts. Do not overload the jack. Overloading is dangerous, will hasten the need for overhaul and may damage the jack.

### **7.4 OVERHAUL INSTRUCTIONS**

During overhaul, replace all parts that do not pass disassembly inspection requirements. Regardless of apparent condition, replace all parts marked with (◆) in the parts breakdown. A repair parts kit (P/N 12314SPK) which contains all of the parts marked with (◆) is available and recommended to keep on hand at your facility. Coat all O-rings and back-up rings with hydraulic fluid MIL-PRF-5606 prior to assembly. Clean all metal parts with clean solvent and dry with compressed air. Lubricate all threads. Use Teflon tape carefully on all pipe threads. Remove excess tape because it can clog valves and passages. If ball valves, located in cylinder/reservoir base, do not seat properly, they may need to be reseated by tapping the ball into the valve seat with a brass rod cupped at one end.

The following procedures include disassembly and reassembly instructions for the components listed below:

1. Hand pump assembly (see figure 2):
  - a. Drain all hydraulic fluid from reservoir through pipe plug at oil screen port (figure 1A, item 62).
  - b. Remove cotter pins (17), pump pins (13) and fulcrum (12) from pump link (3) and pump plunger (8).
  - c. Remove pump plunger (8) from pump body (7).
  - d. Remove retaining ring (10), scraper ring (9), two back-up rings (5) and o-ring (6) from pump body (7).
  - e. Unscrew valve block (1) and pump body (7) from base and remove gasket (4).
  - f. Unscrew pump body (7) from valve block (1) and remove gasket (4), 1/4 dia steel ball (15), valve spring (11) and 7/32 dia steel ball (14).
  - g. To reassemble, install 7/32 dia steel ball (14), valve spring (11), 1/4 dia steel ball (15) and gasket (4) into valve block (1) then screw pump body (7) into valve block (1).
  - h. Install gasket (4) into base and screw pump body (7) and valve block (1) assembly into base.
  - i. Install retaining ring (10) and scraper ring (9) onto pump plunger (8).
  - j. Install two back-up rings (5) and o-ring (6) into pump body (7).
  - k. Install pump plunger (8), scraper ring (9) and retaining ring (10) into pump body (7).
  - l. Install fulcrum (12), pump pins (13) and cotter pins (17) to the pump plunger (8) and the pump link (3).
2. Check valve (see figure 1A):
  - a. Drain all hydraulic fluid from reservoir through pipe plug at oil screen port (figure 1A, item 62).
  - b. Remove plug (40), spring (36) and 5/16 dia steel ball (55). Remove o-ring (46) from plug (40).
  - c. To reassemble, first install o-ring (46) onto plug (40), then install 5/16 dia steel ball (55), spring (36) and plug (40).



#### 7.4 OVERHAUL INSTRUCTIONS (*continued*)

3. Release valve (see figure 1A):
  - a. Drain all hydraulic fluid from reservoir through pipe plug at oil screen port (figure 1A, item 62).
  - b. Remove release valve stem (66) from gland (67).
  - c. Remove gland (67), packing (65), flat washer (68) and 1/4 dia steel ball (56) from base (1).
  - d. Reinstall and 1/4 dia steel ball (56), flat washer (68), packing (65) and gland (67) into base (1).
  - e. Install release valve stem into gland (67) and tighten completely
  - f. Finally tighten gland (67) until packing (65) compresses and seals properly around release valve stem (66) and base (1)
4. Oil screen (see figure 1A):
  - a. Drain all hydraulic fluid from reservoir through pipe plug at oil screen port (figure 1A, item 62).
  - b. Remove oil screen (34) from base (1).
  - c. To reassemble, install oil screen (34) and pipe plug (62) into base (1).
5. Safety pop-off valve (see figure 1A):

#### CAUTION!



**The safety pop-off valve, located in the base, should not be removed unless absolutely necessary. The valve is set to by-pass hydraulic fluid back to the reservoir at 5-10% above the rated capacity of 12 tons. If adjustment is required, see procedure under testing.**

- a. Drain all hydraulic fluid from reservoir through pipe plug at oil screen port (figure 1A, item 62).
- b. Remove plug (57), set screw (3), spring (32), spring guide (54) and ball (56).
- c. To reassemble, install ball (56), spring guide (54), spring (32), setscrew (3) and plug (57). See adjustment procedure under TESTING.
6. Cylinder and plungers (see figure 1B):
  - a. Drain all hydraulic fluid from reservoir through pipe plug at oil screen port (figure 1A, item 62).
  - b. Remove release valve assembly (follow step 3 above).
  - c. Lift extension screw (8) and inner plunger (7) approximately 2 inches to expose set screw (52). Remove setscrew (52) from inner plunger (7) and remove extension screw nut (9) and extension screw (8). Inspect spring pin (23) on bottom of extension screw (8).
  - d. Remove inner locknut (19), center locknut (18) and outer locknut (17).
  - e. Remove outer stop ring (14) using spanner wrench (P/N 83688).
  - f. Attach inner plunger lifting tool (P/N 12314-23) to inner plunger and pull up. The plungers will rise out of cylinder.
  - g. After plungers have been removed, push inner plunger (7) down and out of center plunger (6). Push center plunger (6) down and out of outer plunger (5). Remove center stop ring (15) and inner stop ring (16) using correct spanner wrenches (P/N 83687 & 12314-22) if replacement is required.
  - h. Remove retaining ring (22) from inner plunger (7), then remove inner bearing (13), o-ring (43) and back-up ring (39). Remove retaining ring (21) from center plunger (6), then remove center bearing (12), o-ring (42) and back-up ring (38). Remove retaining ring (20) from outer plunger (5), then remove outer bearing (11), o-ring (41) and back-up ring (37).
  - i. If cylinder (4) needs to be replaced, remove nuts (48), washers (24), retaining rings (47) and tripod head pins (26). The tripod head (2), cylinder (4), reservoir (61,63), top reservoir gasket (10) and o-rings (45 & 44) can now be removed.
  - j. To reassemble, install o-ring (45) onto bottom of cylinder (4) and o-ring (44) onto base (1). Install cylinder (4), reservoir (61,63), top reservoir gasket (10), tripod head (2), tripod head pins (26), retaining rings (47). Finally install washers (24) and torque nuts (48) to 130 ± 5 ft-lbs in incremental steps.
  - k. Install back-up ring (39), o-ring (43), inner bearing (13), and retaining ring (22) onto inner plunger (7). Install inner stop ring (16), back-up ring (38), o-ring (42), center bearing (12), and retaining ring (21) onto center plunger (6). Install center stop ring (15), back-up ring (37), o-ring (41), outer bearing (11), and retaining ring (20) onto outer plunger (5).
  - l. Slide inner plunger (7) in through the bottom of center plunger (6). Slide center plunger (6) and inner plunger (7) in through the bottom of outer plunger (5).
  - m. Using inner plunger lifting tool (P/N 12314-23) install plungers into the cylinder (4). Install outer stop ring (14) into cylinder (4).
  - n. Install outer locknut (17), center locknut (18) and inner locknut (19).
  - p. Install extension screw nut (9), set screw (52) and extension screw (8) into inner plunger (7).
  - r. Fill reservoir with MIL-H-5606 hydraulic fluid or approved equivalent.

7.0 Maintenance continued on following page.



**7.0 MAINTENANCE** *(continued)*

**7.5 TESTING:**

Place jack in a load indicating test fixture. Make sure the test adapter is 3/4 inch male spherical radius. Operate hand pump to extend plungers against the test adapter. Verify that the two outer plungers are fully extended and the inner plunger is partially extended. Load test the jack at rated capacity of 12 tons. If the jack fails to operate properly, check for trouble as indicated in section 6.0 Trouble Shooting. With the plungers extended and supporting the capacity load, allow the jack to stand for 10 minutes. Any excess settling indicates leakage in the hand pumps, check valves or jack packing seals. Check for hydraulic fluid leaks and replace all defective parts.

If adjustment is required for the safety pop-off valve, perform the following procedure:

1. Remove plug (figure 1A, item 57). Close release valve stem (figure 1A, item 66).
2. Place jack in a load indicating test fixture. Make sure the test adapter is 3/4 inch male spherical radius. Operate hand pump to extend plungers against the test adapter. Verify that the two outer plungers are fully extended and the inner plunger is partially extended.
3. While operating the hand pump, adjust set screw (figure 1A, item 3) until the safety pop-off valve by-passes hydraulic fluid back to the reservoir at 12.6 to 13.2 tons.
4. Replace plug (figure 1A, item 57). Once more operate hand pump to verify correct setting.
5. Open release valve stem (figure 1A, item 66) to relieve pressure.

**7.6 SPECIAL TOOLS:**

The following special tools are necessary to disassemble/reassemble the cylinder assembly. These tools may be purchased upon request:

| Part Number | Description                      | Qty |
|-------------|----------------------------------|-----|
| 12314-22    | Spanner wrench, inner stop ring  | 1   |
| 83687       | Spanner wrench, center stop ring | 1   |
| 83688       | Spanner wrench, outer stop ring  | 1   |
| 12314-23    | Lifting tool, plunger            | 1   |



## 8.0 PROVISION OF SPARES

### 8.1 SOURCE OF SPARE PARTS

Spare parts may be obtained from the manufacturer:

**Malabar International**

1 Air Cargo Pkwy East

Swanton, Ohio 43558 USA

Telephone: (419) 866-6301 or 800-426-6301

E-mail: sales@malabar.com

Website: www.malabar.com

### 8.2 RECOMMENDED SPARE PARTS LISTS

The following spare parts are recommended and available upon request. Reference the following page(s) for Replacement Parts and Kits available.

| Part Number | Description                   | Qty |
|-------------|-------------------------------|-----|
| 12314SPK    | Repair parts kit              | 1   |
| 55040       | Hand pump assembly            | 1   |
| 61878       | Pump handle                   | 1   |
| 55100       | Release valve assembly        | 1   |
| 55155       | Safety pop-off valve assembly | 1   |
| 12314-96    | Name plate                    | 1   |
| 55998-1     | Sticker, Malabar              | 1   |
| 55994       | Sticker, fluid                | 1   |
| 51531-1     | Swivel caster                 | 1   |
| 51597       | Compression spring            | 1   |
| 12314-12    | Outer bearing                 | 1   |
| 12314-32    | Center bearing                | 1   |
| 12314-52    | Inner bearing                 | 1   |
| 12314-17    | Outer stop ring               | 1   |
| 12314-37    | Center stop ring              | 1   |
| 12314-57    | Inner stop ring               | 3   |
| 12314-18    | Extension screw               | 1   |
| *441-016    | Air pump                      | 1   |
| *441-037    | Air drive seal kit, air pump  | 1   |
| *441-040    | Hydraulic seal kit, air pump  | 1   |
| *421-006    | Air valve                     | 1   |
| *425-001    | Air relief valve              | 1   |

\* Optional equipment – These parts required only when supplied with jack.



## **9.0 IN SERVICE SUPPORT**

Contact Malabar, Inc. for technical services and information. See Section 1.3 – Manufacturer.

## **10.0 GUARANTEES/LIMITATION OF LIABILITY**


- I. Seller warrants each new product of its manufacture to be free from defects in material or workmanship, under proper, reasonable, and normal use and service.
- II. The warranty period shall be as follows:
  - A. For Malabar equipment, with the exception of Tripod Jacks, the warranty period is one (1) year after date of shipment.
  - B. For Malabar Tripod Jacks, the warranty period is three (3) years after date of shipment.
- III. Where Buyer claims an alleged defect in material or workmanship and so advises Seller in writing within ten (10) days after discovery thereof, then and in such event, Buyer shall return said equipment, transportation prepaid, to the Seller, provided such return is timely and within the above-mentioned warranty period. This warranty and liability of the Seller is expressly limited solely to replacement or repair of defective parts or goods, and return at Buyer's expense to Buyer after finding by Seller the product was defective prior to original shipment or, at the option of Seller, to providing refund to Buyer of the purchase price for said product.
- IV. It is further expressly understood and agreed that:
  - A. THERE IS NO WARRANTY, REPRESENTATION OF CONDITION OF ANY KIND, EXPRESS OR IMPLIED, (INCLUDING NO WARRANTY OF MERCHANTABILITY OR OF FITNESS) EXCEPT THAT THE MATERIAL SHALL BE OF THE QUALITY SPECIFIED IN APPLICABLE SPECIFICATIONS, AND NONE SHALL BE IMPLIED BY LAW. Except as otherwise provided herein, quality shall be in accordance with Seller's specifications. Final determination of the material for the use contemplated by Buyer is the sole responsibility of Buyer and Seller shall have no responsibility in connection with such suitability, and
  - B. Buyer's sole and exclusive remedy shall be repair or replacement of defective parts or goods by the Seller. Should the goods, in the judgment of Seller, preclude the remedying of the warranted defects by repair or replacement, the Buyer's sole and exclusive remedy shall be the refund of the purchase price, and
  - C. Seller shall not be liable for prospective profits or special, indirect or consequential damages, nor shall any recovery of any kind against Seller be greater in amount than the purchase price of the specific material sold and causing the alleged loss, damage or injury. Buyer assumes all risk and liability for loss, damage or injury to persons or property of Buyer or others arising out of use or possession of any product or part sold hereunder, and
  - D. Seller shall in no way be deemed or held to be obligated, liable or accountable upon or for any guarantees or warranties, express or implied, or created by statute or by operation of law or otherwise, in any manner of form beyond its express agreement above set forth, and
  - E. No warranty herein shall apply to any product which shall have been repaired or altered, unless such alteration or repair has been made by Seller or if, after return to and inspection by Seller, the product is found by Seller to have been subject to misuse, negligence or accident, and
  - F. No warranty of any nature is made by Seller as to any component forming a part of the product sold and Buyer shall receive only such warranties offered by such other manufacturer of such component, and
  - G. Seller does not assume nor does Seller authorize any other person to assume for it any other liability or make any warranty in connection with the sale of its products.

## **11.0 APPENDICES**

APPENDIX I Safety Data Sheet – MIL-PRF-5606 Hydraulic Fluid



## Pneumatic / Hydraulic Diagram

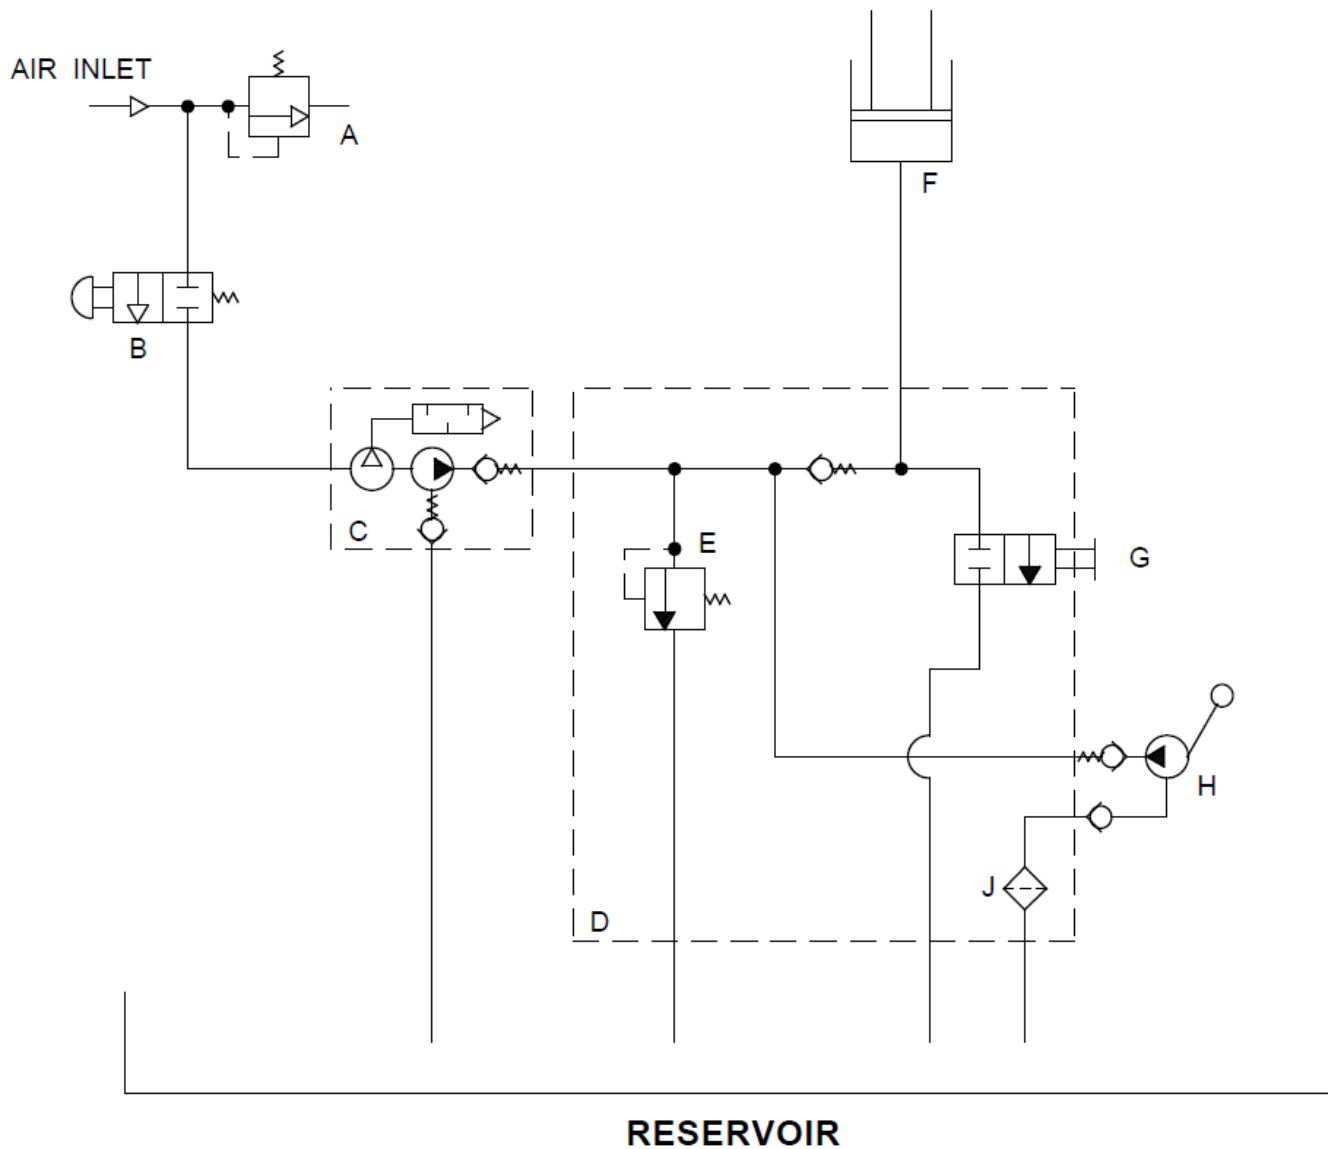


- A - AIR RELIEF VALVE
- B - AIR VALVE
- C - AIR PUMP
- D - BASE
- E - SAFETY POP-OFF VALVE

- F - CYLINDER ASSEMBLY
- G - RELEASE VALVE
- H - HAND PUMP
- J - OIL SCREEN



## Parts List – Figure 1A


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

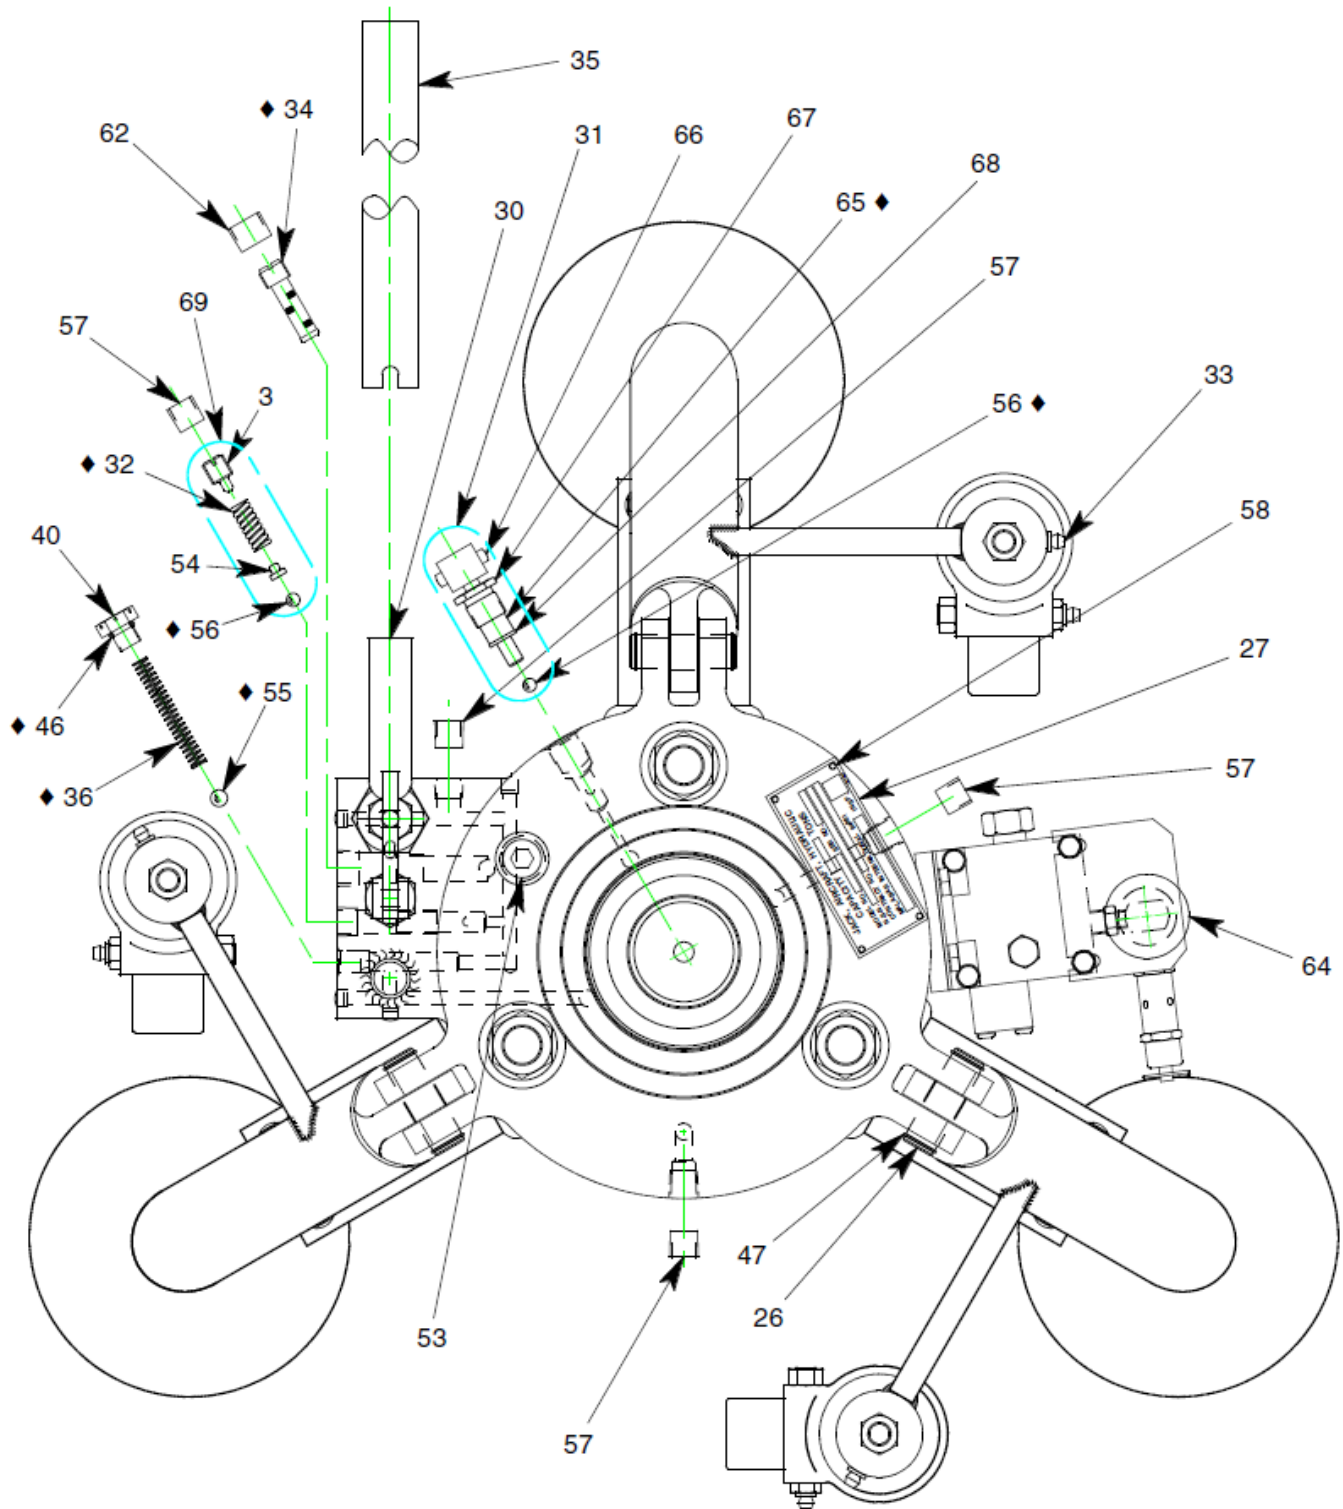



## Parts List – Figure 1B

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

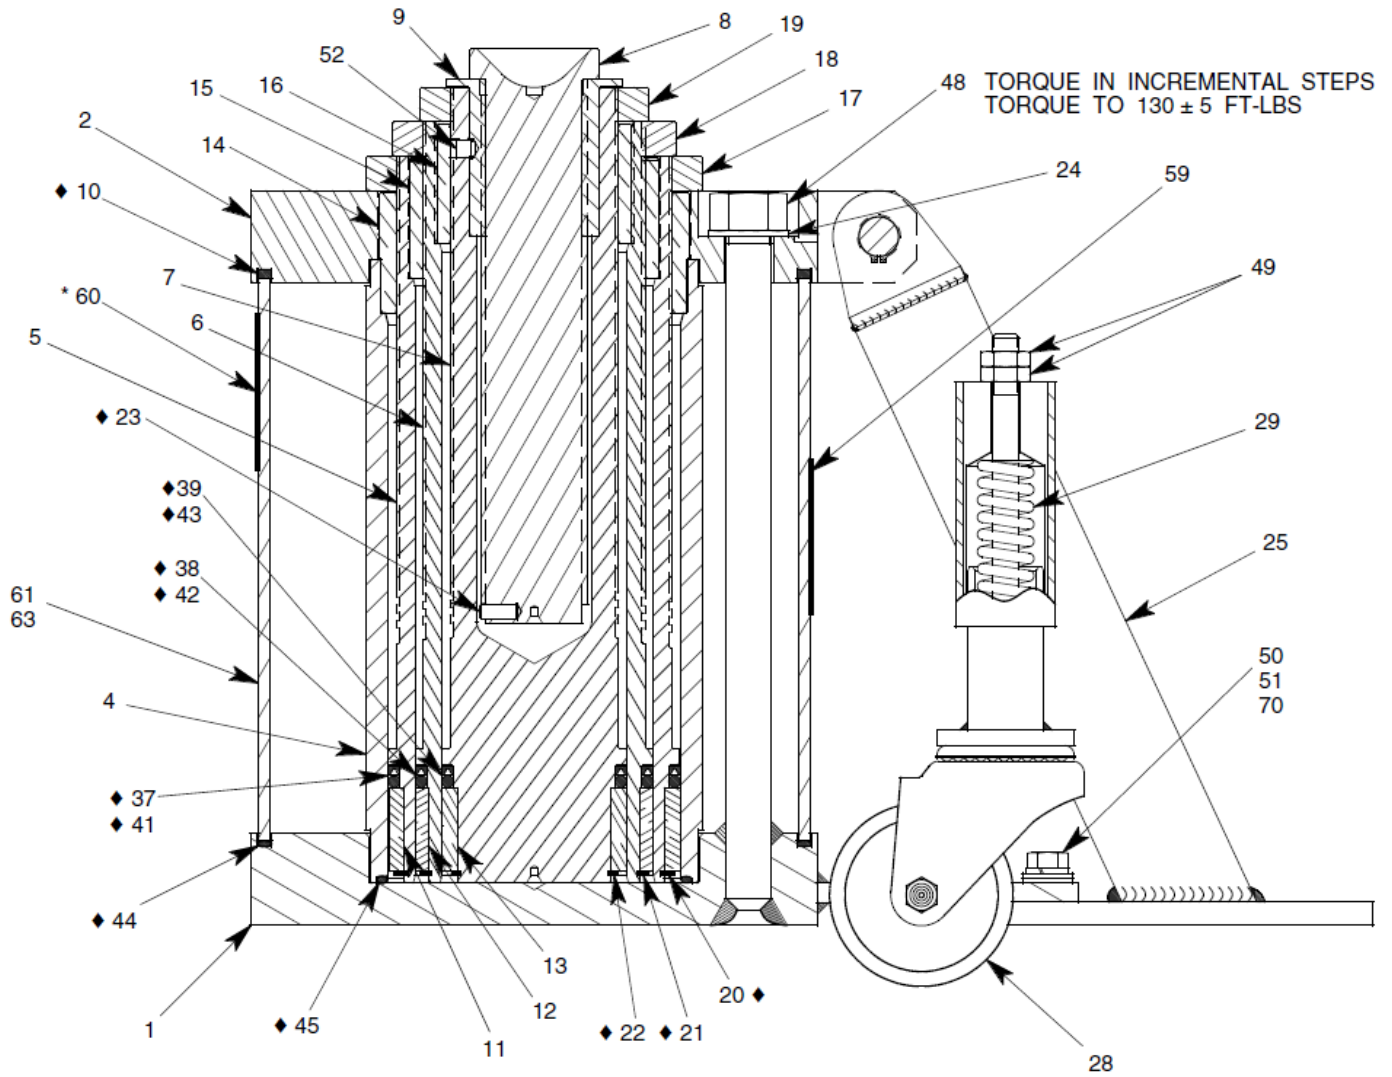



## Parts List – Figure 1B

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

| Item | Part Number | Description            | Qty |
|------|-------------|------------------------|-----|
| 1    | 12314-11    | BASE                   | 1   |
| 2    | 12314-4     | TRIPOD HEAD            | 1   |
| 3    | 55148       | SET SCREW              | 1   |
| 4    | 12314-6     | CYLINDER               | 1   |
| 5    | 12314-10    | OUTER PLUNGER          | 1   |
| 6    | 12314-30    | CENTER PLUNGER         | 1   |
| 7    | 12314-51    | INNER PLUNGER          | 1   |
| 8    | 12314-18    | EXTENSION SCREW        | 1   |
| 9    | 12314-25    | EXTENSION SCREW NUT    | 1   |
| 10   | 12314-13    | TOP RESERVOIR GASKET   | 1   |
| 11   | 12314-12    | OUTER BEARING          | 1   |
| 12   | 12314-32    | CENTER BEARING         | 1   |
| 13   | 12314-52    | INNER BEARING          | 1   |
| 14   | 12314-17    | OUTER STOP RING        | 1   |
| 15   | 12314-37    | CENTER STOP RING       | 1   |
| 16   | 12314-57    | INNER STOP RING        | 1   |
| 17   | 12314-16    | OUTER LOCKNUT          | 1   |
| 18   | 12314-36    | CENTER LOCKNUT         | 1   |
| 19   | 12314-56    | INNER LOCKNUT          | 1   |
| 20   | 55924-425   | RETAINING RING         | 1   |
| 21   | 55924-343   | RETAINING RING         | 1   |
| 22   | 55924-250   | RETAINING RING         | 1   |
| 23   | 371-014     | ROLL PIN, 1/4 X 5/8 LG | 1   |
| 24   | 362-018     | FLAT WASHER, 3/4 DIA   | 3   |
| 25   | 12314-55    | LEG                    | 3   |
| 26   | 12314-75    | TRIPOD HEAD PIN        | 3   |
| 27   | 12314-96    | NAMEPLATE              | 1   |
| 28   | 51531-1     | SWIVEL CASTER ASSEMBLY | 1   |
| 29   | 51597       | SPRING                 | 1   |
| 30   | 55040       | HAND PUMP ASSEMBLY     | 1   |
| 31   | 55100       | RELEASE VALVE ASSEMBLY | 1   |
| 32   | 55154H      | SPRING                 | 1   |
| 33   | 998-003     | GREASE FITTING         | 3   |
| 34   | 55567       | OIL SCREEN             | 1   |
| 35   | 61878       | PUMP HANDLE            | 1   |
| 36   | 72519       | SPRING                 | 1   |
| 37   | 49B6413-51  | BACK-UP RING           | 1   |
| 38   | 49B6413-44  | BACK-UP RING           | 1   |
| 39   | 49B6413-37  | BACK-UP RING           | 1   |
| 40   | 717-046     | PLUG, 7/16-20          | 1   |
| 41   | 55925-348   | O-RING                 | 1   |
| 42   | 55925-341   | O-RING                 | 1   |
| 43   | 55925-334   | O-RING                 | 1   |



## Parts List – Figure 1B

When ordering replacement parts/kits, please specify model, serial number and color of your unit.


| Item | Part Number | Description                  | Qty |
|------|-------------|------------------------------|-----|
| 44   | 55925-269   | O-RING                       | 1   |
| 45   | 55925-249   | O-RING                       | 1   |
| 46   | 55908-4     | O-RING                       | 1   |
| 47   | 55923-62    | RETAINING RING               | 6   |
| 48   | 351-022     | HEX NUT, 3/4-16              | 3   |
| 49   | 352-005     | HEX JAM NUT, 7/16-14         | 6   |
| 50   | 321-042     | HHCS, 3/8-16 X 7/8 LG        | 6   |
| 51   | 363-003     | SPLIT LOCKWASHER, 3/8        | 6   |
| 52   | 331-004     | SET SCREW, 5/16-24 X 5/16 LG | 1   |
| 53   | 717-008     | PIPE PLUG, 1/2 NPT           | 1   |
| 54   | 55153       | SPRING GUIDE                 | 1   |
| 55   | 412-002     | STEEL BALL, 5/16 DIA         | 1   |
| 56   | 412-004     | STEEL BALL, 1/4 DIA          | 2   |
| 57   | 717-006     | PIPE PLUG, 1/4 NPT           | 4   |
| 58   | 397-005     | DRIVE SCREW                  | 4   |
| 59   | 55998-1     | STICKER, MALABAR             | 1   |
| 60   | 55994       | STICKER, FLUID               | 1   |
| 61   | 12314-2     | RESERVOIR                    | 1   |
| 62   | 717-007     | PIPE PLUG, 3/8 NPT           | 1   |
| 63   | 12314-14    | RESERVOIR w/ A.P. BRACKET    | 1   |
| 64   | 12314-70    | AIR PUMP OPTION KIT          | 1   |
| 65   | 55104       | PACKING                      | 1   |
| 66   | 55101       | RELEASE VALVE STEM           | 1   |
| 67   | 55102       | GLAND                        | 1   |
| 68   | AN960-516   | FLAT WASHER, 5/16            | 1   |
| 69   | 55155       | POP-OFF VALVE ASSEMBLY       | 1   |
| 70   | 361-001     | FLAT WASHER, 3/8 SAE         | 12  |



## Parts List – Figure 2

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

### ◆ PART OF REPAIR PARTS KIT

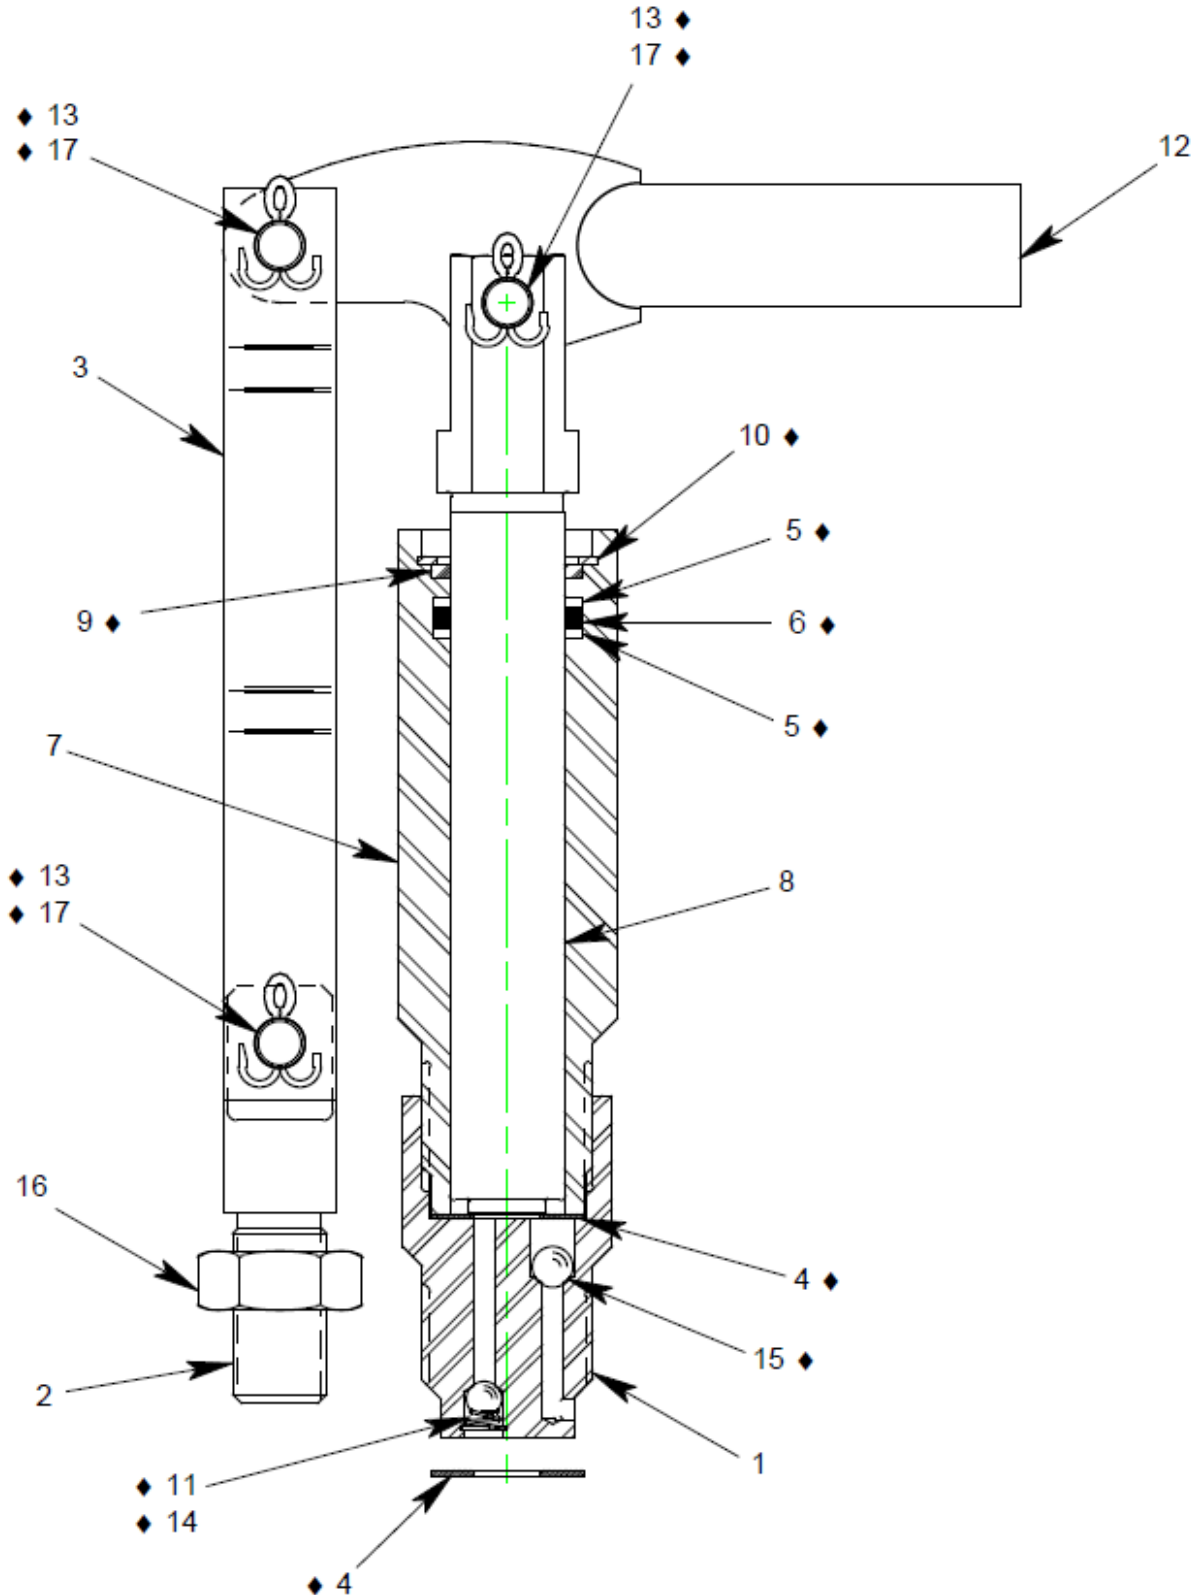



## Parts List – Figure 2


When ordering replacement parts/kits, please specify model, serial number and color of your unit.

| Item | Part Number  | Description                        | Qty |
|------|--------------|------------------------------------|-----|
|      | <b>55040</b> | <b>Pump Assembly; consists of:</b> |     |
| 1    | 55010        | VALVE BLOCK                        | 1   |
| 2    | 55011        | ANCHOR                             | 1   |
| 3    | 55012        | LINK                               | 1   |
| 4    | 55024        | GASKET                             | 2   |
| 5    | 55922-15     | BACK-UP RING                       | 2   |
| 6    | 55925-210    | O-RING                             | 1   |
| 7    | 881846       | BODY, 3/4 DIA                      | 1   |
| 8    | 881847       | PLUNGER, 3/4 DIA                   | 1   |
| 9    | 55911-15     | SCRAPER RING                       | 1   |
| 10   | 55926-112    | RETAINING RING                     | 1   |
| 11   | 55295        | VALVE SPRING                       | 1   |
| 12   | 55001        | FULCRUM                            | 1   |
| 13   | 55002        | FLAT HEAD PIN, 5/16 DIA            | 3   |
| 14   | 412-003      | STEEL BALL, 7/32 DIA               | 1   |
| 15   | 412-004      | STEEL BALL, 1/4 DIA                | 1   |
| 16   | 352-004      | HEX JAM NUT, 5/8-18                | 1   |
| 17   | 372-001      | COTTER PIN, 3/32 x 3/4 LG          | 3   |



### Parts List – Figure 3

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

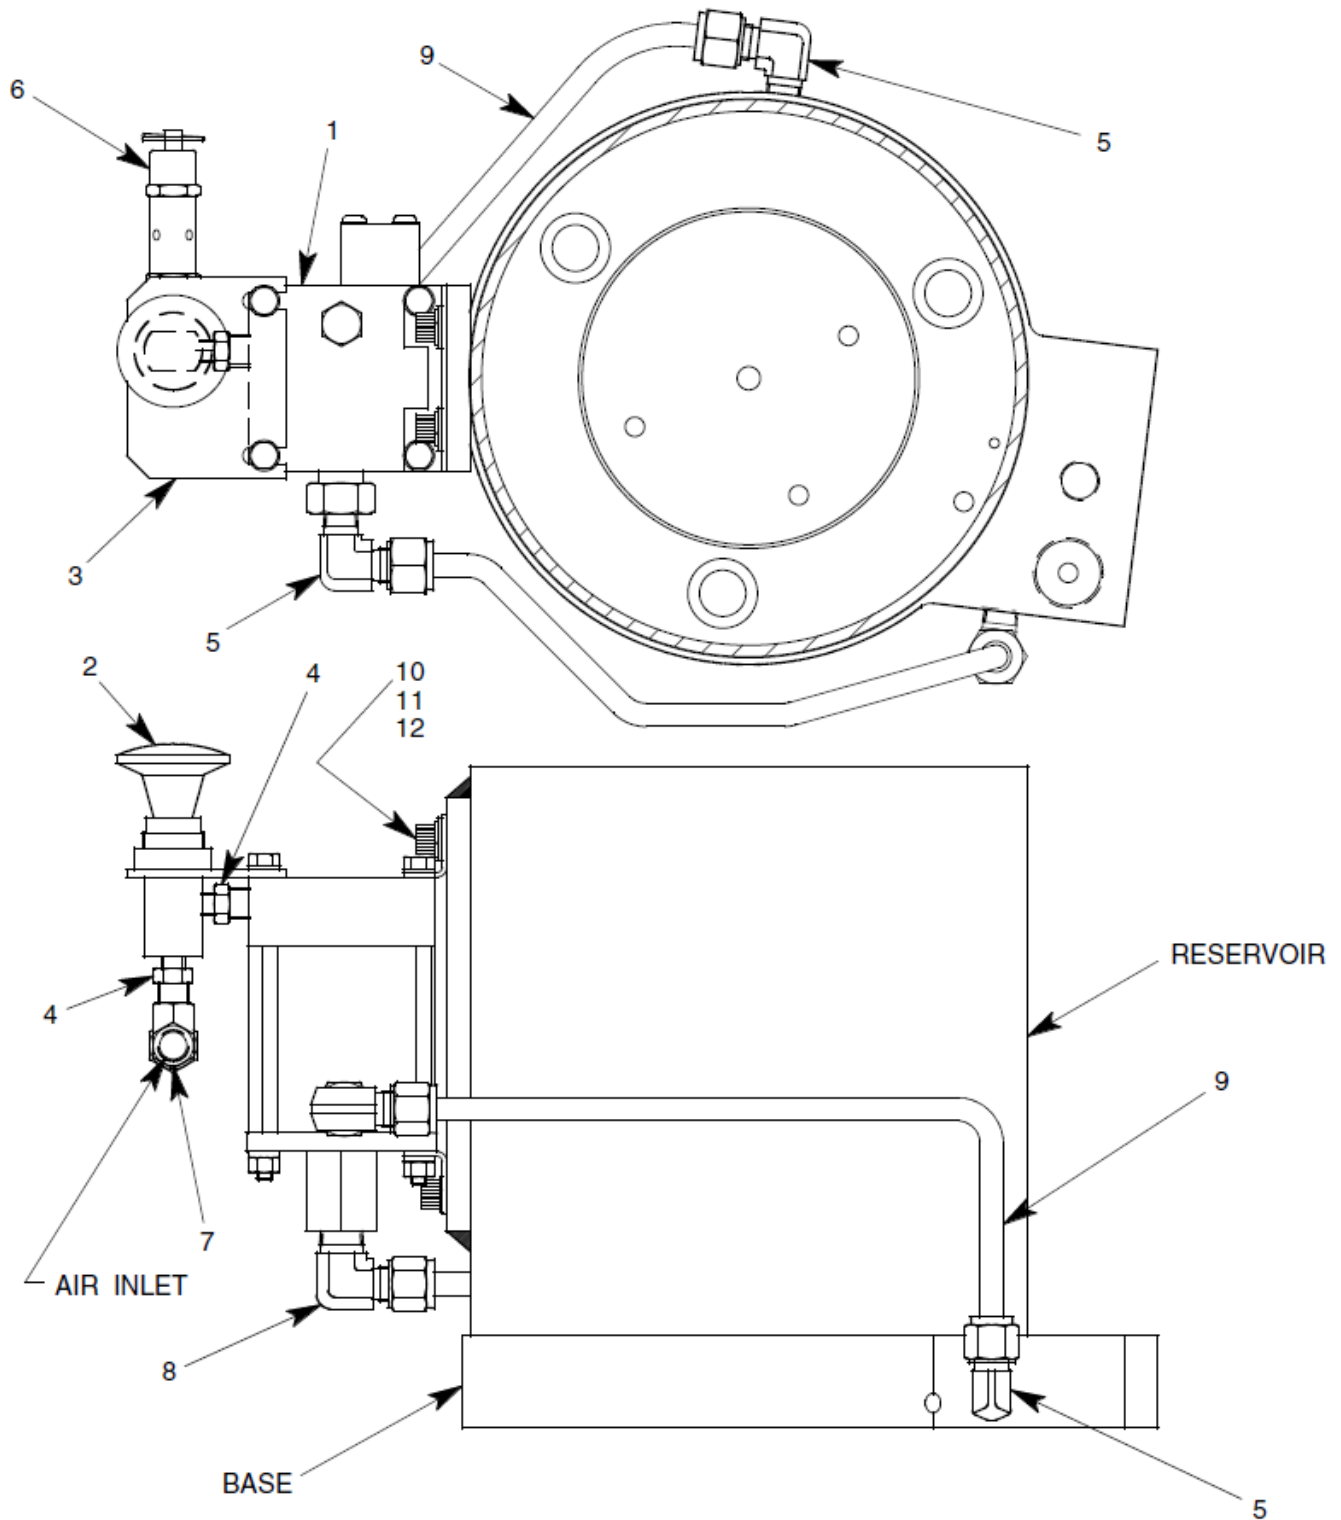



### Parts List – Figure 3

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

| Item | Part Number     | Description                       | Qty |
|------|-----------------|-----------------------------------|-----|
|      | <b>12314-70</b> | <b>Air Pump Kit; consists of:</b> |     |
| 1    | 441-016         | AIR PUMP                          | 1   |
| 2    | 421-006         | AIR VALVE                         | 1   |
| 3    | 72585           | MOUNT PLATE                       | 1   |
| 4    | 711-024         | NIPPLE, 1/4 MPT x 1/8 MPT         | 2   |
| 5    | 722-014         | ELBOW, 3/8 T x 1/4 MPT            | 3   |
| 6    | 425-001         | AIR RELIEF VALVE                  | 1   |
| 7    | 713-013         | TEE, 1/4 FPT                      | 1   |
| 8    | 722-010         | ELBOW, 3/8 T x 3/8 NPT            | 1   |
| 9    | 732-010         | TUBE, 3/8 O.D. x .065 WALL        | AR  |
| 10   | 323-011         | SHCS, 5/16-18 x 1/2 LG            | 4   |
| 11   | 363-002         | SPLIT LOCKWASHER, 5/16            | 4   |
| 12   | 361-006         | FLAT WASHER, 5/16                 | 4   |









## **APPENDIX I**

### **Safety Data Sheet MIL-PRF-5606 Hydraulic Fluid**







Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 1 of 12

## SAFETY DATA SHEET

### SECTION 1

### PRODUCT AND COMPANY IDENTIFICATION

#### PRODUCT

**Product Name:** MOBIL AERO HFA  
**Product Description:** Base Oil and Additives  
**Product Code:** 201550401020, 490110-00, 970584  
**Intended Use:** Aviation hydraulic oil

#### COMPANY IDENTIFICATION

**Supplier:** EXXON MOBIL CORPORATION  
22777 Springwoods Village Parkway  
Spring, TX. 77253 USA  
**24 Hour Health Emergency** 609-737-4411  
**Transportation Emergency Phone** 800-424-9300 or 703-527-3887 CHEMTREC  
**Product Technical Information** 800-662-4525  
**MSDS Internet Address** <http://www.exxon.com>, <http://www.mobil.com>

### SECTION 2

### HAZARDS IDENTIFICATION

This material is hazardous according to regulatory guidelines (see (M)SDS Section 15).

#### CLASSIFICATION:

Flammable liquid: Category 4.  
Aspiration toxicant: Category 1.

#### LABEL:

##### Pictogram:



**Signal Word:** Danger

#### Hazard Statements:

H227: Combustible liquid. H304: May be fatal if swallowed and enters airways.

#### Precautionary Statements:

P210: Keep away from flames and hot surfaces. -- No smoking. P273: Avoid release to the environment. P280: Wear protective gloves and eye / face protection. P301 + P310: IF SWALLOWED: Immediately call a POISON CENTER or doctor/physician. P331: Do NOT induce vomiting. P370 + P378: In case of fire: Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish. P403 + P235: Store in a well-ventilated place. Keep cool. P405: Store locked up. P501: Dispose of contents and container in accordance with local regulations.



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 2 of 12

## Other hazard information:

**HAZARD NOT OTHERWISE CLASSIFIED (HNOC):** None as defined under 29 CFR 1910.1200.

## PHYSICAL / CHEMICAL HAZARDS

Material can accumulate static charges which may cause an ignition. Material can release vapors that readily form flammable mixtures. Vapor accumulation could flash and/or explode if ignited. Combustible.

## HEALTH HAZARDS

High-pressure injection under skin may cause serious damage. Excessive exposure may result in eye, skin, or respiratory irritation.

## ENVIRONMENTAL HAZARDS

No significant hazards.

|                        |            |                 |               |
|------------------------|------------|-----------------|---------------|
| <b>NFPA Hazard ID:</b> | Health: 1  | Flammability: 2 | Reactivity: 0 |
| <b>HMIS Hazard ID:</b> | Health: 1* | Flammability: 2 | Reactivity: 0 |

**NOTE:** This material should not be used for any other purpose than the intended use in Section 1 without expert advice. Health studies have shown that chemical exposure may cause potential human health risks which may vary from person to person.

## SECTION 3 COMPOSITION / INFORMATION ON INGREDIENTS

This material is defined as a mixture.

### Hazardous Substance(s) or Complex Substance(s) required for disclosure

| Name   | CAS#       | Concentration* | GHS Hazard Codes                      |
|--|------------|----------------|---------------------------------------|
| 2,6-DI-TERT-BUTYL-P-CRESOL                           | 128-37-0   | 0.1 - < 1%     | H400(M factor 1),<br>H410(M factor 1) |
| DISTILLATES (PETROLEUM), HYDROTREATED LIGHT          | 64742-47-8 | 5 - < 10%      | H304                                  |
| HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM) | 64742-53-6 | 50 - < 70%     | H227, H304                            |
| HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)           | 64742-46-7 | 20 - < 30%     | H304                                  |
| TRIPHENYL PHOSPHATE                                  | 115-86-6   | 0.1 - < 0.25%  | H400(M factor 1),<br>H410(M factor 1) |

\* All concentrations are percent by weight unless material is a gas. Gas concentrations are in percent by volume.

As per paragraph (i) of 29 CFR 1910.1200, formulation is considered a trade secret and specific chemical identity and exact percentage (concentration) of composition may have been withheld. Specific chemical identity and exact percentage composition will be provided to health professionals, employees, or designated representatives in accordance with applicable provisions of paragraph (i).

## SECTION 4 FIRST AID MEASURES

### INHALATION



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 3 of 12

Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use mouth-to-mouth resuscitation.

## SKIN CONTACT

Wash contact areas with soap and water. Remove contaminated clothing. Launder contaminated clothing before reuse. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

## EYE CONTACT

Flush thoroughly with water. If irritation occurs, get medical assistance.

## INGESTION

Seek immediate medical attention. Do not induce vomiting.

## NOTE TO PHYSICIAN

If ingested, material may be aspirated into the lungs and cause chemical pneumonitis. Treat appropriately.

## SECTION 5 FIRE FIGHTING MEASURES

### EXTINGUISHING MEDIA

**Appropriate Extinguishing Media:** Use water fog, foam, dry chemical or carbon dioxide (CO<sub>2</sub>) to extinguish flames.

**Inappropriate Extinguishing Media:** Straight Streams of Water

### FIRE FIGHTING

**Fire Fighting Instructions:** Evacuate area. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply. Firefighters should use standard protective equipment and in enclosed spaces, self-contained breathing apparatus (SCBA). Use water spray to cool fire exposed surfaces and to protect personnel.

**Unusual Fire Hazards:** Combustible. Pressurized mists may form a flammable mixture.

**Hazardous Combustion Products:** Aldehydes, Incomplete combustion products, Oxides of carbon, Phosphorus oxides, Smoke, Fume, Sulfur oxides

### FLAMMABILITY PROPERTIES

**Flash Point [Method]:** >82°C (180°F) [ASTM D-93]

**Flammable Limits (Approximate volume % in air):** LEL: 0.7 UEL: 7.0 [Estimated]

**Autoignition Temperature:** >225°C (437°F)

## SECTION 6 ACCIDENTAL RELEASE MEASURES

### NOTIFICATION PROCEDURES

In the event of a spill or accidental release, notify relevant authorities in accordance with all applicable



regulations. US regulations require reporting releases of this material to the environment which exceed the applicable reportable quantity or oil spills which could reach any waterway including intermittent dry creeks. The National Response Center can be reached at (800)424-8802.

#### PROTECTIVE MEASURES

Avoid contact with spilled material. Warn or evacuate occupants in surrounding and downwind areas if required due to toxicity or flammability of the material. See Section 5 for fire fighting information. See the Hazard Identification Section for Significant Hazards. See Section 4 for First Aid Advice. See Section 8 for advice on the minimum requirements for personal protective equipment. Additional protective measures may be necessary, depending on the specific circumstances and/or the expert judgment of the emergency responders.

For emergency responders: Respiratory protection: respiratory protection will be necessary only in special cases, e.g., formation of mists. Half-face or full-face respirator with filter(s) for dust/organic vapor or Self Contained Breathing Apparatus (SCBA) can be used depending on the size of spill and potential level of exposure. If the exposure cannot be completely characterized or an oxygen deficient atmosphere is possible or anticipated, SCBA is recommended. Work gloves that are resistant to hydrocarbons are recommended. Gloves made of polyvinyl acetate (PVA) are not water-resistant and are not suitable for emergency use. Chemical goggles are recommended if splashes or contact with eyes is possible. Small spills: normal antistatic work clothes are usually adequate. Large spills: full body suit of chemical resistant, antistatic material is recommended.

#### SPILL MANAGEMENT

**Land Spill:** Eliminate all ignition sources (no smoking, flares, sparks or flames in immediate area). Stop leak if you can do it without risk. All equipment used when handling the product must be grounded. Do not touch or walk through spilled material. Prevent entry into waterways, sewer, basements or confined areas. A vapor suppressing foam may be used to reduce vapors. Use clean non-sparking tools to collect absorbed material. Absorb or cover with dry earth, sand or other non-combustible material and transfer to containers. Large Spills: Water spray may reduce vapor; but may not prevent ignition in closed spaces. Recover by pumping or with suitable absorbent.

**Water Spill:** Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Water spill and land spill recommendations are based on the most likely spill scenario for this material; however, geographic conditions, wind, temperature, (and in the case of a water spill) wave and current direction and speed may greatly influence the appropriate action to be taken. For this reason, local experts should be consulted. Note: Local regulations may prescribe or limit action to be taken.

#### ENVIRONMENTAL PRECAUTIONS

Large Spills: Dike far ahead of liquid spill for later recovery and disposal. Prevent entry into waterways, sewers, basements or confined areas.

|                  |
|------------------|
| <b>SECTION 7</b> |
|------------------|

|                             |
|-----------------------------|
| <b>HANDLING AND STORAGE</b> |
|-----------------------------|

#### HANDLING

Avoid contact with skin. Avoid prolonged breathing of mists and heated vapor. Prevent small spills and leakage to avoid slip hazard. Material can accumulate static charges which may cause an electrical spark (ignition source). When the material is handled in bulk, an electrical spark could ignite any flammable vapors from liquids or residues that may be present (e.g., during switch-loading operations). Use proper bonding and/or ground procedures. However, bonding and grounds may not eliminate the hazard from static



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 5 of 12

accumulation. Consult local applicable standards for guidance. Additional references include American Petroleum Institute 2003 (Protection Against Ignitions Arising out of Static, Lightning and Stray Currents) or National Fire Protection Agency 77 (Recommended Practice on Static Electricity) or CENELEC CLC/TR 50404 (Electrostatics - Code of practice for the avoidance of hazards due to static electricity).

**Static Accumulator:** This material is a static accumulator.

## STORAGE

The container choice, for example storage vessel, may effect static accumulation and dissipation. Keep container closed. Handle containers with care. Open slowly in order to control possible pressure release. Store in a cool, well-ventilated area. Storage containers should be grounded and bonded. Fixed storage containers, transfer containers and associated equipment should be grounded and bonded to prevent accumulation of static charge.

## SECTION 8 EXPOSURE CONTROLS / PERSONAL PROTECTION

### EXPOSURE LIMIT VALUES

Exposure limits/standards (Note: Exposure limits are not additive)

| Substance Name  | Form                         | Limit / Standard |           |  | NOTE | Source  |
|---|------------------------------|------------------|-----------|--|------|---------|
| 2,6-DI-TERT-BUTYL-P-CRESOL  | Inhalable fraction and vapor | TWA              | 2 mg/m3   |  | N/A  | ACGIH   |
| DISTILLATES (PETROLEUM), HYDROTREATED LIGHT [total hydrocarbon vapor] | Non-Aerosol                  | TWA              | 200 mg/m3 |  | Skin | ACGIH   |
| HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)                  | Mist.                        | TWA              | 5 mg/m3   |  | N/A  | OSHA Z1 |
| HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)                  | Inhalable fraction.          | TWA              | 5 mg/m3   |  | N/A  | ACGIH   |
| HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)                  | Mist.                        | TWA              | 5 mg/m3   |  | N/A  | ACGIH   |
| HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)                            | Mist.                        | TWA              | 5 mg/m3   |  | N/A  | OSHA Z1 |
| HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)                            | Inhalable fraction.          | TWA              | 5 mg/m3   |  | N/A  | ACGIH   |
| TRIPHENYL PHOSPHATE   |                              | TWA              | 3 mg/m3   |  | N/A  | OSHA Z1 |
| TRIPHENYL PHOSPHATE   |                              | TWA              | 3 mg/m3   |  | N/A  | ACGIH   |

**Exposure limits/standards for materials that can be formed when handling this product:** When mists/aerosols can occur the following are recommended: 5 mg/m<sup>3</sup> - ACGIH TLV (inhalable fraction), 5 mg/m<sup>3</sup> - OSHA PEL.

NOTE: Limits/standards shown for guidance only. Follow applicable regulations.

No biological limits allocated.

### ENGINEERING CONTROLS

The level of protection and types of controls necessary will vary depending upon potential exposure conditions.



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 6 of 12

---

Control measures to consider:

Use explosion-proof ventilation equipment to stay below exposure limits.

## PERSONAL PROTECTION

Personal protective equipment selections vary based on potential exposure conditions such as applications, handling practices, concentration and ventilation. Information on the selection of protective equipment for use with this material, as provided below, is based upon intended, normal usage.

**Respiratory Protection:** If engineering controls do not maintain airborne contaminant concentrations at a level which is adequate to protect worker health, an approved respirator may be appropriate. Respirator selection, use, and maintenance must be in accordance with regulatory requirements, if applicable. Types of respirators to be considered for this material include:

No special requirements under ordinary conditions of use and with adequate ventilation.

For high airborne concentrations, use an approved supplied-air respirator, operated in positive pressure mode. Supplied air respirators with an escape bottle may be appropriate when oxygen levels are inadequate, gas/vapor warning properties are poor, or if air purifying filter capacity/rating may be exceeded.

**Hand Protection:** Any specific glove information provided is based on published literature and glove manufacturer data. Glove suitability and breakthrough time will differ depending on the specific use conditions. Contact the glove manufacturer for specific advice on glove selection and breakthrough times for your use conditions. Inspect and replace worn or damaged gloves. The types of gloves to be considered for this material include:

If prolonged or repeated contact is likely, chemical resistant gloves are recommended. If contact with forearms is likely, wear gauntlet style gloves.

**Eye Protection:** If contact is likely, safety glasses with side shields are recommended.

**Skin and Body Protection:** Any specific clothing information provided is based on published literature or manufacturer data. The types of clothing to be considered for this material include:

If prolonged or repeated contact is likely, chemical, and oil resistant clothing is recommended.

**Specific Hygiene Measures:** Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking, and/or smoking. Routinely wash work clothing and protective equipment to remove contaminants. Discard contaminated clothing and footwear that cannot be cleaned. Practice good housekeeping.

## ENVIRONMENTAL CONTROLS

Comply with applicable environmental regulations limiting discharge to air, water and soil. Protect the environment by applying appropriate control measures to prevent or limit emissions.

## SECTION 9

## PHYSICAL AND CHEMICAL PROPERTIES

**Note:** Physical and chemical properties are provided for safety, health and environmental considerations only and may not fully represent product specifications. Contact the Supplier for additional information.

## GENERAL INFORMATION

**Physical State:** Liquid

**Color:** Red



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 7 of 12

Odor: Characteristic  
Odor Threshold: N/D

## IMPORTANT HEALTH, SAFETY, AND ENVIRONMENTAL INFORMATION

Relative Density (at 15 °C): 0.88  
Flammability (Solid, Gas): N/A  
Flash Point [Method]: >82°C (180°F) [ASTM D-93]  
Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0 [Estimated]  
Autoignition Temperature: >225°C (437°F)  
Boiling Point / Range: N/D  
Decomposition Temperature: N/D  
Vapor Density (Air = 1): N/D  
Vapor Pressure: [N/D at 20 °C]  
Evaporation Rate (n-butyl acetate = 1): N/D  
pH: N/A  
Log Pow (n-Octanol/Water Partition Coefficient): N/D  
Solubility in Water: Negligible  
Viscosity: 13.8 cSt (13.8 mm<sup>2</sup>/sec) at 40 °C | 5.1 cSt (5.1 mm<sup>2</sup>/sec) at 100°C [ASTM D 445]  
Oxidizing Properties: See Hazards Identification Section.

## OTHER INFORMATION

Freezing Point: N/D  
Melting Point: N/A  
Pour Point: -60°C (-76°F) [ASTM D97]  
DMSO Extract (mineral oil only), IP-346: < 3 %wt

## SECTION 10

## STABILITY AND REACTIVITY

**REACTIVITY:** See sub-sections below.

**STABILITY:** Material is stable under normal conditions.

**CONDITIONS TO AVOID:** Open flames and high energy ignition sources.

**MATERIALS TO AVOID:** Strong oxidizers

**HAZARDOUS DECOMPOSITION PRODUCTS:** Material does not decompose at ambient temperatures.

**POSSIBILITY OF HAZARDOUS REACTIONS:** Hazardous polymerization will not occur.

## SECTION 11

## TOXICOLOGICAL INFORMATION

### INFORMATION ON TOXICOLOGICAL EFFECTS

| Hazard Class                                    | Conclusion / Remarks  |
|---|---|
| <b>Inhalation</b>                               |   |
| Acute Toxicity: No end point data for material. | Minimally Toxic. Based on assessment of the components.   |
| Irritation: No end point data for material.     | Elevated temperatures or mechanical action may form vapors, mist, or fumes which may be irritating to the eyes, nose, throat, or lungs. |



Product Name: MOBIL AERO HFA  
 Revision Date: 01 Oct 2015  
 Page 8 of 12

|  |  |
|--|--|
| <b>Ingestion</b>   |  |
| Acute Toxicity: No end point data for material.                | Minimally Toxic. Based on assessment of the components.  |
| <b>Skin</b>  |  |
| Acute Toxicity: No end point data for material.                | Minimally Toxic. Based on assessment of the components.  |
| Skin Corrosion/Irritation: No end point data for material.     | May dry the skin leading to discomfort and dermatitis. Based on assessment of the components.                  |
| <b>Eye</b>   |  |
| Serious Eye Damage/Irritation: No end point data for material. | May cause mild, short-lasting discomfort to eyes. Based on assessment of the components.                       |
| <b>Sensitization</b>   |  |
| Respiratory Sensitization: No end point data for material.     | Not expected to be a respiratory sensitizer.   |
| Skin Sensitization: No end point data for material.            | Not expected to be a skin sensitizer. Based on assessment of the components.                                   |
| <b>Aspiration:</b> Data available.                             | May be fatal if swallowed and enters airways. Based on physico-chemical properties of the material.            |
| <b>Germ Cell Mutagenicity:</b> No end point data for material. | Not expected to be a germ cell mutagen. Based on assessment of the components.                                 |
| <b>Carcinogenicity:</b> No end point data for material.        | Not expected to cause cancer. Based on assessment of the components.   |
| <b>Reproductive Toxicity:</b> No end point data for material.  | Not expected to be a reproductive toxicant. Based on assessment of the components.                             |
| <b>Lactation:</b> No end point data for material.              | Not expected to cause harm to breast-fed children.   |
| <b>Specific Target Organ Toxicity (STOT)</b>                   |  |
| Single Exposure: No end point data for material.               | Not expected to cause organ damage from a single exposure.   |
| Repeated Exposure: No end point data for material.             | Not expected to cause organ damage from prolonged or repeated exposure. Based on assessment of the components. |

## TOXICITY FOR SUBSTANCES

| NAME                       | ACUTE TOXICITY                       |
|----------------------------|--------------------------------------|
| 2,6-DI-TERT-BUTYL-P-CRESOL | Oral Lethality: LD50 0.89 g/kg (Rat) |

## OTHER INFORMATION

### For the product itself:

Repeated and/or prolonged exposure may cause irritation to the skin, eyes, or respiratory tract. Small amounts of liquid aspirated into the lungs during ingestion or from vomiting may cause chemical pneumonitis or pulmonary edema.

### Contains:

Base oil severely refined: Not carcinogenic in animal studies. Representative material passes IP-346, Modified Ames test, and/or other screening tests. Dermal and inhalation studies showed minimal effects; lung non-specific infiltration of immune cells, oil deposition and minimal granuloma formation. Not sensitizing in test animals.

The following ingredients are cited on the lists below: None.

--REGULATORY LISTS SEARCHED--



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 9 of 12

1 = NTP CARC  
2 = NTP SUS

3 = IARC 1  
4 = IARC 2A

5 = IARC 2B  
6 = OSHA CARC

## SECTION 12

## ECOLOGICAL INFORMATION

The information given is based on data available for the material, the components of the material, and similar materials.

### ECOTOXICITY

Material -- Not expected to be harmful to aquatic organisms.

### MOBILITY

More volatile component -- Highly volatile, will partition rapidly to air. Not expected to partition to sediment and wastewater solids.

Less volatile component -- Low solubility and floats and is expected to migrate from water to the land. Expected to partition to sediment and wastewater solids.

### PERSISTENCE AND DEGRADABILITY

#### Biodegradation:

Components -- Expected to be inherently biodegradable

### BIOACCUMULATION POTENTIAL

Majority of components -- Has the potential to bioaccumulate, however metabolism or physical properties may reduce the bioconcentration or limit bioavailability.

## SECTION 13

## DISPOSAL CONSIDERATIONS

Disposal recommendations based on material as supplied. Disposal must be in accordance with current applicable laws and regulations, and material characteristics at time of disposal.

### DISPOSAL RECOMMENDATIONS

Product is suitable for burning in an enclosed controlled burner for fuel value or disposal by supervised incineration at very high temperatures to prevent formation of undesirable combustion products. Protect the environment. Dispose of used oil at designated sites. Minimize skin contact. Do not mix used oils with solvents, brake fluids or coolants.

### REGULATORY DISPOSAL INFORMATION

RCRA Information: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed as hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrosivity or reactivity and is not formulated with contaminants as determined by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

**Empty Container Warning** Empty Container Warning (where applicable): Empty containers may contain residue and can be dangerous. Do not attempt to refill or clean containers without proper instructions. Empty drums should be



Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 10 of 12

completely drained and safely stored until appropriately reconditioned or disposed. Empty containers should be taken for recycling, recovery, or disposal through suitably qualified or licensed contractor and in accordance with governmental regulations. DO NOT PRESSURISE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND, OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION. THEY MAY EXPLODE AND CAUSE INJURY OR DEATH.

|                   |                              |
|-------------------|------------------------------|
| <b>SECTION 14</b> | <b>TRANSPORT INFORMATION</b> |
|-------------------|------------------------------|

**LAND (DOT)**

**Proper Shipping Name:** COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light)  
**Hazard Class & Division:** COMBUSTIBLE LIQUID  
**ID Number:** NA1993  
**Packing Group:** III  
**ERG Number:** 128  
**Label(s):** NONE  
**Transport Document Name:** NA1993, COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light), COMBUSTIBLE LIQUID, PG III

Footnote: This material is not regulated under 49 CFR in a container of 119 gallon capacity or less when transported solely by land, as long as the material is not a hazardous waste, a marine pollutant, or specifically listed as a hazardous substance.

**LAND (TDG):** Not Regulated for Land Transport

**SEA (IMDG):** Not Regulated for Sea Transport according to IMDG-Code

**Marine Pollutant:** No

**AIR (IATA):** Not Regulated for Air Transport

|                   |                               |
|-------------------|-------------------------------|
| <b>SECTION 15</b> | <b>REGULATORY INFORMATION</b> |
|-------------------|-------------------------------|

**OSHA HAZARD COMMUNICATION STANDARD:** This material is considered hazardous in accordance with OSHA HazCom 2012, 29 CFR 1910.1200.

**Listed or exempt from listing/notification on the following chemical inventories:** AICS, DSL, ENCS, IECSC, KECI, PICCS, TCSI, TSCA

**EPCRA SECTION 302:** This material contains no extremely hazardous substances.

**SARA (311/312) REPORTABLE HAZARD CATEGORIES:** Fire. Immediate Health. Delayed Health.

**SARA (313) TOXIC RELEASE INVENTORY:** This material contains no chemicals subject to the supplier notification requirements of the SARA 313 Toxic Release Program.



Product Name: MOBIL AERO HFA  
 Revision Date: 01 Oct 2015  
 Page 11 of 12

The following ingredients are cited on the lists below:

| Chemical Name  | CAS Number | List Citations   |
|--|------------|------------------|
| DISTILLATES (PETROLEUM),<br>HYDROTREATED LIGHT             | 64742-47-8 | 1, 17, 18        |
| HYDROTREATED LIGHT<br>NAPHTHENIC DISTILLATE<br>(PETROLEUM) | 64742-53-6 | 1, 4, 13, 17, 18 |
| HYDROTREATED MIDDLE<br>DISTILLATE (PETROLEUM)              | 64742-46-7 | 1, 4, 17, 18     |

--REGULATORY LISTS SEARCHED--

|               |                  |                   |             |
|---------------|------------------|-------------------|-------------|
| 1 = ACGIH ALL | 6 = TSCA 5a2     | 11 = CA P65 REPRO | 16 = MN RTK |
| 2 = ACGIH A1  | 7 = TSCA 5e      | 12 = CA RTK       | 17 = NJ RTK |
| 3 = ACGIH A2  | 8 = TSCA 6       | 13 = IL RTK       | 18 = PA RTK |
| 4 = OSHA Z    | 9 = TSCA 12b     | 14 = LA RTK       | 19 = RI RTK |
| 5 = TSCA 4    | 10 = CA P65 CARC | 15 = MI 293       |             |

Code key: CARC=Carcinogen; REPRO=Reproductive

| SECTION 16 | OTHER INFORMATION |
|------------|-------------------|
|------------|-------------------|

N/D = Not determined, N/A = Not applicable

**KEY TO THE H-CODES CONTAINED IN SECTION 3 OF THIS DOCUMENT (for information only):**

H227: Combustible liquid; Flammable Liquid, Cat 4  
 H304: May be fatal if swallowed and enters airways; Aspiration, Cat 1  
 H400: Very toxic to aquatic life; Acute Env Tox, Cat 1  
 H410: Very toxic to aquatic life with long lasting effects; Chronic Env Tox, Cat 1

**THIS SAFETY DATA SHEET CONTAINS THE FOLLOWING REVISIONS:**

Revision Changes:  
 Section 01: Company Mailing Address information was modified.  
 Section 05: Hazardous Combustion Products information was modified.  
 Section 15: List Citations Table information was modified.  
 Section 15: National Chemical Inventory Listing information was modified.  
 Section 14: Marine Pollutant information was modified.  
 Composition: Component Table information was modified.  
 Section 08: Exposure Limits Table information was modified.  
 Section 16: Revision Information - Implementation of GHS requirements phrase. information was deleted.

The information and recommendations contained herein are, to the best of ExxonMobil's knowledge and belief, accurate and reliable as of the date issued. You can contact ExxonMobil to insure that this document is the most current available from ExxonMobil. The information and recommendations are offered for the user's consideration and examination. It is the user's responsibility to satisfy itself that the product is suitable for the intended use. If buyer repackages this product, it is the user's responsibility to insure proper health, safety and other necessary information is included with and/or on the container. Appropriate warnings and safe-handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law,





Product Name: MOBIL AERO HFA  
Revision Date: 01 Oct 2015  
Page 12 of 12

re-publication or retransmission of this document, in whole or in part, is not permitted. The term, "ExxonMobil" is used for convenience, and may include any one or more of ExxonMobil Chemical Company, Exxon Mobil Corporation, or any affiliates in which they directly or indirectly hold any interest.

---

Internal Use Only

MHC: 2A, 0, 0, 0, 1, 1

PPEC: C

DGN: 2005454XUS (552975)

---

Copyright 2002 Exxon Mobil Corporation, All rights reserved