




Operation & Service Manual

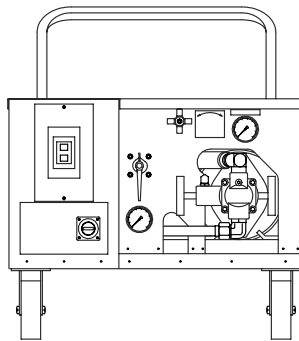

Model: 5030 Hydraulic Power Unit

01/2003 - AA - Rev. OR

Includes Illustrated Parts Lists

Tronair, Inc.

*1740 Eber Road
Holland, Ohio 43528-9794
USA*

Telephone: (419) 866-6301 • 800-426-6301

Fax: (419) 867-0634

Web Site: www.tronair.com E-mail: mail@tronair.com

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

TABLE OF CONTENTS

PAGE

Figure 1 – External Components.....	1
Figure 2 – Internal Components.....	1
Figure 3 – Standard Hydraulic Schematic & Option T Hydraulic Schematic.....	2
Figure 4 – Electrical Schematic.....	3
1.0 General Description.....	4
2.0 Technical Specifications.....	4
2.2 Hydraulic	4
2.3 Electrical.....	4
2.3 Mechanical	4
3.0 Preparation For Use.....	4
3.1 Servicing Reservoir	4
3.2 Connecting Electrical Leads.....	5
4.0 Operation	5
4.1 General Comments	5
4.2 Preliminary Adjustments And Operations.....	6
4.3 Sample Valve.....	8
4.4 Bleeding Air From System	8
4.5 Abbreviated Operating Instructions.....	9
4.6 Options	9
5.0 Maintenance	11
5.1 General Maintenance	11
5.2 Filter Maintenance	11
5.3 Selector Valve Maintenance.....	11
5.4 Lubrication	11
5.5 Storage.....	11
6.0 Troubleshooting.....	11
6.1 No Flow Or Pressure	11
6.2 Fluctuating Pressure Or Flow	11
6.3 Unit Overheats.....	12
6.4 Loss Of Flow In Closed Loop	12
6.5 External Leakage From Selector Valve.....	12
7.0 Parts List Index.....	12
APPENDIX I	Instrument Certification Notice
APPENDIX II	Lincoln Motor Manual
APPENDIX III	Continental Hydraulics Service Booklet PVR6-"G" Design Series Pumps
APPENDIX IV	MSDS Hydraulic Fluid – Aviation Phosphate Ester, Type IV

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

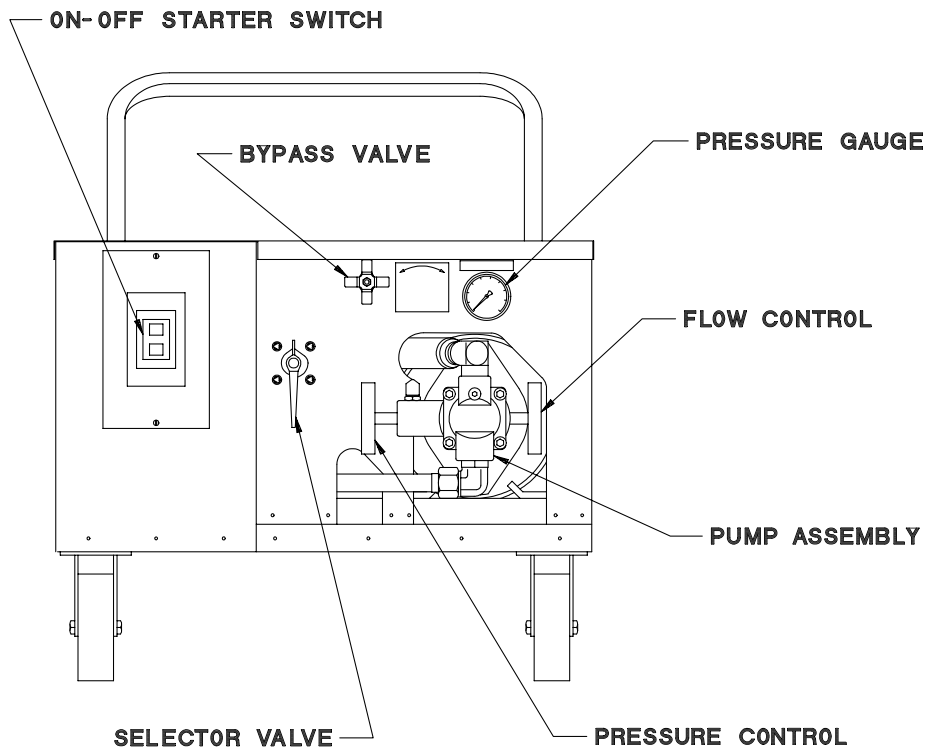


FIGURE 1 – External Components

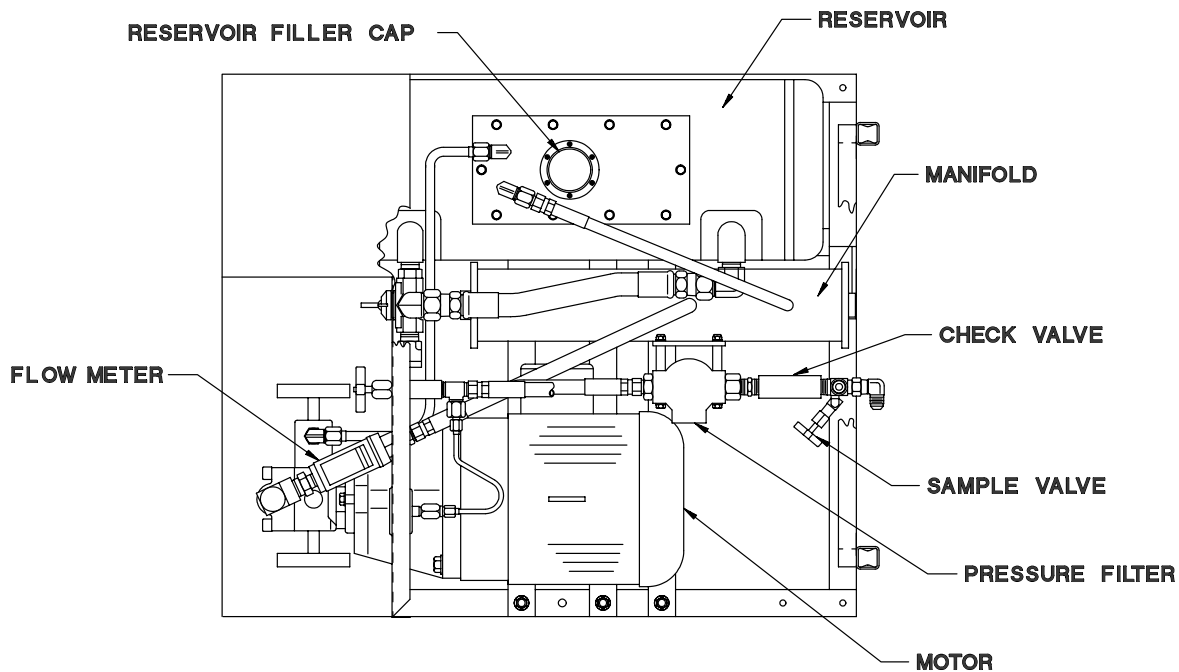


FIGURE 2 – Internal Components


TRONAIR

01/2003 - AA - Rev. OR

- 1 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

**Hydraulic Schematic
(Standard Models)**

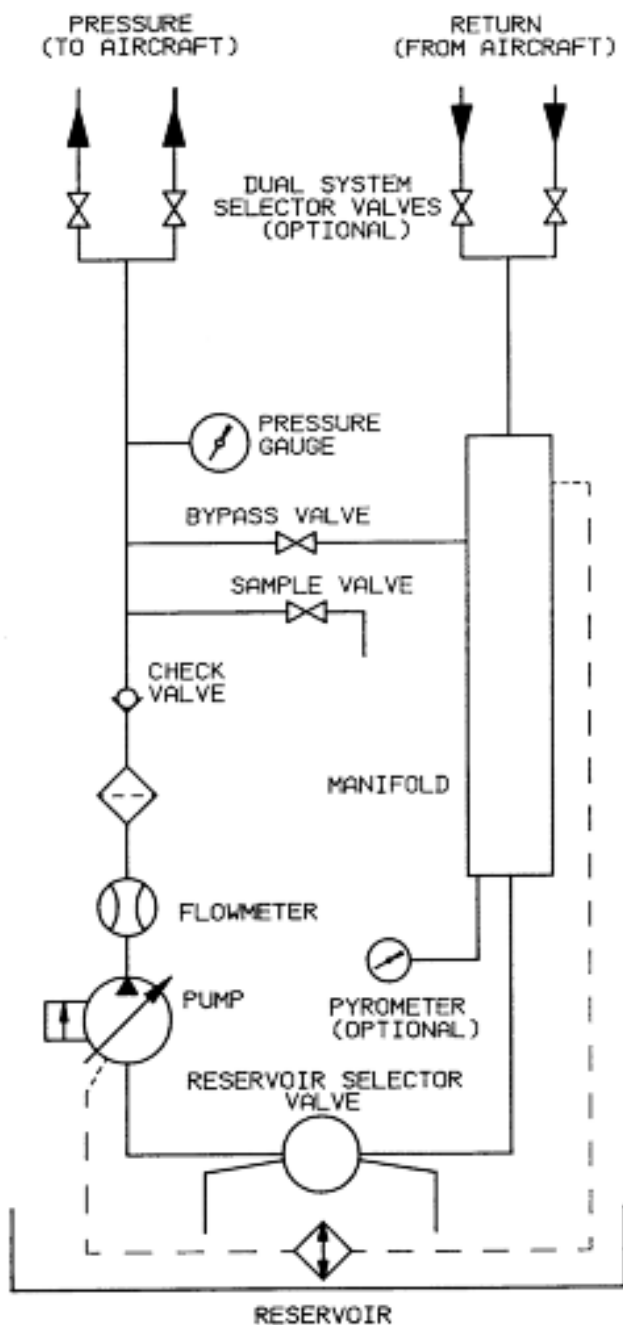

**Hydraulic Schematic
(Option T)
Return Back-Pressure
With Sight Gauge**


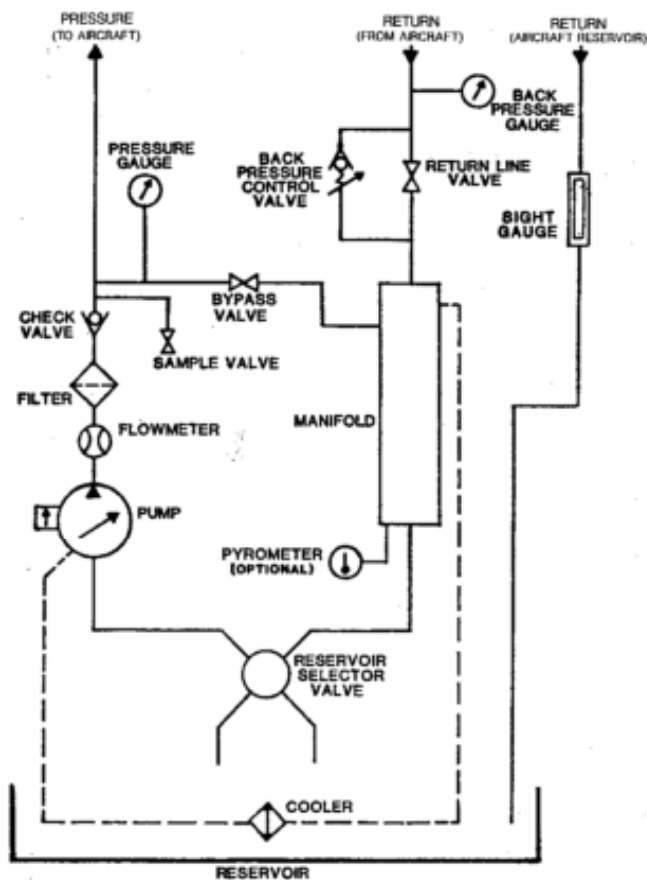


FIGURE 3 – Hydraulic Schematics

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

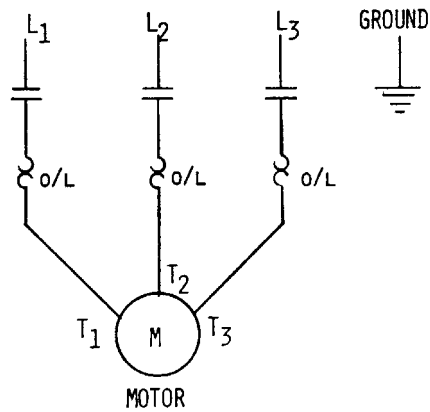

DUAL INPUT VOLTAGE CONNECTION

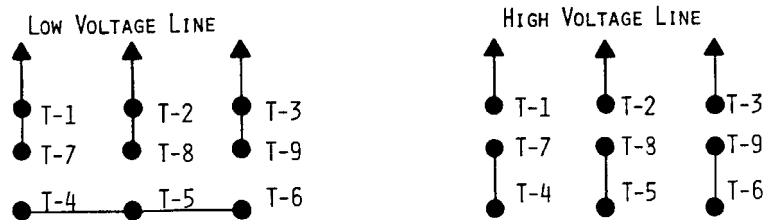


FIGURE 4 – Electrical Schematic

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

1.0 GENERAL DESCRIPTION

The Tronair Hydraulic Power Unit (HPU) provides a source of clean, pressurized hydraulic fluid for performing required aircraft maintenance.

Important features include:

- Pressure compensated pump with integral pressure and flow controls
- 10 gallon reservoir with selector valve
- Bypass valve
- Cooler located inside reservoir
- Manual starter with overload protection
- Non bypass filter with 2 micron filter element

2.0 TECHNICAL SPECIFICATIONS

2.2 HYDRAULIC

Fluid:	Aviation Phosphate Ester, Type IV Fluids
Pressure Range:	0 – 1,750 psi
Flow Range:	0 – 6 gpm (60 Hz systems) 0 – 5 gpm (50 Hz systems)
Filtration:	2 Micron Absolute, Non-Bypass
Reservoir Capacity:	10 gallons (Maximum)

2.3 ELECTRICAL

Power Requirements: 3 Phase, Alternating Current

60 Hz
9.2 amps @ 208 VAC
8.4 amps @ 230 VAC
4.2 amps @ 460 VAC
3.7 amps @ 575 VAC

50 Hz
9.3 amps @ 220 VAC
4.6 amps @ 380, 415, 440 VAC

2.3 MECHANICAL

Dimensions:	35 inches	Long
	30 inches	Wide
	24 inches	High
Weight:	400 lbs	

3.0 PREPARATION FOR USE

The HPU is shipped completely assembled and only the following steps are required to make the unit operational.

3.1 SERVICING RESERVOIR

Remove the sheet metal cover and fill the reservoir with the correct fluid until fluid level is slightly above the minimum oil level mark. Since a case drain cooler is located in the HPU reservoir, it is important that this fluid level be maintained in order to prevent excessive heat buildup.

3.0 Preparation for Use continued on following page.

TRONAIR

01/2003 - AA - Rev. OR

- 4 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

3.2 CONNECTING ELECTRICAL LEADS

Install plug onto the electrical cord and check for proper motor rotation by "bumping" the On-Off switch. Correct motor rotation is indicated by an arrow on pump motor adapter. If rotation is not correct, change any two of the three input leads inside the on-off switch box or at the plug.

NOTE: *Balanced three phase voltage must be available to prevent overheating and damage to the motor. Voltage unbalanced between phases occurs when the voltages differ from one another. Some reasons for imbalance are:*

- 1. Unequal loading of each phase.*
- 2. Poor connections in the supply.*
- 3. Single phase condition caused by blown fuses or bad connections.*

If these conditions occur in the incoming power system, a protective device, such as a voltage monitor, should be installed on the machine to prevent motor damage.

4.0 OPERATION

Due to the complexity, differences, and ongoing changes in aircraft hydraulic systems, no attempt has been made to relate to any specific aircraft operation. It is suggested that this manual and the HPU be studied thoroughly in order to obtain optimum benefit of the various features. By combining an understanding of the HPU and the aircraft hydraulic system, many services not mentioned in this manual may be performed. Refer to the hydraulic schematic, front panel controls, and internal components pages for clarification while reading this manual.

4.1 GENERAL COMMENTS

Most questions or problems concerning hydraulic power units are usually caused by improper training or understanding of hydraulics. The following comments are given to aid in obtaining maximum benefits from the hydraulic power unit.

4.1.1 Training

Be sure that all personnel that will use the machine read the operating manual and receive training. We encourage customers to call Tronair to discuss any operating or testing requirements.

4.1.2 Use of the HPU Reservoir

It is suggested that the integral reservoir be used whenever possible. Use of this reservoir eliminates any possibility of cavitating the pump. Most complaints of pump noises are due to fluid restrictions in the aircraft systems when using the aircraft reservoir. Also, if the integral reservoir is used, the HPU will run considerably cooler. This occurs because the pump case drain oil is directed to the reservoir instead of the pump return. The only compromise in using the HPU reservoir is that the aircraft system reservoir must be serviced after testing, which is standard procedure.

4.0 Operation continued on following page.

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

4.0 OPERATION (continued)

4.2 PRELIMINARY ADJUSTMENTS AND OPERATIONS

The following are basic to the operation of the HPU and should be thoroughly understood. The pressure and flow controls have lock nuts to prevent rotation of the control shafts during operation. These nuts should be moved away from the pump during adjustments of flow or pressure in order to eliminate binding of the control shafts.

4.2.1 Flow Control Adjustment

- a. Open bypass valve.
- b. Select "Hydraulic Power Unit" position with reservoir selector valve.
- c. Start HPU.
- d. Adjust flow control for maximum desired flow. Observing the flowmeter, read flow (gallons per minute) directly from flowmeter scale. Be sure the control shaft lock nut is loose during adjustment. Tighten after adjustment to maintain setting.

4.2.2 Pressure Control Adjustment

- a. Open bypass valve.
- b. Select "Hydraulic Power Unit" position with reservoir selector valve.
- c. Start HPU.
- d. Close bypass valve.
- e. Adjust pressure control for desired pressure. Be sure the control shaft lock nut is loose during adjustment. Tighten after adjustment to maintain setting.

NOTE: *Once the flow and pressure controls have been adjusted, it is not necessary to change these settings after each operation unless desired.*

4.2.3 Reservoir Selector Valve Operation

Operation of the reservoir selector valve allows the operator to select either the aircraft reservoir (closed loop) of the HPU reservoir (open loop).



CAUTION!

The reservoir selector valve should only be operated when the HPU is not running. The operation of the reservoir selector valve should be done prior to starting the HPU.

4.2.3.a Aircraft Reservoir Position (Closed Loop):

In this position, the HPU is dependent on the aircraft reservoir and system for an adequate supply of fluid. Cavitation, due to an inadequate fluid supply from the aircraft, may be indicated by erratic indication of the system pressure gauge or flowmeter. Usually, the aircraft fluid supply will be restricted due to small return oil lines in the aircraft. Sometimes this problem can be minimized or eliminated by pressurizing the aircraft reservoir with air.



CAUTION!

If the aircraft reservoir is pressurized, do not exceed the aircraft manufacturer's recommendations.

If the aircraft reservoir cannot be pressurized or the cavitation persists, decrease the flow control setting until the cavitation is eliminated.

4.2.3 Reservoir Selector Valve Operation continued on following page.

TRONAIR

01/2003 - AA - Rev. OR

- 6 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

4.2 PRELIMINARY ADJUSTMENTS AND OPERATIONS

4.2.3 Reservoir Selector Valve Operation (continued)

4.2.3.a HPU Reservoir Position (Open Loop)

In this position, the HPU reservoir supplies oil to the pump and accepts return oil from the aircraft. It is desirable to operate the HPU in this mode since it eliminates any possibility of cavitation.

Since the HPU reservoir is vented to atmosphere and the aircraft is at a higher level, it is normal for the aircraft reservoir to drain into the HPU reservoir. It is, therefore, necessary to be sure that sufficient room is available in the HPU reservoir to accommodate the additional fluid.



CAUTION!

The aircraft system reservoir must be serviced after completion of operational testing.

In the "HPU Reservoir" position, faster landing gear swings are usually possible since there is no restrictions to flow at the pump inlet.

On most aircraft, the aircraft reservoir may usually be serviced by disconnecting the return hose. Normally servo leakage or operation of a hydraulic component will allow some flow to the aircraft reservoir. Caution should be observed if this method is used.

WARNING!



- **When using the HPU reservoir, it may be possible to overfill the aircraft reservoir if several landing gear swings are done in a short time period.**
- **Always wait approximately 15 seconds between gear swings to allow the aircraft reservoir to drain into the HPU.**
- **Do not change the reservoir selector valve position while the machine is running**

4.2.4 Bypass Valve Operation

The bypass valve is used for unloading the pump flow in conjunction with the flowmeter.

4.2.4.a Start Up Operation

The bypass valve should be opened prior to starting the HPU in order to allow the motor to start under a no load condition.

4.2.4.b Shut Down Operation

Prior to shut down, the bypass valve may be opened to bleed off any residual system pressure.

CAUTION!



Excessive heat, which could damage machine components, will be generated if the bypass valve is partially opened or is used for regulating flow or pressure.

- **Use the flow and pressure controls for regulation.**
- **Use the bypass valve for unloading the system.**

4.0 Operation continued on following page.

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

4.0 OPERATION (continued)

4.3 SAMPLE VALVE

A sample valve is provided on the rear of the unit to obtain a fluid sample for analysis or inspection. In order to obtain a representative fluid sample, it is suggested that American National Standard number B93.19-1972 be followed.

4.4 BLEEDING AIR FROM SYSTEM

Rapid fluctuations of the pressure gauge and flowmeter are indications of cavitation or entrapped air in the hydraulic lines and/or components. Air may enter the system when:

- Operating the unit with insufficient oil in the reservoir.
- Changing a component on the aircraft.
- Changing the hose connections and/or couplings.

To Easily Purge the Unit of Air:

1. Fill reservoir to recommended level.
2. Open bypass valve.
3. Place reservoir selector valve in "Hydraulic Power Unit" position.
4. Start unit and adjust flow control to maximum position.
5. Run unit for five (5) minutes and shut off.
6. If additional bleeding is required, proceed with the following steps:
 - a. Connect the pressure and return hoses together. (Kits containing the necessary fitting(s) are available from Tronair)
 - b. If the unit is equipped with pressure and return ball valves, open the ball valves prior to starting the unit.



WARNING!

Failure to open the return ball valves will cause hose or valve rupture. Property damage and personal injury can result.

- c. Place the reservoir selector valve in the "Hydraulic Power Unit" position.
- d. Open the bypass valve on the instrument panel
- e. Start unit and adjust flow control to maximum position.
- f. Close the bypass valve and allow the unit to run for 5 minutes.

Under some conditions where a large amount of air has entered the system, the pump may not be able to draw an initial prime and will not pump. If this occurs, it may be necessary to fill the pump inlet line with fluid.

4.0 Operation continued on following page.

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

4.0 OPERATION (continued)

4.5 ABBREVIATED OPERATING INSTRUCTIONS

These instructions may be used for fast reference after a thorough understanding of the HPU operation has been achieved.

4.5.1 Initial Adjustments

1. Set flow control (See Section 4.2-A).
2. Set pressure control (See Section 4.1-B).

4.5.2 Prior to Starting

1. Select reservoir valve position.
2. Open bypass valve.

4.5.3 Operation

1. Start HPU.
2. Close bypass valve.

4.5.4 Shut Off

1. Open bypass valve.
2. Stop HPU.

4.6 OPTIONS

The following options are available on some models of hydraulic power units. Refer to the appropriate option description for operation information.

4.6.1 Dual System (Option C) Operation

The dual system option allows control of fluid flow to aircraft with two hydraulic systems. The systems consist of two sets of hoses and valves located in the pressure and return systems. The valves are mounted on the rear of the hydraulic power unit and are of the 90 degree ball type. The valves are open when the operating handle is in line with the valve.

Although both systems may be operated simultaneously, usually only one system is required at any one time. If both valve sets are open simultaneously, the pump output will be divided between the two systems. Also, cross flow between the reservoirs may occur if a reservoir level or pressure differential exists. Select valve positions prior to starting machine.

To Operate the Dual System

1. Before starting machine, open pressure and return valves of the same system.



WARNING!

Ensure pressure and return hoses of the *same system* are paired and used together.

2. After completing tests on one system, shut the machine **OFF** before selecting the second system.

To Operate the Dual System continued on following page.

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

4.6.1 Dual System (Option C) Operation

To Operate the Dual System (continued)

WARNING!



Never open or close dual system valves without shutting off the hydraulic power unit. Damage to the aircraft system or reservoir may result if either return line valve is closed while the machine is running.

3. If equipped with the **Dual System Crossover Check Option**, separate pressure gauges are located after each system pressure shut off valve. This allows bleed down pressures to be read when the pressure valves are closed. Follow aircraft manufacturer's instructions.

4.6.2 Return Back-Pressure with Sight Gauge (Option T) Operation

Option T consists of two valves and a pressure gauge mounted on the rear of the machine, a sight glass mounted on the control panel, and a third hose for connection to the aircraft reservoir. The two valves are connected in parallel and consists of a 90 degree ball valve and an adjustable pressure relief valve.

Refer to **Figure 4 – Page 2** HPU Option T Hydraulic Schematic. With the ball valve open, all aircraft return oil will flow through this valve. If, however, the valve is closed, the flow path will be through the pressure relief valve. The pressure relief valve may be adjusted to obtain any desired return line back-pressure as specified in the Citation maintenance manual. The return line back pressure may be read on the adjacent pressure gauge.

Since the Citation has an onboard unloading valve, **the hydraulic power unit reservoir should be used for all tests**. This allows the pump to operate in an unload condition most of the time, therefore, extending pump life.

To Fill Aircraft Reservoir:

1. Be sure that there is sufficient oil in the HPU reservoir.
2. With both bypass valves open, start machine and adjust flow control for approximately one (1) gpm.
3. Close bypass valve and return line ball valve. This will force oil returning from the aircraft through the return pressure relief valve, causing a back pressure in the aircraft return line.
4. Be sure that the aircraft system has unloaded. If not, adjust pressure control for 1,500 psi until aircraft does unload, indicated by a drop in the panel system pressure gauge.
5. Read the back pressure gauge and adjust the back pressure valve for 20 to 25 psi, if necessary. This action, with the one (1) gpm flow rate, will fill the aircraft reservoir with an overflow visible through the HPU panel mounted sight glass.
6. When little or no air is visible in the sight glass, the aircraft reservoir is filled. The return line ball valve may now be opened and aircraft testing may start. The flow control should be adjusted for a higher desired flow.
7. For any tests requiring line back-pressure, close the return line ball valve and adjust the return line back pressure valve.

NOTE: *Since the Citation reservoir is pressurized, the return line ball valve may be closed prior to shut down to prevent the aircraft reservoir from draining.*

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

5.0 MAINTENANCE

5.1 GENERAL MAINTENANCE

- The hydraulic power unit should be maintained in a safe and clean condition at all times.
- Locate and correct the source of any and all leaks.
- Inspect hoses and electrical cord periodically for damage and wear. Replace as required.

5.2 FILTER MAINTENANCE

The main pressure filter has a replaceable element that is not cleanable. It is recommended that this filter be changed after every 25 hours of operation, annually, or whatever a reduced maximum flow is noticed. Refer to the parts list for the correct filter element number.

5.3 SELECTOR VALVE MAINTENANCE

The Reservoir Selector Valve has been assembled with a special grease (Tronair #H-2132) that is compatible with Skydrol. It is recommended that this valve be disassembled and re-lubed every two (2) years, or if there is any sign of external leakage.

5.4 LUBRICATION

The swivel casters are equipped with grease fittings which should be lubricated annually.

5.5 STORAGE

In the event that the HPU will not be used for 12 months or longer, the reservoir may be drained. The unit should then be appropriately covered in order to maintain cleanliness.

6.0 TROUBLESHOOTING

6.1 NO FLOW OR PRESSURE

Flow control set too low Increase flow setting
Motor running in wrong direction..... See Section 3.0 "Preparation for Use"
Insufficient oil in reservoir..... See Section 3.0 "Preparation for Use"
Air in hydraulic lines See Section 4.4 "Bleeding Air From System"
Faulty pump Repair or replace pump

6.2 FLUCTUATING PRESSURE OR FLOW

Pump cavitation See Section 4.2.3.a "Aircraft Reservoir Position"
Air in hydraulic lines See Section 4.4 "Bleeding Air From System"

6.0 Troubleshooting continued on following page.

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

6.0 TROUBLESHOOTING (continued)

6.3 UNIT OVERHEATS

Low fluid level in reservoir..... See Section 3.0 "Preparation for Use"

Running unit for long time periods without..... Cycle landing gear or other components operating aircraft components..... periodically or allow unit to cool.

Bypass valve partially open See Section 4.2.4, "Bypass Valve Operation"

NOTES: 1) *Running time under deadhead condition can be increased substantially by selecting the "Hydraulic Power Unit" position; reservoir selector valve.*

2) *When a pressure compensated pump is required to hold pressure without any flow delivery (dead headed condition) it is normal for the pump case drain flow and temperature to increase. By selecting the "Hydraulic Power Unit" position of the selector valve, all of the oil in the reservoir is utilized for cooling.*

6.4 LOSS OF FLOW IN CLOSED LOOP

Leaking over Reservoir Selector Valve Valve must be disassembled and thoroughly cleaned with alcohol. Re-lubricate with grease (Tronair part number H-2132) before re-assembled.

6.5 EXTERNAL LEAKAGE FROM SELECTOR VALVE

Leaking out the front of Reservoir..... Valve must be disassembled and thoroughly cleaned with alcohol. Re-lube with grease (Tronair part number H-2132) before re-assembled.

7.0 PARTS LIST INDEX


When ordering Replacement Parts/Kits, please specify Model & Serial Number of your product. Reference the following pages for ordering information of Replacement Parts and Kits.

Description	Page
Bypass Valve	20
Crossover Check (Option D)	22
Dual System (Option C)	22
Electrical Components.....	15
External Components	13
Filter Assembly	19
Hourmeter (Option F).....	24
Internal Components.....	14
Pump/Motor Assembly	18
Pyrometer (Option K).....	23
Reservoir Selector Valve	16
Reservoir Sub-Assembly	17
Return Back-Pressure with Sight Gauge (Option T)	25
Return Filter Assembly (Option W)	26
Sample Valve.....	21



Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

External Components

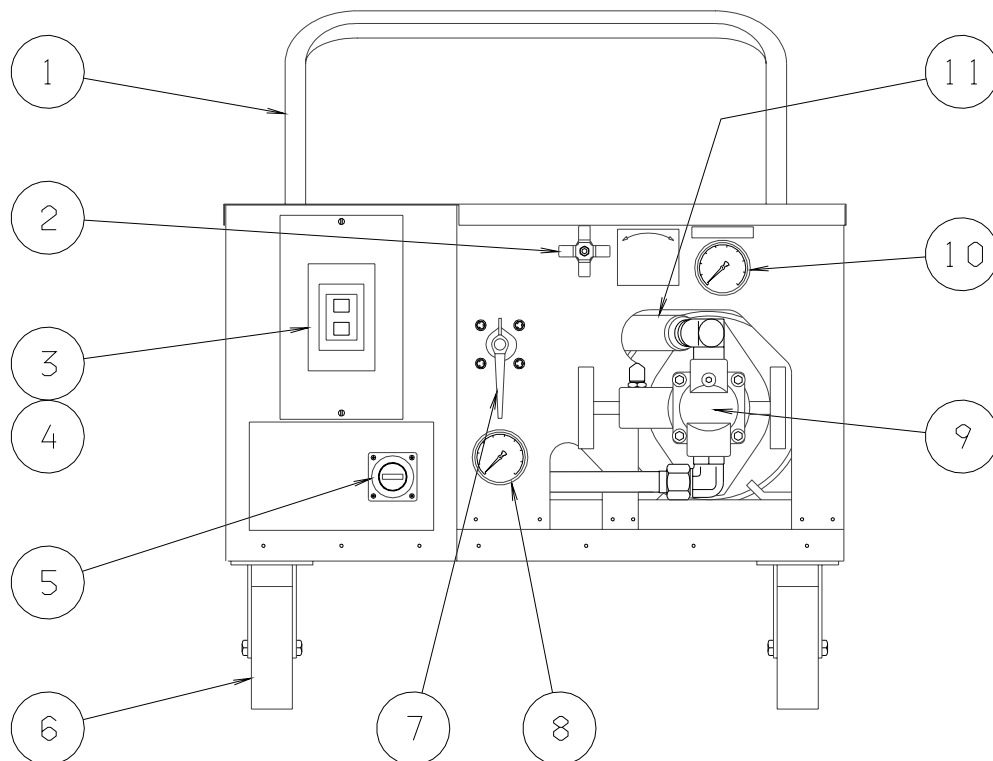


Part numbers given for Aviation Phosphate Ester, Type IV Fluid Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	TS-1482-01.....	Handle	1
2.....	HC-1056-02.....	Valve, Bypass.....	1
3.....	EC-1044	Switch, Starter (All Voltages)	1
4.....	See Page 15	Heater	3
5.....	Z-2145	Hourmeter (Option F)	1
6.....	V-1056.....	Caster - Rigid	2
7.....	HC-1472	Valve, Selector 3/4.....	1
8.....	HC-1114.....	Pyrometer (Option K)	1
9.....	HC-1072-01.....	Pump	1
10.....	HC-1385.....	Gauge, Pressure.....	1
11.....	HC-2153	Flowmeter	1
Not Shown.....	TF-1041-09*180.....	Hose, Pressure	1
Not Shown.....	TF-1041-01*180.....	Hose, Return.....	1

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Internal Components

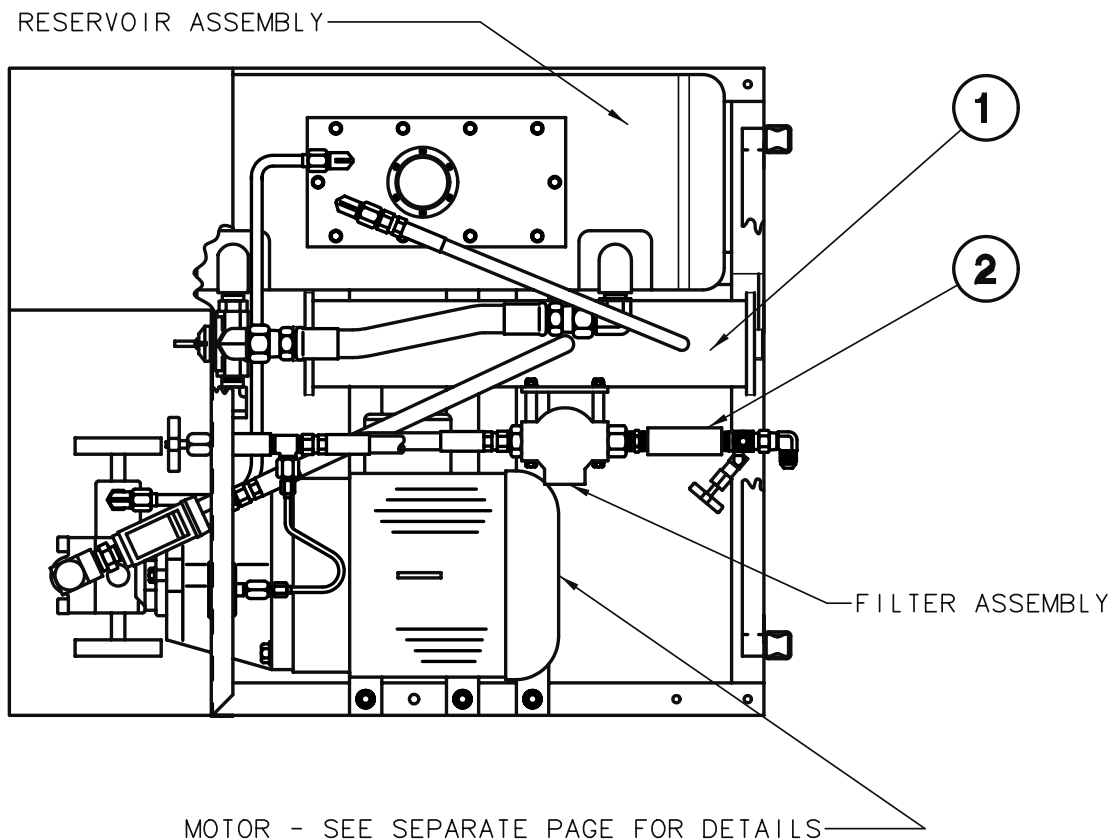

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.


ITEM	PART NUMBER	DESCRIPTION	QTY
1	Z-1834	Manifold	1
2	HC-1059	Valve, Check	1

TRONAIR

01/2003 - AA - Rev. OR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids


Electrical Components

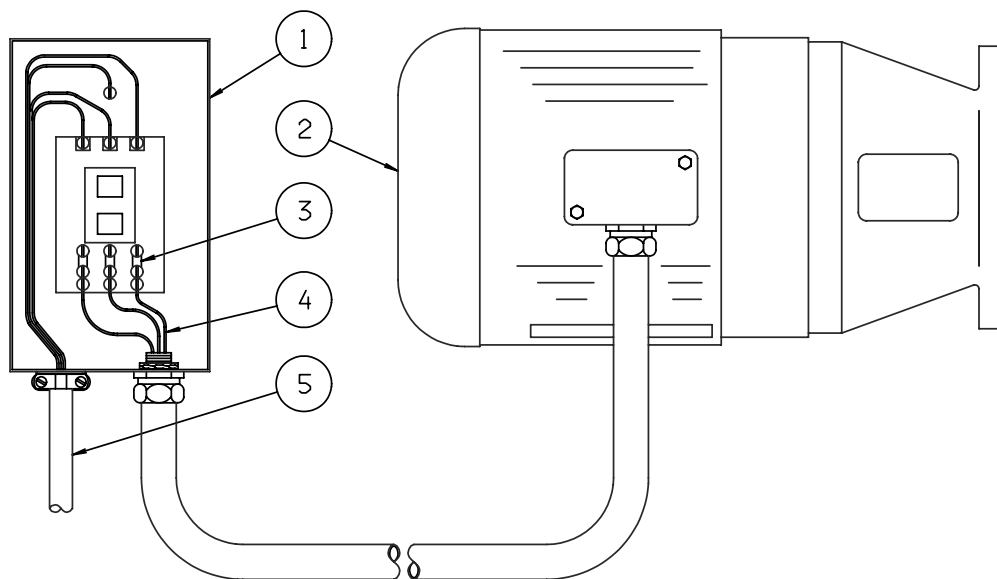

VAC @ 60 Hz	(1) Starter Switch	Q T Y	(2) Motor	Q T Y	(3) Heater	Q T Y	(4) Wire	Q T Y	(5) Power Cord	Q T Y
208	EC-1044	1	EC-1186-01	1	EC-1202-W51	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
230	EC-1044	1	EC-1186-02	1	EC-1202-W50	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
380	EC-1044	1	EC-1186-01	1	EC-1202-W45	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
460	EC-1044	1	EC-1186-02	1	EC-1202-W43	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
575	EC-1044	1	EC-1186-03	1	EC-1202-W41	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
VAC @ 50 Hz	(1) Starter Switch	Q T Y	(2) Motor	Q T Y	(3) Heater	Q T Y	(4) Wire	Q T Y	(5) Power Cord	Q T Y
200	EC-1044	1	EC-1186-02	1	EC-1202-W50	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
220	EC-1044	1	EC-1186-02	1	EC-1202-W50	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
380	EC-1044	1	EC-1186-02	1	EC-1202-W43	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
415	EC-1044	1	EC-1186-02	1	EC-1202-W43	3	EC-1252-01*43.0	3	EC-1170-01*0600	1
440	EC-1044	1	EC-1186-02	1	EC-1202-W43	3	EC-1252-01*43.0	3	EC-1170-01*0600	1

Model: 5030
 Hydraulic Power Unit
 Aviation Phosphate Ester, Type IV Fluids

Reservoir Selector Valve

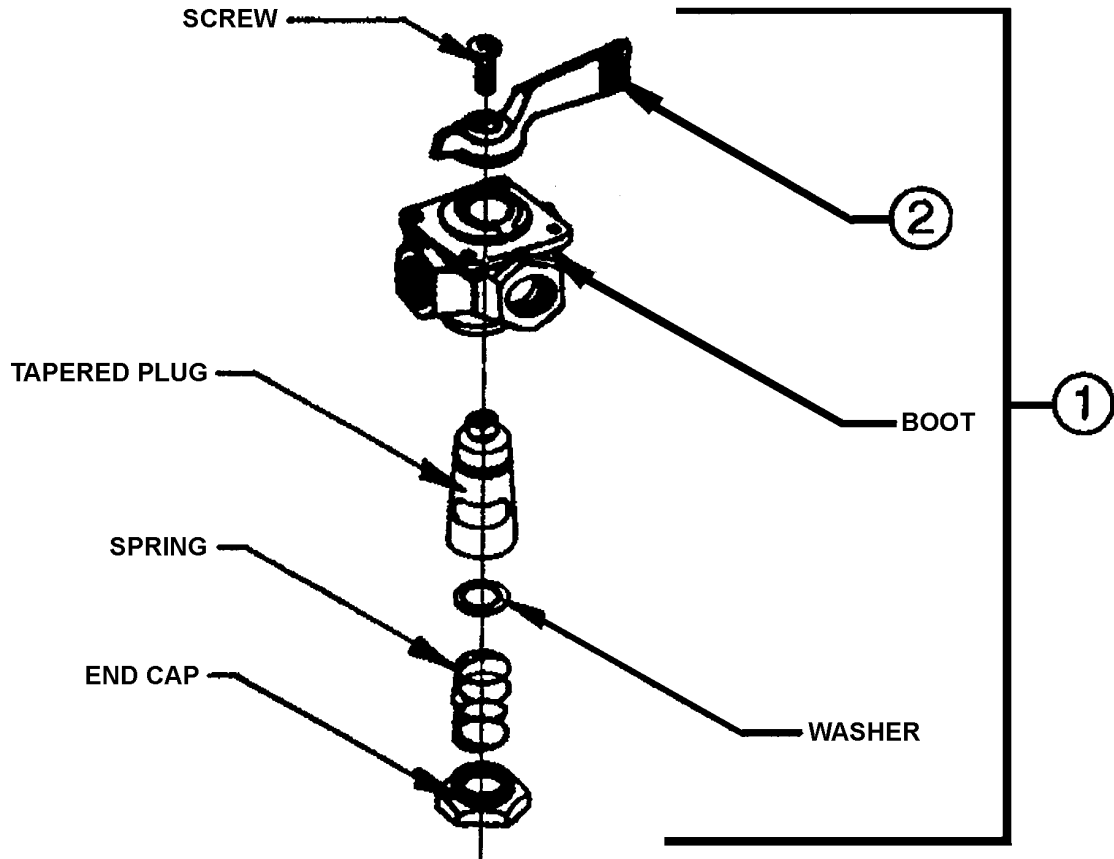

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	HC-1742	Selector, Valve 3/4	

VALVE REPLACEMENT PARTS

2	HC-1075	Handle, Valve	1
---------	---------------	---------------------	---


NOTE: For replacement of parts other than what is listed, a complete valve (Item 1) must be purchased.

TRONAIR

01/2003 - AA - Rev. OR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Reservoir Sub-Assembly

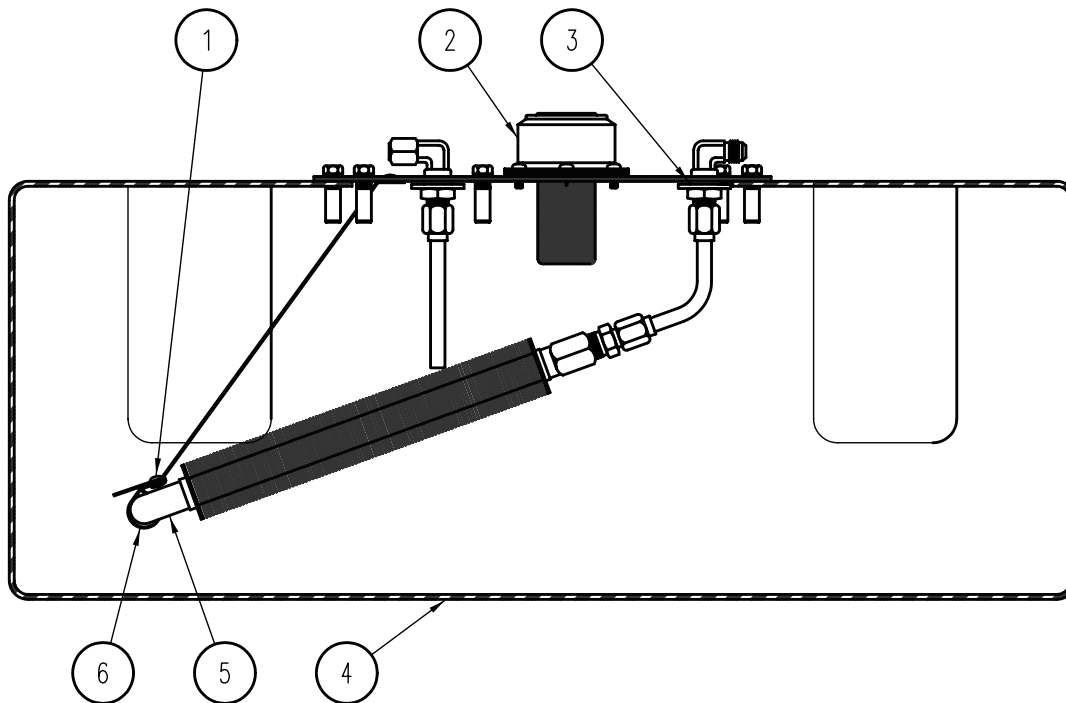

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.


ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	G-1351-04	Rivet, 1/8" diameter x 1/4" Grip	4
2.....	HC-1030	Assembly, Filler/Breather	1
3.....	HC-2013-906.....	O-ring	2
4.....	K-3708.....	Kit, Reservoir	1
5.....	HC-1878.....	Cooler.....	1
6.....	H-1721-04	Clamp.....	1

TRONAIR

01/2003 - AA - Rev. OR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Pump/Motor Assembly

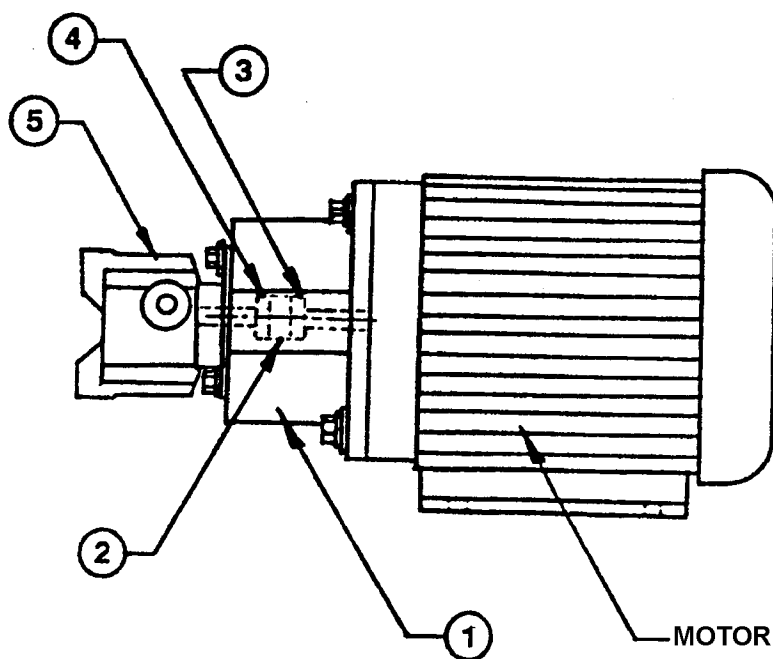

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	HC-1393-11	Mount, Pump/Motor	1
2	H-2227	Coupling – Spider	1
3	H-2224-03	Coupling – Body (Motor)	1
4	H-2224-01	Coupling – Body (Pump)	1
♦ 5	HC-1072-01	Pump, Hydraulic	1

PUMP REPLACEMENT PARTS

6	HC-1077	Seal, Shaft	1
7	K-1077	Kit, Seal (Includes Item 6)	1


♦ See Appendix III - pump manufacturer's service booklet for servicing of Item 5 and additional repair kits.

TRONAIR

01/2003 - AA - Rev. OR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Filter Assembly

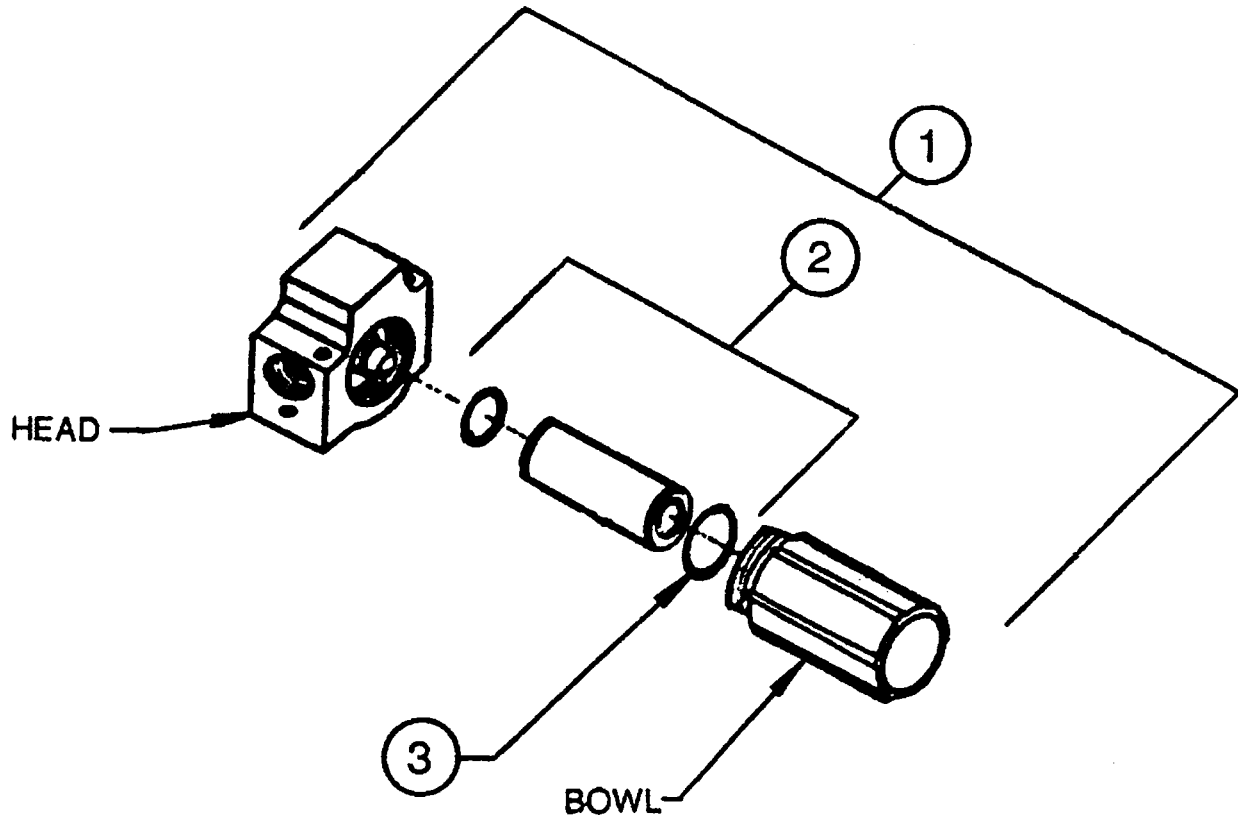

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	HC-1084.....	Assembly, Filter	1

FILTER REPLACEMENT PARTS

♦ 2.....	K-1415.....	Kit, Filter Element.....	1
3.....	HC-2006-138.....	O-ring	1

♦ *Item 2 includes Item 3 O-ring.*


TRONAIR

01/2003 - AA - Rev. OR

- 19 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Bypass Valve

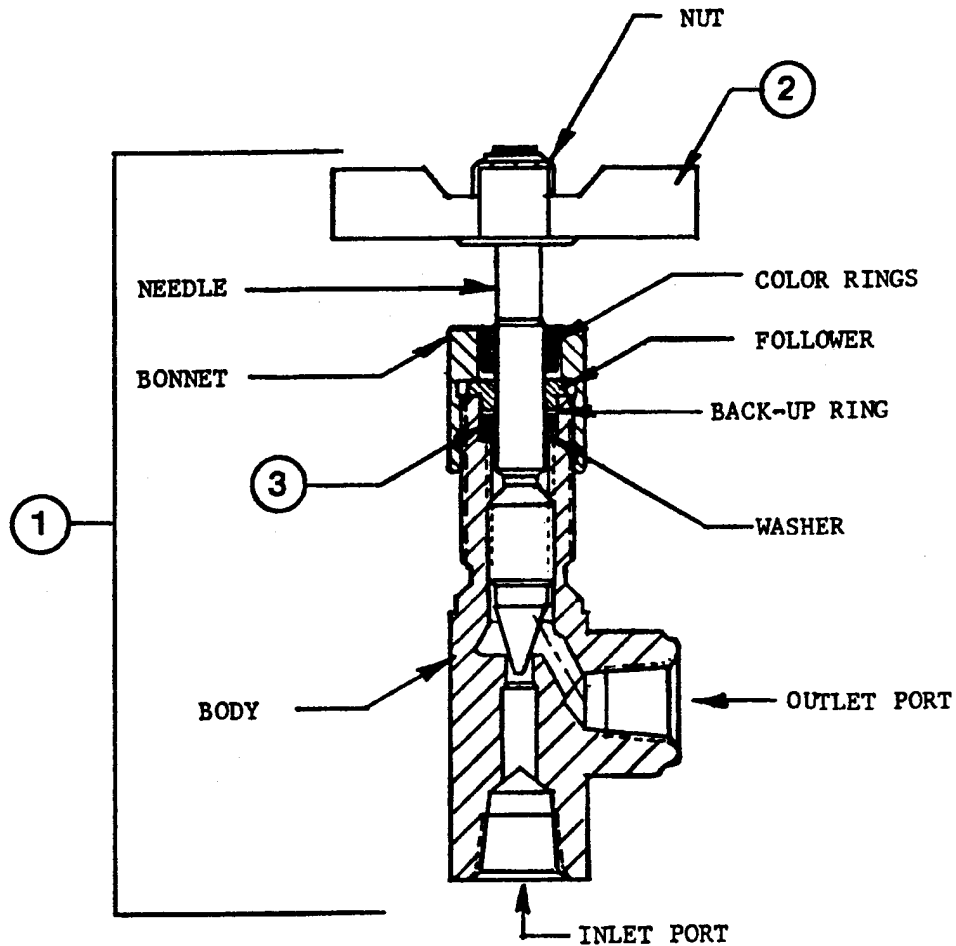

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	HC-1056-02.....	Assembly, Valve	1
2.....	HC-1076.....	Handle, Valve.....	1
3.....	HC-2006-012.....	O-ring.....	1


TRONAIR

01/2003 - AA - Rev. OR

- 20 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Sample Valve

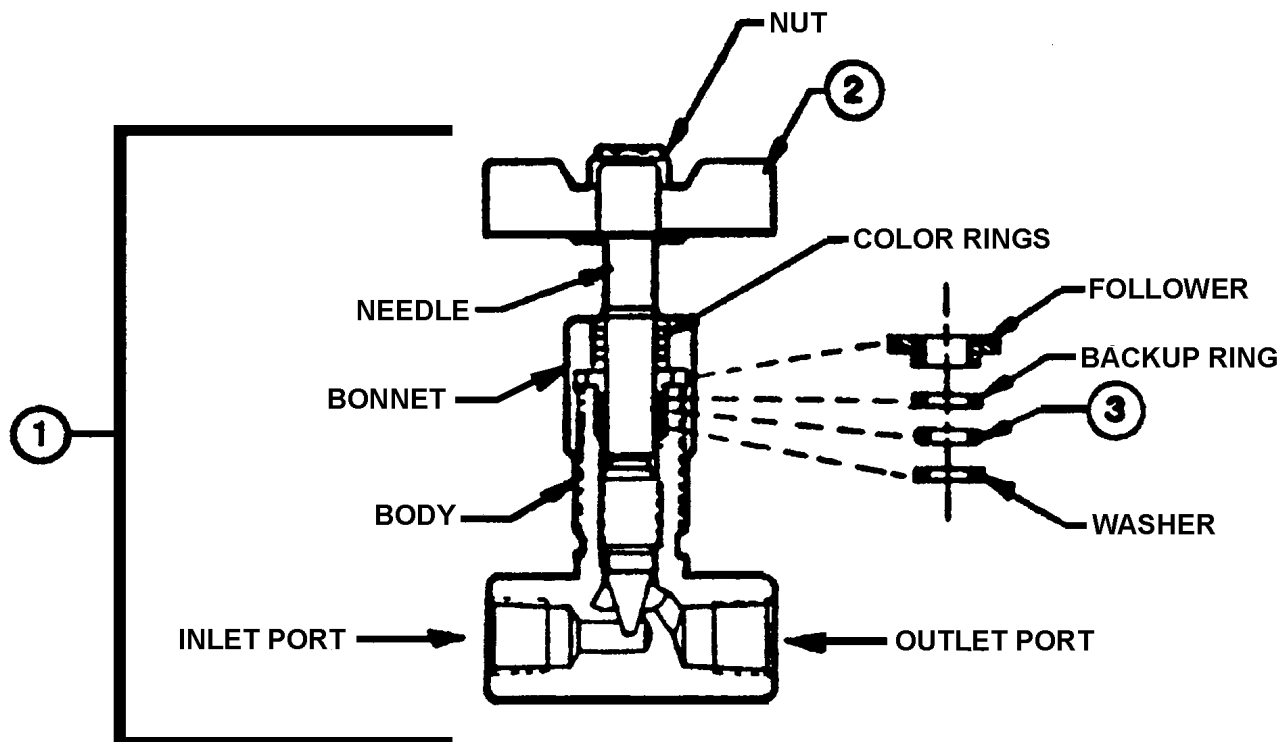

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	HC-1202-02	Assembly, Valve	1

VALVE REPLACEMENT PARTS

2	HC-1203	Handle, Valve	1
3	HC-2006-010	O-ring	1


TRONAIR

01/2003 - AA - Rev. OR

- 21 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Dual System (Option C)
Crossover Check (Option D)

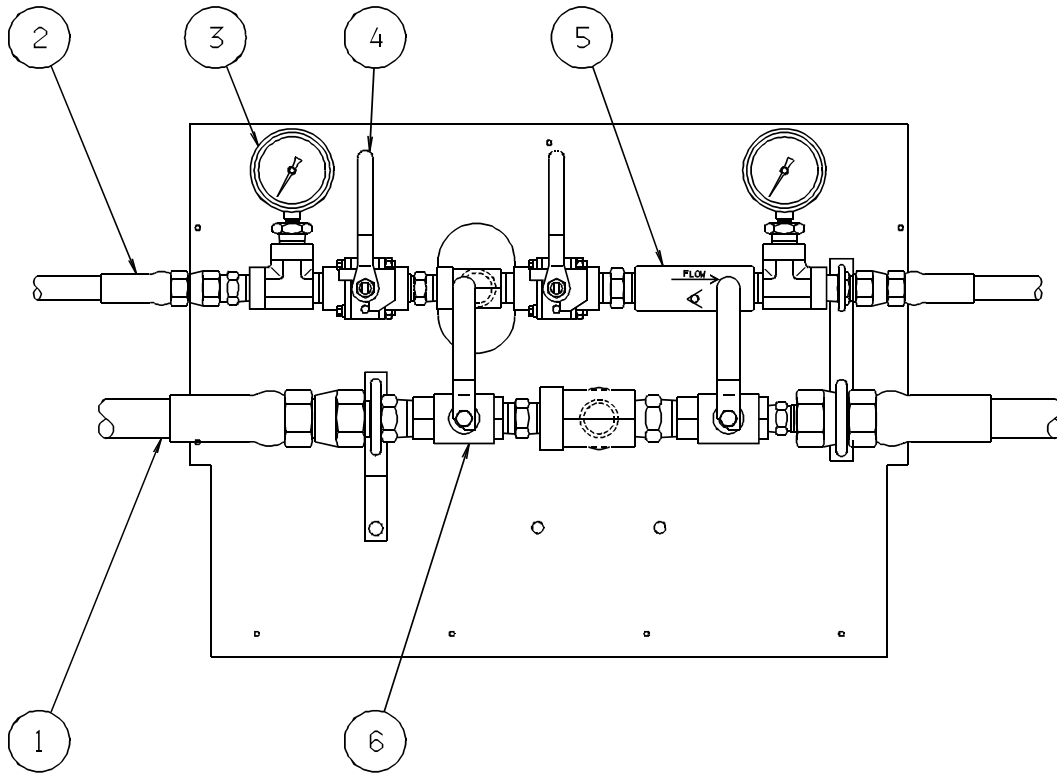


Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	TF-1041-01*180.....	Assembly, Return Hose.....	2
2.....	TF-1041-01*180.....	Assembly, Pressure Hose	2
3.....	HC-1042	Gauge, Pressure.....	2
4.....	HC-1654-03.....	Valve, Pressure Ball	2
5.....	HC-1059	Valve, Check.....	1
6.....	HC-1425-04.....	Valve, Return Ball.....	2


TRONAIR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Pyrometer (Option K)

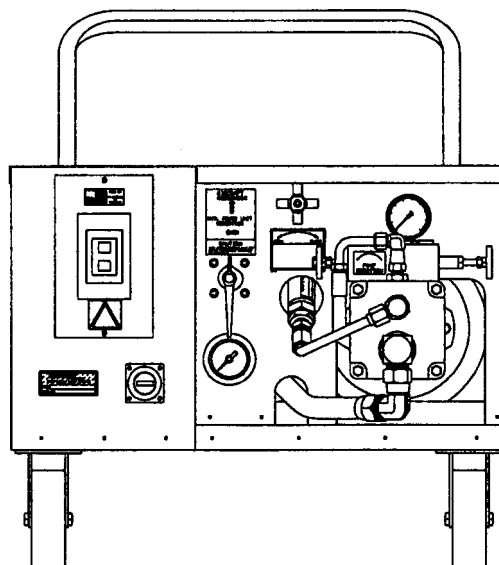

CALIBRATION ADJUSTMENT SCREW

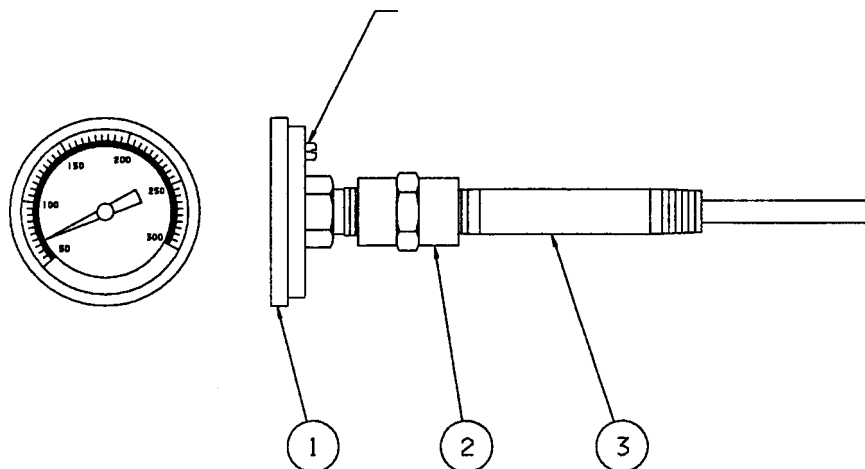

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.


ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	HC-1093	Pyrometer	1
2.....	N-2204-04-S	Connector, Pipe	1
3.....	N-2219-14	Nipple, Pipe ¼" NPT x 3" long.....	1

TRONAIR

01/2003 - AA - Rev. OR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Hourmeter (Option F)

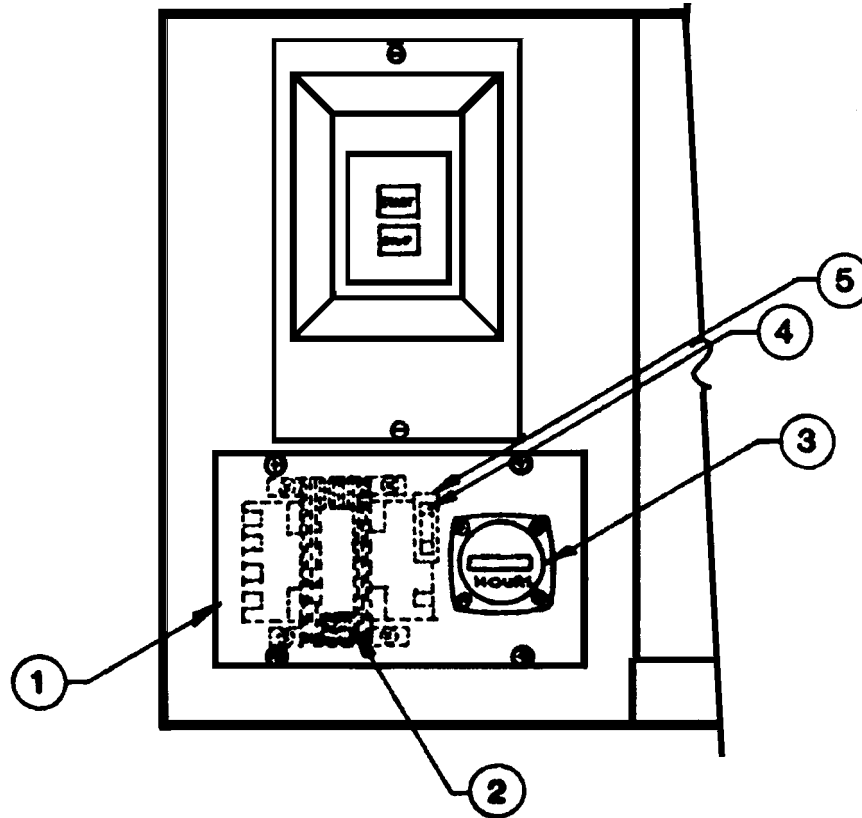

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1.....	S-1072	Cover.....	1
2.....	EC-1069	♦ Transformer:.....	1
		208V/60Hz, 380V/50Hz,	
		575V/60Hz, 415V/50Hz	
2.....	EC-1070	♦ Transformer.....	1
		230V/60Hz, 220V/50Hz,	
		460V/60Hz, 440V/50Hz	
3.....	EC-1060	Hourmeter	1
4.....	EC-1161	Fuse 1½ amp, Glass Tube-Slo Blo.....	1
5.....	EC-1071	Fuse Holder	1

♦ *Select one based on voltage.*



TRONAIR

01/2003 - AA - Rev. OR

- 24 -

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Return Back-Pressure with Sight Gauge (Option T)

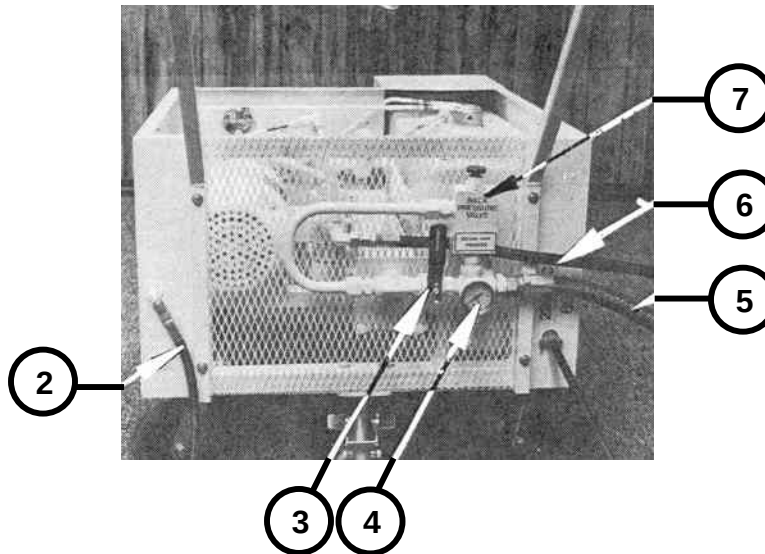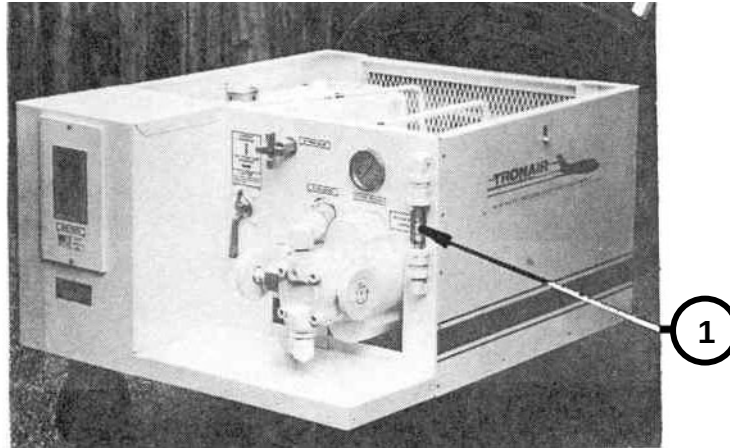


Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	HC-1115	Sight glass	1
2	TF-1041-02*180.....	Assembly, Return Hose (Aircraft Reservoir).....	1
3	HC-1425-04.....	Valve, Ball	1
4	HC-1117	Gauge, Pressure.....	1
5	TF-1041-01*180.....	Assembly, Pressure Hose	1
6	TF-1041-09*180.....	Assembly, Return Hose.....	1
7	HC-1118	Valve, Back Pressure	1

TRONAIR

Model: 5030
Hydraulic Power Unit
Aviation Phosphate Ester, Type IV Fluids

Return Filter Assembly (Option W)

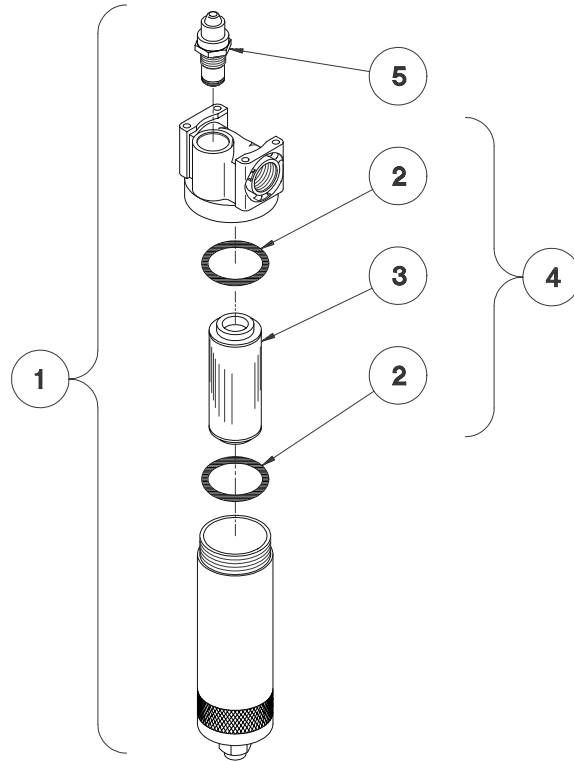

Part numbers given for Aviation Phosphate Ester, Type IV Fluids Type Units only.

ITEM	PART NUMBER	DESCRIPTION	QTY
1	HC-1477	Assembly, Filter	1
3	HC-1476	Element, Filter.....	1

FILTER REPLACEMENT PARTS

2	HC-2006-142.....	O-ring	2
◆ 4.....	K-3097.....	Kit, Filter Element.....	1
5	HC-1851	Indicator, Clogging	1

◆ *Item 4 includes corresponding Item 2—O-ring.*

TRONAIR



APPENDIX I

Instrument
Certification
Notice



APPENDIX II

Lincoln
Motor
Manual



APPENDIX III

Continental Hydraulics
Service Booklet
PVR6-"G" Design Series Pumps



APPENDIX IV

MSDS
Hydraulic
Fluid