


### **OPERATION & SERVICE MANUAL**



Model: 02-7925C0100 25 Ton (22.7 Metric Ton) Axle Jack

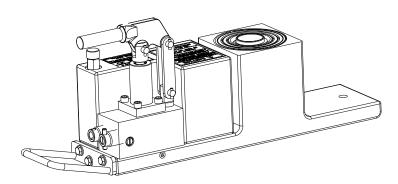

12/2023 - Rev. 05

For Spare Parts, Operations & Service Manuals or Service Needs Scan the QR code or visit Tronair.com/aftermarket



The Tronair Group of Companies: Tronair | EBIS | Columbus Jack | Eagle | DAE | Malabar International

REVISION	DATE	TEXT AFFECTED
01	02/2013	Original Release
02	03/2013	Modified Parts List
03	09/2013	Modified Parts List
04	01/2014	Modified Parts List
05	12/2023	Major revision
		-



#### **TABLE OF CONTENTS**

	PAGI	드
1.0	PRODUCT INFORMATION	1
	I.1 DESCRIPTION	
	1.2 MODEL & SERIAL NUMBER	
	I.3 MANUFACTURER	
	1.4 USAGE	1
	I.5 SPECIFICATIONS	
2.0	SAFETY INFORMATION	
-	2.1 USAGE AND SAFETY INFORMATION	
3.0	FRAINING	
	3.1 TRAINING REQUIREMENTS	
	3.2 TRAINING PROGRAM	
	3.3 OPERATOR TRAINING	
4.0	ASSEMBLY INSTRUCTIONS	
	4.1 GENERAL INFORMATION	2
	4.2 PRE-USE CHECKS	
5.0	DPERATING INSTRUCTIONS	
	5.1 JACK INSTRUCTIONS	2
6.0	FROUBLE SHOOTING	2
7.0	MAINTENANCE	3
	7.1 SERVICING JACK	3
	7.2 REMOVING AND SERVICING PUMP	3
	7.3 JACK FUNCTION LOAD TEST	
8.0	PROVISION OF SPARES	4
	3.1 SOURCE OF SPARE PARTS	
	3.2 RECOMMENDED SPARE PARTS LISTS	
9.0	GUARANTEES/LIMITATION OF LIABILITY	
10 O	APPENDICES	1



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

#### 1.0 PRODUCT INFORMATION

#### 1.1 DESCRIPTION

The Tronair Model 02-7925C0100 Hydraulic Axle Jack incorporates the following quality features:

- Steel construction
- Three stage telescoping ram
- · Quick action mechanical extension
- Single speed, manually operated pump
- Uses standard MIL-PRF-5606 hydraulic fluid
- Preset relief/release valve

#### 1.2 MODEL & SERIAL NUMBER

Reference nameplate on unit

#### 1.3 MANUFACTURER

**TRONAIR**, Inc. Telephone: (419) 866-6301 or 800-426-6301

1 Air Cargo Pkwy East Fax: (419) 867-0634
Swanton, Ohio 43558 USA E-mail: sales@tronair.com
Website: www.tronair.com

#### 1.4 USAGE

The purpose of this jack is to lift aircraft for maintenance. It has a maximum capacity of 25 tons.

#### 1.5 SPECIFICATIONS

Vertical capacity	50,000 lb. (222.40 kN)
Minimum closed height	
Mechanical extension	1.375 in (3.5 cm)
Hydraulic extension	9.375 in (24.8 cm)
Maximum height obtainable	16.44 in (41.76 cm)
Axle Jack Weigh	60 lb. (224 N)
Spacer Block Weight	20.7 lb. (92 N)

NOTE: Spacer blocks are 1" or 2" high and change the minimum and maximum height values

#### 2.0 SAFETY INFORMATION

#### 2.1 USAGE AND SAFETY INFORMATION

To ensure safe operations please read the following statements and understand their meaning. Also refer to your equipment manufacturer's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.



#### WARNING!

Warning is used to indicate the presence of a hazard that can cause **severe personal injury, death, and/or substantial property damage** if the Warning Notice is ignored.



#### **CAUTION!**

Caution is used to indicate the presence of a hazard, which will or can cause *minor personal injury or property damage* is the Caution Notice is ignored.

#### 3.0 TRAINING

#### 3.1 TRAINING REQUIREMENTS

The employer of the operator is responsible for providing a training program sufficient for the safe operation of the unit.

#### 3.2 TRAINING PROGRAM

The employer provided operator training program should cover safety procedures concerning use of the unit in and around the intended aircraft at the intended aircraft servicing location.

#### 3.3 OPERATOR TRAINING

The operator training should provide the required training for safe operation of the unit.

NOTE: Maintenance and Trouble Shooting are to be performed by a skilled and trained technician.



#### 4.0 **ASSEMBLY INSTRUCTIONS**

#### 4.1 **GENERAL INFORMATION**

This product should be assembled and/or repaired using good workmanship practices and proper tools.

All replacement parts must be the same as or equal to the original parts supplied.

#### 4.2 PRE-USE CHECKS

Refer to the Parts List and Illustrations section to identify and ensure that all parts are present.

- Generally, check over unit to assure the tightness of all nuts, bolts and screws.
- With rams completely collapsed, check hydraulic fluid level; between 0.25 and 0.50 inches from top of reservoir fitting. Replenish with MIL-PRF-5606 fluid as required.

#### 5.0 **OPERATING INSTRUCTIONS**

The user should be familiar with the following statements prior to using the jack(s).

#### **CAUTION!**



- Aircraft jacking adapters must rest in jack pad
- NEVER put hands between aircraft and jack pad
- ALWAYS open reservoir vent screw before operating
- ALWAYS jack against a load and NEVER against itself

#### 5.1 JACK INSTRUCTIONS

#### To Raise Aircraft:

- Place jack on a hard level surface.
- Raise jack as close to aircraft jack pad as possible by screwing out the center mechanical extension.
- Make sure reservoir vent screw is open.
- Close pump release valve and operate pump.

#### To Lower Aircraft:

1. Loosen pump release valve slightly to slowly lower aircraft.

#### 6.0 TROUBLE SHOOTING

TROUBLE	PROBABLE CAUSE	ACTION	
Fluid leakage at pump piston or pump body	Damaged backup ring, o-ring, piston or pump body	Remove piston and pump body. Inspect for damage. Replace defective part(s). Replace removed o-ring and backup ring	
External fluid leakage at rams	Damaged o-ring, backup ring or inner cylinder wall	Remove rams as a unit from cylinder. Inspect parts. Replace o-ring and defective part(s)	
	Release valve not closed properly	Fully tighten release valve	
	Low fluid level	Fill to correct fluid level	
Jack fails to lift rated load	Pressure relief valve improperly adjusted	Adjust or replace release valve	
	Leakage at inlet or outlet check ball	Inspect valve body for wear or replace valve body and check balls	
	Vent screw closed	Open vent screw	
Pama will not cupport load	Leaking ram o-ring seals	Check for external leakage, if present replace defective seal and back up ring	
Rams will not support load after manual or pneumatic	Leaking pressure check valve	Inspect valve body for wear or replace valve body and check balls	
pump up	Leaking pressure relief valve	Remove release valve, inspect ball and ball seat in pump block. Replace effective part(s)	
	Release valve open	Fully tighten release valve	
Rams raise and fall with each manual pump stroke	Inlet check valve not seated or sticking	Pump rapidly to dislodge or replace valve body	
	Pressure check valve not seated or sticking	Pump rapidly to dislodge or replace valve body	
	Ram locknut not loosened	Raise jack ¼ inch and release locknut	
Jack fails to lower	Vent screw closed	Open vent screw	
. 222	O-Ring (pinched or rolled)	Replace o-ring and back-up ring, clean up cylinder wall of debris	



#### 7.0 MAINTENANCE

#### **General Comments**

- All maintenance and/or repair work should be done using good workmanship practices and proper tools.
- The work area should be clean and free of dirt.
- When hydraulic seals are removed, every effort should be made to avoid the contact of tools with the critical surfaces of parts. Surface deformities could cause degradation of seals and failure.
- It is good practice to replace all seals and wiper rings once removed. Cut and damaged seals normally result in fluid leakage and jack failure.
- At this time flush old hydraulic fluid and dirt from overall system and replenish with new, clean hydraulic fluid.

#### 7.1 SERVICING JACK

#### To Disassemble Jack

- 1. Collapse jack ram.
- 2. Remove vent screw and drain all fluid from reservoir.
- 3. Remove stop ring retaining ram assembly.
- 4. Lift cylinder from jack base (Operate jack hand pump to help remove cylinder).
- 5. Remove threaded retaining rings and separate cylinders through bottom.
- 6. Remove all old seals and wiper rings and replace with new ones.

#### To Re-assemble Jack

- 1. Re-assemble in reverse order of above.
- 2. Tighten all retaining rings securely.
- 3. Pre-lube all O-rings and seals with new, clean MIL-PRF-5606 hydraulic fluid.

#### NOTE: Lubricate cylinder, ram(s) and seal(s) for assembly:

Lubricate inner cylinder wall(s) with MIL-PRF-5606 hydraulic fluid

Apply suitable o-ring lubricant grease to installed seal(s) and to seal lead-in chamfer at opening of cylinder

NOTE: To minimize air entrapment under the rams. Actuate cylinder with had pump several inches and release. This will circulate oil and bleed out air.

#### 7.2 REMOVING AND SERVICING PUMP

#### NOTE: If pump is found faulty, call the factory for replacement or replace seals as follows:

- 1. Review Appendix I Hand Pump Parts List during the following procedure.
- 2. Drain all fluid from reservoir.
- 3. Remove pump from jack.
- 4. Remove cotter pin from clevis pin.
- 5. Remove four (4) socket head cap screws.
- 6. Remove flanges.
- 7. Remove tube assembly.
- 8. Replace O-rings and backup ring. (See Appendix II for kits available).
- 9. Re-assemble in reverse order.
- 10. Torque each 3/8 socket head cap screw to 20–25 ft-lbs. Torque each  $\frac{1}{2}$  socket head cap screw to 6 to 7  $\frac{1}{2}$  ft-lbs.

#### 7.3 JACK FUNCTION LOAD TEST

- 1. Take all necessary precautions to prevent injury.
- 2. Always jack against a load and never against the jack itself.
- 3. Do not exceed a test load equal to the jack rated capacity plus 5% to 10%.



#### 8.0 PROVISION OF SPARES

#### 8.1 SOURCE OF SPARE PARTS

Spare parts may be obtained from the manufacturer:

**TRONAIR**, Inc. Telephone: (419) 866-6301 or 800-426-6301

1 Air Cargo Pkwy East Fax: (419) 867-0634 Swanton, Ohio 43558 USA E-mail: sales@tronair.com Website: www.tronair.com

For Spare Parts, Operations & Service Manuals or Service Needs: Scan the QR code or visit Tronair.com/aftermarket

#### 8.2 RECOMMENDED SPARE PARTS LISTS

Reference the following page(s) for Replacement Parts and Kits available.

Recommended Spares:

K-3441.....Seal Replacement Kit K-4588....Ram Seal Replacement Kit

#### 9.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.

#### 10.0 APPENDICES


APPENDIX I Hydraulic Schematic

APPENDIX II HC-2515 Hand Pump (8,800 psi) Parts List APPENDIX III SDS Hydraulic Fluid (MIL-PRF-5606)


APPENDIX IV Declaration of Conformity APPENDIX V Maintenance Schedule



#### **Parts List**

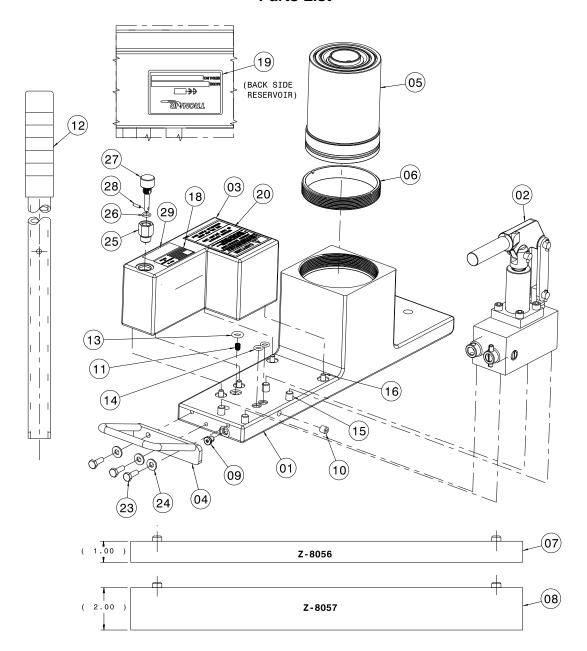

Item	Part Number	Description	Qty
1	J-5304-01	Plate, Base	1
5	Z-8055	Assembly, Cylinder	1
6	TR-2293	Ring, Stop 1	
9	N-2066-02-S-B	Plug, Hex Head with O-Ring	1
10	N-2205-02-S	Plug, Hex Head 1/8 NPT	1
11	H-2001	Filter, Reservoir	1
12	H-3340	Assembly, Handle	1
18	V-1001	Label, Made in USA	1
19	V-2972	Label, Serial Number	1
20	V-1517	Label, Caution	1
29	V-2465	Label, Vent Screw	1






#### **Parts List**

Item	Part Number	Description	Qty
	K-4461	Kit, Pump Replacement; consists of:	
2	HC-2515	Pump, Hand, 8800 psi (CE)	1
14	HC-2008-109	O-ring, Series 2	2
15	G-1151-107210	Screw, Hex Socket Head Cap, <sup>3</sup> / <sub>8</sub> -16 x 1" long	4
	K-4757	Kit, Handle Replacement; consists of:	
4	Z-8058-01	Weldment, Handle	1
23	G-1100-105006	Bolt, HH Grade 5, ¼ - 20 x ¾ Long	3
24	G-1250-1050N	Flatwasher, ¼ Narrow	3
	K-4777	Kit, Reservoir Vent; consists of:	
25	N-2463-03-S-B	Fitting, Reducer, #6 SAE Male to #4 SAE Female	1
26	HC-2010-904	O-Ring, Series 3	1
27	R-2765	Plug, Reservoir Vent	1
28	G-1303-13035	Pin, 1/8 x 7/16 LG SST Roll	1
29	V-2965	Label, Vent Screw	1
	K-4789	Kit, Spacer Plate; consists of:	
7	Z-8056	Assembly, 1" Base Plate	1
8	Z-8057	Assembly, 2" Base Plate	1
	K-4889	Kit, Reservoir Replacement; consists of:	
3	Z-8363-01	Weldment, Reservoir	1
13	HC-2000-204	O-ring, Series 2	1
16	G-1151-105210	Screw, Hex Socket Head Cap, 1/4-20 x 1" long	4
19	V-1779	Label, Serial Number	1
20	V-1517	Label, Caution	1
25	N-2463-03-S-B	Fitting, Reducer, #6 SAE Male to #4 SAE Female	1
26	HC-2010-904	O-Ring, Series 3	1
27	R-2765	Plug, Reservoir Vent	1
28	G-1303-13035	Pin, 1/8 x 7/16 LG SST Roll	1
29	V-2465	Label, Vent Screw	1



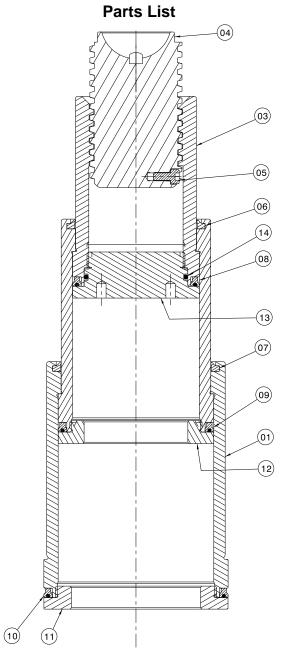

Item	Part Number	Description	Qty
1	TR-2292	Cylinder, 1 <sup>st</sup> Stage	1
2	TR-2291	Cylinder, 2 <sup>nd</sup> Stage	1
3	TR-2290	Cylinder, 3 <sup>rd</sup> Stage	1
4	R-2712	Extension, Mechanical	1
5	G-1151-103203	Screw, #10 – 24 x % SHCS	1
11	R-2715	Retaining Ring, 3 <sup>rd</sup> Stage	1
12	R-2714	Retaining Ring, 2 <sup>nd</sup> Stage	1
13	R-2713	Retaining Plug, 1st Stage	1
	K-4756	Kit, Cylinder Seal Replacement; consists of:	
6	HC-1697-26	Wiper, 900 Series	1
7	HC-1697-31	Wiper, 900 Series	1
8	HC-1670-139	Polypak	1
9	HC-1670-163	Polypak	1
10	HC-1670-195	Polypak	1
14	HC-2008-136	O-Ring, Series 2	1




# **APPENDIX I**

**Hydraulic Schematic** 



# **Hydraulic Schematic**

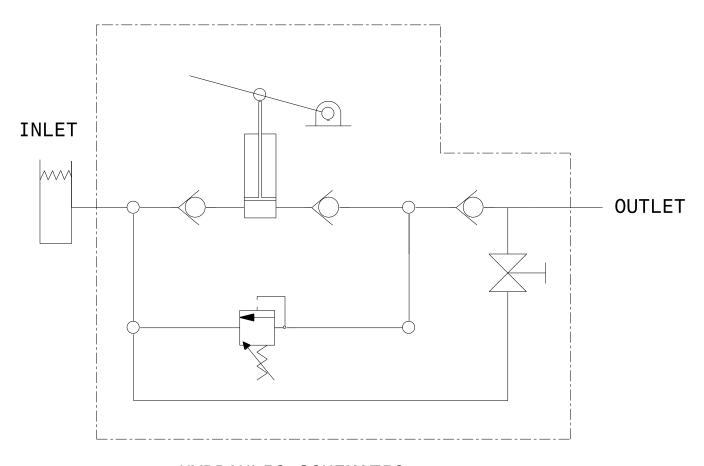

HYDRAULIC SCHEMATIC



# **APPENDIX II**

HC-2515 8,800 psi Hand Pump Parts List



# Model: HC-2515 8800 psi Hand Pump

\*\*\*

# Parts List With Illustrations

08/2010 - Rev. 01

Phone: (419) 866-6301 | 800-426-6301

Web: www.tronair.com

Email: sales@tronair.com



This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

#### **Parts List**


When ordering Replacement Parts/Kits, please specify Model, Color and Serial Number of your Unit.

#### This pump is compatible with MIL-PRF-5606/MIL-PRF-83282 Hydraulic Fluids only.

Reference Parts List Illustration on following page.


EM	PART NUMBER	DESCRIPTION
1	540-000	Plug, Pipe
		Flange
		Screw, Socket Head Cap
		Plug
30	519-000	Pin, Roll
		Valve, Relief
	K-4215	Kit, Seal Replacement; consists of:
5		O-Ring, Outlet Check
		O-Ring, Tube Seal
		Wiper, Rod
10		Ring, Backup
		O-Ring, Piston
		O-Ring, Valve Body
		Ring, Backup
		O-Ring, Release Screw
27		O Ring Relief Volve
		O-Ring, Relief Valve
		Ring, Back-Up
34		O-Ring, Relief Valve
_	K-1068	Kit, Linkage Replacement; consists of:
		Pivot
10		Assembly, Linkage Pin
13		Strap
		Assembly, Clevis Pin
15		Bracket, Pump Handle
	K-4216	Kit, Internal Parts Replacement; consists of:
2		Spring, Inlet Check
		Spring, Outlet Check
		Ball, Outlet Check
6		Ball, Inlet Check
24		Ball
25		Spring
	K-3875	Kit, Piston/Cylinder Replacement; consists of:
		Piston
		Tube
16		Retainer, Wiper
21		Assembly, Valve Body (Includes Items 1, 2, 6, 21)
	K-3876	Kit, Piston/Seal Replacement; consists of:
		Piston
11		Ring, Backup
19		O-Ring, Piston
19		O-Ring, Piston
19 20	K-4214	

NOTE: Entire pump assembly can be purchased as a kit. See Hydraulic Jack Parts list.





Parts List Illustration
This pump is compatible with MIL-PRF-5606/MIL-PRF-83282 Hydraulic Fluids only.

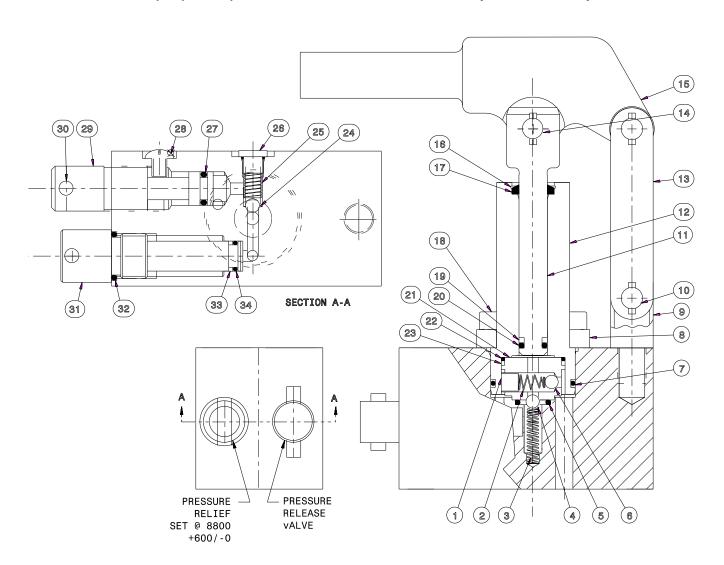



#### **WARNING**

Item 31 (H-3355) is a preset relief valve. Do Not disassemble this valve. Replacement parts are available as a preset relief valve assembly.



## **APPENDIX V**

Safety Data Sheet MIL-PRF-5606 Hydraulic Fluid



Revision Date: 01 Oct 2015

Page 1 of 12

#### SAFETY DATA SHEET

#### **SECTION 1**

#### PRODUCT AND COMPANY IDENTIFICATION

**PRODUCT** 

**Product Name: MOBIL AERO HFA** 

Product Description: Base Oil and Additives

**Product Code:** 201550401020, 490110-00, 970584

Intended Use: Aviation hydraulic oil

**COMPANY IDENTIFICATION** 

Supplier: **EXXON MOBIL CORPORATION** 

22777 Springwoods Village Parkway

Spring, TX. 77253 USA

24 Hour Health Emergency Transportation Emergency Phone 609-737-4411

800-424-9300 or 703-527-3887 CHEMTREC

**Product Technical Information** 800-662-4525

**MSDS Internet Address** http://www.exxon.com, http://www.mobil.com

#### **SECTION 2**

#### HAZARDS IDENTIFICATION

This material is hazardous according to regulatory guidelines (see (M)SDS Section 15).

#### **CLASSIFICATION:**

Flammable liquid: Category 4. Aspiration toxicant: Category 1.

#### Pictogram:



Signal Word: Danger

#### **Hazard Statements:**

H227: Combustible liquid. H304: May be fatal if swallowed and enters airways.

#### **Precautionary Statements:**

P210: Keep away from flames and hot surfaces. -- No smoking. P273: Avoid release to the environment. P280: Wear protective gloves and eye / face protection.P301 + P310: IF SWALLOWED: Immediately call a POISON CENTER or doctor/physician. P331: Do NOT induce vomiting. P370 + P378: In case of fire: Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish.P403 + P235: Store in a well-ventilated place. Keep cool. P405: Store locked up.P501: Dispose of contents and container in accordance with local regulations.



Revision Date: 01 Oct 2015

Page 2 of 12

#### Other hazard information:

HAZARD NOT OTHERWISE CLASSIFIED (HNOC): None as defined under 29 CFR 1910.1200.

#### PHYSICAL / CHEMICAL HAZARDS

Material can accumulate static charges which may cause an ignition. Material can release vapors that readily form flammable mixtures. Vapor accumulation could flash and/or explode if ignited. Combustible.

#### **HEALTH HAZARDS**

High-pressure injection under skin may cause serious damage. Excessive exposure may result in eye, skin, or respiratory irritation.

#### **ENVIRONMENTAL HAZARDS**

No significant hazards.

NFPA Hazard ID:Health:1Flammability:2Reactivity:0HMIS Hazard ID:Health:1\*Flammability:2Reactivity:0

**NOTE:** This material should not be used for any other purpose than the intended use in Section 1 without expert advice. Health studies have shown that chemical exposure may cause potential human health risks which may vary from person to person.

#### SECTION 3

#### **COMPOSITION / INFORMATION ON INGREDIENTS**

This material is defined as a mixture.

Hazardous Substance(s) or Complex Substance(s) required for disclosure

Name	CAS#	Concentration*	GHS Hazard Codes
2,6-DI-TERT-BUTYL-P-CRESOL	128-37-0	0.1 - < 1%	H400(M factor 1),
			H410(M factor 1)
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	5 - < 10%	H304
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE	64742-53-6	50 - < 70%	H227, H304
(PETROLEUM)			
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	64742-46-7	20 - < 30%	H304
TRIPHENYL PHOSPHATE	115-86-6	0.1 - < 0.25%	H400(M factor 1),
			H410(M factor 1)

<sup>\*</sup> All concentrations are percent by weight unless material is a gas. Gas concentrations are in percent by volume.

As per paragraph (i) of 29 CFR 1910.1200, formulation is considered a trade secret and specific chemical identity and exact percentage (concentration) of composition may have been withheld. Specific chemical identity and exact percentage composition will be provided to health professionals, employees, or designated representatives in accordance with applicable provisions of paragraph (i).

SECTION 4 FIRST AID MEASURES

**INHALATION** 



Revision Date: 01 Oct 2015

Page 3 of 12

Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use

mouth-to-mouth resuscitation.

#### SKIN CONTACT

Wash contact areas with soap and water. Remove contaminated clothing. Launder contaminated clothing before reuse. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

#### **EYE CONTACT**

Flush thoroughly with water. If irritation occurs, get medical assistance.

#### INGESTION

Seek immediate medical attention. Do not induce vomiting.

#### **NOTE TO PHYSICIAN**

If ingested, material may be aspirated into the lungs and cause chemical pneumonitis. Treat appropriately.

#### **SECTION 5**

#### **FIRE FIGHTING MEASURES**

#### **EXTINGUISHING MEDIA**

**Appropriate Extinguishing Media:** Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish flames.

Inappropriate Extinguishing Media: Straight Streams of Water

#### **FIRE FIGHTING**

**Fire Fighting Instructions:** Evacuate area. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply. Firefighters should use standard protective equipment and in enclosed spaces, self-contained breathing apparatus (SCBA). Use water spray to cool fire exposed surfaces and to protect personnel.

Unusual Fire Hazards: Combustible. Pressurized mists may form a flammable mixture.

**Hazardous Combustion Products:** Aldehydes, Incomplete combustion products, Oxides of carbon, Phosphorus oxides, Smoke, Fume, Sulfur oxides

#### **FLAMMABILITY PROPERTIES**

Flash Point [Method]: >82°C (180°F) [ASTM D-93]

Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0 [Estimated]

**Autoignition Temperature:** >225°C (437°F)

#### **SECTION 6**

#### **ACCIDENTAL RELEASE MEASURES**

#### **NOTIFICATION PROCEDURES**

In the event of a spill or accidental release, notify relevant authorities in accordance with all applicable



Revision Date: 01 Oct 2015

Page 4 of 12

regulations. US regulations require reporting releases of this material to the environment which exceed the applicable reportable quantity or oil spills which could reach any waterway including intermittent dry creeks. The National Response Center can be reached at (800)424-8802.

#### **PROTECTIVE MEASURES**

Avoid contact with spilled material. Warn or evacuate occupants in surrounding and downwind areas if required due to toxicity or flammability of the material. See Section 5 for fire fighting information. See the Hazard Identification Section for Significant Hazards. See Section 4 for First Aid Advice. See Section 8 for advice on the minimum requirements for personal protective equipment. Additional protective measures may be necessary, depending on the specific circumstances and/or the expert judgment of the emergency responders.

For emergency responders: Respiratory protection: respiratory protection will be necessary only in special cases, e.g., formation of mists. Half-face or full-face respirator with filter(s) for dust/organic vapor or Self Contained Breathing Apparatus (SCBA) can be used depending on the size of spill and potential level of exposure. If the exposure cannot be completely characterized or an oxygen deficient atmosphere is possible or anticipated, SCBA is recommended. Work gloves that are resistant to hydrocarbons are recommended. Gloves made of polyvinyl acetate (PVA) are not water-resistant and are not suitable for emergency use. Chemical goggles are recommended if splashes or contact with eyes is possible. Small spills: normal antistatic work clothes are usually adequate. Large spills: full body suit of chemical resistant, antistatic material is recommended.

#### **SPILL MANAGEMENT**

Land Spill: Eliminate all ignition sources (no smoking, flares, sparks or flames in immediate area). Stop leak if you can do it without risk. All equipment used when handling the product must be grounded. Do not touch or walk through spilled material. Prevent entry into waterways, sewer, basements or confined areas. A vapor suppressing foam may be used to reduce vapors. Use clean non-sparking tools to collect absorbed material. Absorb or cover with dry earth, sand or other non-combustible material and transfer to containers. Large Spills: Water spray may reduce vapor; but may not prevent ignition in closed spaces. Recover by pumping or with suitable absorbent.

**Water Spill:** Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Water spill and land spill recommendations are based on the most likely spill scenario for this material; however, geographic conditions, wind, temperature, (and in the case of a water spill) wave and current direction and speed may greatly influence the appropriate action to be taken. For this reason, local experts should be consulted. Note: Local regulations may prescribe or limit action to be taken.

#### **ENVIRONMENTAL PRECAUTIONS**

Large Spills: Dike far ahead of liquid spill for later recovery and disposal. Prevent entry into waterways, sewers, basements or confined areas.

#### SECTION 7

#### HANDLING AND STORAGE

#### **HANDLING**

Avoid contact with skin. Avoid prolonged breathing of mists and heated vapor. Prevent small spills and leakage to avoid slip hazard. Material can accumulate static charges which may cause an electrical spark (ignition source). When the material is handled in bulk, an electrical spark could ignite any flammable vapors from liquids or residues that may be present (e.g., during switch-loading operations). Use proper bonding and/or ground procedures. However, bonding and grounds may not eliminate the hazard from static



Revision Date: 01 Oct 2015

Page 5 of 12

accumulation. Consult local applicable standards for guidance. Additional references include American Petroleum Institute 2003 (Protection Against Ignitions Arising out of Static, Lightning and Stray Currents) or National Fire Protection Agency 77 (Recommended Practice on Static Electricity) or CENELEC CLC/TR 50404 (Electrostatics - Code of practice for the avoidance of hazards due to static electricity).

Static Accumulator: This material is a static accumulator.

#### **STORAGE**

The container choice, for example storage vessel, may effect static accumulation and dissipation. Keep container closed. Handle containers with care. Open slowly in order to control possible pressure release. Store in a cool, well-ventilated area. Storage containers should be grounded and bonded. Fixed storage containers, transfer containers and associated equipment should be grounded and bonded to prevent accumulation of static charge.

#### **SECTION 8**

#### **EXPOSURE CONTROLS / PERSONAL PROTECTION**

#### **EXPOSURE LIMIT VALUES**

Exposure limits/standards (Note: Exposure limits are not additive)

Substance Name	Form	Limit / Sta	andard	NOTE	Source
2,6-DI-TERT-BUTYL-P-CRESOL	Inhalable fraction and vapor	TWA	2 mg/m3	N/A	ACGIH
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT [total hydrocarbon vapor]	Non-Aerosol	TWA	200 mg/m3	Skin	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	OSHA Z1
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Inhalable fraction.	TWA	5 mg/m3	N/A	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	ACGIH
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m3	N/A	OSHA Z1
HYDROTREATED MIDDLE DISTILLATE (PETROLEUM)	Inhalable fraction.	TWA	5 mg/m3	N/A	ACGIH
TRIPHENYL PHOSPHATE		TWA	3 mg/m3	N/A	OSHA Z1
TRIPHENYL PHOSPHATE		TWA	3 mg/m3	N/A	ACGIH

**Exposure limits/standards for materials that can be formed when handling this product:** When mists/aerosols can occur the following are recommended: 5 mg/m³ - ACGIH TLV (inhalable fraction), 5 mg/m³ - OSHA PEL.

NOTE: Limits/standards shown for guidance only. Follow applicable regulations.

No biological limits allocated.

#### **ENGINEERING CONTROLS**

The level of protection and types of controls necessary will vary depending upon potential exposure conditions.



Revision Date: 01 Oct 2015

Page 6 of 12

Control measures to consider:

Use explosion-proof ventilation equipment to stay below exposure limits.

#### PERSONAL PROTECTION

Personal protective equipment selections vary based on potential exposure conditions such as applications, handling practices, concentration and ventilation. Information on the selection of protective equipment for use with this material, as provided below, is based upon intended, normal usage.

**Respiratory Protection:** If engineering controls do not maintain airborne contaminant concentrations at a level which is adequate to protect worker health, an approved respirator may be appropriate. Respirator selection, use, and maintenance must be in accordance with regulatory requirements, if applicable. Types of respirators to be considered for this material include:

No special requirements under ordinary conditions of use and with adequate ventilation.

For high airborne concentrations, use an approved supplied-air respirator, operated in positive pressure mode. Supplied air respirators with an escape bottle may be appropriate when oxygen levels are inadequate, gas/vapor warning properties are poor, or if air purifying filter capacity/rating may be exceeded.

**Hand Protection:** Any specific glove information provided is based on published literature and glove manufacturer data. Glove suitability and breakthrough time will differ depending on the specific use conditions. Contact the glove manufacturer for specific advice on glove selection and breakthrough times for your use conditions. Inspect and replace worn or damaged gloves. The types of gloves to be considered for this material include:

If prolonged or repeated contact is likely, chemical resistant gloves are recommended. If contact with forearms is likely, wear gauntlet style gloves.

Eye Protection: If contact is likely, safety glasses with side shields are recommended.

**Skin and Body Protection:** Any specific clothing information provided is based on published literature or manufacturer data. The types of clothing to be considered for this material include:

If prolonged or repeated contact is likely, chemical, and oil resistant clothing is recommended.

**Specific Hygiene Measures:** Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking, and/or smoking. Routinely wash work clothing and protective equipment to remove contaminants. Discard contaminated clothing and footwear that cannot be cleaned. Practice good housekeeping.

#### **ENVIRONMENTAL CONTROLS**

Comply with applicable environmental regulations limiting discharge to air, water and soil. Protect the environment by applying appropriate control measures to prevent or limit emissions.

#### **SECTION 9**

#### PHYSICAL AND CHEMICAL PROPERTIES

Note: Physical and chemical properties are provided for safety, health and environmental considerations only and may not fully represent product specifications. Contact the Supplier for additional information.

#### GENERAL INFORMATION

Physical State: Liquid

Color: Red



Revision Date: 01 Oct 2015

Page 7 of 12

Odor: Characteristic Odor Threshold: N/D

#### IMPORTANT HEALTH, SAFETY, AND ENVIRONMENTAL INFORMATION

Relative Density (at 15 °C): 0.88 Flammability (Solid, Gas): N/A

Flash Point [Method]: >82°C (180°F) [ASTM D-93]

Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0 [Estimated]

**Autoignition Temperature:** >225°C (437°F)

Boiling Point / Range: N/D
Decomposition Temperature: N/D
Vapor Density (Air = 1): N/D
Vapor Pressure: [N/D at 20 °C]

Evaporation Rate (n-butyl acetate = 1): N/D

pH: N/A

Log Pow (n-Octanol/Water Partition Coefficient): N/D

Solubility in Water: Negligible

Viscosity: 13.8 cSt (13.8 mm2/sec) at 40 °C | 5.1 cSt (5.1 mm2/sec) at 100 °C [ASTM D 445]

Oxidizing Properties: See Hazards Identification Section.

#### OTHER INFORMATION

Freezing Point: N/D Melting Point: N/A

Pour Point: -60°C (-76°F) [ASTM D97] DMSO Extract (mineral oil only), IP-346: < 3 %wt

#### SECTION 10 STABILITY AND REACTIVITY

REACTIVITY: See sub-sections below.

STABILITY: Material is stable under normal conditions.

**CONDITIONS TO AVOID:** Open flames and high energy ignition sources.

MATERIALS TO AVOID: Strong oxidizers

**HAZARDOUS DECOMPOSITION PRODUCTS:** Material does not decompose at ambient temperatures.

**POSSIBILITY OF HAZARDOUS REACTIONS:** Hazardous polymerization will not occur.

#### SECTION 11 TOXICOLOGICAL INFORMATION

#### INFORMATION ON TOXICOLOGICAL EFFECTS

Hazard Class	Conclusion / Remarks
Inhalation	
Acute Toxicity: No end point data for material.	Minimally Toxic. Based on assessment of the components.
Irritation: No end point data for material.	Elevated temperatures or mechanical action may form vapors, mist, or fumes which may be irritating to the eyes, nose, throat, or lungs.



Revision Date: 01 Oct 2015

Page 8 of 12

Ingestion Acute Toxicity: No end point data for Minimally Toxic. Based on assessment of the components. material. Skin Acute Toxicity: No end point data for Minimally Toxic. Based on assessment of the components. material. Skin Corrosion/Irritation: No end point data May dry the skin leading to discomfort and dermatitis. Based on for material. assessment of the components. Eye Serious Eye Damage/Irritation: No end point May cause mild, short-lasting discomfort to eyes. Based on data for material. assessment of the components. Sensitization Not expected to be a respiratory sensitizer. Respiratory Sensitization: No end point data for material Skin Sensitization: No end point data for Not expected to be a skin sensitizer. Based on assessment of the material. components. Aspiration: Data available. May be fatal if swallowed and enters airways. Based on physico-chemical properties of the material. Germ Cell Mutagenicity: No end point data Not expected to be a germ cell mutagen. Based on assessment of for material the components Carcinogenicity: No end point data for Not expected to cause cancer. Based on assessment of the material. components. Reproductive Toxicity: No end point data Not expected to be a reproductive toxicant. Based on assessment for material. of the components Lactation: No end point data for material. Not expected to cause harm to breast-fed children. Specific Target Organ Toxicity (STOT) Not expected to cause organ damage from a single exposure. Single Exposure: No end point data for Repeated Exposure: No end point data for Not expected to cause organ damage from prolonged or repeated material. exposure. Based on assessment of the components

#### **TOXICITY FOR SUBSTANCES**

NAME	ACUTE TOXICITY
2,6-DI-TERT-BUTYL-P-CRESOL	Oral Lethality: LD50 0.89 g/kg (Rat)

#### OTHER INFORMATION

#### For the product itself:

Repeated and/or prolonged exposure may cause irritation to the skin, eyes, or respiratory tract. Small amounts of liquid aspirated into the lungs during ingestion or from vomiting may cause chemical pneumonitis or pulmonary edema. **Contains:** 

Base oil severely refined: Not carcinogenic in animal studies. Representative material passes IP-346, Modified Ames test, and/or other screening tests. Dermal and inhalation studies showed minimal effects; lung non-specific infiltration of immune cells, oil deposition and minimal granuloma formation. Not sensitizing in test animals.

The following ingredients are cited on the lists below: None.

-- REGULATORY LISTS SEARCHED--



Revision Date: 01 Oct 2015

Page 9 of 12

 1 = NTP CARC
 3 = IARC 1
 5 = IARC 2B

 2 = NTP SUS
 4 = IARC 2A
 6 = OSHA CARC

#### **SECTION 12**

#### **ECOLOGICAL INFORMATION**

The information given is based on data available for the material, the components of the material, and similar materials.

#### **ECOTOXICITY**

Material -- Not expected to be harmful to aquatic organisms.

#### **MOBILITY**

More volatile component -- Highly volatile, will partition rapidly to air. Not expected to partition to sediment and wastewater solids.

Less volatile component -- Low solubility and floats and is expected to migrate from water to the land. Expected to partition to sediment and wastewater solids.

#### PERSISTENCE AND DEGRADABILITY

#### **Biodegradation:**

Components -- Expected to be inherently biodegradable

#### **BIOACCUMULATION POTENTIAL**

Majority of components -- Has the potential to bioaccumulate, however metabolism or physical properties may reduce the bioconcentration or limit bioavailability.

#### **SECTION 13**

#### **DISPOSAL CONSIDERATIONS**

Disposal recommendations based on material as supplied. Disposal must be in accordance with current applicable laws and regulations, and material characteristics at time of disposal.

#### **DISPOSAL RECOMMENDATIONS**

Product is suitable for burning in an enclosed controlled burner for fuel value or disposal by supervised incineration at very high temperatures to prevent formation of undesirable combustion products. Protect the environment. Dispose of used oil at designated sites. Minimize skin contact. Do not mix used oils with solvents, brake fluids or coolants.

#### REGULATORY DISPOSAL INFORMATION

RCRA Information: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed as hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrositivity or reactivity and is not formulated with contaminants as determined by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

**Empty Container Warning** Empty Container Warning (where applicable): Empty containers may contain residue and can be dangerous. Do not attempt to refill or clean containers without proper instructions. Empty drums should be



Revision Date: 01 Oct 2015

Page 10 of 12

completely drained and safely stored until appropriately reconditioned or disposed. Empty containers should be taken for recycling, recovery, or disposal through suitably qualified or licensed contractor and in accordance with governmental regulations. DO NOT PRESSURISE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND, OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION. THEY MAY EXPLODE AND CAUSE INJURY OR DEATH.

#### **SECTION 14**

#### TRANSPORT INFORMATION

LAND (DOT)

Proper Shipping Name: COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light)

Hazard Class & Division: COMBUSTIBLE LIQUID

ID Number: NA1993
Packing Group: III
ERG Number: 128
Label(s): NONE

Transport Document Name: NA1993, COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum),

Hydrotreated Light), COMBUSTIBLE LIQUID, PG III

Footnote: This material is not regulated under 49 CFR in a container of 119 gallon capacity or less when transported solely by land, as long as the material is not a hazardous waste, a marine pollutant, or specifically listed as a hazardous substance.

LAND (TDG): Not Regulated for Land Transport

SEA (IMDG): Not Regulated for Sea Transport according to IMDG-Code

Marine Pollutant: No

AIR (IATA): Not Regulated for Air Transport

#### SECTION 15

#### REGULATORY INFORMATION

**OSHA HAZARD COMMUNICATION STANDARD:** This material is considered hazardous in accordance with OSHA HazCom 2012, 29 CFR 1910.1200.

Listed or exempt from listing/notification on the following chemical inventories: AICS, DSL, ENCS, IECSC, KECI, PICCS, TCSI, TSCA

EPCRA SECTION 302: This material contains no extremely hazardous substances.

SARA (311/312) REPORTABLE HAZARD CATEGORIES: Fire. Immediate Health. Delayed Health.

**SARA (313) TOXIC RELEASE INVENTORY:** This material contains no chemicals subject to the supplier notification requirements of the SARA 313 Toxic Release Program.



Revision Date: 01 Oct 2015

Page 11 of 12

#### The following ingredients are cited on the lists below:

Chemical Name	CAS Number	List Citations
DISTILLATES (PETROLEUM),	64742-47-8	1, 17, 18
HYDROTREATED LIGHT		
HYDROTREATED LIGHT	64742-53-6	1, 4, 13, 17, 18
NAPHTHENIC DISTILLATE		
(PETROLEUM)		
HYDROTREATED MIDDLE	64742-46-7	1, 4, 17, 18
DISTILLATE (PETROLEUM)		

#### -- REGULATORY LISTS SEARCHED --

1 = ACGIH ALL	6 = TSCA 5a2	11 = CA P65 REPRO	16 = MN RTK
2 = ACGIH A1	7 = TSCA 5e	12 = CA RTK	17 = NJ RTK
3 = ACGIH A2	8 = TSCA 6	13 = IL RTK	18 = PA RTK
4 = OSHA Z	9 = TSCA 12b	14 = LA RTK	19 = RI RTK
5 = TSCA 4	10 = CA P65 CARC	15 = MI 293	

Code key: CARC=Carcinogen; REPRO=Reproductive

N/D = Not determined, N/A = Not applicable

#### KEY TO THE H-CODES CONTAINED IN SECTION 3 OF THIS DOCUMENT (for information only):

H227: Combustible liquid; Flammable Liquid, Cat 4

H304: May be fatal if swallowed and enters airways; Aspiration, Cat 1

H400: Very toxic to aquatic life; Acute Env Tox, Cat 1

H410: Very toxic to aquatic life with long lasting effects; Chronic Env Tox, Cat 1

#### THIS SAFETY DATA SHEET CONTAINS THE FOLLOWING REVISIONS:

**Revision Changes:** 

Section 01: Company Mailing Address information was modified.

Section 05: Hazardous Combustion Products information was modified.

Section 15: List Citations Table information was modified.

Section 15: National Chemical Inventory Listing information was modified.

Section 14: Marine Pollutant information was modified.

Composition: Component Table information was modified. Section 08: Exposure Limits Table information was modified.

Section 16: Revision Information - Implementation of GHS requirements phrase, information was deleted.

The information and recommendations contained herein are, to the best of ExxonMobil's knowledge and belief, accurate and reliable as of the date issued. You can contact ExxonMobil to insure that this document is the most current available from ExxonMobil. The information and recommendations are offered for the user's consideration and examination. It is the user's responsibility to satisfy itself that the product is suitable for the intended use. If buyer repackages this product, it is the user's responsibility to insure proper health, safety and other necessary information is

included with and/or on the container. Appropriate warnings and safe-handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law,



Revision Date: 01 Oct 2015

Page 12 of 12

re-publication or retransmission of this document, in whole or in part, is not permitted. The term, "ExxonMobil" is used for convenience, and may include any one or more of ExxonMobil Chemical Company, Exxon Mobil Corporation, or any affiliates in which they directly or indirectly hold any interest.

------

Internal Use Only

MHC: 2A, 0, 0, 0, 1, 1 PPEC: C

DGN: 2005454XUS (552975)

\_\_\_\_\_

Copyright 2002 Exxon Mobil Corporation, All rights reserved



# APPENDIX IV Declaration of Conformity



### **DECLARATION of CONFORMITY**

The design, development and manufacture is in accordance with European Community guidelines

Axle Jack 02-7925C0100

Relevant provisions complied with by the machinery: 2006/42/EC

Relevant standards complied with by the machinery: EN ISO 12100-1

Identification of person empowered to sign on behalf of the Manufacturer:

Quality Assurance Representative

Phone: (419) 866-6301 | 800-426-6301

Web: www.tronair.com

Email: sales@tronair.com



# **APPENDIX V**

**Maintenance Schedule** 



# **Maintenance Schedule**

#### **Axle Jacks**

Tronair recommends performing preventative maintenance on all jacks, which should include a 90-day routine inspection and a 12-month load test.

Mo	odel Number Serial Number
Ma	nintenance Performed By Date
	-Day Maintenance: Check hydraulic system for leaks including the following:
	Hand pump; cylinder, fittings and seals
	<ul> <li>Reservoir; welds and fittings</li> <li>Check jack structure for corrosion, bending, cracking and excessive wear including the following:</li> <li>Base plate</li> </ul>
	Mechanical extension     Mechanical extension
	Hydraulic cylinder assembly     Retaining ring (secures the cylinder to the base plate)
	Jack pads, nose and main gear adapters
	Spacer blocks
	Check fluid level with rams fully retracted. See manual for proper level height
	Extend rams and visually inspect for corrosion, foreign matter, excessive wear and leaks around ram seals. Remove
_	any foreign matter
	Check paint condition, touch-up areas that are exposed
ш	Actuate the hand pump and raise the ram to full extension at least once.
	Do not pressurize hydraulic system once fully extended
П	<u>Do not</u> allow jack to miss-stage when raising the rams to full extension  Extend rams and visually inspect for corrosion, foreign matter, excessive wear and leaks around ram seals. Remove
_	any foreign matter
	Open release valve and verify that rams fully retract
	nual (12-Month) Maintenance: Check hydraulic fluid for contamination (dirt/water) drain and flush if required Perform 90-day maintenance checklist Capacity test (110% of jack's rated capacity)
NO	OTE: The jack may be returned to Tronair for load testing, or sent to a local hydraulic repair shop. Please contact

Tronair to obtain a "Return Material Authorization Number" (RMA#) before sending any product to Tronair.