




Operation & Service Manual



Model: 02A7845C0120
10 Ton (9 Metric Ton)
Three Stage Jack

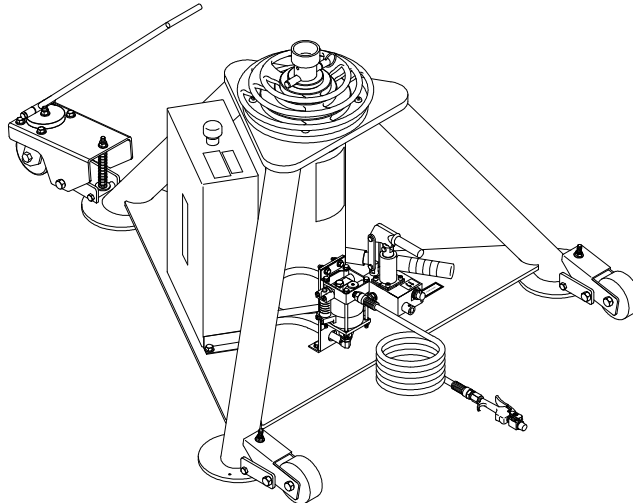

12/2011 - Rev. 02

Includes Illustrated Parts Lists

Models: 02A7845C0120
10 Ton Single Stage Jack

TABLE OF CONTENTS

	<u>PAGE</u>
1.0 Product Information	1
1.1 Usage	1
1.2 List Of Drawings	1
2.0 Safety Information	1
2.1 Alarm And Warning Systems	1
2.2 Warning And Danger Signs	1
2.3 Component Safety Features	1
2.4 Functional Safety Features	1
2.5 Features For Operator Safety	1
2.6 Environmental Safety Features	1
2.7 Protection Systems	1
2.8 Closed Circuits	1
2.9 Interlocking	1
2.10 Necessary Personal Protective Equipment	1
2.11 Safety Guidelines	2
2.12 Conditions For Safe Use	2
2.13 Operator Qualifications	2
2.14 Additional Safety Measures	2
2.15 In Case Of Hydraulic Line Failure	2
3.0 Packaging And Storage	3
3.1 Packaging Requirements	3
3.2 Handling	3
3.3 Strapping	3
3.4 Packaging Protection	3
3.5 Labeling Of Packaging	3
3.6 Storage Compatibility	3
3.7 Storage Environment	3
3.8 Storage Space And Handling Facilities	3
4.0 Transportation	3
5.0 Assembly	4
5.1 General Instructions	4
5.2 Pre-Use Checks	4
5.3 Personnel Requirements	4
5.4 Inspection And Test Procedures	4
6.0 Installation	4
6.1 Air Supply Requirements	4
7.0 Operation	5
7.1 Operating Parameters	5
7.2 Numerical Values	5
7.3 Operator Controls	5
7.4 Operating Instructions	6
7.4.1 Rules For Operating:	6
7.4.2 Jack Instructions	6
8.0 Training	8
9.0 Maintenance	8
9.1 General	8
9.2 Maintenance Schedule	8
9.2.1 Storage/Low Usage	8
9.3 Removing And Servicing Pump	9
9.4 Jack Function Load Test	9
9.5 Pneumatic Pump	9
10.0 Trouble Shooting	9
11.0 Provision Of Spares	10
12.0 In-Service Support	10
13.0 Guarantees/Limitation of Liability	10
14.0 Appendices	10

APPENDIX I	Hydraulic Schematic
APPENDIX II	Haskel Air Pump Manufacturer Data
APPENDIX III	HC-1961 Hand Pump Parts List
APPENDIX IV	Declaration of Conformity
APPENDIX V	Material Safety Data Sheet – MIL-PRF-5606 Hydraulic Fluid



Models: 02A7845C0120
10 Ton Single Stage Jack

REVISION	DATE	TEXT AFFECTED
01	02/2008	Original Release
02	12/2011	Modified 7.4.2 Jack Instructions, 10.0 Trouble Shooting, and Parts List

**Models: 02A7845C0120
10 Ton Single Stage Jack**

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

1.0 PRODUCT INFORMATION

Name of Equipment: 10 TON THREE STAGE JACK

Manufactured by TRONAIR, INC. South 1740 Eber Rd., Holland, OH 43528-9794 USA

1.1 USAGE

The device is intended to lift an aircraft by its fuselage and/or main wing with other hydraulic jacks arranged by position and quantity to provide proper balance, and in conjunction with the correct jack pad, whose maximum load on any one jack does not exceed the rated capacity of the jack.

The jacks are not intended for metal forming, metal working, or any purpose other than that stated above.

1.2 LIST OF DRAWINGS

Reference Parts List and Illustrations

2.0 SAFETY INFORMATION

2.1 ALARM AND WARNING SYSTEMS

None

2.2 WARNING AND DANGER SIGNS

See labels on unit.



WARNING!

The ram locknuts are user operated safety devices. Failure to utilize these locknuts may result in personal injury or death.

2.3 COMPONENT SAFETY FEATURES

- **Ram Locknut** prevents lowering of the ram. The Ram Locknut must be lowered as the aircraft is being lifted.
- **Hold to Run Air Valve** requires the operator to hold the air valve lever to raise the ram using the air pump. Releasing the air valve lever stops upward movement of the ram.

2.4 FUNCTIONAL SAFETY FEATURES

Pressure Relief Valve prevents overload during raising operations.

2.5 FEATURES FOR OPERATOR SAFETY

- Hold to Run Air Valve
- Cautions And Instruction Labels Located on Jack
- Ram Locknut

2.6 ENVIRONMENTAL SAFETY FEATURES

Jack is non-polluting. See Appendix V Material Safety Data Sheet for the recommended hydraulic fluid (MIL-PRF-5606).

2.7 PROTECTION SYSTEMS

None

2.8 CLOSED CIRCUITS

None

2.9 INTERLOCKING

None

2.10 NECESSARY PERSONAL PROTECTIVE EQUIPMENT



CAUTION!

Always wear safety glasses.

2.0 Safety information continued on following page.

TRONAIR

12/2011 - Rev. 02

- 1 -

Models: 02A7845C0120
10 Ton Single Stage Jack

2.0 SAFETY INFORMATION (continued)

2.11 SAFETY GUIDELINES



CAUTION!

Do not place hands on top of jack near ram locknuts while lowering jack.

Pinch points exist between top of jack and threads on ram.

- Never put hands between the aircraft and the jack pad; as after aircraft has been lowered, struts may have hung up.
- Never align jack under aircraft by pounding on jack legs. Dented legs may lead to jack collapse.
- Always lower ram locking nut(s) after jack is under load. Be sure ram nut(s) is seated fully after jacking.
- Always raise and lower jacks simultaneously so that aircraft remains level.
- Always use a tail or nose stand, as applicable, for additional stability.



WARNING!

The ram locknuts are user operated safety devices.
Failure to utilize these locknuts may result in personal injury or death.

2.12 CONDITIONS FOR SAFE USE

- Use in a clean dry environment on a level surface.
- Operate between -20° C and 50°C/-4° F and 122° F.

2.13 OPERATOR QUALIFICATIONS

This jack is intended to be used by the skilled and trained aircraft technician. The operator must be familiar with the jacking procedures for the aircraft to be raised, and the operation of the jack.

Installation/Maintenance/Dismantling Qualifications: This jack is to be installed, maintained, and dismantled by qualified technicians familiar with hydraulic systems.

2.14 ADDITIONAL SAFETY MEASURES

This jack must be used in accordance with this technical manual, and in accordance with the aircraft manufacturer's jacking procedures.

2.15 IN CASE OF HYDRAULIC LINE FAILURE

The velocity fuse will prevent lowering of the ram. To reset the velocity fuse, repair the hydraulic line, then pump the hand pump until the ram begins to rise. This will reset the velocity fuse, and the jack can be lowered.

**Models: 02A7845C0120
10 Ton Single Stage Jack**

3.0 PACKAGING AND STORAGE

3.1 PACKAGING REQUIREMENTS

Jacks are to be packaged as required to prevent damage to legs or hydraulic equipment during shipment.

3.2 HANDLING

Jacks can be rolled by hand on its casters.

3.3 STRAPPING

Jacks can be strapped down by suitable means to prevent unwanted movement during shipment.

3.4 PACKAGING PROTECTION

No special packaging material for cushioning or suspension is required.

3.5 LABELING OF PACKAGING

Packaging should be labeled DO NOT DROP.

3.6 STORAGE COMPATIBILITY

No special considerations.

3.7 STORAGE ENVIRONMENT

- Store jacks between -20°C and +50°C/-4° F and 122° F.
- Always store jack with ram all the way down.
- Suitable for outdoor storage by using a full coverage waterproof tarp or canvas.

3.8 STORAGE SPACE AND HANDLING FACILITIES

- Minimum Closed Height: 27 in (68.6 cm)
- Mechanical Extension: 13 ½ in (34.3 cm)
- Hydraulic Extension: 47 in (119.4 cm)
- Maximum Height Obtainable: 87 ½ in (222.3 cm)
- Weight: 444 lbs (201.4 kg)

4.0 TRANSPORTATION

Lifting can be accomplished by crane and strap thru top of tripod, or by fork truck under lower tripod support.
Approximate weight = 444 lbs (201.4 kg)

**Models: 02A7845C0120
10 Ton Single Stage Jack**

5.0 ASSEMBLY

This product is shipped completely assembled and tested and requires no further assembly before operation. The following sections apply when servicing the unit.

5.1 GENERAL INSTRUCTIONS

- This product should be assembled and/or repaired using good workmanship practices and proper tools. Bolts and elastic stopnuts should be tightened to a torque not to exceed industry standards for Grade '5' bolts.
- All replacement parts must be the same as or better than the original parts supplied.
- Dispose of waste per federal and local laws and regulations.
- No modifications are allowed that will adversely affect the jacks safety performance.
- The pressure relief valve is not serviceable. It must be replaced as a unit.

5.2 PRE-USE CHECKS

1. Refer to the Illustrated Parts List to identify and ensure that all parts are present.
2. Generally check over unit to assure the tightness of all nuts, bolts and fittings.
3. With rams completely collapsed, check hydraulic fluid level.
 - Replenish with MIL-PRF-5606 fluid as required.
 - FLUID LEVEL: ½ in (12.7 mm) below vent.

NOTE: *Refer to fluid manufacturer's (appendix v) material safety data sheet, and advisory for handling and disposal of fluid.*

5.3 PERSONNEL REQUIREMENTS

This jack is to be assembled by qualified technicians familiar with hydraulic systems.

5.4 INSPECTION AND TEST PROCEDURES

1. Ensure fluid level is within ½ in (12.7 mm) from reservoir vent cap.
2. Raise ram to full stroke, and check for leaks.

6.0 INSTALLATION

Installation and commissioning requires connection of the hold to run air valve to an adequate air supply (Air Pump Equipped Models Only).

6.1 AIR SUPPLY REQUIREMENTS

90-100 psi (6.21-6.89 bar)

Models: 02A7845C0120
10 Ton Single Stage Jack

7.0 OPERATION

7.1 OPERATING PARAMETERS

- The user shall work in accordance with the Operator Manual.
- It is not allowed to work under the raised load until it is secured by suitable means, i.e. **Ram Locknut**.
- The employer of the operator shall provide for all necessary training and give information about pumping and translating forces.
- Operate between -20° C and 50°C/-4° F and 122° F.

7.2 NUMERICAL VALUES

- Rated Capacity: 20,000 lbs (9,072 kg)
- Minimum Closed Height: 27 in (68.6 cm)
- Mechanical Extension: 13 ½ in (34.3 cm)
- Hydraulic Extension: 47 in (119.4 cm)
- Maximum Height Obtainable: 87 ½ in (222.3 cm)
- Weight: 444 lbs (201.4 kg)
- Pressure Relief Setting: 3250 + 300/-0 PSIG (224 +20/-0 bar)
- Noise level is 64 dB(A) at a distance of 120 in (3048 mm) at an inlet pressure of 100 psi (6.9 bar)

7.3 OPERATOR CONTROLS

See illustration.


7.4 OPERATING INSTRUCTIONS

The user should be familiar with the following statements prior to using the jack(s):



CAUTION!

1. Never put hands between the aircraft and the jack pad; as after aircraft has been lowered, struts may have hung up.
2. Never align jack under aircraft by pounding on jack legs. Dented legs may lead to jack collapse.
3. Always lower ram locking nut(s) after jack is under load. Be sure ram nut(s) is seated fully after jacking.
4. Always raise and lower jacks simultaneously so that aircraft remains level.
5. Always use a tail or nose stand, as applicable, for additional stability.

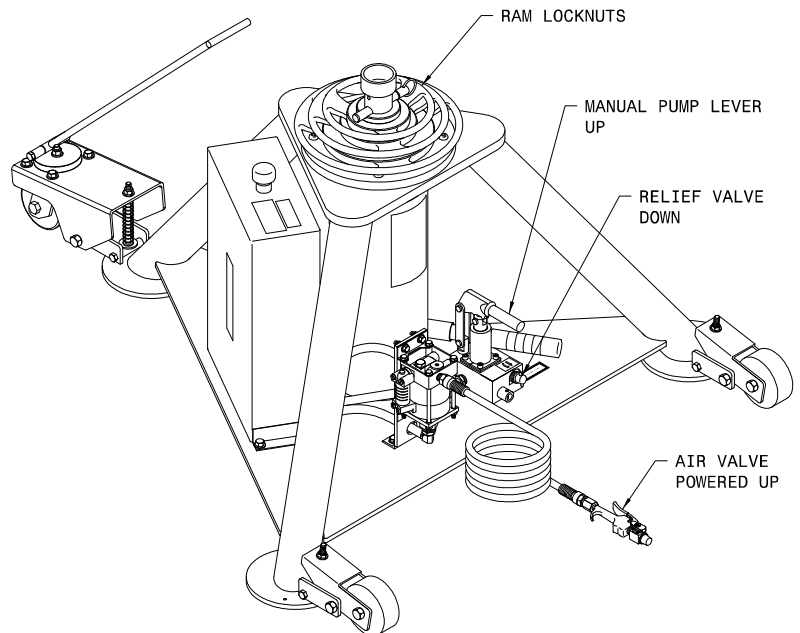

WARNING!

When collapsing rams by hand, miss-staging may occur and cause pinch points. To collapse ram, add a minimum 50 lb load to the mechanical extension. Keep hands and fingers clear of locking nuts. Failure to adhere to this safety instruction can cause injury.

7.4 Operating instructions continued on following page.

TRONAIR

12/2011 - Rev. 02

- 5 -

Models: 02A7845C0120
10 Ton Single Stage Jack

7.4 OPERATING INSTRUCTIONS (*continued*)

7.4.1 Rules For Operating:

1. The user shall work in accordance with the Operation & Service Manual.
2. It is not allowed to work under the raised load until it is secured by suitable means, i.e. Ram Locknut.
3. The employer of the operator shall provide for all necessary training and give information about pumping and translating forces.
4. Operate between -20° C and 50°C/-4° F and 122° F.

7.4.2 Jack Instructions

To Raise Aircraft:

1. Place jack on a hard, level surface.
2. Raise mechanical extension as close to aircraft jack pad as possible.




WARNING!

The locking pin **MUST** be placed in the ram protection ring groove and fully through the mechanical extension.

The locking pin washer and ball lock **MUST** be placed outside the ram protection ring.


- Do not place extra locking pins in any other hole on the mechanical extension.
- Insure mating surfaces to jack point are free of debris and damage.
- Under no conditions should the locking pin washer or washer groove be inside the ram protection ring groove.
- Under no conditions should the locking pin's ball lock be inside the ram protection ring groove.
- Never use the jack if the ram protection ring is not installed.
- Never use the locking pin without a locking pin washer.
- Never use a locking pin that has been damaged.
- Never use a ram protection ring that has been damaged or deformed.
- Failure to comply could result in premature failure below certified weight and could cause serious injury including death.

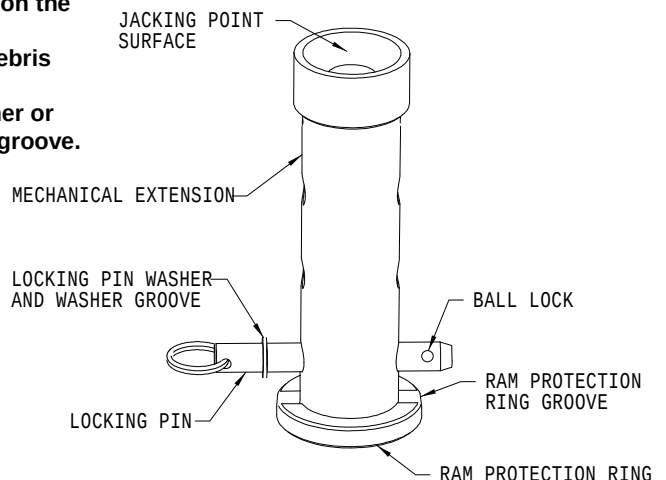


Models: 02A7845C0120
10 Ton Single Stage Jack

7.4.2 Jack Instructions (continued)


**CORRECT PIN
PLACEMENT**

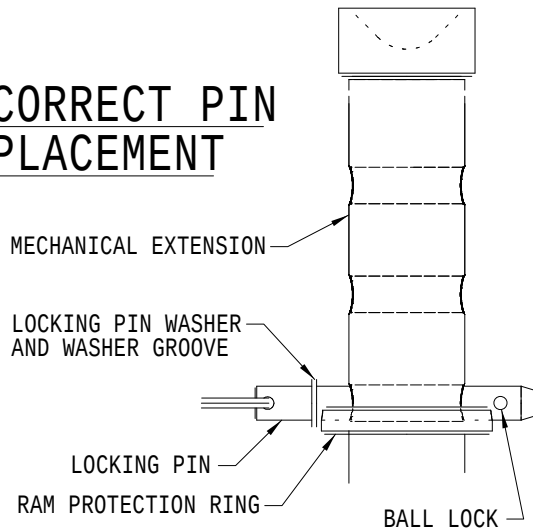


RAM PROTECTION RING

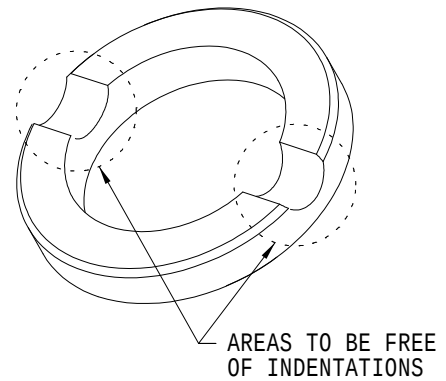

**INCORRECT PIN
PLACEMENT**

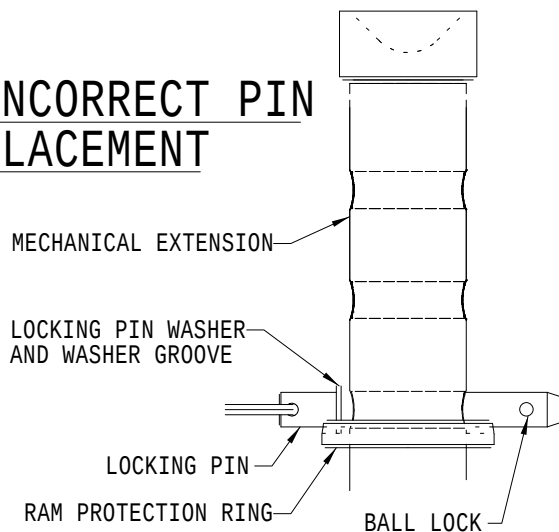

**INCORRECT PIN
PLACEMENT**

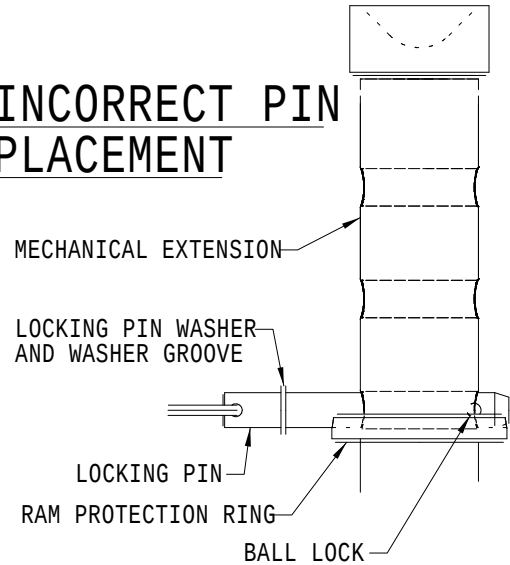

3. Close pump release valve by turning clockwise.

NOTE: Turning the pump release valve counter-clockwise lowers the jack. Turning the pump release valve clockwise stops the jacks descent, and allows it to be raised.

4. If air pump is to be used, be sure shop air needle valve is closed and attach shop air (125 psi/8.6 bars Maximum) to needle valve. Open needle valve and operate air pump. Close needle valve when ram reaches required height.
5. Hydraulic rams must be completely retracted before operating the jack.
6. Close pump release valve and operate pump.
7. Hydraulic rams must extend in order from largest to smallest diameter.
8. Largest diameter hydraulic ram must fully extend before the next stage ram begin to raise.
9. Lower mechanical lock nut(s) while extending rams. Keep lock nut within 1 inch of bottom on extending ram.
10. Do not continue to operate air pump after all rams have fully extended.

7.4.2 Jack instructions continued on following page.

TRONAIR

12/2011 - Rev. 02

Models: 02A7845C0120
10 Ton Single Stage Jack

7.4.2 Jack Instructions (*continued*)



WARNING!

- The ram locknuts are user operated safety devices. Failure to utilize these locknuts may result in personal injury or death.
- Do not place hands on top of jack near ram locknuts while lowering jack. Pinch points exist between top of jack and threads on ram.
- Always wear safety glasses.

To Lower Aircraft:

1. Lower all jacks simultaneously.
2. If ram locking nut(s) is tight, raise jack slightly to release nut(s) ¼ " from tripod
3. Ensure proper staging as aircraft is being lowered: loosen locknut beginning with smallest ram (1" max) until stage is completely lowered. Repeat for next smallest stage.
4. Loosen pump release valve slightly to slowly lower aircraft.

NOTE: When using the jack during washing operations, completely cover top of jack near ram seal to protect from dirt and foreign matter that might get on or between the ram and cylinder causing damage to the seals and O-rings.

8.0 TRAINING

Training of operating personnel is the responsibility of the employer. This jack must be used in accordance with aircraft manufacturer's instructions.

9.0 MAINTENANCE

9.1 GENERAL

- All maintenance and/or repair work should be done using good workmanship practices and proper tools.
- The work area should be clean and free of dirt.
- When O-rings and backup rings are removed, every effort should be made to avoid the contact of tools with the critical surfaces of parts. Surface deformities could cause degradation of seals and failure.
- It is good practice to replace both O-rings and back-up rings once removed. Cut and damaged O-rings normally result in fluid leakage.
- If cylinder bore is found to be rusty, it may be honed as follows:
 - o First stage cylinder to a maximum diameter of 6.133 inches
 - o Second stage ram to a maximum diameter of 4.508 inches
 - o Third stage ram to a maximum diameter of 3.029 inches
- At this time, flush old hydraulic fluid and dirt from overall system and replenish with new, clean hydraulic fluid.
- When refilling the hydraulic system the characteristics of the hydraulic fluid used in the jack and the level of the hydraulic fluid as it is noted on the jack shall be observed.
- Jacks shall be maintained and repaired in accordance with the manufacturer's instructions. Such maintenance and repair shall be carried out by qualified persons.
- No modifications shall be carried out which adversely affect the compliance of the jack with draft standard 2006/42/EC.

9.2 MAINTENANCE SCHEDULE

Check Fluid Level Each Use
Lubricate Casters..... 3 Months
Cleaning..... Annually Or As Needed

NOTE: Wipe with soft cloth only, do no pressure wash or spray water directly at ram seal.

9.2.1 Storage/Low Usage

If jack is unused for 90 days, raise ram to full hydraulic extension, spray ram with DoALL RPM, LPS or equivalent water repellent, BUNA N compatible lubricant.

TRONAIR

12/2011 - Rev. 02

- 8 -

**Models: 02A7845C0120
10 Ton Single Stage Jack**

9.0 MAINTENANCE *(continued)*

9.3 REMOVING AND SERVICING PUMP

NOTE: If pump is found faulty, call the factory for replacement or replace seals as follows:

1. Review Appendix III HC-1961 Hand Pump Parts List.
2. Clamp suction (push on) hose and remove hose from pump.
3. Uncouple fitting of hydraulic hoses from pump.
4. Remove pump from jack.
5. Remove cotter pin from clevis pin.
6. Remove four (4) socket head cap screws.
7. Remove flanges.
8. Remove tube assembly.
9. Replace O-rings and backup ring. (See Appendix III for kits available.)
10. Re-assemble in reverse order.

9.4 JACK FUNCTION LOAD TEST

NOTE: If function load testing is required:

1. Take all necessary precautions to prevent injury.
2. Always jack against a load and **never** against the jack itself.
3. Do not exceed a test load equal to the jack rated capacity plus 10%.

9.5 PNEUMATIC PUMP

See Appendix II Haskel Air Pump Manufacturer Data for complete parts list and repair information.

10.0 TROUBLE SHOOTING

TROUBLE	PROBABLE CAUSE	ACTION
Fluid leakage at pump piston or pump body	Damaged backup ring, o-ring, piston or pump body	Remove piston and pump body. Inspect for damage. Replace defective part(s). Replace removed o-ring and backup ring
External fluid leakage at rams	Damaged o-ring, backup ring or inner cylinder wall.	Remove rams as a unit from cylinder. Inspect parts. Replace o-ring and defective part(s)
Jack fails to lift rated load	Release valve not closed properly	Fully tighten release valve
	Low fluid level	Fill to correct fluid level
	Pressure relief valve improperly adjusted	Adjust or replace release valve
	Leakage at inlet or outlet check ball	Inspect valve body for wear or replace valve body and check balls
	Vent screw closed	Open vent screw
Rams will not support load after manual or pneumatic pump up	Leaking ram o-ring seals	Check for external leakage, if present replace defective seal and back up ring
	Leaking pressure check valve	Inspect valve body for wear or replace valve body and check balls
	Leaking pressure relief valve	Remove release valve, inspect ball and ball seat in pump block. Replace effective part(s)
Rams raise and fall with each manual pump stroke	Release valve open	Fully tighten release valve
	Inlet check valve not seated or sticking	Pump rapidly to dislodge or replace valve body
	Pressure check valve not seated or sticking	Pump rapidly to dislodge or replace valve body
Jack fails to lower	Ram locknut not loosened	Raise jack ¼ inch and release locknut
	Vent screw closed	Open vent screw
	O-Ring (pinched or rolled)	Replace o-ring and back-up ring, clean up cylinder wall of debris

**Models: 02A7845C0120
10 Ton Single Stage Jack**

11.0 PROVISION OF SPARES

Recommended Spares to be kept on hand:

K-4219	Kit, Ram Seal Replacement
K-1685	Kit, Repair Fluid Seal
K-1686	Kit, Repair Air Seal
K-3441	Kit, Seal Replacement

Spare parts may be obtained from the manufacturer:

TRONAIR INC.

1740 Eber Road
Holland, OH 43528-9794 USA

Telephone: 419-866-6301
Fax: 419-867-0634
E-mail: sales@tronair.com
Website: www.tronair.com

12.0 IN-SERVICE SUPPORT

Contact Tronair for technical services and information.

13.0 GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:

- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. **Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.**

14.0 APPENDICES

APPENDIX I	Hydraulic Schematic
APPENDIX II	Haskel Air Pump Manufacturer Data
APPENDIX III	HC-1961 Hand Pump Parts List
APPENDIX IV	Declaration of Conformity
APPENDIX V	Material Safety Data Sheet – MIL-PRF-5606 Hydraulic Fluid

TRONAIR

12/2011 - Rev. 02

- 10 -

**Models: 02A7845C0120
10 Ton Single Stage Jack**

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Reference Illustrations on following pages

ITEM	PART NUMBER	DESCRIPTION	QTY
2	Z-4184-01	Weldment, Tripod	1
3	H-1009-01	Assembly, handle (Pump)	1
14	N-2001-08-S-B	Elbow, 90° Male, SAE #6 x 3/8 in OD – JIC 37°	3
15	G-1154-107214	Capscrew, Socket Button head, 3/8 – 16 x 1 ½ in long	4
16	Z-6704-01	Weldment, Tube/Base	1
17	G-1251-1070R	Lockwasher, 3/8 Regular	2
18	G-1100-107010	Bolt, Hex Head, Grade 5, 3/8 - 16 x 1 in long	2
19	N-2789-04-S-B	Connector, Straight Male, 3/8 in ID Hose x SAE #6	1
20	HC-1961	Pump, Hand (Ref. Appendix I)	1
21	TF-1043-06*22.5	Assembly, Hose 22 ½ in long	1
28	TF-1047-04*10.0	Hose, 3/8 in Push-on x 10 in long	1
46	H-2332	Locknut, 12 Ton Stop	1
47	Z-6692	Ram, Second Stage	1
50	Z-6694	Ram, Third Stage	1
53	Z-2009	Ram, First Stage	1
56	H-2330	Locknut, 10 Ton Stop	1
57	TR-1978	Tube, Stop	1
58	H-2327	Locknut, 10 Ton Stop	1
59	TR-1980	Tube, Stop	1
60	Z-6689	Assembly, Ram	1
61	HJ-557	Pad, Jack	1
62	G-1300-25200	Pin, Roll, ¼ in diameter x 2 in long	1
63	G-1318-1033	Pin, Model "D", 5/8 in diameter x 3.3 in long	1
64	R-1341-02	Shaft, Extension	1
65	TR-1994	Ring, Ram Protection	1
68	K-1685	Kit, Repair Fluid Seal (Ref. Haskel MLP-20/46D)	1
69	K-1686	Kit, Repair Air Seal (Ref. Haskel MLP-20/46D)	1
70	50866	Lubricant, Haskel Seal (Ref. Haskel MLP-20/46D)	1
Not Shown	H-1516-11	Clamp, 2 Ear Hose	1
K-3073 Kit, Rear Wheel; consists of:			
4	G-1100-107532	Bolt, Hex Head, Grade 5, 3/8 - 24 x 3 ¼ in long	1
5	G-1100-109532	Bolt, Hex Head, Grade 5, ½ - 20 x 3 ¼ in long	1
6	Z-2322	Assembly, Rear Wheel	1
7	G-1203-1095	Jamnut, ½ - 20 Elastic	1
8	G-1203-1075	Jamnut, 3/8 – 24 Elastic	1
9	G-1202-1075	Stopnut, 3/8 – 24 Elastic	1
10	G-1250-1070N	Flatwasher, 3/8 Narrow	1
11	H-3398-07	Spring	1
12	Z-2302	Weldment, Pivot	1
K-3076 Kit, Reservoir; consists of:			
8	G-1203-1075	Jamnut, 3/8 – 24 Elastic	4
10	G-1250-1070N	Flatwasher, 3/8 Narrow	8
22	G-1100-107510	Bolt, Hex Head, Grade 5, 3/8 – 24 x 1 in long	4
23	H-1045	Breather	1
24	Z-4197-01	Weldment, Reservoir (includes labels)	1
25	N-2209-03-B	Tee, Street, ¼ NPT	1
27	N-2412-10	Connector, Straight Male, 3/8 in ID Hose x ¼ NPT	2
28	TF-1047-04*10.0	Hose, 3/8 in Push-on x 10 in long	1

TRONAIR

12/2011 - Rev. 02

**Models: 02A7845C0120
10 Ton Single Stage Jack**

Parts List

When ordering replacement parts/kits, please specify model, serial number and color of your unit.

Reference Illustrations on following pages


ITEM	PART NUMBER	DESCRIPTION	QTY
	K-3077	Kit, Air Pump; consists of:	
29.....	TF-1043-03*16.0	Assembly Hose, 16 in long.....	1
30.....	G-1202-1055	Stopnut, ¼ – 28 Elastic.....	4
31.....	G-1250-1050N.....	Flatwasher, ¼ Narrow	8
32.....	TF-1047-04*07.0	Hose, 3/8 in Push-on x 7 in long.....	1
33.....	J-3415-01	Bracket, Air Pump	1
34.....	N-2410-05.....	Elbow, 90° Male, 3/8 in Ho se x 3/8 NPT	1
36.....	G-1100-105510	Bolt, Hex Head, Grade 5, ¼ - 28 x 1 in long	4
37.....	H-1536-19.....	Caplug, Tapered.....	1
38.....	H-1173.....	Valve, Plug	1
39.....	N-2005-08-S.....	Elbow, 90° Male, 3/8 in OD – JIC 37° x ¼ NPT.....	1
40.....	H-1174.....	Pump, Air.....	1
43.....	G-1100-106512	Bolt, Hex Head, Grade 5, 5/16 - 24 x 1 ¼ in long.....	2
44.....	G-1250-1060N.....	Flatwasher, 5/16 Narrow	4
45.....	G-1202-1065	Stopnut, 5/16 – 24 Elastic.....	2
	K-3078	Kit, Handle; consists of:	
8.....	G-1203-1075	Jamnut, 3/8 – 24 Elastic	1
41.....	Z-2301-02.....	Weldment, Handle.....	1
42.....	G-1100-107540	Bolt, Hex Head, Grade 5, 3/8 - 24 x 4 in long	1
	K-4156	Kit, Front Wheel , consists of:	
1.....	Z-6587	Assembly, Front Wheel	
4.....	G-1100-107532	Bolt, Hex Head, Grade 5, 3/8 – 24 x 3 ¼ “ long.....	1
7.....	G-1203-1095	Jamnut, ½ - 20 Elastic.....	1
8.....	G-1203-1075	Jamnut, 3/8 - 24 Elastic.....	1
9.....	G-1202-1075	Stopnut, 3/8 – 24 Elastic.....	1
10.....	G-1250-1070N.....	Flatwasher, 3/8 Narrow	1
71.....	H-3032.....	Spring.....	1
72.....	Z-6588.....	Weldment, Pivot	1
73.....	G-1100-109560	Bolt, HH, Grade 5, ½ – 20 x 6” in long.....	1
74.....	T378-03*001.00.....	Tube, SS ½ ID.....	2
	K-4219	Kit, Ram Seal; consists of:	
48.....	HC-2020-346.....	Backup Ring, Second Stage.....	1
49.....	HC-2000-346.....	O-ring, Second Stage.....	1
51.....	HC-2020-334.....	Backup Ring, Third Stage.....	1
52.....	HC-2000-334.....	O-ring, Third Stage.....	1
54.....	HC-2020-359.....	Backup Ring, First Stage.....	1
55.....	HC-2000-359.....	O-ring, First Stage	1
13.....	K-3333.....	Assembly, Blowgun	1

TRONAIR


12/2011 - Rev. 02

Models: 02A7845C0120
10 Ton Single Stage Jack

Parts Illustration

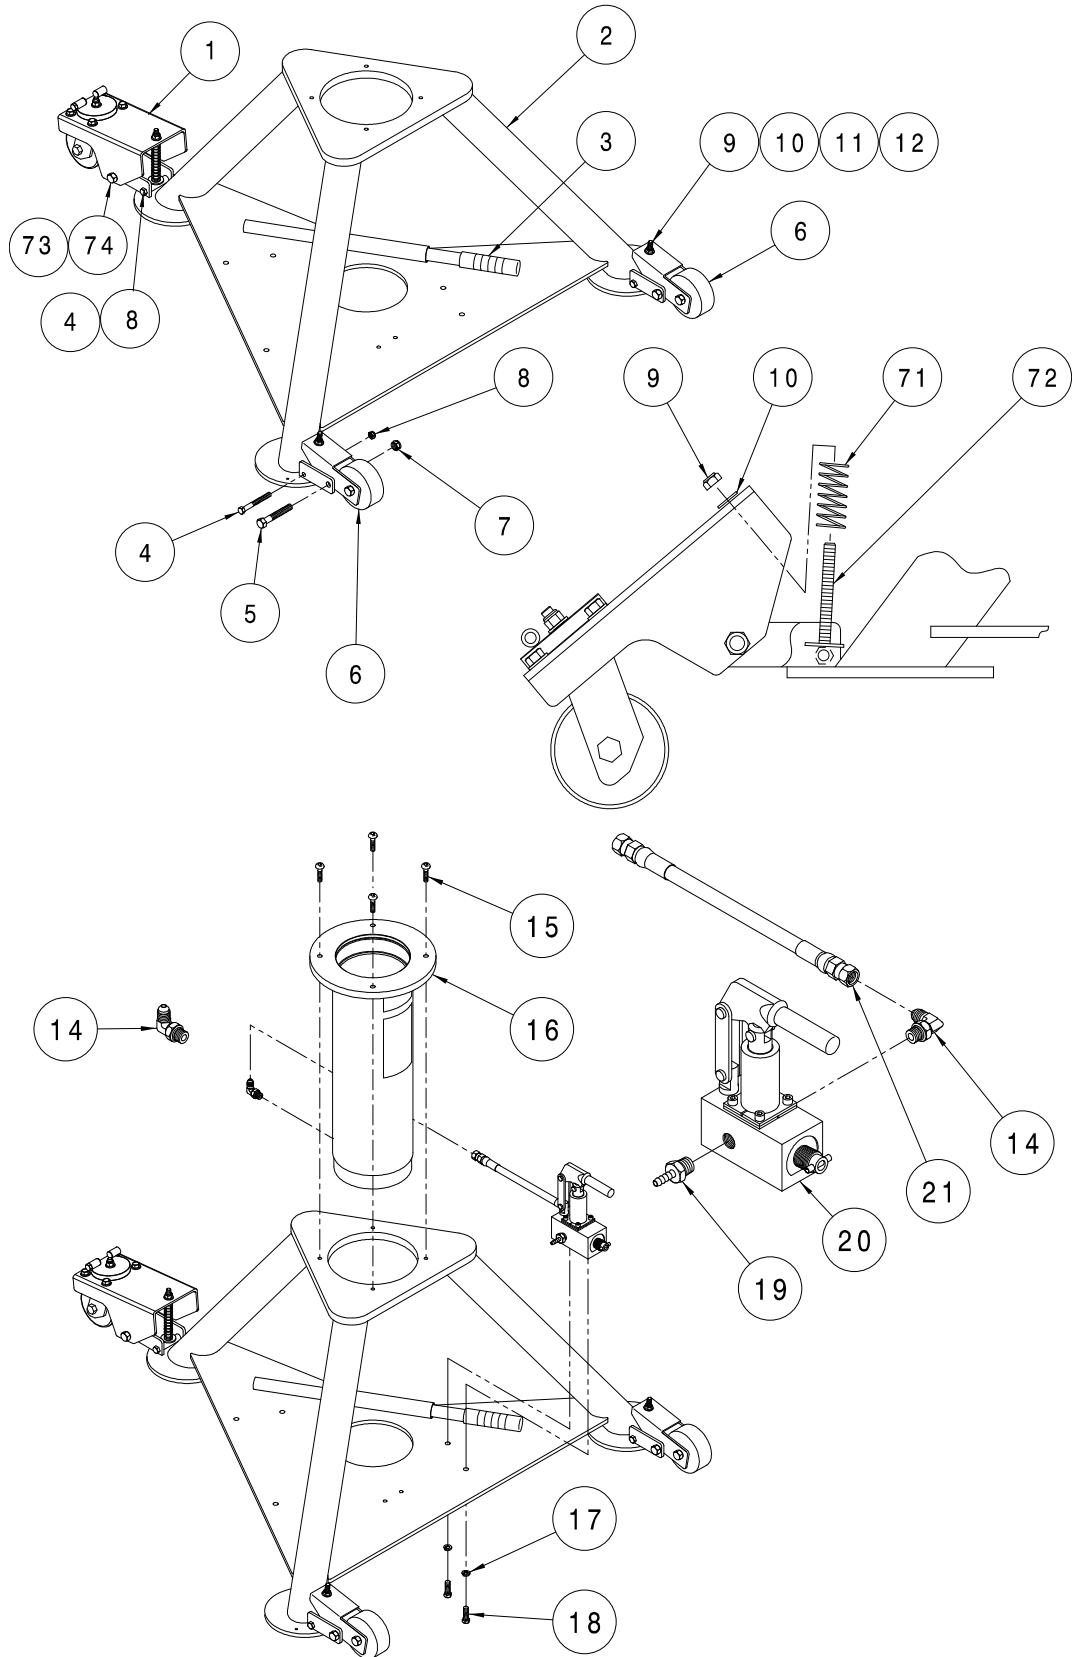


Parts Illustration

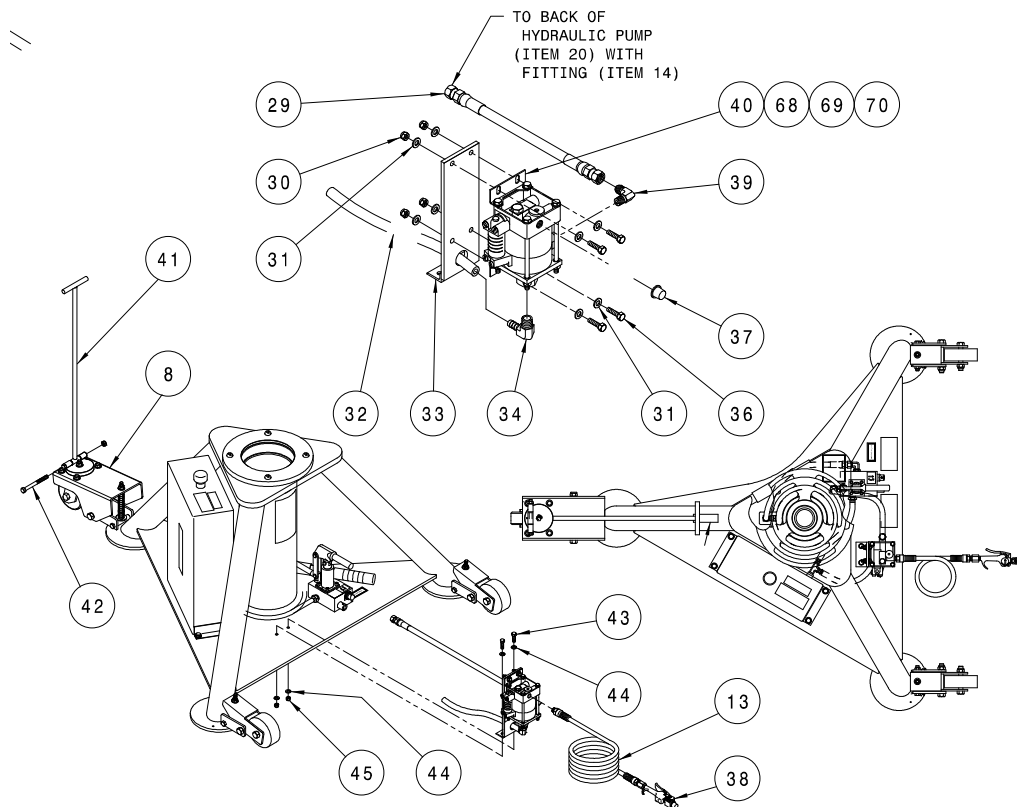

Models: 02A7845C0120
10 Ton Single Stage Jack

Parts Illustration

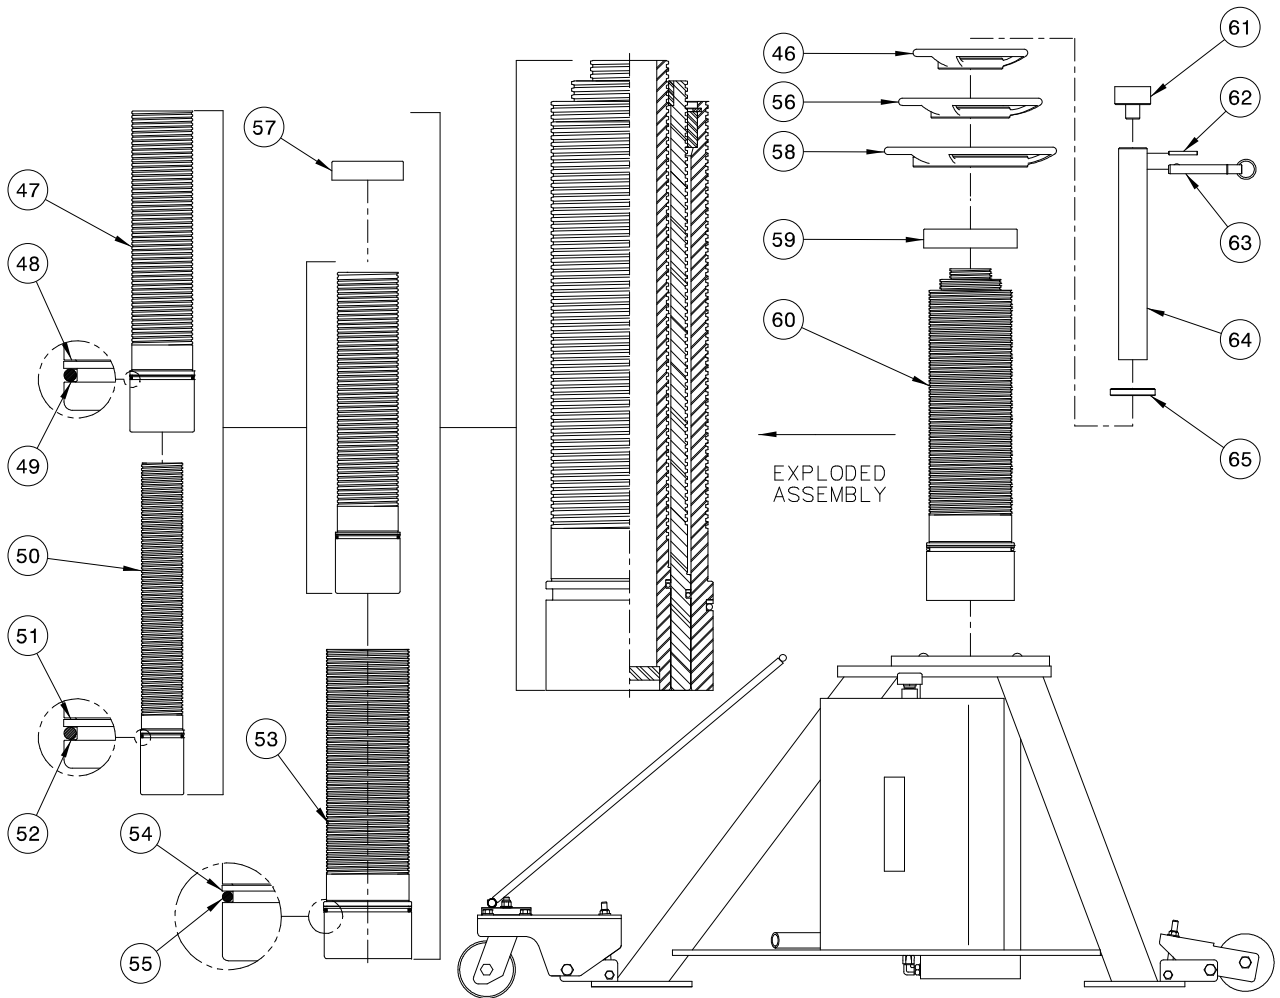




APPENDIX I

Hydraulic Schematic

Hydraulic Schematic

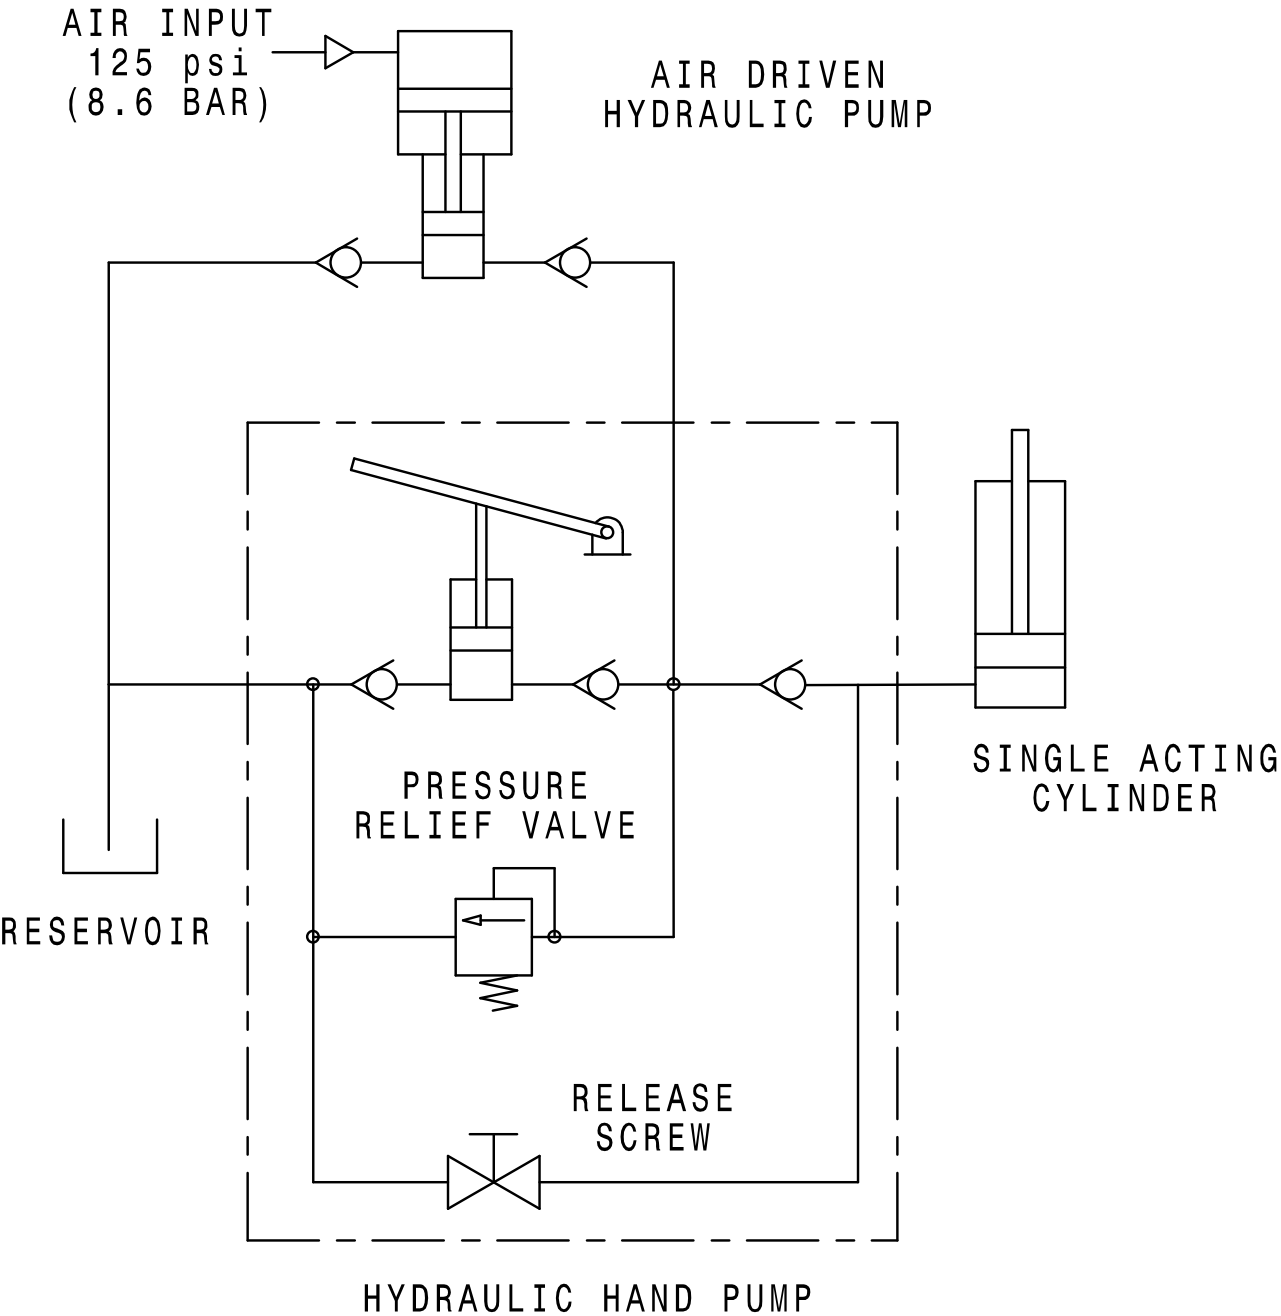



APPENDIX II

Haskel Air Pump Manufacturer Data



PNEUMATIC DRIVEN LIQUID PUMPS

PERFORMANCE • QUALITY • RELIABILITY





Welcome to Haskel

Haskel is an international organization offering a worldwide service through the Haskel group of companies and factory trained distributors. The Haskel group is headquartered in Burbank, California, with facilities throughout the world. We have built an enviable reputation for quality based on high pressure fluid and gas handling equipment.

In addition to offering a comprehensive range of pneumatic driven liquid pumps, air amplifiers, pneumatic and hydraulic driven gas boosters, high pressure valves, fittings and accessories, we custom design and build power packs and test rigs. Our continued investment in technology ensures that Haskel will stay at the leading edge of high pressure technology.

This brochure introduces our pneumatic driven liquid pump range. Technical details and advice on any of the products shown is available on request.

We are here to solve your problems. Just give us a call at 818-843-4000 or visit our website at www.haskel.com for more information or to locate a distributor.

Why Use Haskel Pneumatic Driven Pumps?

Our pumps offer many advantages over electrically driven pumps:

- Safe pneumatic operation – no heat, flame or spark risk
- Up to 100000 psi (7000 bar) capability
- Infinitely variable cycling speed
- Stall feature at pre-determined pressure to hold that pressure without consuming power
- Problem-free stop/start applications
- Easily automated – many modification and control options
- Suitable for most liquids and liquefied gases
- Alternative gas drive options – sour gas, natural gas, boil off gases, nitrogen
- No need for air line lubrication – saves costs and prevents contamination
- Robust, reliable, compact and easy to maintain proven design
- Unbalanced cycling spool provides immediate response to pressure changes
- Also available in standard, or custom built power pack configurations
- Excellent worldwide service for spares and repairs
- Can be manufactured to meet API 675, ATEX, CE and NACE

Applications include:

- Pressure testing
- Work holding/power clamping
- Jacking/lifting
- Valve actuator control
- Hydraulic cylinder actuation
- Press safety overload devices
- Roller tensioning
- Metering
- Precision lubrication and spraying
- Liquefied gas transfer



Pressure and Flow on Demand

This guide will help you to pre-select the pump ideally suited for your application. If you have specific questions, however, we urge you to provide us with details of the duties you require from the pump, available air/gas drive pressure, and pressure/flow requirements, and we will recommend a model and any corresponding accessories.

Output Horsepower Ratings

The pumps are categorized on their horsepower ratings (see pages 6-7). These are approximate and peak at 100 psi (7 bar), assuming adequate drive air, pressure and volume. Peak horsepower is at about 75% nominal ratio x air drive pressure, i.e. 100:1 pump @ 100 psi air drive peaks at $100 \times 100 = 10000 \times 0.75$ psi = 7500 psi (517 bar) hydraulic pressure.

Operation

The pumps automatically reciprocate on a differential piston principle. A large piston driven by relatively low pressure drive acts directly upon a smaller hydraulic piston.

The nominal ratio between piston sizes is indicated in the model coding and approximates to the maximum working pressure. The actual ratio is about 15% above nominal so that the pump continues to cycle when drive pressure equals nominal ratio. Initially, the pump will cycle at maximum speed acting as a transfer pump to pressurize downstream.


It will cycle at a slower rate as the fluid meets resistance until it stalls at maximum output pressure. When a pressure drop downstream occurs, it will recycle as necessary in an effort to maintain maximum pressure. Stall pressure is achieved when the outlet pressure rises and offers more resistance to the reciprocating differential piston assembly. The piston assembly then stalls when the forces balance, e.g. when drive pressure x drive piston area equals outlet (stall) pressure x driven hydraulic plunger area. The pump design is sensitive to very small pressure drops due to the low frictional resistance of the large diameter drive piston and hydraulic piston seals.

Double and Triple Air Head Pumps


Performance can be extended by stacking air pistons without changing the hydraulic piston. Haskel multi-head pumps consume less air than competitive single head pumps of the same area, as only one head is pressurized on the return stroke; e.g., on a 1.5 hp pump additional heads can raise performance to 2 hp.

Double air head pumps are identified by the last digit 2 in the pump model number. Thus, a nominal 50:1 ratio pump with two air heads is described as a 52. Similarly, a triple air head pump is identified with a last digit 3. Thus, a 900 ratio pump with three air heads is described as a 903.


Single Drive Head Pump

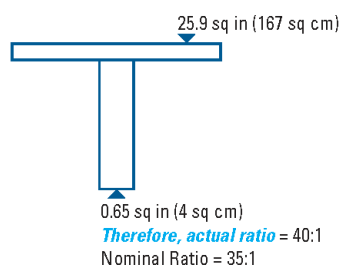

Double Air Head Pump

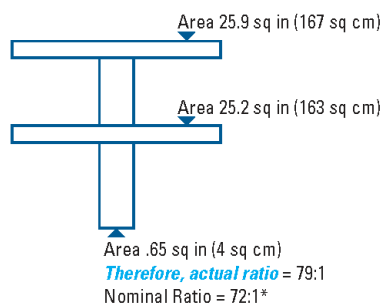

Triple Air Head Pump

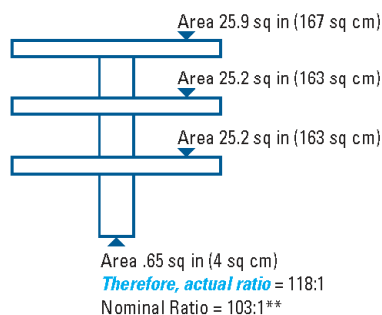


Nominal Ratio


* (2) Indicates Double Drive Piston

** (3) Indicates Triple Drive Piston

1. Drive Section

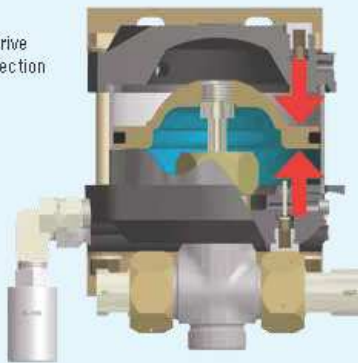


2. Hydraulic Check Valves

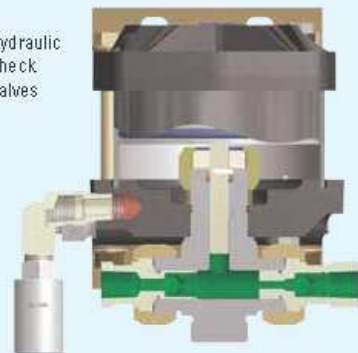

3. Drive Cycling Valve



4. Hydraulic Seal/Check Valve

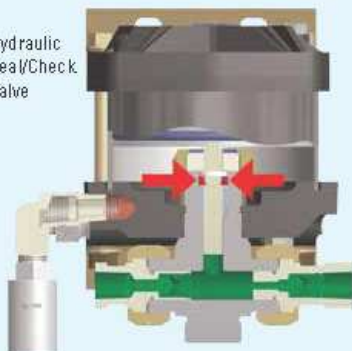

Anatomy of a Pneumatic Driven Pump

1. Drive Section

The piston, complete with "O" ring seal, operates in an epoxy filled, fiberglass wound barrel, the diameter of which is constant throughout a given series of pumps. Drive media forces the piston down on the compression stroke and raises it on the suction stroke (M series have a spring return). The piston is pre-lubricated during assembly and therefore no air line lubricator is necessary.

2. Hydraulic Section/Check Valves

This is directly linked to the drive piston by the hydraulic piston, the bottom portion of which is in the hydraulic body. Outlet flow and pressure are determined by the area of the hydraulic piston head, its nominal ratio with the drive piston head, and drive pressure. On the down stroke, liquid in the hydraulic section is forced under compression through the outlet check valve. Fresh liquid is induced via the inlet check valve on the return stroke. These check valves control the flow of liquid through the hydraulic section. They are spring-loaded and have a very low cracking pressure, allowing maximum opening on the induction stroke. The pressure of hydraulic fluid on the down stroke closes the inlet check valve and acts against the spring to open the outlet check valve.

3. Drive Cycling Valve

This is a pilot-operated, unbalanced, lightweight spool, which directs drive pressure, first to the top of the drive piston, and then to the underside to reciprocate the piston (cycle). It actuates via pilot valves at the top and the bottom of the stroke, which causes the unbalanced spool to shift and reciprocate the piston.

4. Hydraulic Seal/Check Valves

This is one of the few wear parts. Its function is to allow the hydraulic piston to reciprocate without passing fluid into the drive section. The liquid, its pressure and its temperature determine seal specification. A distance piece can be incorporated between drive and hydraulic sections for complete contamination-free operation on most Haskel pumps.



Pump Selection Information

All Haskel pumps are identified by letters coding the type of pump, followed by a number indicating the practical working ratio

of the drive area to the hydraulic plunger area. These letters are explained in the chart below.

Pump Model Letter Coding

M	.875" stroke .33 hp miniature pump series	XH	2" stroke 1.5 + 2 hp Extreme High Pressure pump series
S	Stainless steel hydraulic piston and body	G	4.5" stroke 6 hp pump series
29723	.33 hp Chemical Pump	8	4.5" stroke 8 hp pump or booster series
D (Prefix)	Pump incorporates a Distance Piece	14	4" stroke 10 hp pump series
D (Suffix)	Double Acting pump	W	Polyurethane U-cup dynamic seal
4B	1" stroke .75 hp pump series (bottom inlet only)	F	UHMWPE (Ultra-high Molecular Weight Polyethylene Dynamic Seal
A	2" stroke 1.5 + 2 hp pump series	T	Reinforced teflon dynamic seal
H	2" stroke 1.5 + 2 hp High Pressure pump series	V	Viton o-ring static seal
-C	Filter, regulator with gauge and shut-off/speed control valve	-B	Bottom inlet
		-CP	Chemical Pump

Quick Model Comparison Chart

The chart to the right shows the pressure/flow capability of each pump in the range. The diagonal lines show constant output horsepower for each series. The model ratios are circled.

Example


The pressure required is 2175 psi (150 bar). The flow required is 215 cubic inches (3.52 liters) per minute. The black dot plots position. Only models on diagonals to the right of the dot will meet the demand; e.g., the -35 ratio 1.5 hp pump, assuming a supply at 100 psi (7 bar) and 70 scfm (119m³/hr) can be met; if not, a -32 or -52 2 hp pump would be needed.

Note: For specific performance curves, refer to *Liquid Pump Rapid Reference Guide*.

The diagonal horsepower lines in the chart below are based on 100 psi (7 bar) drive pressure. Drive flow requirement is different for each series as follows:

.33 hp	15 scfm (25 m ³ /hr)	3 hp	85 scfm (144 m ³ /hr)
.75 hp	45 scfm (76 m ³ /hr)	6 hp	175 scfm (297 m ³ /hr)
1.5 hp	70 scfm (119 m ³ /hr)	8 hp	225 scfm (382 m ³ /hr)
2 hp	85 scfm (144 m ³ /hr)	10 hp	270 scfm (459 m ³ /hr)

Reduced air drive flow or pressure will result in a corresponding reduction in output horsepower. This chart can be used to select pump series and model ratio.

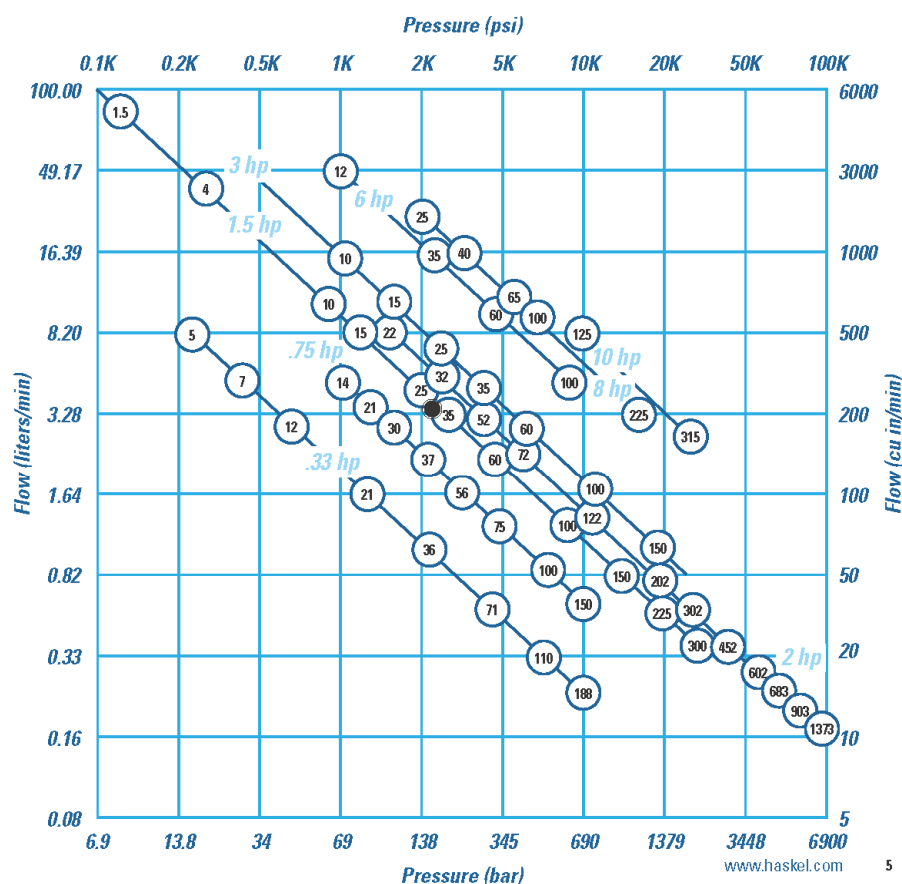

Performance and Specification Overview

Max Drive Drive Head HP	Pump Model Code	Nominal Ratio	Actual Ratio	Mainimum Rated Output Pressure				Displacement/Cycle		Maximum Flow		
				Continuous		Intermittent						
				psi	bar	psi	bar	cu in	ml	cu in/min	l/min	
125 psi/8.6 bar	M, MDSTV	-5	5.6	625	43	625	43	0.83	13.6	506	8.30	
		-7	7.8	900	62	900	62	0.60	9.8	366	6.00	
	M, MS	-12	14	1500	103	1500	103	0.36	5.9	234	3.83	
		-21	25	2600	179	2600	179	0.20	3.3	130	2.13	
	M, MS, 29723	-36	41	4500	310	4500	310	0.12	2.0	78	1.28	
		-71	82	8800	607	8800	607	0.060	1.0	39	0.64	
		-110	126	13500	931	13500	931	0.039	0.6	25	0.42	
	M, MS	-188	217	15000	1034	15000	1034	0.023	0.4	18	0.29	
MS	-220	237	20000	1380	25000	1723	0.021	0.344	14	0.22		
100 psi/7 bar	4B	-14	16	1500	103	1500	103	0.90	14.7	428	7.01	
		-21	24	2300	159	2300	159	0.60	9.8	285	4.67	
		-25	29	2700	186	2700	186	0.50	8.2	238	3.89	
		-30	34	3200	221	3200	221	0.43	7.0	204	3.35	
		-37	42	3800	262	3800	262	0.35	5.7	166	2.72	
		-55	63	6000	414	6000	414	0.22	3.6	105	1.71	
		-75	86	7800	538	7800	538	0.17	2.8	81	1.32	
		-100	114	10600	731	10600	731	0.13	2.0	62	1.01	
-150	171	15000	1034	15000	1034	0.088	1.44	42	0.68			
150 psi/10.5 bar	DSTV	-1.5	1.6	120	8	160	11	31.90	513	5104	83.6	
	ATV, DTV	-4	80	690	48	1200	83	20.00	328	3200	52.4	
	AW, ASF, DF, DSF, DSTV	-B10	11.5	1600	110	1600	110	4.05	66.4	1215	19.9	
		-B15	17	2400	165	2400	165	2.70	44.3	810	13.3	
		-25	29	4000	276	4000	276	1.62	26.6	486	8.0	
		-35	40	5700	393	5700	393	1.16	19.0	348	5.7	
		-60	69	9800	676	9800	676	0.67	11.0	201	3.3	
		-100	115	15000	1034	16500	1138	0.41	6.7	123	2.0	
		-150	173	15000	1034	20000	1380	0.27	4.5	81	1.3	
	HF, HSF, DHF, DSHF	-151	173	25000	1724	25000	1724	0.27	4.5	81	1.3	
		-225	260	30000	2069	37000	2551	0.18	3.0	41	0.7	
	HF	-300	345	30000	2069	50000	3448	0.14	2.3	32	0.5	
-450		533	25000	1724	45000	3403	0.091	1.5	20	0.3		
Double	AW, ASF, DF, DSF, DSTV	-B22	23	3200	221	3200	221	4.05	66.4	1215	19.9	
		-B32	34	4800	331	4800	331	2.70	44.3	810	13.3	
		-52	57	5000	345	8000	552	1.62	26.6	486	8.0	
		-72	80	11000	758	11000	758	1.16	19.0	348	5.7	
	HF, HSF, DHF, DSHF	-122	138	15000	1034	19000	1310	0.67	11.0	201	3.3	
		-202	230	30000	2069	33000	2275	0.41	6.7	92	1.5	
		-302	346	30000	2069	50000	3448	0.27	4.5	61	1.0	
		DXHF, DSXHF	-452	520	30000	2069	70000	4827	0.18	3.0	41	0.7
-602	690		30000	2069	75000	5171	0.14	2.3	32	0.5		
Triple	DXHF, DSXHF	-683	780	30000	2069	70000	4827	0.18	3.0	25	0.41	
		-903	1038	30000	2069	75000	5171	0.14	2.3	20	0.33	
	DSXHW	-1373	1575	30000	2069	100000	6895	0.086	1.4	12	0.197	
2.2	AFD, DFD, ASFD, DSFD		-B60	69	6500	448	6500	448	1.34	2.2	369	6.0
	150 psi/10.5 bar	ASFD	-10	11.5	1600	110	1600	110	8.10	133	1823	29.9
-15			17	2400	165	2400	165	5.40	89	1215	19.9	
-25			29	4000	276	4000	276	3.24	53.2	729	11.9	
-35			40	5700	393	5700	393	2.39	38.0	529	8.6	
-60			69	9800	676	9800	676	1.34	22.0	302	4.9	
-100			115	15000	1034	16500	1138	0.82	13.4	185	3.0	
-150			173	15000	1034	20000	1380	0.54	9.0	122	2.0	
-202			230	30000	2069	33000	2275	0.82	13.4	144	2.4	
Single	GWD, GSFD, DGFD, DGSFD, DGSTVD	-12	14.8	1850	128	4000	276	15.9	260	5009	82.1	
		-35	40.3	4375	302	4375	302	6.0	98	1890	31.0	
	GW, DGF, GSF, DGSE, DGSTV	-60	69	7500	517	7500	517	3.5	57	1103	18.1	
		-100	115	8000	552	10000	690	2.1	34	662	10.8	
125 psi/8.6 bar	8SFD, 8DSFD, 8DSTVD	-25	27.5	3575	246	4000	276	14.0	229	2660	44	
		-40	43.5	6000	414	6000	414	8.90	145	1691	28	
		-65	73	10000	690	10000	680	5.40	88	1026	17	
		-100	112	10000	690	10000	680	3.52	57.5	669	11	
	8HSFD	-225	253	22500	1530	22500	1530	1.56	25.5	296	5	
	10 hp	D14STD, D14SFD	-125	138	16000	1103	16000	1103	8.80	144	704	11.5
-315			347	36000	2482	36000	2482	3.50	57.4	280	4.6	

Typical Performance Based on 100 psi (7 bar) Pressure and Drive Flow Data on Page 5							
Outlet Pressure		Outlet Flow		Outlet Pressure		Outlet Flow	
psi	bar	cu in/min	l/min	psi	bar	cu in/min	l/min
225	15.5	500	8.20	415	29	249	4.09
300	21	350	5.70	600	41	160	2.60
700	48	200	3.28	1125	78	100	1.64
1500	103	90	1.48	2000	138	48.9	0.80
1700	117	70	1.15	3100	214	39.6	0.65
3000	207	39	0.64	6000	414	19	0.31
7500	517	20	0.33	8500	586	17	0.28
9000	345	18	0.30	10000	690	14	0.23
7500	517	14	0.23	15000	1034	12	0.20
700	48	400	6.55	1450	100	61	1
1000	69	270	4.42	2000	138	120	2
1250	86	230	3.77	2500	172	61	1
1500	1034	200	3.28	3000	207	62	1
1750	121	170	2.78	3500	241	82	1.33
2000	138	110	1.8	5000	345	66	1.08
2500	172	87	1.42	7500	517	37	0.6
5000	345	57	0.93	10000	690	26	0.43
7500	517	37	0.6	15000	1034	7	0.11
50	3	3000	81.9	150	10.3	1000	16.4
100	7	1953	32	400	28	750	12.3
400	28	1000	16.4	990	68	500	8.19
750	52	598	9.8	1600	110	200	3.28
1000	69	403	6.6	2500	172	195	3.2
2000	138	350	4.1	3500	248	98	1.6
3000	207	152	2.5	6200	427	50	0.82
4000	276	100	1.64	10000	690	24.4	0.4
7000	483	59.7	0.98	15000	1034	29.9	0.49
7000	483	59.7	0.98	15000	1034	29.9	0.49
7500	517	39.6	0.65	24000	1655	9.8	0.16
15000	1034	29.9	0.49	27000	1862	20.1	0.33
36000	2483	14.6	0.24	49000	3103	9.2	0.15
400	28	799	13.1	2100	145	200	3.28
700	48	500	8.2	3000	207	152	2.5
1900	131	239	4.9	5000	345	97.6	1.6
2000	138	226	3.7	7500	517	50	0.82
4000	276	122	2	12000	828	40.2	0.66
7000	483	91.5	1.5	20000	1379	20.1	0.33
10000	690	45.2	0.74	30000	2069	15.2	0.25
10000	690	34.8	0.57	40000	2789	15.2	0.25
15000	1034	24.4	0.4	50000	3448	12.2	0.2
15000	1034	19.5	0.32	60000	4138	4.9	0.08
15000	1034	15.9	0.26	70000	4828	5.5	0.09
16000	1103	9.2	0.15	90000	6207	3.1	0.05
1000	69	348	5.7	5500	379	152	2.5
500	34	1520	24.9	1000	69	380	6.22
750	52	1030	16.88	1500	103	260	4.26
1000	69	662	10.85	2500	172	162	2.66
1500	1034	465	7.62	3500	248	100	1.64
3000	138	248	4.07	6000	414	56	0.92
5000	345	151	2.48	10000	690	41	0.67
7500	517	103	2	15000	1034	27	0.44
10000	690	63	1.03	20000	1379	47	0.77
200	14	5004	82	1200	83	1454	24
1000	69	1770	29	3500	241	600	9.8
2000	138	976	16	5500	379	397	6.5
2000	138	573	9.4	10000	690	195	3.2
1000	69	2400	39.3	2500	172	260	4.6
2000	138	1420	23.2	4000	276	200	3.27
3000	207	980	14.4	6000	414	310	5.08
5000	345	555	9.1	10000	690	163	2.67
10000	690	270	4.4	20000	1379	144	2.36
8000	552	488	8.0	12000	828	195	3.2
15000	1034	238	3.9	30000	2069	79.3	1.3



Guidelines for Continuous Duty Applications for Maximizing Seal Life Performance

Pump Series	Maximum Cycles per Minute
0.3 hp	325 cpm
0.75 hp	225 cpm
1.5, 2.0 and 2.2 hp (Single and Double Drive Piston)	80 cpm
2.0 hp (Triple Drive Piston)	60 cpm
3.0 hp	80 cpm
6.0 hp	60 cpm
8.0 hp	50 cpm
10.0 hp	40 cpm

.33 hp (.25 kW) M Series Pump Models



Key Features

- Choice of 5 models, 9 ratios, 27 possible combinations
- Flows to 2 gpm (7.5 l/min)
- Choice of wetted materials
- Single air head
- Drive pressure 25 to 125 psi (1.8 to 9 bar)
- Pressures to 25000 psi (1724 bar)
- All Hydraulic fluids, water (plain or DI), solvents, mild chemicals, liquefied gases

Optional Modifications

Number	Description
-HP	Hand pump attachment (with handle). Provides manual operation of pump for precision pressure control or use without air power.
26082	Handle only.
26220-2	With handle.
26220-3	Without handle.
	Kits for converting existing units.
-V	Manual release with relief valve. For M and MS pumps only. Provides high pressure needle valve with internal adjustable safety relief downstream of pump outlet checks. Tank return is 1/4" NPT in pump body.
26063-3	Dead Man valve, 1/4" NPT port.
26064-3	Combination air regulator/filter with gauge, 1/4" NPT port.
26065-3	Speed control valve, 1/4" NPT port.
26065-3 plus 26064-3	-C air controls installed on pump, 1/4" NPT port.
26320	Manifold mount inlet port. Provides O-ring boss in aluminum block to enable mounting on side of tank below oil level. Modification applies to M-21 through M-188 only.
26590	Palm or foot start/stop button drive. Spring loaded shut.
26700-1	Air O/P release valve.
26925	Remote start/stop control. Provides 1/4" NPT bleed signal port for single line remote control.
29002	Viton air drive.
29697	Single stroke from remote air pulse. Useful for metering applications. One stroke per air pulse signal; eliminates automatic cycling, 1/4" NPT signal port.
51331	EPR seals for liquid section for 29723-100 ratio pumps.
51788	Piped exhaust—standard. Provides connection ports for drive and pilot exhausts. Enables under tank top mounting and for natural gas drive.
51794	Piped exhaust—sour gas. With hand pump (HP).
51794-2	Piped exhaust—sour gas. Without hand pump (HP).
51804	Muffler for use with piped exhaust modifications below, 1/4" NPT male port.

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
M, MDSTV	-5	625 psi (43 bar)	.83 cu in (13.6 ml)
M, MS ²¹	-7	900 psi (62 bar)	.6 cu in (9.8 ml)
	-12	1500 psi (103 bar)	.36 cu in (5.9 ml)
M, MS ²¹ 29723 ²¹	-21	2600 psi (179 bar)	.2 cu in (3.3 ml)
	-36	4500 psi (310 bar)	.12 cu in (2.0 ml)
	-71	8800 psi (607 bar)	.06 cu in (1.0 ml)
	-110	13500 psi (931 bar)	.039 cu in (0.6 ml)
	-188	15000 psi (1034 bar)	.023 cu in (.4 ml)
MS	-220	25000 psi (1723 bar)	.021 cu in (.34 ml)

²¹ Not available in 188 ratio

(1) Maximum intermittent pressure for stainless steel in the MS and 29723 is 10000 psig (690 bar)

For service codes, see page 17.

For weights and dimensions, see page 18.

Number	Description
51809	Normally open air operated release with relief valve. Provides highest release flow capacity. Will hold full pump psi piloted from drive air. Vents are not threaded. Ref. drawing 56643 for tank top mounting parts.
51809-1	Normally closed air operated release with relief valve. Used to hold hydraulic jacks. Will release up to 11000 psi (using 100 psi air). Vents are not threaded. Ref. drawing 56643 for tank top mounting parts. Not available in 188:1 ratio.
51810	Safety relief valve. Relief is upstream of outlet check. Vent hole 1/16 NPT M or MS series -21 through 188.
51811	External air pilot. Provides 1/4" NPT port for external air to pilot for remote start/stop.
52340	Solid air cap.
52980	Electric stroke counter provision. Micro switch (BZE5-2RQ) mounted on upper cap trips with each cycle.
53175	Level II cleaning.
53304	High pressure outlet port. Fits 1/4" O.D. high pressure threaded and coned tube.
53784	Piped exhaust (drive only). For field conversion of any .33 HP pump. Provides 1/4" NPT exhaust port.
53935	Low temperature drive. Enables operation down to 5°F. Some sacrifice of seal life at normal temperature. M or MS series.
54179	Stroke adjuster (includes 29697 above). Useful for metering applications. Knurled knob with vertical scale on pump cap.
57905	No return spring. Provides improved fill on suction stroke pumping liquefied gases by utilizing the inlet pressure. Only available on M and MS series.
59888	Cycle timer installed.
80103	Noise reduction kit fitted.
80348	SAE outlet for M-pumps, 1/4" SAE, 6500 psi (448 bar) max.
81499	EPR Seals for M and MS series for Liquid Section.
82367	SS trim for 1/4 hp drive
82500	ATEX Modification (Available on MS & 29723 but not M series).
85630	Conversion kit, new style exhaust muffler.
86337	Extended life air drive.

.75 hp (.56 kW) Pump Models



Key Features

- One model available in 9 ratios
- Output pressures to 15000 psi (1034 bar)
- Flows to 1.5 gpm (5.7 l/min)
- Choice of wetted materials
- Single air head
- Drive pressure 3 psi to 100 psi (.2 to 7 bar)

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
48	-14	1500 psi(103 bar)	9 cu in(148 ml)
	-21	2300 psi(159 bar)	6 cu in(98 ml)
	-25	2700 psi(186 bar)	5 cu in(82 ml)
	-30	3200 psi(221 bar)	43 cu in(7.1 ml)
	-37	3900 psi(262 bar)	35 cu in(5.7 ml)
	-55	6000 psi(414 bar)	22 cu in(3.6 ml)
	-75	7800 psi(538 bar)	17 cu in(2.8 ml)
	-100	10600 psi(731 bar)	13 cu in(2.1 ml)
	-150	15000 psi(1034 bar)	088 cu in(14 ml)

For service codes, see page 17.

For weights and dimensions, see page 19.

Optional Modifications

Number	Description	Number	Description
-C	Air drive controls.	59888	Cycle timer installed.
56564	Extreme cycling service. Not recommended for long stall periods.	80637	SAE outlet fitting for ratio 37 to 100, N° SAE 6900 psi(448 bar) max.
56594	External air pilot port N° NPT. Allows remote start/stop of pump.	82104	Viton air drive.
57639	Low drive air pressure. Allows user to regulate drive air to as low as 3 psi(.2 bar).	82900	ATEX modification.
57960	Single acting drive. Used for pumping liquefied gases under pressure.	86337	Extended life air drive.
59475	1/4" NPT port on drive for recycle valve connection.		
59354	Noise reduction kit fitted.		



1.5 hp (1.12 kW) Pump Models



Key Features

- Choice of 11 models, 13 ratios, 48 possible combinations
- Output pressures to 50000 psi (3448 bar)
- Flows to 22 gpm (83.0 l/min)
- Choice of wetted materials
- Single air head
- Drive pressure 3 to 150 psi (.2 to 10 bar)

Optional Modifications

Number	Description
-C	Air controls (filter, regulator, gauge, shut-off). 1/2" NPT.
-CP	Air controls with precision regulator. 1/2" NPT.
-CO	Air controls with recycle button. 1/2" NPT.
-CPO	Air controls with precision regulator and recycle button. 1/2" NPT.
-B	Bottom Inlet (designate "B" before ratio dash number "BR" on -B10, -B15, -B22 and -B32) 1.5 hp and 2 hp pumps (not applicable to high output, chemical, 2.2 hp, or AWD series pumps).
-W	Additional upper foot bracket.
16821	Low air pressure control feature. For operating at air pressures as low as 3 to 4 psi (.2 to .3 bar). Includes 28881 modification.
16831	Low temperature modification. For special sealing in air drive for operating temperatures from as low as -20°F up to normal +120°F.
16834	Exhaust adapter. With back pressure balance piston.
17860	Electrical stroke counter provision. Includes B2E5-2RQ microswitch.
25721	Mechanical stroke counter, installed (6 digit).
27964	Interconnecting inlet-outlet tubing. 1/2" female for 4:1 ratio series pumps (ATV-4 or DTV-4).
28000	Threaded vent (or purge) ports on standard distance piece. Except 1.5:1 ratio.
28003	Test port. Provides access port in pump's body between inlet and outlet check valves for 1.5 hp and 2 hp pumps. -10 ratio or higher, single acting.
28881	Air pilot modification. 1/2" NPT. Allows remote start/stop of pump.
29376	Three-way cycling spool. For 1.5 hp and 2 hp single acting pumps, for use with CO ₂ .
29702	Single stroke modification.

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
DSTV ⁽¹⁾	-1.5	160 psi (11 bar)	319 cu in (513.0 m)
ATV, DTV ⁽¹⁾	-4	1200 psi (83 bar)	200 cu in (328.0 m)
AW, ASF, DF, DSF, DSTV	-8:10 -8:15 -25 -35 -60	1600 psi (110 bar) 2400 psi (165 bar) 4000 psi (275 bar) 5700 psi (393 bar) 9800 psi (676 bar)	4 cu in (65.4 m) 2.7 cu in (44.3 m) 1.6 cu in (26.5 m) 1.2 cu in (19 m) .7 cu in (11 m)
AW, ASF, DF, DSF, DSTV	-100 -150	16500 psi (1138 bar) 20000 psi (1375 bar)	4 cu in (65.7 m) 28 cu in (4.5 m)
HF, HSF, DSHF	-151 -225 -300	25000 psi (1724 bar) 37000 psi (2551 bar) 50000 psi (3448 bar)	28 cu in (4.5 m) 18 cu in (3.0 m) 14 cu in (2.3 m)
HF	-450	45000 psi (3103 bar)	.09 cu in (1.5 m)

(1) These series are "lift" pumps and maximum outlet pressure is (air drive x pump ratio) + inlet pressure.

For service codes, see page 17.

For weights and dimensions, see page 20.

Number	Description
23806	Double distance piece. For 1.5 hp and 2 hp pumps only, except 1.5:1 ratio.
51050	Extreme service cycling modification. Not recommended for long stall periods.
51056	Exhaust/pilot vent combination.
51331	EPR (Ethylene propylene) static seals in wetted section. Applies to distance piece pumps only.
51345	Sour gas drive provision to N.A.C.E. specifications. 1.5 hp to 2.2 hp distance piece pump only, single air head and double air head.
52788	Viton seals air drive.
53825	Severe Arctic low temperature service. -25, -35, -60, -100, -150, -151, -225, -300, -450 ratios.
54885	Rotate pump body 90° from standard.
54935	SS trim for 5/3 air drive.
55305	Tube ports. 1/2" SAE inlet and outlet. For 1.5 hp to 2 hp pumps. 15 pump minimum.
55516	Polyurethane ("W") seal. For ForTV series pumps, except high output models.
55630	Stainless steel (AISI-316) distance piece. For 1.5 hp to 2 hp pumps.
58353	Noise reduction kit fitted. Not available on AFD, DFD, ASFD or DSFD.
82460	HNBR seals in air drive section.
82500	ATEX modification (not available on AWW or DSXHV pumps).
82388	1/2" High pressure outlet converts medium ratio 10-122 outlet K port to high pressure port.
86337	Extended life air drive.

1.5 hp (1.12 kW) High Output Flow Pumps

Available in a choice of 3 models, these high output, low ratio pumps are capable of pressures to 1200 psi (82 bar) and flow rates of up to 22 gpm (83 l/min). These are "lift" pumps whereby the outlet pressure equals the air drive x the pump ratio plus the inlet pressure.

Model DSTV-1.5 has a maximum air drive of 150 psi (10 bar) and is capable of pressures up to 180 psi (11 bar). The model ATV and DTV-4 work on a maximum air drive of 150 psi (10 bar) and have a maximum pressure rating of 1200 psi (83 bar). A noise reduction modification is available for applications where noise level is an issue.


Distance Piece (Separation)

Pumps with prefix "D" in the model number have aluminum distance piece between the air drive and pump section (except DSTV-1.5). Vent holes can be threaded 1/2" NPT female at extra cost. Specify modification number 28000. Horizontal mounting is recommended for non-exchange of contaminants.


Mounting Brackets

All series mounting brackets have 7/16" holes (slots) for 3/8" bolts. Upper mounting brackets are not furnished as standard on single air head non-distance piece units.

Dimensional Data

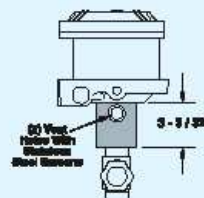



Mounting Brackets

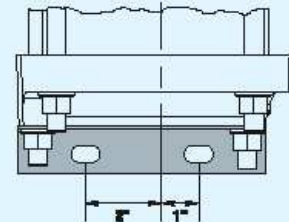

Optional Pump Inlets for Tank Mounting

To specify ratios -10, -15, -22 or -32, add "BR" between the model number and the ratio, e.g., AWW-BR10.

Inlet externally threaded 1 1/4" NPT male
Internally threaded 1" NPT female

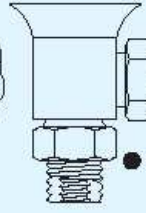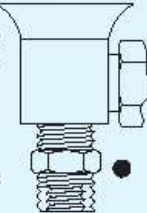

To specify ratios -25 through -903, add "B" between the model number and the ratio, e.g., AWW-B25.

Inlet on the bottom and externally threaded 1" NPT male
Internally threaded 1/2" NPT female

Drive inlet and exhaust are 1/2" NPT female. Drive inlet also includes a 1/8" NPT male x 1/8" NPSM female (straight pipe thread) swivel adapter (connecting male nipple should include 30° inside bevel for proper fit).



2 & 2.2 hp (1.49 & 1.64 kW) Pump Models



Key Features

- Choice of 16 models, 13 ratios, 46 possible combinations
- Output pressures to 100000 psi (7000 bar)
- Flows to 5 gpm (15 l/min)
- Choice of wetted materials
- Double and triple air heads
- Drive pressure 3 to 100 psi (.2 to 7 bar)

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
AW, ASF, DF, DSF, DSTV	-B22	3200 psi (221 bar)	4 cu in (66.4 ml)
	-B32	4800 psi (331 bar)	2.7 cu in (44.3 ml)
	-S2	8000 psi (552 bar)	1.6 cu in (26.6 ml)
	-T2	11000 psi (758 bar)	1.2 cu in (19 ml)
	-122	19000 psi (1310 bar)	.7 cu in (11 ml)
HF, HSF, DHF, DSHF	-202	33000 psi (2275 bar)	4 cu in (6.7 ml)
	-302	50000 psi (3448 bar)	28 cu in (4.5 ml)
DXHF, DSXHF	-452	70000 psi (4827 bar)	.18 cu in (3.0 ml)
	-602	75000 psi (5171 bar)	.14 cu in (2.3 ml)
DXHF, DSXHF	-683	70000 psi (4827 bar)	.18 cu in (3.0 ml)
	-903	75000 psi (5171 bar)	.14 cu in (2.3 ml)
DSXHW	-1373	100000 psi (6895 bar)	.09 cu in (1.4 ml)
AFD, DSFD, DFD, ASFD	-860	6500 psi (448 bar)	1.3 cu in (22 ml)

For service codes, see page 17.

For weights and dimensions, see page 20.

3 hp (2.24 kW) Pump Models



Key Features

- One model available in 8 ratios
- Output pressures to 33000 psi (2275 bar)
- Flow rates to 8 gpm (30 l/min)
- Single air head
- Drive pressure 3 to 150 psi (.2 to 10 bar)

Model	Nominal Ratio	Maximum Working Pressure*	Displacement per Cycle
ASFD	10	1600 psi (110 bar)	8.1 cu in (132.8 ml)
	15	2400 psi (165 bar)	5.4 cu in (88.6 ml)
	25	4000 psi (275 bar)	3.3 cu in (53.2 ml)
	35	5700 psi (393 bar)	2.3 cu in (38 ml)
	60	9800 psi (676 bar)	1.3 cu in (22 ml)
	100	16500 psi (1138 bar)	.8 cu in (13.4 ml)
	150	20000 psi (1379 bar)	.6 cu in (9 ml)
	202	33000 psi (2275 bar)	.8 cu in (13.4 ml)

* Continuous/Intermittent

For service codes, see page 17.

For weights and dimensions, see page 21.

Optional Modifications (for 2 hp, 2.2 hp and 3 hp pump models)

Number	Description
-C	Air controls (filter, regulator, gauge, shut-off, 1/2" NPT).
-CP	Air controls with precision regulator, 1/2" NPT.
-CO	Air controls with recycle button, 1/2" NPT.
-CP0	Air controls with precision regulator and recycle button, 1/2" NPT.
-B	Bottom Inlet (designate "B" before ratio dash number "BR" on -B10, -B15, -B22 and -B32) 1.5 hp and 2 hp pumps (not applicable to high output, chemical, 2.2 hp, or AWD series pumps)
16821	Low air pressure control feature. For operating at air pressures as low as 3 to 4 psi (.2 to .3 bar).
16831	Low temperature modification. For special sealing in air drive for operating temperatures from as low as -20°F up to normal +120°F.
16834	Exhaust adapter. With back pressure balance piston.
17860	Electrical stroke counter provision. Includes BZE5-2RL microswitch.
25721	Mechanical stroke counter. Installed (5 digit).
27964	Interconnecting inlet-outlet tubing, 1/2" female for 4:1 ratio series pumps (ATV-4 or DTV-4).
28000	Threaded vent (or purge) ports on standard distance piece. Except 1.5:1 ratio and 3 hp pump.
28003	Test port. Provides access port in pump's body between inlet and outlet check valves for 1.5 hp and 2 hp pumps, -10 ratio or higher, single acting.
28981	Air pilot modification, 1/2" NPT - Allows remote start/stop of pump.
29376	Three-way cycling spool. For 1.5 hp and 2 hp single acting pumps.
29702	Single stroke modification. Except 3 hp pump.
29806	Double distance piece. For 1.5 hp and 2 hp pumps only, except 1.5:1 ratio.

Number	Description
51050	Extreme service cycling modification. Not recommended for long stall periods.
51056	Exhaust/pilot vent combiner.
51331	EPB (Ethylene propylene) static seals in wetted section. Applies to distance piece pumps only.
51345	Sour gas drive provision to N.A.C.E. specifications. 1.5 hp to 2.2 hp distance piece pumps only. Single air head and double air head.
52788	Viton seals. Air drive only - 1.5 hp to 2.2 hp pump only.
53925	Severe Arctic low temperature service. -25, -35, -60, -100, -150, -151, -225, -300, -490 ratios except 3 hp pump.
54885	Rotate pump body 90° from standard. Except 3 hp pump.
54935	SS trim for 5/3 air drive.
55191	Mounting ring kit for AWD series.
55192	3/4 NPT inlet port installed on AWD series (in place of threaded port).
55193	Extra foot bracket installed.
55305	Tube ports, 1/2" SAE inlet and outlet - for 1.5 hp to 2 hp pumps, 15 pump minimum.
55465	Ceramic Plunger -60 Ratio.
55516	Polyurethane "W" seal in "F" series pumps-except high output models.
55630	Stainless steel (SS-316) distance piece - for 1.5 thru 2 hp pumps.
59353	Noise reduction kit fitted. Not available on AFD, DFD, ASD or D5FD.
59888	Cycle timer installed.
82460	HNBR Seals in air drive section.
82500	ATEX modification (not available on AWD or DSXHW pumps).
86337	Extended life air drive.



6 hp (4.47 kW) Pump Models



Key Features

- Choice of 10 models, 4 ratios, 20 possible combinations
- Output pressures to 10000 psi (690 bar)
- Flow rates to 21 gpm (80 l/min)
- Choice of wetted materials
- Single air head – double acting
- Drive pressure 3 to 125 psi (.2 to 9 bar)
- All hydraulic fluids, water (plain or DI), solvents

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
GW, GSFD, DGFD ⁽¹⁾ , DGSD ⁽¹⁾ , DGSTVD ⁽¹⁾	-12	4000 psi (276 bar)	159 cu in (260 ml)
GW, GSFD, DGFD, DGSD, DGSTV	-35 -60 -100	4375 psi (302 bar) 7800 psi (517 bar) 10000 psi (690 bar)	6.0 cu in (98 ml) 3.5 cu in (57 ml) 2.1 cu in (34.5 ml)

(1) Double Acting "Lift" Pumps

For service codes, see page 17.

For weights and dimensions, see page 22.

Incorporating 10 models, this heavy duty range of double acting pumps provide pressures up to 10000 psi (690 bar) and flow rates up to 4 gpm (15 l/min).

Designed to operate with air drive pressures between 40 and 125 psi (2.8 and 9 bar). For drive pressures 3 to 40 psi (.2 to 2.8 bar), order 51875-1 mod.

8 hp (5.97 kW) Pump Models



Key Features

- Choice of 6 models, 5 ratios, 9 possible combinations
- Pressures to 22500 psi (1530 bar)
- Flow rates to 11.5 gpm (44 l/min)
- All hydraulic fluids, water (plain or DI), solvents, liquefied gases
- Choice of wetted materials
- Single air head – double acting
- Drive pressure 3 to 125 psi (.2 to 9 bar)

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
8SFD, 8DFD, 8DSFD, 8DSTVD, 8FD	-25 ⁽¹⁾	4000 psi (276 bar)	14 cu in (229 ml)
8SFD, 8DSFD	-40 -65 -100 ⁽¹⁾	6000 psi (408 bar) 10000 psi (690 bar) 10000 psi (690 bar)	9 cu in (145.3 ml) 5.4 cu in (88.2 ml) 3.5 cu in (57.5 ml)
8HSFD	-22.5 ⁽¹⁾	22500 psi (1530 bar)	1.6 cu in (25.5 ml)

(1) Double Acting "Lift" Pumps

For service codes, see page 17.

For weights and dimensions, see page 23.

10 hp (7.46 kW) Pump Models



Key Features

- Choice of 4 models, 4 ratios, 4 possible combinations
- Pressures to 36000 psi (2500 bar)
- Flow rates to 3 gpm (11 l/min)
- Drive pressure 3 to 125 psi (2 to 9 bar)
- All hydraulic fluids, water (plain or DI), solvents, liquefied gases
- Choice of wetted materials

Model	Nominal Ratio	Maximum Working Pressure	Displacement per Cycle
D14 STD	129 ¹	16000 psi (1103 bar)	8.8 cu in (144.2 ml)
	315 ¹	36000 psi (2482 bar)	3.5 cu in (57.4 ml)
D14 SFD	129 ¹	16000 psi (1103 bar)	8.8 cu in (144.2 ml)
	315 ¹	36000 psi (2482 bar)	3.5 cu in (57.4 ml)

(1) Double Acting "LIFT" Pumps

For service codes, see page 17.

For weights and dimensions, see page 23.

Incorporating two basic models, this heavy duty range of double acting pumps provide pressures up to 36000 psi (2482 bar) and output flow rate up to 3 gpm (11 l/min).

Operating from a maximum air drive pressure of 125 psi (9 bar), these pumps are designed for medium to high pressure service with minimum maintenance.

These large, slow speed pumps approach a seal life as high as 5 times that of many smaller pumps and this advantage becomes ever greater in heavy duty service involving water, or other liquids with negligible lubricity.

Optional Modifications (for 6 hp, 8 hp and 10 hp pump)

Number	Description
C	Air controls.
17860	Electrical stroke counter provision (includes BZEE-2RQ micro switch).
25721	Mechanical stroke counter installed (5 digit).
29077	Interconnecting tubing – 6 hp and 8 hp pumps, double ended.
29077-1	Interconnecting tubing – 6 hp and 8 hp pumps, double ended low ratio pumps.
29078	Same as 29077, 29077-1 double ended w/distance piece.
29078-1	Same as 29077, 29077-1 double ended w/distance piece low ratio pumps.
29079	Interconnecting tubing – 10 hp pumps.
29125	External pilot modification – for 6 hp thru 10 hp pumps.
51875-1	Low air pressure control – for 6 hp thru 10 hp pumps.
54030	Sour gas air drive provision to NACE spec. 6 hp distance piece pumps only.

Number	Description
54312	Extreme service cycling modification – for 6 hp thru 10 hp pumps.
54936	Exhaust/bleed vent combiner.
55330	Interconnecting tubing 8D SFD-100 low pressure inlet.
55330-1	Interconnecting tubing 8D SFD-100 high pressure inlet.
55366	Interconnecting tubing 8D SFD-225.
57002	Witon seals – air drive only – 6 hp.
57944	Witon seals – air drive only – 8 hp.
59688	Cycle timer installed.
82500	ATEX modification available for 6 hp only, not available on 8 hp or 14 hp drive, nor on GW, GSE, DGSF, G SFD, or DGSFD models.
86337	Extended life air drive.



www.haskel.com

15

Power System Specialists

World safety standards and quality demands are rising. Component manufacturers are required to provide test certification and product quality assurance which can only be determined using the types of systems which Haskel can provide. Typically, we have built systems for production and field testing the proof, leak, and burst aspects of hoses, cylinders, and valves.

These systems can be portable, mobile, or static test rigs. We also offer a range of standard pressure packs used for power jacking, clamping, and other applications where reliable power is needed.

Selecting Your Accessories

Haskel can either provide accessories separately or supply them fitted to form a complete package suited to your application. Additionally, Haskel can fit customer nominated accessories. Our accessories catalog is available and our technical support team is always ready to advise you on the most suitable choice of accessories for your application.

- Air pilot switches
- Air pilot valves
- Regulating relief valves
- Directional control and release valves
- Hydraulic accumulators, gas receivers and storage cylinders
- High pressure valves, fittings and tubing
- Plenum chambers
- Port adapters
- Pressure regulators
- Gauge snubbers
- Filters
- Stainless steel check valves
- Intensifiers with integral checks for cycling
- Capillary type gauge snubbers

Quality and After-Sale Service



Haskel meets the requirements of international quality assurance ISO 9001. Build quality is matched by an innovative design and problem solving ability which stems from years of experience. Our representatives around the world are carefully chosen and trained to help you arrive at a correct product choice, and to offer a maintenance and parts service that is second to none.

Please ask for your copy of our latest accessories brochure.



Liquids Compatible with Haskel Pumps

To assist in easier pump selection, we have classified various popular liquids in groups and assigned to each group a service code. These service code numbers are featured in the chart to the right and are designated for each pump series. Seals and other wetted materials can be supplied to suit your preferred liquid. For advice, please contact our technical services personnel at 818-843-4000.

Services

Service Codes

1 Petroleum-based oils, kerosene, water with 5% soluble oil.

2 Plain water, diesel fuel.

3 Most phosphate ester-based fire-resistant hydraulic fluids, e.g. Pydraul, Lindol, Cellulube, Fyrquel, and Houghtosafe 1120 and petroleum-based solvents compatible with UHMWPE (Ultra-high Molecular Weight Polyethylene) dynamic seals and Viton static seals.

4 Petroleum-based solvents, e.g. boron fuels, aromatic hydrocarbons (benzene, toluene, xylene, hylene, etc.); chlorinated solvents (trichlorethylene, carbon tetrachloride, chlorobenzene, etc.); mercaptans, Dowtherm A, fluorinated solvents (fluorobenzene, fluorochlorethylene, etc.); Dowtherm E, plus all of Group 3 and some mildly corrosive acids compatible with wetted materials. See note 5A for service with methyl-ethyl-ketone, methyl acetone, diacetone, alcohol and freon 22.

5 Skydrol and Aerosafe hydraulic fluid; acetone and some alcohols (ethyl, methyl, and isopropyl).

5A. Also suitable for these fluids if Viton static seals are replaced with EPR; specify modification number 51331 (no extra charge); e.g., 51331-MDTV-5. Most phosphate ester-based fluids solidify at approximately 30000 psi.

6 Deionized water; demineralized water.

Note: Dynamic seal life with non-lubricating fluids will understandably be less than with lubricating types.

Operating Temperatures

Drive Section

-4° (25°F) to +65°C (150°F) (low temperature seals are available for Arctic operation).




Liquid Section


For reasonable seal life, high temperature should be limited to 54° C (130° F), for F and W seal models, 135° C (275° F) for T and TV models (with distance piece).

hp	Model	Services						
		1	2	3	4	5	5A	6
.33	M	•						
	MS	•	•					
	MDTV	•		•			•	
	MDSTV	•	•	•	•		•	
	MCPV	•	•	•	•	•		
	29723	•	•	•		•		•
.75	4B -14 to -37	•						
	4B -55 to -150	•	•					
1.5 2 2.2	AW	•						
	ASF	•	•					
	DF	•		•			•	
	DSF	•	•	•			•	•
	HF	•						
	HSF	•	•					
	DHF	•					•	
	DSHF	•	•				•	•
	DSTV	•	•	•	•		•	
	ATV	•	•					
	DTV	•	•				•	
	DSTV -1.5	•	•	•	•		•	•
	AFD	•						
	DFD	•		•			•	
	ASFD	•	•					
	DSFD	•	•	•			•	•
3	DXHF	•					•	
	DSXHF	•	•				•	•
6	DSXHW	•	•					
	ASFD	•	•					
	GW	•						
	GSF	•	•					
	DGF	•		•			•	
	DGSF	•	•	•			•	•
	DGSTV	•	•	•	•		•	
	GWD	•						
	GSHU	•	•					
	DGFD	•		•			•	
	DGSFD	•	•	•	•		•	•
	DGSTVD	•	•	•	•		•	
8	8FD	•						
	8SFD	•	•	•	•		•	
	8DFD	•						
	8DSFD	•	•					
	8DSTVD	•		•			•	
	8HSFD	•	•	•	•		•	
10	D14STD -125	•	•	•	•		•	
	D14STD -315	•	•	•	•		•	
	D14SFD -125	•	•	•			•	•
	D14SFD -315	•	•	•			•	•


Weights and Dimensions

.33 hp (.25 kW) M Series Pump Models

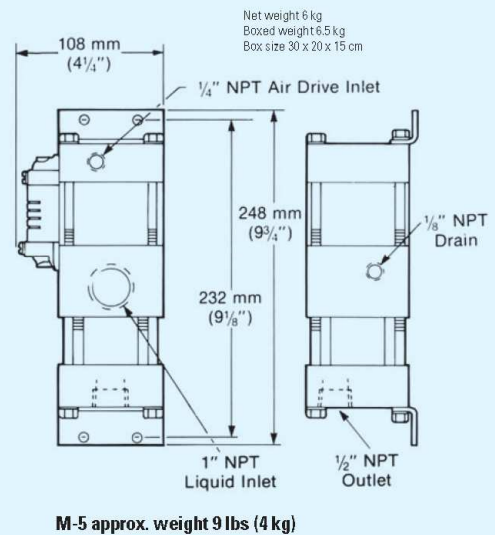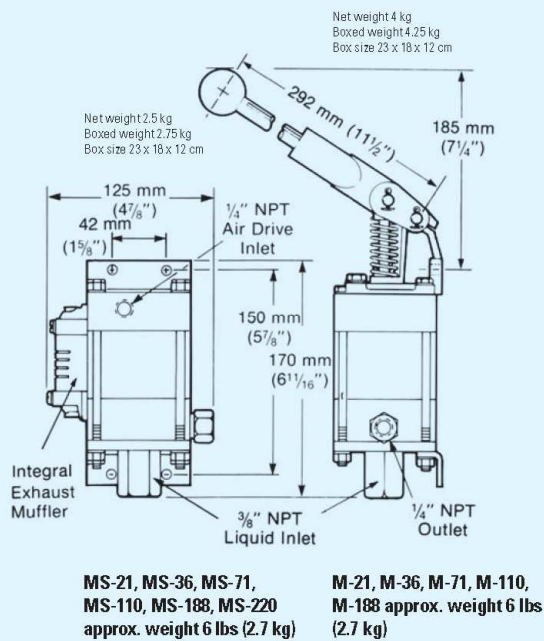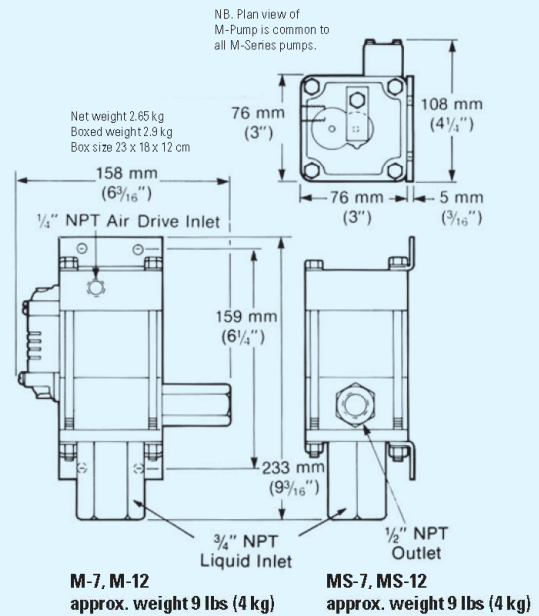

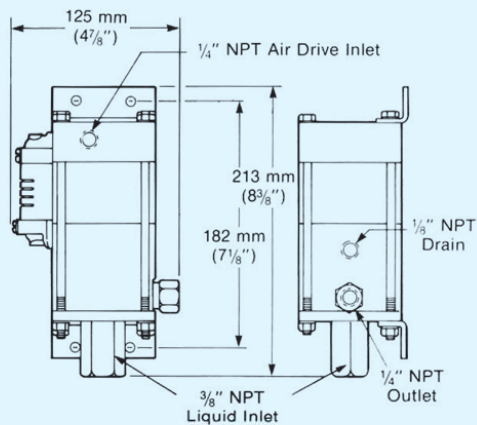


29723-21, 29723-36, 29723-71, 29723-110
approx. weight 6.5 lbs (3 kg)




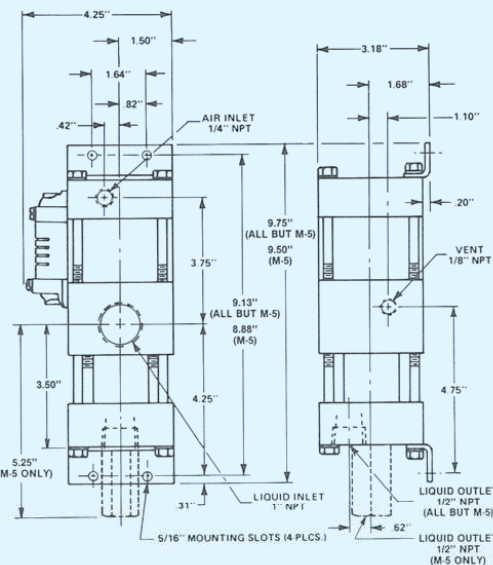


MDSTV-5
Approx weight 15 1/2 lbs (7 kg)




.75 hp (.56 kW) Pump Models

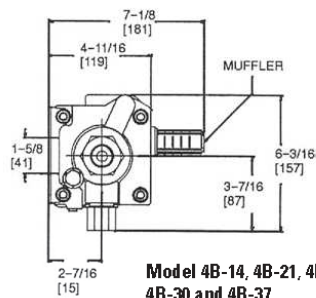



Model 4B-14, 4B-21, 4B-25,
4B-30 and 4B-37

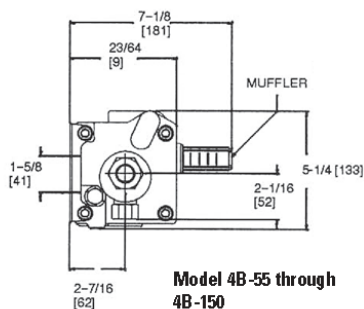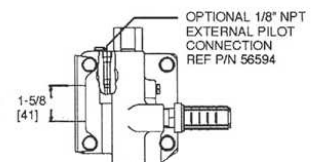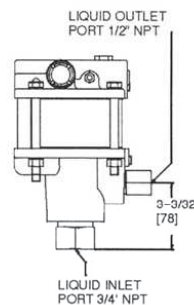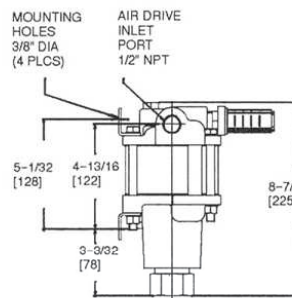


Model 4B-55 through
4B-150

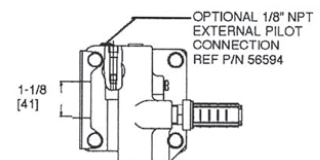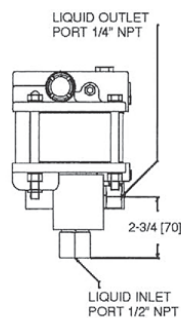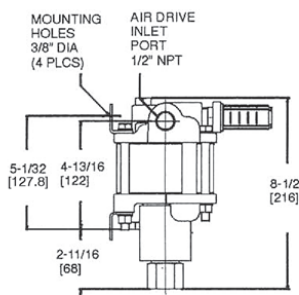

1.5 hp, 2 & 2.2 hp (1.12, 1.49 & 1.64 kW) Pump Models

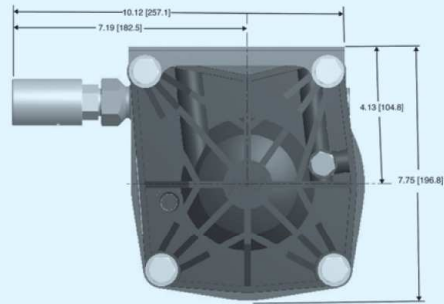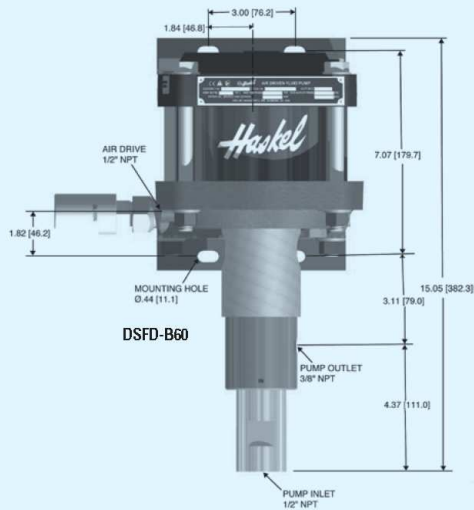


Net weight 18 kg
Boxed weight 20 kg
Box size 66 x 42 x 50 cm

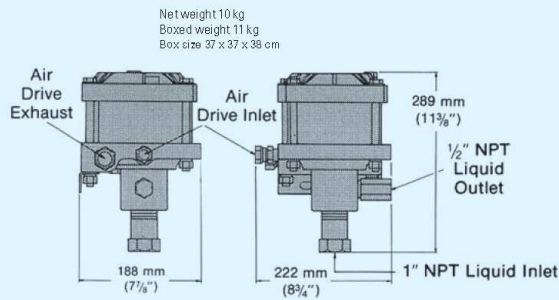


**1.5 and 2 hp low ratio pumps;
-B10 and -B15 ratios**


Net weight 10 kg
Boxed weight 11 kg
Box size 37 x 37 x 38 cm

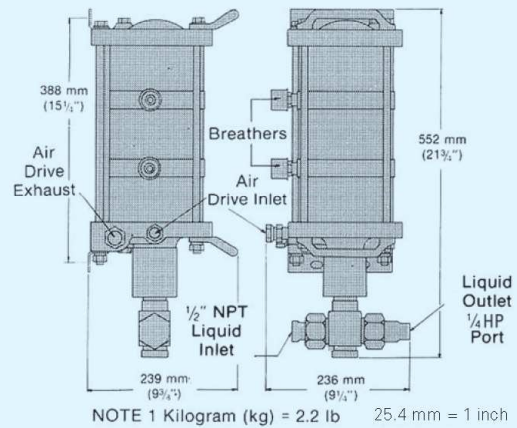

**1.5 and 2 hp high ratio pumps;
-683 and -903 ratios**

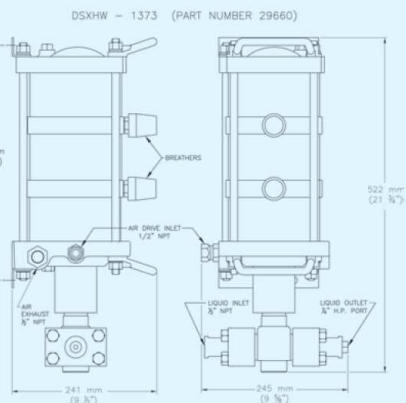


2 & 2.2 hp (1.49 & 1.64 kW) Pump Models

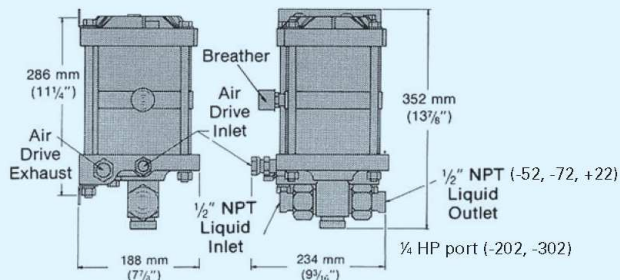


**1.5 and 2 hp medium ratio pumps;
-52, -72, -122, -202 and -302 ratios**

Net weight 18 kg
Boxed weight 19 kg
Box size 45 x 37 x 44 cm

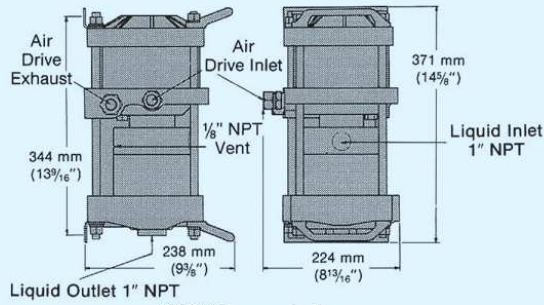

DSTV-1.5 pump; single acting, high output


Net weight 10 kg
Boxed weight 11 kg
Box size 45 x 37 x 44 cm

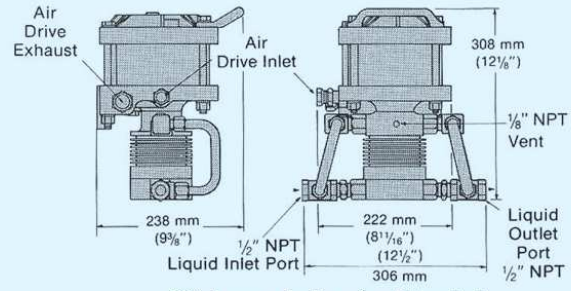


ATV-4 pumps; double acting, high output

Note: For model DTV-4, add distance piece dimension from page 11.
Interconnecting inlet and outlet port tubing shown.

Net weight 9.5 kg
Boxed weight 10 kg
Box size 25 x 26 x 22 cm

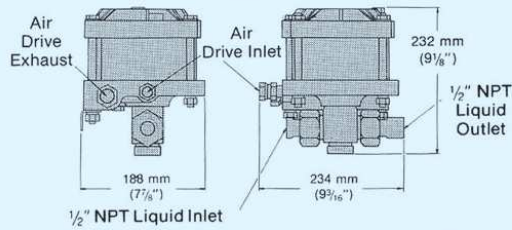


1.5 and 2 hp medium and high ratios; -25 through -150, -151, -225, -300 and -450 ratios

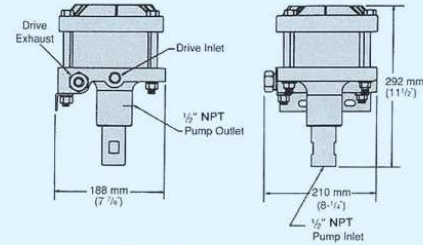


AFD or ASFD, -B60, -B100 pumps; double acting, high output


3 hp (2.24 kW) Pump Models

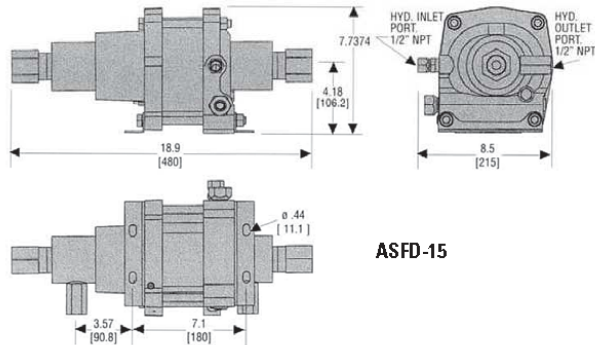

ASFD-15




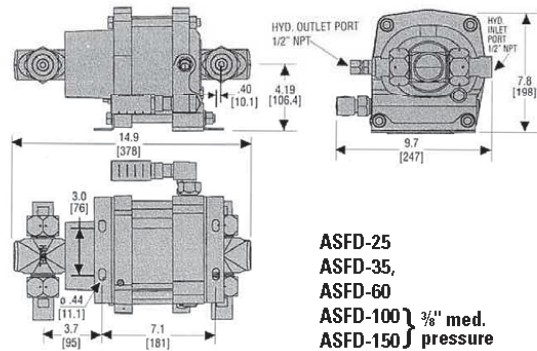


ASFD-25, ASFD-35, ASFD-60, ASFD-100, ASFD-150 } 3/8" med. pressure

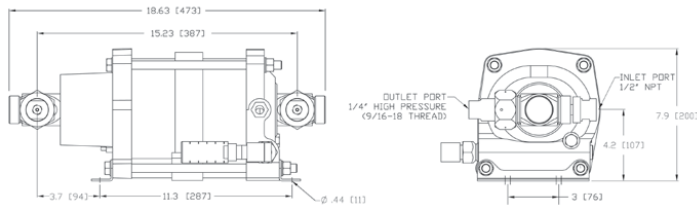

ASFD-202


6 hp (4.47 kW) Pump Models

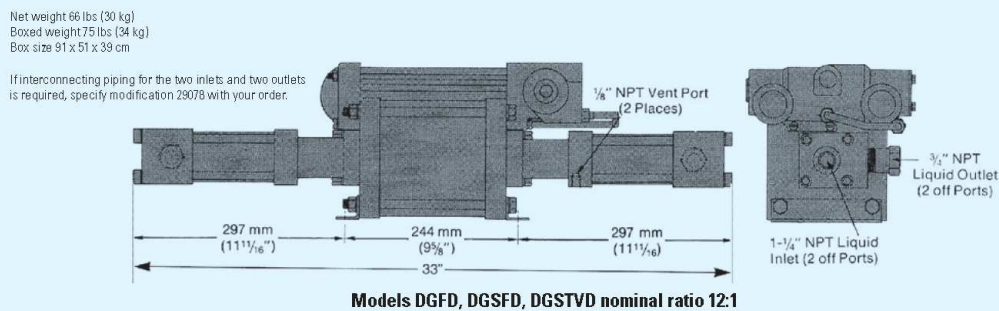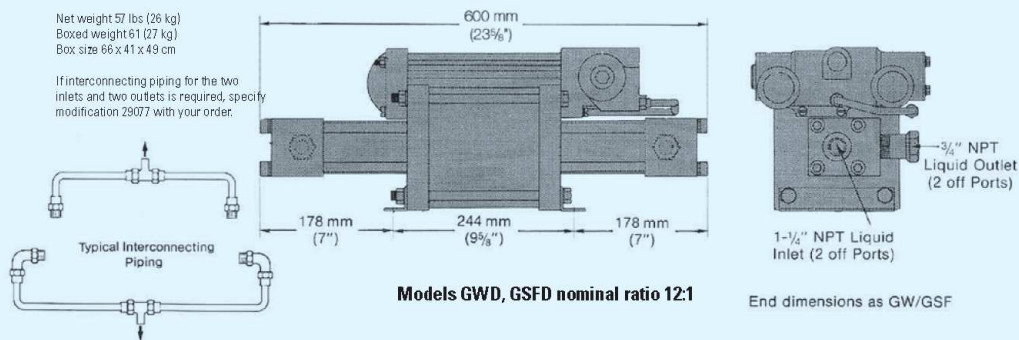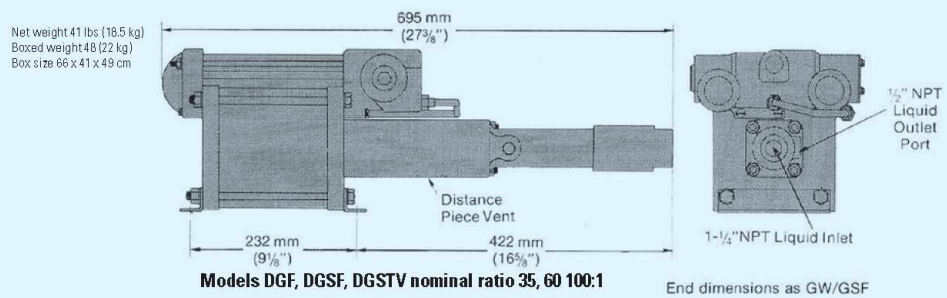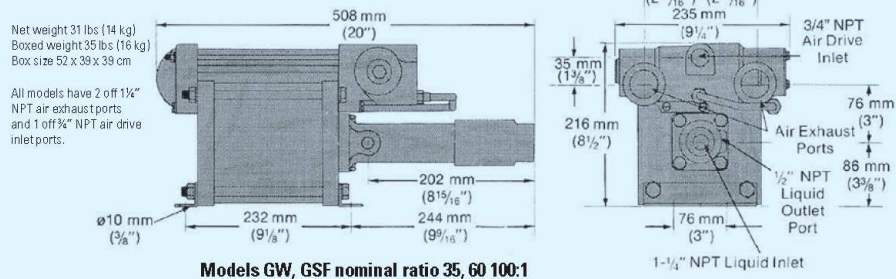

8 hp (5.97 kW) Pump Models

Model	Length	Width	Height	Weight	Air Drive	Liquid Inlet	Liquid Outlet
8FD-25 8SFD-25	25 3/8" (644.5 mm)	9 1/2" (241 mm)	11" (279 mm)	80 lbs (36 kg)	3/4"	1 1/4" NPT ⁽¹⁾	3/4" NPT ⁽²⁾
8DFD-25 8DSFD-25 8DSTVD-25	34 3/4" (883 mm)	9 1/2" (241 mm)	11" (279 mm)	94 lbs (43 kg)	3/4"	1 1/4" NPT ⁽¹⁾	3/4" NPT ⁽²⁾
8SFD-40	26 7/8" (683 mm)	9 1/2" (241 mm)	11" (279 mm)	64 lbs (29 kg)	3/4"	1" NPT	3/8" NPT
8SFD-65	26 7/8" (683 mm)	9 1/2" (241 mm)	11" (279 mm)	63 lbs (28.5 kg)	3/4"	1" NPT	1/2" NPT
8HSFD-225	28 3/8" (721)	9 1/2" (241 mm)	11" (279 mm)	71 lbs (32 kg)	3/4"	3/8" M/P (20K coned and threaded connection)	3/8" M/P (20K coned and threaded connection)
8DSFD-100	41 1/4" (1060 mm)	9 1/2" (241 mm)	11" (279 mm)	92 lbs (42 kg)	3/4"	1 1/4" NPT ⁽¹⁾	3/4" NPT ⁽²⁾

10 hp (7.46 kW) Pump Models

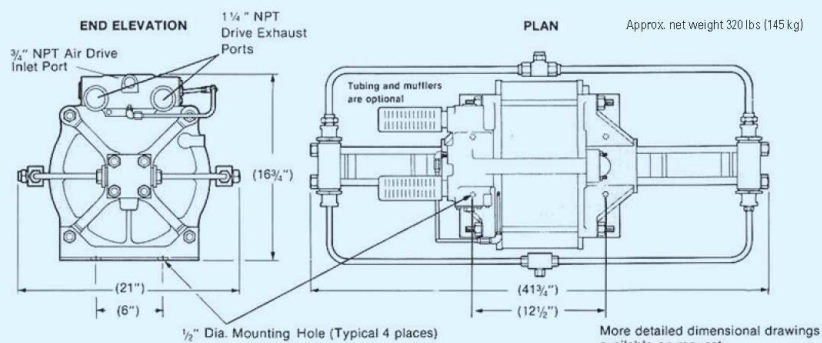

Note: See 29079 interconnecting tubing optional page 15, (29079 shown)
 Single Inlet port – 3/4 JIC male flare connection, single outlet port 3/8 HP ports (Bu Tech).
 Individual Pump ports – Liquid inlets 2 ea. 1/2 NPT ports, 2 ea. 3/8 HP ports (BuTech)

CELEBRATING OVER 60
YEARS OF HYDRAULIC AND
PNEUMATIC ENGINEERING
EXPERIENCE IN THE DESIGN
AND MANUFACTURING
OF HIGH PRESSURE
GENERATING EQUIPMENT
AND CONTROLS



016225
EMSS11320

Haskel International, Inc.

100 East Graham Place
Burbank, California 91502 USA
Tel: 818-843-4000 / Fax: 818-556-2549 or 818-841-4291
www.haskel.com

Haskel Europe Ltd.

North Hylton Road
Sunderland SR5 3JD, England, UK
Tel: 44-191-549-1212 / Fax: 44-191-549-0911
www.haskel-europe.com

Haskel Middle East



Hamilton Sundstrand Industrial ME FZE
P.O. Box 262384 Jebel Ali, Dubai, United Arab Emirates
Tel: +971 4886 2666 / Fax: +971 4886 2667
Email: sales@haskel.ae

Haskel Asia

Hamilton Sundstrand Singapore Industrial Pte. Ltd.
23 Tagore Lane #03-06
Tagore 23 Warehouse Complex, Singapore 787601
Tel: 65-6455-7559 / Fax: 65-6455-2841
www.haskel.com.sg

For further information on Haskel
products, please visit us online at
www.haskel.com

THIS DRAWING IS THE PROPERTY OF
HYDRA-TECH, INC. IT IS TO BE USED
ONLY FOR THE PURPOSES SPECIFIED
HEREON. IT IS NOT TO BE REPRODUCED
OR TRANSMITTED IN ANY FORM OR BY
ANY MEANS, ELECTRONIC OR MECHANICAL,
INCLUDING PHOTOCOPYING, RECORDING,
OR BY ANY INFORMATION STORAGE AND
RETRIEVAL SYSTEM.

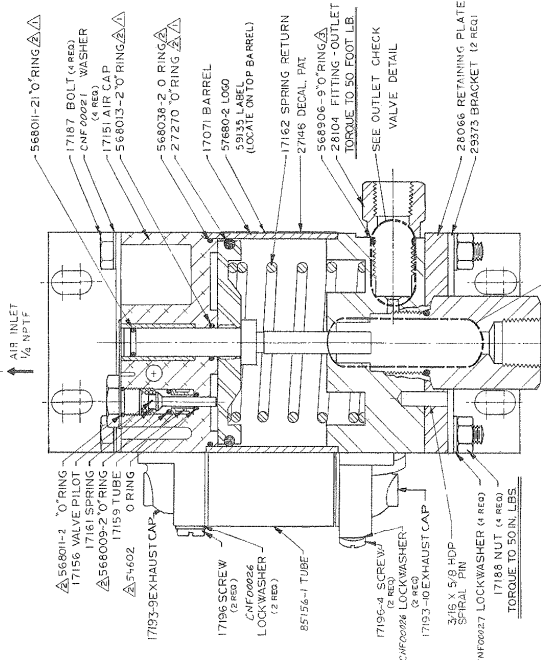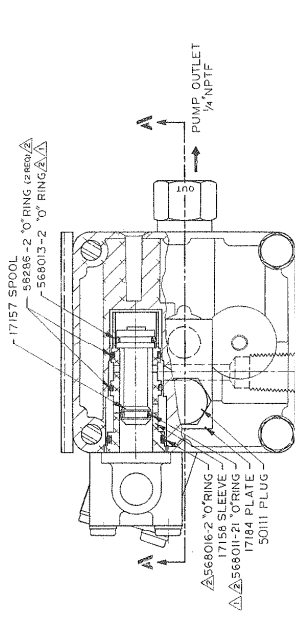


CROSS SECTION A-A

- 55763-XX TOOL MAY BE USED TO INSTALL HYD. SEAL.
- THESE PARTS ARE INCLUDED IN 17179-XX
HYDRAULIC SECTION SEALS KIT.
- THESE PARTS ARE INCLUDED IN 17178
AIR DRIVE SEALS KIT.
- APPLY VERY LIGHT COATING OF LUBRICANT PER
4P3-3.14 TO DYNAMIC SEALS IN AIR DRIVE SECTION.

NOTE:

REV	DATE	BY	CHKD	DESCRIPTION
1	10/15/83	WJ	WJ	REVISED PER ECO 11601
2	10/15/83	WJ	WJ	REVISED PER ECO 11602
3	10/15/83	WJ	WJ	REVISED PER ECO 11603
4	10/15/83	WJ	WJ	REVISED PER ECO 11604
5	10/15/83	WJ	WJ	REVISED PER ECO 11605
6	10/15/83	WJ	WJ	REVISED PER ECO 11606
7	10/15/83	WJ	WJ	REVISED PER ECO 11607
8	10/15/83	WJ	WJ	REVISED PER ECO 11608
9	10/15/83	WJ	WJ	REVISED PER ECO 11609
10	10/15/83	WJ	WJ	REVISED PER ECO 11610
11	10/15/83	WJ	WJ	REVISED PER ECO 11611
12	10/15/83	WJ	WJ	REVISED PER ECO 11612
13	10/15/83	WJ	WJ	REVISED PER ECO 11613
14	10/15/83	WJ	WJ	REVISED PER ECO 11614
15	10/15/83	WJ	WJ	REVISED PER ECO 11615
16	10/15/83	WJ	WJ	REVISED PER ECO 11616
17	10/15/83	WJ	WJ	REVISED PER ECO 11617
18	10/15/83	WJ	WJ	REVISED PER ECO 11618
19	10/15/83	WJ	WJ	REVISED PER ECO 11619
20	10/15/83	WJ	WJ	REVISED PER ECO 11620
21	10/15/83	WJ	WJ	REVISED PER ECO 11621
22	10/15/83	WJ	WJ	REVISED PER ECO 11622
23	10/15/83	WJ	WJ	REVISED PER ECO 11623
24	10/15/83	WJ	WJ	REVISED PER ECO 11624
25	10/15/83	WJ	WJ	REVISED PER ECO 11625
26	10/15/83	WJ	WJ	REVISED PER ECO 11626
27	10/15/83	WJ	WJ	REVISED PER ECO 11627
28	10/15/83	WJ	WJ	REVISED PER ECO 11628
29	10/15/83	WJ	WJ	REVISED PER ECO 11629
30	10/15/83	WJ	WJ	REVISED PER ECO 11630
31	10/15/83	WJ	WJ	REVISED PER ECO 11631
32	10/15/83	WJ	WJ	REVISED PER ECO 11632
33	10/15/83	WJ	WJ	REVISED PER ECO 11633
34	10/15/83	WJ	WJ	REVISED PER ECO 11634
35	10/15/83	WJ	WJ	REVISED PER ECO 11635
36	10/15/83	WJ	WJ	REVISED PER ECO 11636
37	10/15/83	WJ	WJ	REVISED PER ECO 11637
38	10/15/83	WJ	WJ	REVISED PER ECO 11638
39	10/15/83	WJ	WJ	REVISED PER ECO 11639
40	10/15/83	WJ	WJ	REVISED PER ECO 11640
41	10/15/83	WJ	WJ	REVISED PER ECO 11641
42	10/15/83	WJ	WJ	REVISED PER ECO 11642
43	10/15/83	WJ	WJ	REVISED PER ECO 11643
44	10/15/83	WJ	WJ	REVISED PER ECO 11644
45	10/15/83	WJ	WJ	REVISED PER ECO 11645
46	10/15/83	WJ	WJ	REVISED PER ECO 11646
47	10/15/83	WJ	WJ	REVISED PER ECO 11647
48	10/15/83	WJ	WJ	REVISED PER ECO 11648
49	10/15/83	WJ	WJ	REVISED PER ECO 11649
50	10/15/83	WJ	WJ	REVISED PER ECO 11650

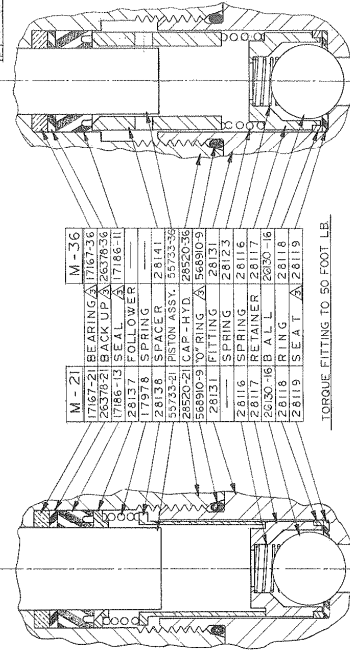

INLET CHECK VALVE M-21 AND M-36

REV	DATE	BY	CHKD	DESCRIPTION
1	10/15/83	WJ	WJ	REVISED PER ECO 11651
2	10/15/83	WJ	WJ	REVISED PER ECO 11652
3	10/15/83	WJ	WJ	REVISED PER ECO 11653
4	10/15/83	WJ	WJ	REVISED PER ECO 11654
5	10/15/83	WJ	WJ	REVISED PER ECO 11655
6	10/15/83	WJ	WJ	REVISED PER ECO 11656
7	10/15/83	WJ	WJ	REVISED PER ECO 11657
8	10/15/83	WJ	WJ	REVISED PER ECO 11658
9	10/15/83	WJ	WJ	REVISED PER ECO 11659
10	10/15/83	WJ	WJ	REVISED PER ECO 11660
11	10/15/83	WJ	WJ	REVISED PER ECO 11661
12	10/15/83	WJ	WJ	REVISED PER ECO 11662
13	10/15/83	WJ	WJ	REVISED PER ECO 11663
14	10/15/83	WJ	WJ	REVISED PER ECO 11664
15	10/15/83	WJ	WJ	REVISED PER ECO 11665
16	10/15/83	WJ	WJ	REVISED PER ECO 11666
17	10/15/83	WJ	WJ	REVISED PER ECO 11667
18	10/15/83	WJ	WJ	REVISED PER ECO 11668
19	10/15/83	WJ	WJ	REVISED PER ECO 11669
20	10/15/83	WJ	WJ	REVISED PER ECO 11670
21	10/15/83	WJ	WJ	REVISED PER ECO 11671
22	10/15/83	WJ	WJ	REVISED PER ECO 11672
23	10/15/83	WJ	WJ	REVISED PER ECO 11673
24	10/15/83	WJ	WJ	REVISED PER ECO 11674
25	10/15/83	WJ	WJ	REVISED PER ECO 11675
26	10/15/83	WJ	WJ	REVISED PER ECO 11676
27	10/15/83	WJ	WJ	REVISED PER ECO 11677
28	10/15/83	WJ	WJ	REVISED PER ECO 11678
29	10/15/83	WJ	WJ	REVISED PER ECO 11679
30	10/15/83	WJ	WJ	REVISED PER ECO 11680
31	10/15/83	WJ	WJ	REVISED PER ECO 11681
32	10/15/83	WJ	WJ	REVISED PER ECO 11682
33	10/15/83	WJ	WJ	REVISED PER ECO 11683
34	10/15/83	WJ	WJ	REVISED PER ECO 11684
35	10/15/83	WJ	WJ	REVISED PER ECO 11685
36	10/15/83	WJ	WJ	REVISED PER ECO 11686
37	10/15/83	WJ	WJ	REVISED PER ECO 11687
38	10/15/83	WJ	WJ	REVISED PER ECO 11688
39	10/15/83	WJ	WJ	REVISED PER ECO 11689
40	10/15/83	WJ	WJ	REVISED PER ECO 11690
41	10/15/83	WJ	WJ	REVISED PER ECO 11691
42	10/15/83	WJ	WJ	REVISED PER ECO 11692
43	10/15/83	WJ	WJ	REVISED PER ECO 11693
44	10/15/83	WJ	WJ	REVISED PER ECO 11694
45	10/15/83	WJ	WJ	REVISED PER ECO 11695
46	10/15/83	WJ	WJ	REVISED PER ECO 11696
47	10/15/83	WJ	WJ	REVISED PER ECO 11697
48	10/15/83	WJ	WJ	REVISED PER ECO 11698
49	10/15/83	WJ	WJ	REVISED PER ECO 11699
50	10/15/83	WJ	WJ	REVISED PER ECO 11700

INLET CHECK VALVE M-7, M-110 AND M-188

TORQUE FITTING TO 125 FOOT LB.

REV	DATE	BY	CHKD	DESCRIPTION
1	10/15/83	WJ	WJ	REVISED PER ECO 11701
2	10/15/83	WJ	WJ	REVISED PER ECO 11702
3	10/15/83	WJ	WJ	REVISED PER ECO 11703
4	10/15/83	WJ	WJ	REVISED PER ECO 11704
5	10/15/83	WJ	WJ	REVISED PER ECO 11705
6	10/15/83	WJ	WJ	REVISED PER ECO 11706
7	10/15/83	WJ	WJ	REVISED PER ECO 11707
8	10/15/83	WJ	WJ	REVISED PER ECO 11708
9	10/15/83	WJ	WJ	REVISED PER ECO 11709
10	10/15/83	WJ	WJ	REVISED PER ECO 11710
11	10/15/83	WJ	WJ	REVISED PER ECO 11711
12	10/15/83	WJ	WJ	REVISED PER ECO 11712
13	10/15/83	WJ	WJ	REVISED PER ECO 11713
14	10/15/83	WJ	WJ	REVISED PER ECO 11714
15	10/15/83	WJ	WJ	REVISED PER ECO 11715
16	10/15/83	WJ	WJ	REVISED PER ECO 11716
17	10/15/83	WJ	WJ	REVISED PER ECO 11717
18	10/15/83	WJ	WJ	REVISED PER ECO 11718
19	10/15/83	WJ	WJ	REVISED PER ECO 11719
20	10/15/83	WJ	WJ	REVISED PER ECO 11720
21	10/15/83	WJ	WJ	REVISED PER ECO 11721
22	10/15/83	WJ	WJ	REVISED PER ECO 11722
23	10/15/83	WJ	WJ	REVISED PER ECO 11723
24	10/15/83	WJ	WJ	REVISED PER ECO 11724
25	10/15/83	WJ	WJ	REVISED PER ECO 11725
26	10/15/83	WJ	WJ	REVISED PER ECO 11726
27	10/15/83	WJ	WJ	REVISED PER ECO 11727
28	10/15/83	WJ	WJ	REVISED PER ECO 11728
29	10/15/83	WJ	WJ	REVISED PER ECO 11729
30	10/15/83	WJ	WJ	REVISED PER ECO 11730
31	10/15/83	WJ	WJ	REVISED PER ECO 11731
32	10/15/83	WJ	WJ	REVISED PER ECO 11732
33	10/15/83	WJ	WJ	REVISED PER ECO 11733
34	10/15/83	WJ	WJ	REVISED PER ECO 11734
35	10/15/83	WJ	WJ	REVISED PER ECO 11735
36	10/15/83	WJ	WJ	REVISED PER ECO 11736
37	10/15/83	WJ	WJ	REVISED PER ECO 11737
38	10/15/83	WJ	WJ	REVISED PER ECO 11738
39	10/15/83	WJ	WJ	REVISED PER ECO 11739
40	10/15/83	WJ	WJ	REVISED PER ECO 11740
41	10/15/83	WJ	WJ	REVISED PER ECO 11741
42	10/15/83	WJ	WJ	REVISED PER ECO 11742
43	10/15/83	WJ	WJ	REVISED PER ECO 11743
44	10/15/83	WJ	WJ	REVISED PER ECO 11744
45	10/15/83	WJ	WJ	REVISED PER ECO 11745
46	10/15/83	WJ	WJ	REVISED PER ECO 11746
47	10/15/83	WJ	WJ	REVISED PER ECO 11747
48	10/15/83	WJ	WJ	REVISED PER ECO 11748
49	10/15/83	WJ	WJ	REVISED PER ECO 11749
50	10/15/83	WJ	WJ	REVISED PER ECO 11750

REVISED PER ECO 11751	REVISED PER ECO 11752	REVISED PER ECO 11753	REVISED PER ECO 11754	REVISED PER ECO 11755	REVISED PER ECO 11756	REVISED PER ECO 11757	REVISED PER ECO 11758	REVISED PER ECO 11759	REVISED PER ECO 11760	REVISED PER ECO 11761	REVISED PER ECO 11762	REVISED PER ECO 11763	REVISED PER ECO 11764	REVISED PER ECO 11765	REVISED PER ECO 11766	REVISED PER ECO 11767	REVISED PER ECO 11768	REVISED PER ECO 11769	REVISED PER ECO 11770	REVISED PER ECO 11771	REVISED PER ECO 11772	REVISED PER ECO 11773	REVISED PER ECO 11774	REVISED PER ECO 11775	REVISED PER ECO 11776	REVISED PER ECO 11777	REVISED PER ECO 11778	REVISED PER ECO 11779	REVISED PER ECO 11780	REVISED PER ECO 11781	REVISED PER ECO 11782	REVISED PER ECO 11783	REVISED PER ECO 11784	REVISED PER ECO 11785	REVISED PER ECO 11786	REVISED PER ECO 11787	REVISED PER ECO 11788	REVISED PER ECO 11789	REVISED PER ECO 11790	REVISED PER ECO 11791	REVISED PER ECO 11792	REVISED PER ECO 11793	REVISED PER ECO 11794	REVISED PER ECO 11795	REVISED PER ECO 11796	REVISED PER ECO 11797	REVISED PER ECO 11798	REVISED PER ECO 11799	REVISED PER ECO 11800
-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------


REVISED PER ECO 11801	REVISED PER ECO 11802	REVISED PER ECO 11803	REVISED PER ECO 11804	REVISED PER ECO 11805	REVISED PER ECO 11806	REVISED PER ECO 11807	REVISED PER ECO 11808	REVISED PER ECO 11809	REVISED PER ECO 11810	REVISED PER ECO 11811	REVISED PER ECO 11812	REVISED PER ECO 11813	REVISED PER ECO 11814	REVISED PER ECO 11815	REVISED PER ECO 11816	REVISED PER ECO 11817	REVISED PER ECO 11818	REVISED PER ECO 11819	REVISED PER ECO 11820	REVISED PER ECO 11821	REVISED PER ECO 11822	REVISED PER ECO 11823	REVISED PER ECO 11824	REVISED PER ECO 11825	REVISED PER ECO 11826	REVISED PER ECO 11827	REVISED PER ECO 11828	REVISED PER ECO 11829	REVISED PER ECO 11830	REVISED PER ECO 11831	REVISED PER ECO 11832	REVISED PER ECO 11833	REVISED PER ECO 11834	REVISED PER ECO 11835	REVISED PER ECO 11836	REVISED PER ECO 11837	REVISED PER ECO 11838	REVISED PER ECO 11839	REVISED PER ECO 11840	REVISED PER ECO 11841	REVISED PER ECO 11842	REVISED PER ECO 11843	REVISED PER ECO 11844	REVISED PER ECO 11845	REVISED PER ECO 11846	REVISED PER ECO 11847	REVISED PER ECO 11848	REVISED PER ECO 11849	REVISED PER ECO 11850
-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------

REVISED PER ECO 11851	REVISED PER ECO 11852	REVISED PER ECO 11853	REVISED PER ECO 11854	REVISED PER ECO 11855	REVISED PER ECO 11856	REVISED PER ECO 11857	REVISED PER ECO 11858	REVISED PER ECO 11859	REVISED PER ECO 11860	REVISED PER ECO 11861	REVISED PER ECO 11862	REVISED PER ECO 11863	REVISED PER ECO 11864	REVISED PER ECO 11865	REVISED PER ECO 11866	REVISED PER ECO 11867	REVISED PER ECO 11868	REVISED PER ECO 11869	REVISED PER ECO 11870	REVISED PER ECO 11871	REVISED PER ECO 11872	REVISED PER ECO 11873	REVISED PER ECO 11874	REVISED PER ECO 11875	REVISED PER ECO 11876	REVISED PER ECO 11877	REVISED PER ECO 11878	REVISED PER ECO 11879	REVISED PER ECO 11880	REVISED PER ECO 11881	REVISED PER ECO 11882	REVISED PER ECO 11883	REVISED PER ECO 11884	REVISED PER ECO 11885	REVISED PER ECO 11886	REVISED PER ECO 11887	REVISED PER ECO 11888	REVISED PER ECO 11889	REVISED PER ECO 11890	REVISED PER ECO 11891	REVISED PER ECO 11892	REVISED PER ECO 11893	REVISED PER ECO 11894	REVISED PER ECO 11895	REVISED PER ECO 11896	REVISED PER ECO 11897	REVISED PER ECO 11898	REVISED PER ECO 11899	REVISED PER ECO 11900
-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------

REVISED PER ECO 11901	REVISED PER ECO 11902	REVISED PER ECO 11903	REVISED PER ECO 11904	REVISED PER ECO 11905	REVISED PER ECO 11906	REVISED PER ECO 11907	REVISED PER ECO 11908	REVISED PER ECO 11909	REVISED PER ECO 11910	REVISED PER ECO 11911	REVISED PER ECO
-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------

1. TITLE	INLET CHECK VALVE	2. DRAWING NUMBER	28550-1
3. DATE	10/1/54	4. DESIGNED BY	W. J. BROWN
5. CHECKED BY	W. J. BROWN	6. APPROVED BY	W. J. BROWN
7. PART NUMBER	28550-1	8. QUANTITY	1
9. MATERIAL	BRASS	10. FINISH	AS SUPPLIED

INLET CHECK VALVE M-50

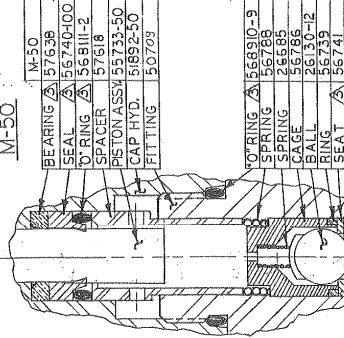

TORQUE FITTING TO 70 FT/LB.

1. TITLE	INLET CHECK VALVE	2. DRAWING NUMBER	28550-1
3. DATE	10/1/54	4. DESIGNED BY	W. J. BROWN
5. CHECKED BY	W. J. BROWN	6. APPROVED BY	W. J. BROWN
7. PART NUMBER	28550-1	8. QUANTITY	1
9. MATERIAL	BRASS	10. FINISH	AS SUPPLIED



APPENDIX - III

HC-1961 Hand Pump Parts List



**Model: HC-1961
3250 psi Hand Pump**

**Parts List
With Illustrations**

05/2005 – Rev. OR

**HC-1963
2500 psi Hand Pump**

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur.

This pump is compatible with MIL-PRF-5606/MIL-H-83282 Hydraulic Fluids only.

INSTALLATION INSTRUCTIONS:

1. Inspect all parts. Replace all worn or otherwise defective parts.
2. Clean all parts prior to re-assembly.
3. Lubricate all O-rings with clean system hydraulic fluid prior to installation.
4. Torque pump screws (Item 4) to 10 ft-lbs.

Parts List

When ordering Replacement Parts/Kits, please specify Model and Serial Number of your Unit.

Reference Illustrations on Page 3

ITEM	PART NUMBER	DESCRIPTION	QTY
4.....	518-000	Screw, Socket Head Cap	4
9.....	Not Sold Separately.....	Pump Body.....	1
10.....	H-2606.....	Assembly, Relief Screw.....	1
24.....	506-000	Flange Half.....	4
Not Shown.....	H-1009-01.....	Handle.....	1

All other parts available in Replacement Kits only.

ITEM	PART NUMBER	DESCRIPTION	QTY
	K-1068	Kit, Linkage Replacement; consists of:	
17.....		Bracket, Pump Handle	1
18.....		Assembly, Clevis Pin.....	1
19.....		Assembly, Linkage Pin	2
20.....		Strap.....	2
23.....		Pivot	1
	K-1778	Kit, Piston/Cylinder Replacement; consists of:	
1.....		Retainer, Wiper	1
21.....		Tube	1
22.....		Piston	1
25.....		Assembly, Valve Body (Includes Items 7, 12, 25, 26)	1
	K-1906	Kit, Piston/Seal Replacement; consists of:	
3.....		Ring, Backup	1
5.....		O-ring, Piston	1
22.....		Piston	1
	K-3342	Kit, Internal Parts Replacement; consists of:	
12.....		Spring, Inlet Check.....	1
26.....		Ball, Inlet Check	2
28.....		Ball, Outlet Check.....	1
29.....		Spring, Outlet Check	1
33.....		Spring, Inlet Check.....	1

Replacement Kits List continued on following page.

HC-1963
2500 psi Hand Pump

Parts List

When ordering Replacement Parts/Kits, please specify Model and Serial Number of your Unit.

Reference Illustrations on Page 3

ITEM	PART NUMBER	DESCRIPTION	QTY
	K-3343	Kit, Release Screw Replacement; consists of:	
13.....		Screw, Release	1
14.....		Pin, Roll.....	1
15.....		Retainer, Screw.....	1
16.....		O-ring	1
	K-3441	Kit, Seal Replacement; consists of:	
2.....		Wiper, Rod	1
3.....		Ring, Backup	1
5.....		O-ring, Piston	1
6.....		O-ring, Valve Body	1
8.....		O-ring, Tube Seal	1
11.....		O-ring, Relief Screw	1
16.....		O-ring, Release Screw	1
27.....		O-ring, Outlet Check.....	1
34.....		Ring, Backup Relief Screw.....	1
35.....		O-ring, Relief Screw	1




TRONAIR

10/2001 – Rev. OR

- 2 -

HC-1963
2500 psi Hand Pump

Parts List Illustrations

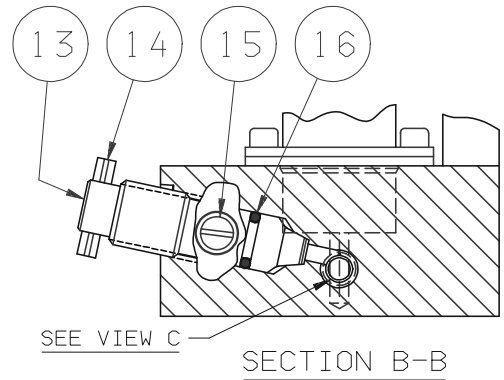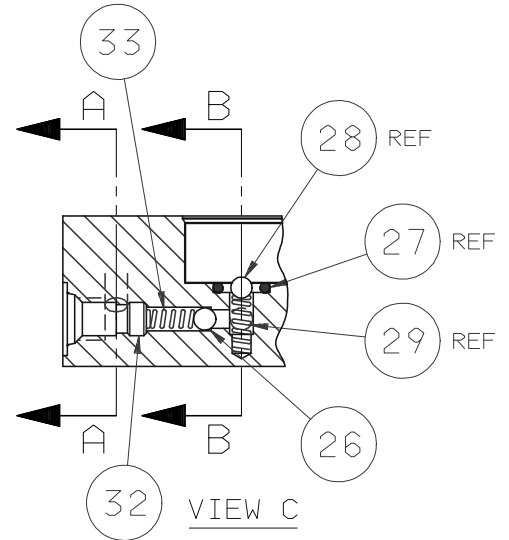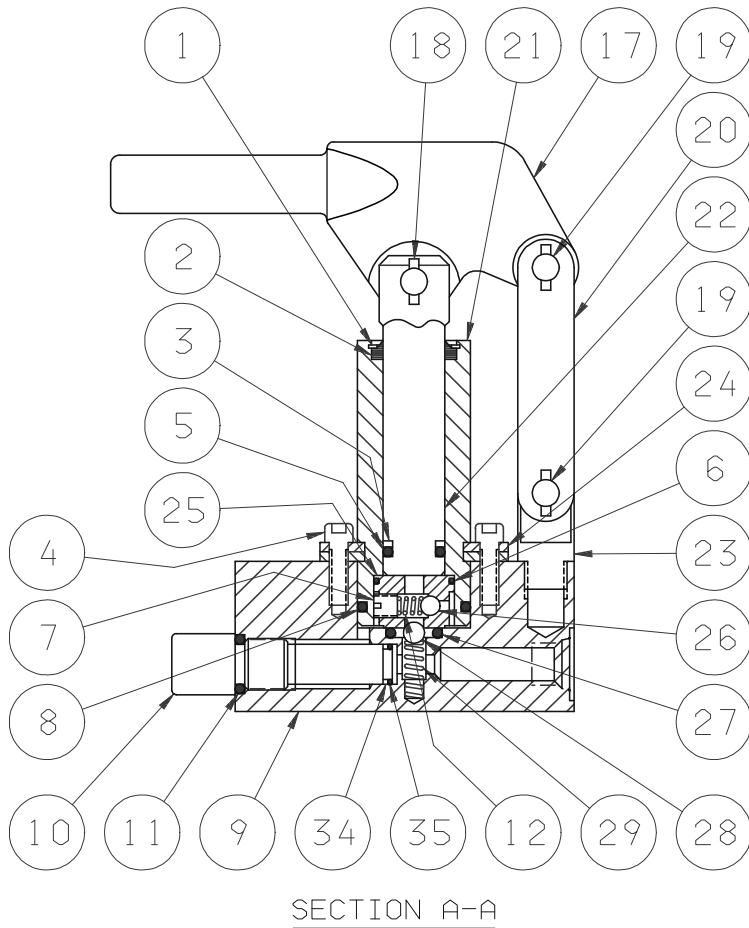

WARNING!

Item 10 (H-2606) is a preset relief valve. Do Not disassemble this valve.
Replacement parts are available as a preset relief valve assembly



APPENDIX - IV

Declaration of Conformity



DECLARATION of CONFORMITY

The design, development and manufacture is in accordance with European Community guidelines

Tripod Jack
02A7845C0120

Relevant provisions complied with by the machinery:
2006/42/EEC

Relevant standards complied with by the machinery:
EN ISO 12100-1

Identification of person empowered to sign on behalf of the manufacturer:

A handwritten signature in black ink, reading "David L. Kidd". The signature is written in a cursive style with a large, looped "D" and "K".

Quality Assurance Representative



APPENDIX - V

**Material Safety Data Sheet
MIL-PRF-5606A
Hydraulic Fluid**

MATERIAL SAFETY DATA SHEET

SECTION 1 PRODUCT AND COMPANY IDENTIFICATION

PRODUCT

Product Name: MOBIL AERO HFA
Product Description: Base Oil and Additives
Product Code: 490110-00, 970584
Intended Use: Aviation hydraulic oil

COMPANY IDENTIFICATION

Supplier: EXXON MOBIL CORPORATION
3225 GALLOW'S RD.
FAIRFAX, VA. 22037 USA
24 Hour Health Emergency 800-737-4411
Transportation Emergency Phone 800-424-9300
ExxonMobil Transportation No. 281-834-3296
MSDS Requests 713-613-3661
Product Technical Information 800-662-4525, 800-947-9147
MSDS Internet Address <http://www.exxon.com>, <http://www.mobil.com>

SECTION 2 COMPOSITION / INFORMATION ON INGREDIENTS

Reportable Hazardous Substance(s) or Complex Substance(s)

Name	CAS#	Concentration*
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	10 - 30%
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	64742-53-6	30 - 60%
HYDROTREATED LIGHT PARAFFINIC DISTILLATES, PETROLEUM	64742-55-8	10 - 30%

* All concentrations are percent by weight unless material is a gas. Gas concentrations are in percent by volume.

SECTION 3 HAZARDS IDENTIFICATION

This material is considered to be hazardous according to regulatory guidelines (see (M)SDS Section 15).

POTENTIAL PHYSICAL / CHEMICAL EFFECTS

Combustible. Material can release vapors that readily form flammable mixtures. Vapor accumulation could flash and/or explode if ignited.

POTENTIAL HEALTH EFFECTS

If swallowed, may be aspirated and cause lung damage. Frequent or prolonged contact may defat and dry the skin, leading to discomfort and dermatitis. May be irritating to the eyes, nose, throat, and lungs. High-pressure injection under skin may cause serious damage.

Target Organs: Skin |

NFPA Hazard ID:	Health: 0	Flammability: 2	Reactivity: 0
HMIS Hazard ID:	Health: 0*	Flammability: 2	Reactivity: 0

NOTE: This material should not be used for any other purpose than the intended use in Section 1 without expert advice. Health studies have shown that chemical exposure may cause potential human health risks which may vary from person to person.

SECTION 4	FIRST AID MEASURES
------------------	---------------------------

INHALATION

Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use mouth-to-mouth resuscitation.

SKIN CONTACT

Wash contact areas with soap and water. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

EYE CONTACT

Flush thoroughly with water. If irritation occurs, get medical assistance.

INGESTION

Seek immediate medical attention. Do not induce vomiting.

NOTE TO PHYSICIAN

If ingested, material may be aspirated into the lungs and cause chemical pneumonitis. Treat appropriately.

SECTION 5	FIRE FIGHTING MEASURES
------------------	-------------------------------

EXTINGUISHING MEDIA

Appropriate Extinguishing Media: Use water fog, foam, dry chemical or carbon dioxide (CO₂) to extinguish flames.

Inappropriate Extinguishing Media: Straight Streams of Water

FIRE FIGHTING

Fire Fighting Instructions: Evacuate area. Prevent runoff from fire control or dilution from entering streams, sewers, or drinking water supply. Firefighters should use standard protective equipment and in enclosed spaces, self-contained breathing apparatus (SCBA). Use water spray to cool fire exposed surfaces and to protect personnel.

Unusual Fire Hazards: Combustible. Pressurized mists may form a flammable mixture.

Hazardous Combustion Products: Smoke, Fume, Sulfur oxides, Aldehydes, Incomplete combustion products, Oxides of carbon, Phosphorus oxides

FLAMMABILITY PROPERTIES

Flash Point [Method]: >82°C (180°F) [ASTM D-93]

Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0

Autoignition Temperature: >225°C (437°F)

SECTION 6	ACCIDENTAL RELEASE MEASURES
------------------	------------------------------------

NOTIFICATION PROCEDURES

In the event of a spill or accidental release, notify relevant authorities in accordance with all applicable regulations. U.S. regulations require reporting releases of this material to the environment which exceed the reportable quantity or oil spills which could reach any waterway including intermittent dry creeks. The National Response Center can be reached at (800)424-8802.

PROTECTIVE MEASURES

Avoid contact with spilled material. Warn or evacuate occupants in surrounding and downwind areas if required due to toxicity or flammability of the material. See Section 5 for fire fighting information. See Section 3 for Significant Hazards. See Section 4 for First Aid Advice. See Section 8 for Personal Protective Equipment.

SPILL MANAGEMENT

Land Spill: Eliminate all ignition sources (no smoking, flares, sparks or flames in immediate area). Stop leak if you can do it without risk. All equipment used when handling the product must be grounded. Do not touch or walk through spilled material. Prevent entry into waterways, sewer, basements or confined areas. A vapor suppressing foam may be used to reduce vapors. Use clean non-sparking tools to collect absorbed material. Absorb or cover with dry earth, sand or other non-combustible material and transfer to containers. Large Spills: Water spray may reduce vapor; but may not prevent ignition in closed spaces. Recover by pumping or with suitable absorbent.

Water Spill: Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Water spill and land spill recommendations are based on the most likely spill scenario for this material; however, geographic conditions, wind, temperature, (and in the case of a water spill) wave and current direction and speed may greatly influence the appropriate action to be taken. For this reason, local experts should be consulted. Note: Local regulations may prescribe or limit action to be taken.

ENVIRONMENTAL PRECAUTIONS

Large Spills: Dike far ahead of liquid spill for later recovery and disposal. Prevent entry into waterways, sewers, basements or confined areas.

SECTION 7	HANDLING AND STORAGE
------------------	-----------------------------

HANDLING

Avoid contact with skin. Avoid prolonged breathing of mists and heated vapor. Use proper bonding and/or grounding procedures. Prevent small spills and leakage to avoid slip hazard.

Static Accumulator: This material is a static accumulator.

STORAGE

Keep container closed. Handle containers with care. Open slowly in order to control possible pressure release. Store in a cool, well-ventilated area. Storage containers should be grounded and bonded. Drums must be grounded and bonded and equipped with self-closing valves, pressure vacuum bungs and flame arresters.

SECTION 8 EXPOSURE CONTROLS / PERSONAL PROTECTION

EXPOSURE LIMIT VALUES

Exposure limits/standards (Note: Exposure limits are not additive)

Source	Form	Limit / Standard			Note	Source
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)		TWA	2000 mg/m ³	500 ppm	N/A	OSHA Z1
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	STEL	10 mg/m ³		N/A	ACGIH
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	Mist.	TWA	5 mg/m ³		N/A	ACGIH
HYDROTREATED LIGHT PARAFFINIC DISTILLATES, PETROLEUM	Mist.	STEL	10 mg/m ³		N/A	ACGIH
HYDROTREATED LIGHT PARAFFINIC DISTILLATES, PETROLEUM	Mist.	TWA	5 mg/m ³		N/A	ACGIH

Exposure limits/standards for materials that can be formed when handling this product: When mists / aerosols can occur, the following are recommended: 5 mg/m³ - ACGIH TLV, 10 mg/m³ - ACGIH STEL, 5 mg/m³ - OSHA PEL.

NOTE: Limits/standards shown for guidance only. Follow applicable regulations.

ENGINEERING CONTROLS

The level of protection and types of controls necessary will vary depending upon potential exposure conditions. Control measures to consider:
Use explosion-proof ventilation equipment to stay below exposure limits.

PERSONAL PROTECTION

Personal protective equipment selections vary based on potential exposure conditions such as applications, handling practices, concentration and ventilation. Information on the selection of protective equipment for use with this material, as provided below, is based upon intended, normal usage.

Respiratory Protection: If engineering controls do not maintain airborne contaminant concentrations at a level which is adequate to protect worker health, an approved respirator may be appropriate. Respirator selection, use, and maintenance must be in accordance with regulatory requirements, if applicable. Types of respirators to be considered for this material include:

No special requirements under ordinary conditions of use and with adequate ventilation.

For high airborne concentrations, use an approved supplied-air respirator, operated in positive pressure mode. Supplied air respirators with an escape bottle may be appropriate when oxygen levels are inadequate, gas/vapor warning properties are poor, or if air purifying filter capacity/rating may be exceeded.

Hand Protection: Any specific glove information provided is based on published literature and glove manufacturer data. Work conditions can greatly effect glove durability; inspect and replace worn or damaged gloves. The types of gloves to be considered for this material include:

If prolonged or repeated contact is likely, chemical resistant gloves are recommended. If contact with forearms is likely, wear gauntlet style gloves.

Eye Protection: If contact is likely, safety glasses with side shields are recommended.

Skin and Body Protection: Any specific clothing information provided is based on published literature or manufacturer data. The types of clothing to be considered for this material include:
If prolonged or repeated contact is likely, chemical, and oil resistant clothing is recommended.

Specific Hygiene Measures: Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking, and/or smoking. Routinely wash work clothing and protective equipment to remove contaminants. Discard contaminated clothing and footwear that cannot be cleaned. Practice good housekeeping.

ENVIRONMENTAL CONTROLS

See Sections 6, 7, 12, 13.

SECTION 9	PHYSICAL AND CHEMICAL PROPERTIES
------------------	---

Typical physical and chemical properties are given below. Consult the Supplier in Section 1 for additional data.

GENERAL INFORMATION

Physical State: Liquid
Color: Red
Odor: Characteristic
Odor Threshold: N/D

IMPORTANT HEALTH, SAFETY, AND ENVIRONMENTAL INFORMATION

Relative Density (at 15 C): 0.88
Flash Point [Method]: >82C (180F) [ASTM D-93]
Flammable Limits (Approximate volume % in air): LEL: 0.7 UEL: 7.0
Autoignition Temperature: >225°C (437°F)
Boiling Point / Range: N/D
Vapor Density (Air = 1): N/D
Vapor Pressure: [N/D at 20 °C]
Evaporation Rate (n-butyl acetate = 1): N/D
pH: N/A
Log Pow (n-Octanol/Water Partition Coefficient): N/D
Solubility in Water: Negligible
Viscosity: 13.8 cSt (13.8 mm²/sec) at 40 C | 5.1 cSt (5.1 mm²/sec) at 100C
Oxidizing Properties: See Sections 3, 15, 16.

OTHER INFORMATION

Freezing Point: N/D
Melting Point: N/A
Pour Point: -60°C (-76°F)
DMSO Extract (mineral oil only), IP-346: < 3 %wt

SECTION 10 STABILITY AND REACTIVITY

STABILITY: Material is stable under normal conditions.

CONDITIONS TO AVOID: Open flames and high energy ignition sources.

MATERIALS TO AVOID: Strong oxidizers

HAZARDOUS DECOMPOSITION PRODUCTS: Material does not decompose at ambient temperatures.

HAZARDOUS POLYMERIZATION: Will not occur.

SECTION 11 TOXICOLOGICAL INFORMATION

ACUTE TOXICITY

Route of Exposure	Conclusion / Remarks
Inhalation	
Toxicity (Rat): LC50 > 5000 mg/m3	Minimally Toxic. Based on assessment of the components.
Irritation: No end point data.	Elevated temperatures or mechanical action may form vapors, mist, or fumes which may be irritating to the eyes, nose, throat, or lungs. Based on assessment of the components.
Ingestion	
Toxicity (Rat): LD50 > 2000 mg/kg	Minimally Toxic. Based on test data for structurally similar materials.
Skin	
Toxicity (Rabbit): LD50 > 2000 mg/kg	Minimally Toxic. Based on test data for structurally similar materials.
Irritation (Rabbit): Data available.	Negligible irritation to skin at ambient temperatures. Based on assessment of the components.
Eye	
Irritation (Rabbit): Data available.	May cause mild, short-lasting discomfort to eyes. Based on assessment of the components.

CHRONIC/OTHER EFFECTS

For the product itself:

Repeated and/or prolonged exposure may cause irritation to the skin, eyes, or respiratory tract. Small amounts of liquid aspirated into the lungs during ingestion or from vomiting may cause chemical pneumonitis or pulmonary edema.

Contains:

Base oil severely refined: Not carcinogenic in animal studies. Representative material passes IP-346, Modified Ames test, and/or other screening tests. Dermal and inhalation studies showed minimal effects; lung non-specific infiltration of immune cells, oil deposition and minimal granuloma formation. Not sensitizing in test animals.

Additional information is available by request.

The following ingredients are cited on the lists below: None.

--REGULATORY LISTS SEARCHED--

1 = NTP CARC
2 = NTP SUS

3 = IARC 1
4 = IARC 2A

5 = IARC 2B
6 = OSHA CARC

Product Name: MOBIL DTE 11M
Revision Date: 01 Sep 2009
Page 7 of 10

Material -- Expected to be harmful to aquatic organisms. May cause long-term adverse effects in the aquatic environment.

MOBILITY

Base oil component -- Low solubility and floats and is expected to migrate from water to the land. Expected to partition to sediment and wastewater solids.

PERSISTENCE AND DEGRADABILITY

Biodegradation:

Base oil component -- Expected to be inherently biodegradable

BIO ACCUMULATION POTENTIAL

Base oil component -- Has the potential to bioaccumulate, however metabolism or physical properties may reduce the bioconcentration or limit bioavailability.

SECTION 13	DISPOSAL CONSIDERATIONS
-------------------	--------------------------------

Disposal recommendations based on material as supplied. Disposal must be in accordance with current applicable laws and regulations, and material characteristics at time of disposal.

DISPOSAL RECOMMENDATIONS

Product is suitable for burning in an enclosed controlled burner for fuel value or disposal by supervised incineration at very high temperatures to prevent formation of undesirable combustion products.

REGULATORY DISPOSAL INFORMATION

RCRA Information: The unused product, in our opinion, is not specifically listed by the EPA as a hazardous waste (40 CFR, Part 261D), nor is it formulated to contain materials which are listed as hazardous wastes. It does not exhibit the hazardous characteristics of ignitability, corrosivity or reactivity and is not formulated with contaminants as determined by the Toxicity Characteristic Leaching Procedure (TCLP). However, used product may be regulated.

Empty Container Warning Empty Container Warning (where applicable): Empty containers may contain residue and can be dangerous. Do not attempt to refill or clean containers without proper instructions. Empty drums should be completely drained and safely stored until appropriately reconditioned or disposed. Empty containers should be taken for recycling, recovery, or disposal through suitably qualified or licensed contractor and in accordance with governmental regulations. DO NOT PRESSURISE, CUT, WELD, BRAZE, SOLDER, DRILL, GRIND, OR EXPOSE SUCH CONTAINERS TO HEAT, FLAME, SPARKS, STATIC ELECTRICITY, OR OTHER SOURCES OF IGNITION. THEY MAY EXPLODE AND CAUSE INJURY OR DEATH.

SECTION 14	TRANSPORT INFORMATION
-------------------	------------------------------

LAND (DOT): Not Regulated for Land Transport

LAND (TDG): Not Regulated for Land Transport

SEA (IMDG): Not Regulated for Sea Transport according to IMDG-Code

SECTION 14	TRANSPORT INFORMATION
-------------------	------------------------------

LAND (DOT)

Proper Shipping Name: COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light)
Hazard Class & Division: COMBUSTIBLE LIQUID
ID Number: NA1993
Packing Group: III
ERG Number: 128
Label(s): NONE
Transport Document Name: NA1993, COMBUSTIBLE LIQUID, N.O.S. (Distillates (Petroleum), Hydrotreated Light), COMBUSTIBLE LIQUID, PG III

Footnote: This material is not regulated under 49 CFR in a container of 119 gallon capacity or less when transported solely by land, as long as the material is not a hazardous waste, a marine pollutant, or specifically listed as a hazardous substance.

LAND (TDG) : Not Regulated for Land Transport

SEA (IMDG) : Not Regulated for Sea Transport according to IMDG-Code

AIR (IATA) : Not Regulated for Air Transport

SECTION 15	REGULATORY INFORMATION
-------------------	-------------------------------

OSHA HAZARD COMMUNICATION STANDARD: When used for its intended purpose, this material is classified as hazardous in accordance with OSHA 29CFR 1910.1200.

NATIONAL CHEMICAL INVENTORY LISTING: AICS, IECSC, DSL, EINECS, ENCS, KECI, PICCS, TSCA

EPCRA: This material contains no extremely hazardous substances.

SARA (311/312) REPORTABLE HAZARD CATEGORIES: Fire. Delayed Health.

SARA (313) TOXIC RELEASE INVENTORY: This material contains no chemicals subject to the supplier notification requirements of the SARA 313 Toxic Release Program.

The Following Ingredients are Cited on the Lists Below:

Chemical Name	CAS Number	List Citations
DISTILLATES (PETROLEUM), HYDROTREATED LIGHT	64742-47-8	17, 18, 19
HYDROTREATED LIGHT NAPHTHENIC DISTILLATE (PETROLEUM)	64742-53-6	1, 4, 13, 17, 18
HYDROTREATED LIGHT PARAFFINIC DISTILLATES, PETROLEUM	64742-55-8	1, 17, 18

--REGULATORY LISTS SEARCHED--

1 = ACGIH ALL	6 = TSCA 5a2	11 = CA P65 REPRO	16 = MN RTK
2 = ACGIH A1	7 = TSCA 5e	12 = CA RTK	17 = NJ RTK
3 = ACGIH A2	8 = TSCA 6	13 = IL RTK	18 = PA RTK
4 = OSHA Z	9 = TSCA 12b	14 = LA RTK	19 = RI RTK
5 = TSCA 4	10 = CA P65 CARC	15 = MI 293	

Code key: CARC=Carcinogen; REPRO=Reproductive

SECTION 16	OTHER INFORMATION
-------------------	--------------------------

N/D = Not determined, N/A = Not applicable

THIS SAFETY DATA SHEET CONTAINS THE FOLLOWING REVISIONS:

Revision Changes:

Section 05: Fire Fighting Measures - Unusual Fire Hazards was modified.
Section 10: Conditions to Avoid was modified.
Section 07: Handling and Storage - Handling was modified.
Section 07: Handling and Storage - Storage Phrases was modified.
Section 03: HMIS Flammability was modified.
Section 03: NFPA Flammability was modified.
Section 06: Accidental Release - Spill Management - Land was modified.
Section 09: Flash Point C(F) was modified.
Section 08: Exposure Control was modified.
Section 15: SARA (311/312) REPORTABLE HAZARD CATEGORIES was modified.
Section 16: Land Spill was modified.
Section 14: DOT Technical Name - All was added.
Section 03: Physical/Chemical Hazard was added.
Section 14: Proper Shipping Name - Header was added.
Section 14: Proper Shipping Name was added.
Section 14: Hazard Class & Division - Header was added.
Section 14: Hazard Class was added.
Section 14: UN Number - Header was added.
Section 14: UN Number was added.
Section 14: Packing Group - Header was added.
Section 14: Packing Group was added.
Section 14: Label(s) - Header was added.
Section 14: Label(s) was added.
Section 14: ERG Number - Header was added.
Section 14: ERG Number was added.
Section 14: Transport Document Name - Header was added.
Section 14: Transport Document Name was added.
Section 14: DOT Technical Name - Open parenthesis was added.
Section 14: DOT Technical Name - Close parenthesis was added.
Section 03: Physical/Chemical Hazard was added.
Section 03: Physical/Chemical Hazards - Header was added.
Section 14: DOT Footnote was added.
Section 16: Physical Hazards was added.
Section 16: Physical Hazards - Header was added.
Section 16: Precautions was added.
Section 16: Precautions - Header was added.
Section 10: Conditions to Avoid was deleted.
Section 14: LAND (DOT) - Default was deleted.

PRECAUTIONARY LABEL TEXT:

Contains: DISTILLATES (PETROLEUM), HYDROTREATED LIGHT
CAUTION!

HEALTH HAZARDS

Repeated exposure may cause skin dryness or cracking. If swallowed, may be aspirated and cause lung damage.

Target Organs: Skin |

PHYSICAL HAZARDS

Combustible.



PRECAUTIONS

Use proper bonding and/or grounding procedures.

FIRST AID

Inhalation: Remove from further exposure. For those providing assistance, avoid exposure to yourself or others. Use adequate respiratory protection. If respiratory irritation, dizziness, nausea, or unconsciousness occurs, seek immediate medical assistance. If breathing has stopped, assist ventilation with a mechanical device or use mouth-to-mouth resuscitation.

Eye: Flush thoroughly with water. If irritation occurs, get medical assistance.

Oral: Seek immediate medical attention. Do not induce vomiting. If ingested, material may be aspirated into the lungs and cause chemical pneumonitis. Treat appropriately.

Skin: Wash contact areas with soap and water. If product is injected into or under the skin, or into any part of the body, regardless of the appearance of the wound or its size, the individual should be evaluated immediately by a physician as a surgical emergency. Even though initial symptoms from high pressure injection may be minimal or absent, early surgical treatment within the first few hours may significantly reduce the ultimate extent of injury.

FIRE FIGHTING MEDIA

Use water fog, foam, dry chemical or carbon dioxide (CO2) to extinguish flames.

SPILL/LEAK

Land Spill: Eliminate all ignition sources (no smoking, flares, sparks or flames in immediate area). Stop leak if you can do it without risk. Prevent entry into waterways, sewer, basements or confined areas. A vapor suppressing foam may be used to reduce vapors. Absorb or cover with dry earth, sand or other non-combustible material and transfer to containers. Recover by pumping or with suitable absorbent.

Water Spill: Stop leak if you can do it without risk. Confine the spill immediately with booms. Warn other shipping. Remove from the surface by skimming or with suitable absorbents. Seek the advice of a specialist before using dispersants.

Use

Not intended or suitable for use in or around a household or dwelling.

The information and recommendations contained herein are, to the best of ExxonMobil's knowledge and belief, accurate and reliable as of the date issued. You can contact ExxonMobil to insure that this document is the most current available from ExxonMobil. The information and recommendations are offered for the user's consideration and examination. It is the user's responsibility to satisfy itself that the product is suitable for the intended use. If buyer repackages this product, it is the user's responsibility to insure proper health, safety and other necessary information is included with and/or on the container. Appropriate warnings and safe-handling procedures should be provided to handlers and users. Alteration of this document is strictly prohibited. Except to the extent required by law, re-publication or retransmission of this document, in whole or in part, is not permitted. The term, "ExxonMobil" is used for convenience, and may include any one or more of ExxonMobil Chemical Company, Exxon Mobil Corporation, or any affiliates in which they directly or indirectly hold any interest.

Internal Use Only

MHC: 2A,0,0,0,0,1

PPEC: C

DGN: 2005454XUS (552975)

Copyright 2002 Exxon Mobil Corporation, All rights reserved