

K-5281 – GE Denali Engine Support Kit

This product can not be modified without the written approval of Tronair, Inc. Any modifications done without written approval voids all warranties and releases Tronair, Inc., its suppliers, distributors, employees, or financial institutions from any liability from consequences that may occur. Only Tronair OEM replacement parts shall be used.

This GE Denali Support Kit is to be used with 08-2001-0000 engine stand base, 08-0102-4010 engine sling and the K-5257 Denali Engine Straps.

The engine stand base has five (5) locations for mounting various supports and the upright post assembly. These positions are listed as "A through E" reference figure 2 engine stand assembly locations.

ENGINE SUPPORT INSTALLATION INSTRUCTIONS

1. Attach the upright post assembly to the base at base position "C & F" with (4) 3/8-24 x 1 1/2" long hex head bolts, washers and elastic stopnuts, reference figure 2 engine stand (assembled).
2. Attach FWD engine mount assembly to the base, using the existing hole in front of the base, with the 1/2" Rod End with nuts & Bevel washer, reference figure 2 engine stand (assembled).
3. Assure that all nuts and bolts are secure before placing an engine in the stand.

ENGINE INSTALLATION INSTRUCTIONS

1. With the engine hung from the 08-0102-4010 engine sling and K-5257 Denali Engine Straps, remove the existing lower airframe engine mounts from the engine and attach the K-5281 Engine Tab Block Weldments with existing fasteners.
2. Lower the engine into the engine stand and align the holes of the Lower Support Assembly with Engine Tab Block Weldments. Once align insert Ball Lok pin to secure. Then continue lowering engine until engine bottoms out.
3. Attach FWD engine mount assembly attachment plate to the engine FWD mount by slightly downward until the holes of the attachment plate align with the FWD mount holes, then
4. The engine installation is now complete.
5. To remove engine, reverse the above process.

GUARANTEES/LIMITATION OF LIABILITY

Tronair products are warranted to be free of manufacturing or material defects for a period of one year after shipment to the original customer. This is solely limited to the repair or replacement of defective components. This warranty does not cover the following items:

- a) Parts required for normal maintenance
- b) Parts covered by a component manufacturers warranty
- c) Replacement parts have a 90-day warranty from date of shipment

If you have a problem that may require service, contact Tronair immediately. Do not attempt to repair or disassemble a product without first contacting Tronair, any action may affect warranty coverage. When you contact Tronair be prepared to provide the following information:


- a) Product Model Number
- b) Product Serial Number
- c) Description of the problem

If warranty coverage is approved, either replacement parts will be sent or the product will have to be returned to Tronair for repairs. If the product is to be returned, a Return Material Authorization (RMA) number will be issued for reference purposes on any shipping documents. Failure to obtain a RMA in advance of returning an item will result in a service fee. A decision on the extent of warranty coverage on returned products is reserved pending inspection at Tronair. Any shipments to Tronair must be shipped freight prepaid. Freight costs on shipments to customers will be paid by Tronair on any warranty claims only. Any unauthorized modification of the Tronair products or use of the Tronair products in violation of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied.

The obligations of Tronair expressly stated herein are in lieu of all other warranties or conditions expressed or implied. **Any unauthorized modification of the Tronair products or use of the Tronair products in violations of cautions and warnings in any manual (including updates) or safety bulletins published or delivered by Tronair will immediately void any warranty, express or implied and Tronair disclaims any and all liability for injury (WITHOUT LIMITATION and including DEATH), loss or damage arising from or relating to such misuse.**

Parts List


When ordering Replacement Parts/Kits, please specify Model, Color and Serial Number of your Unit

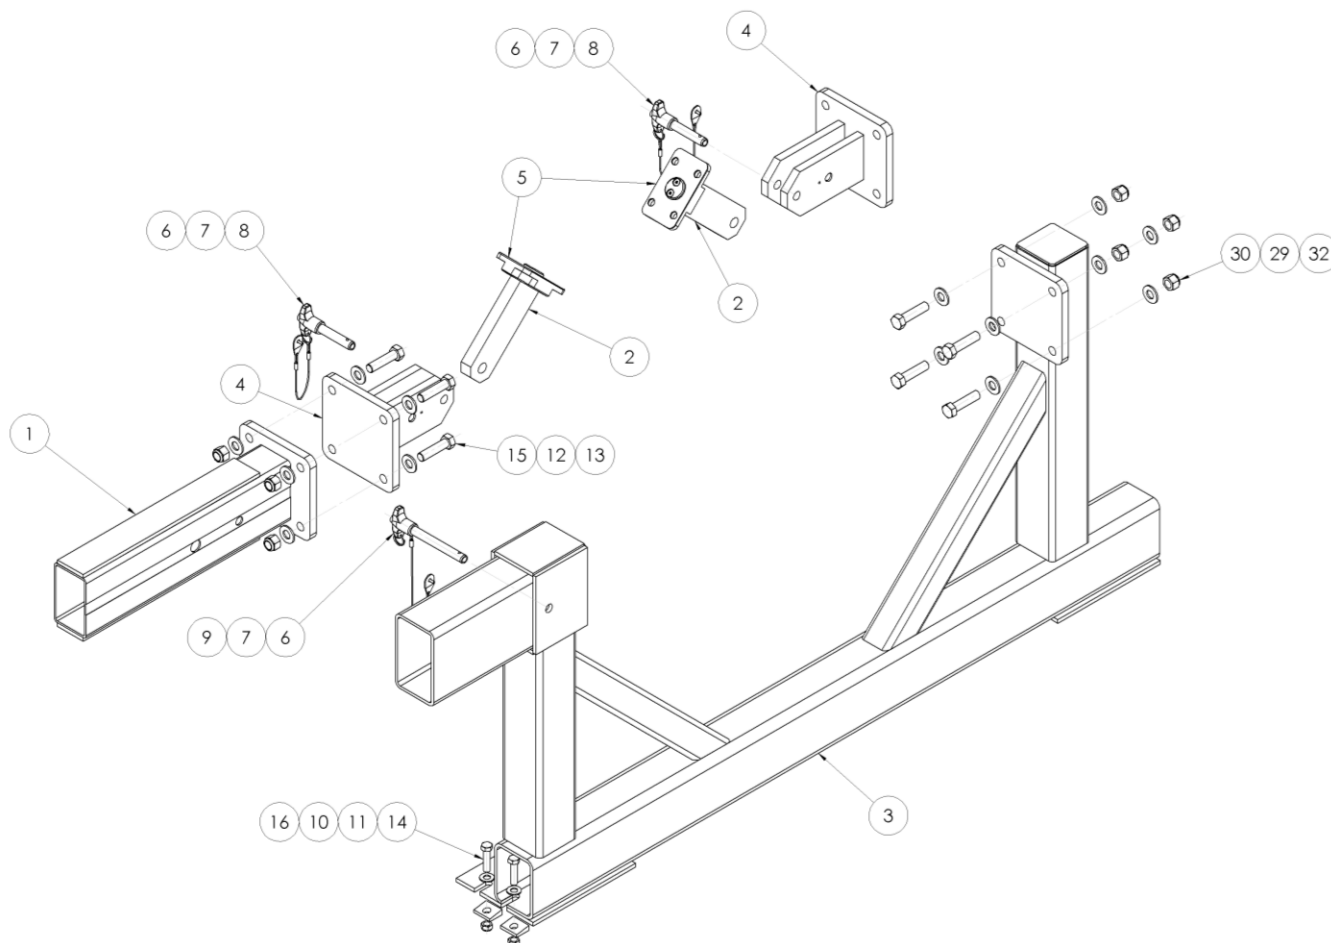

Item	Part Number	Description	Qty
1	Z-10494-00	Weldment, Extension Tube (P)	1
2	Z-10493	Weldment, Engine Tab Block	2
3	Z-10483-00	Weldment, Engine Stand Adapter (P)	1
4	Z-10487	Weldment, Lower Support	2
5	J-7217	Gasket, Mount	2
6	H-1026-07.0	Assembly, Lanyard	3
7	G-1351-04	Rivet, 1/8 Open-End Steel	3
8	G-1310-0820	Pin, 1/2 X 2.0 Ball Lok-T	2
9	G-1310-0835	Pin, 1/2 X 3.5 Ball Lok-T	1
10	G-1278	Washer, 3/8 Modified Bevel	4
11	G-1250-1070N	Flatwasher, 3/8 Narrow	4
12	G-1250-1090N	Flatwasher, 1/2 Narrow	16
13	G-1202-1090	Stopnut, 1/2-13 Elastic	8
14	G-1202-1075	Stopnut, 3/8-24 Elastic	4
15	G-1100-109020	Bolt, 1/2-13 X 2.00" Hex Hd Gr 5	8
16	G-1100-107514	Bolt, 3/8-24 X 1-1/2" Hex Hd Gr 5	4

Parts List


When ordering Replacement Parts/Kits, please specify Model, Color and Serial Number of your Unit

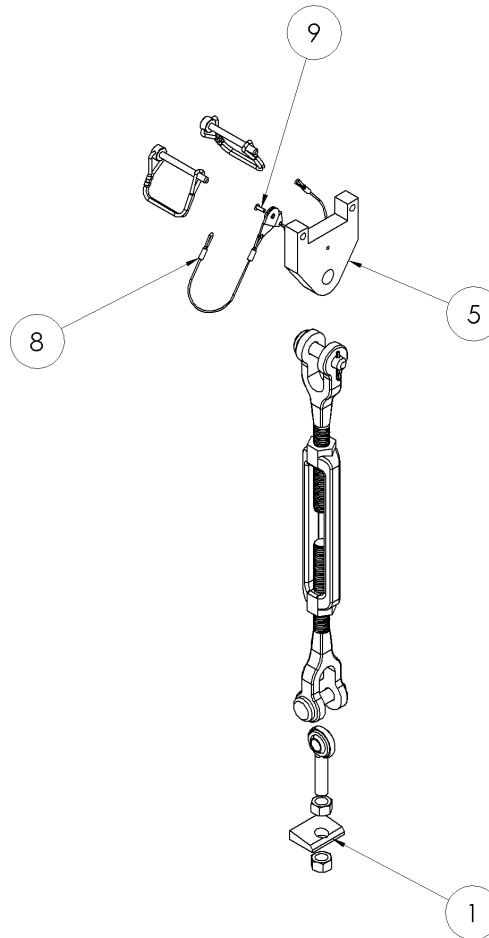



Item	Part Number	Description	Qty
1	G-1805	Washer, 1/2 Modified Bevel	1
2	H-1609-07	End, 1/2 Male Rod	1
3	G-1200-1095	Nut, 1/2-20 Hex.	2
4	H-1274-05	Turnbuckle, 5/8 Jaw & Jaw	1
5	J-7163	Plate, Attachment	1
6	G-1804	Steel Pin With Wire Lock	2
7	G-1351-04	Rivet, 1/8 Open-End Steel	1
8	H-1026-07.0	Assembly, Lanyard	2

Parts List

When ordering Replacement Parts/Kits, please specify Model, Color and Serial Number of your Unit

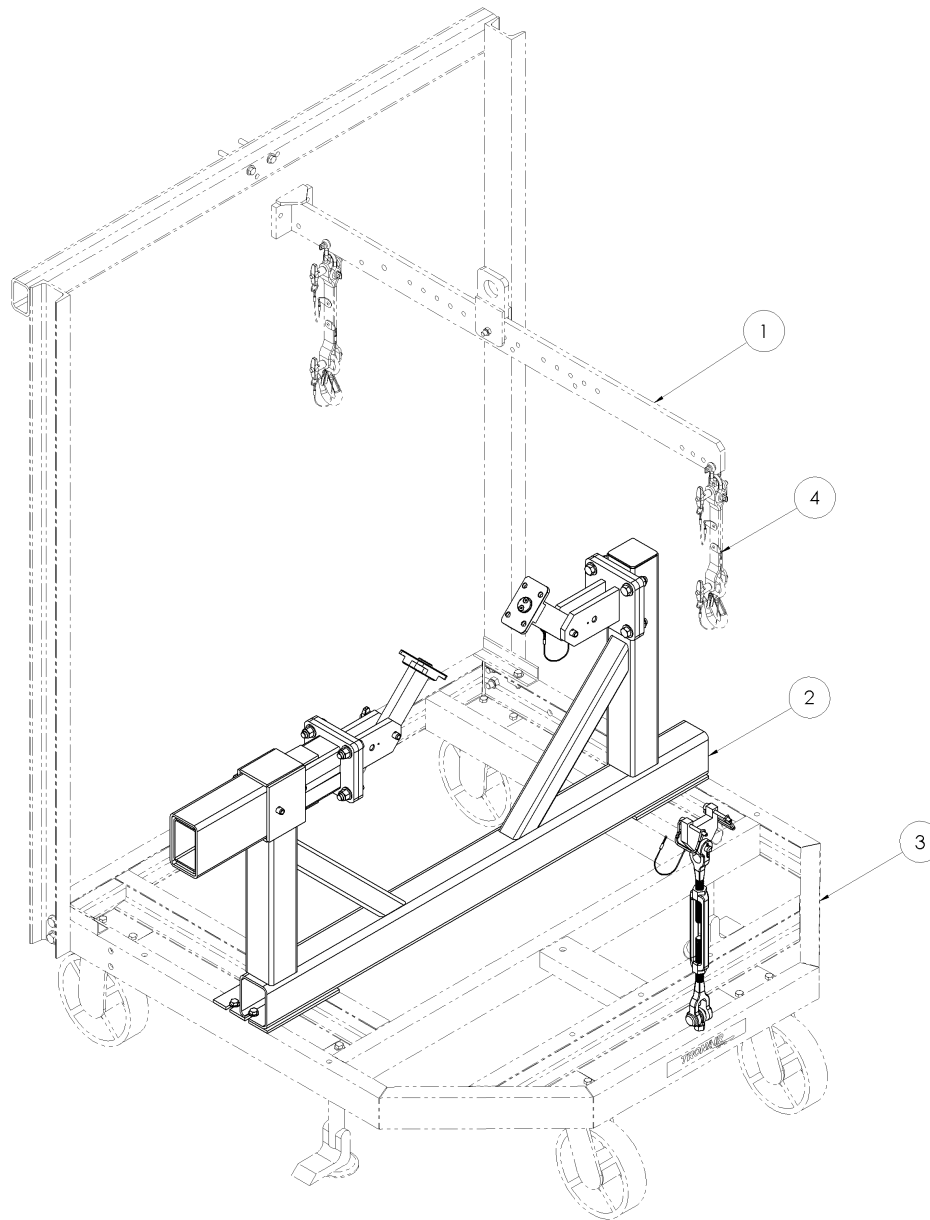

Item	Part Number	Description	Qty
1	08-0102-4010	Engine Sling	REF
2	K-5281	Engine Support	1
3	08-2001-0000	Engine Stand	REF
4	K-5257	Denali Engine Strap	REF



A collage of various Tronair industrial equipment. The items include a dump truck, a tractor, a trailer, a generator, a nitrogen system, and a large storage tank. The equipment is shown in a black and white photograph style, arranged in a grid-like fashion. The Tronair logo is visible on several pieces of equipment.

The Tronair Family of GSE Product Lines

UNPARALLELED RANGE OF PRODUCTS FOR BUSINESS, COMMERCIAL AND MILITARY AIRCRAFT

LIFTING & SHORING (ATA-7)

Hydraulic Tripod Jacks
Axle Jacks
Jack Test Equipment
Stabilizing Stands & Alarms
Aircraft Recovery Dollies

LEVELING & WEIGHING (ATA-8)

Aircraft Weigh Equipment

TOWING AND TAXIING (ATA-9)

Towbar Systems
Tow Vehicles & Tractors

PARKING & MOORING (ATA-10)

Chocks & Covers

SERVICING (ATA-12)

Multi-Purpose Carts
Hydraulic & Engine Oil Servicing
& Test Equipment
Lavatory Servicing Carts
Potable Water Transport Carts
Oxygen & Nitrogen Carts
Oxygen & Nitrogen Boosters

AIR CONDITIONING (ATA-21)

Air Conditioning Equipment
Coolant System Fill/Drain Carts
Cabin Pressurization Test Units

ELECTRICAL (ATA-24)

Ground Power Units
Battery Charger/Analyzer

FUEL (ATA-28)

Fuel Transfer Cart
Fuel Tools

HYDRAULIC POWER (ATA-29)

Hydraulic Power Units
Ram Air Turbine (RAT)
Hydraulic Coupling Hose Adaptors

ICE & RAIN PROTECTION (ATA-30)

Deicer Carts

AIRCRAFT TOOLING

Designed to your Specifications

LANDING GEAR (ATA-32)

Beadbreakers
Dollies - Wheel & Brake
Service Tools
Strut Service Carts
Regulators, Adaptors,
Connectors & Gauges

FUSELAGE (ATA-53)

Lifts, Cranes & Hoists
Maintenance Platforms
Access Stands
Docking Systems

PROPELLERS (ATA-61)

Propeller Stands/Slings/Tools

POWER PLANT (ATA-71)

Engine Compressor Washers
Engine Hoists, Slings & Stands

CLOUD BASED FLEET MGT.

Manage your Repair Station,
Multi Location Jet Center or
Small Operation



www.tronair.com

www.columbusjack.com | www.daeind.com | www.datcomedia.com | www.eagletugs.com | www.malabar.com

Sales Offices: USA • Asia/China • Australia/New Zealand/Singapore • Europe/Middle East/Africa

Tronair, Inc. • 1 Air Cargo Pkwy East • Swanton, OH 43558, USA
Phone: 419-866-6301 | Toll Free: 1-800-426-6301 | Email: sales@tronair.com